 


symbol of leadership

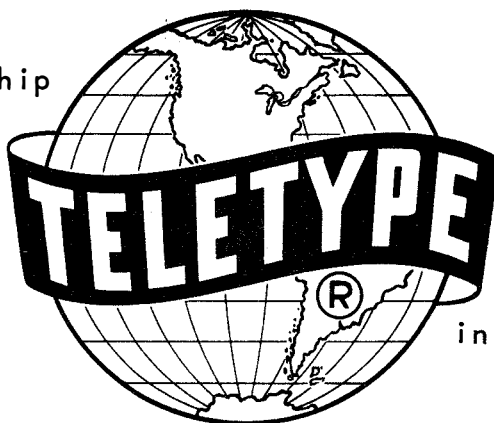

in printing telegraphy

BULLETIN 1087B

PARTS

 
SIGNAL DISTORTION TEST SET
(5 Unit - Tape Operated ED)

TELETYPE[®]

CORPORATION

SUBSIDIARY OF *Western Electric Company* INC.

CHICAGO, ILLINOIS, U. S. A.

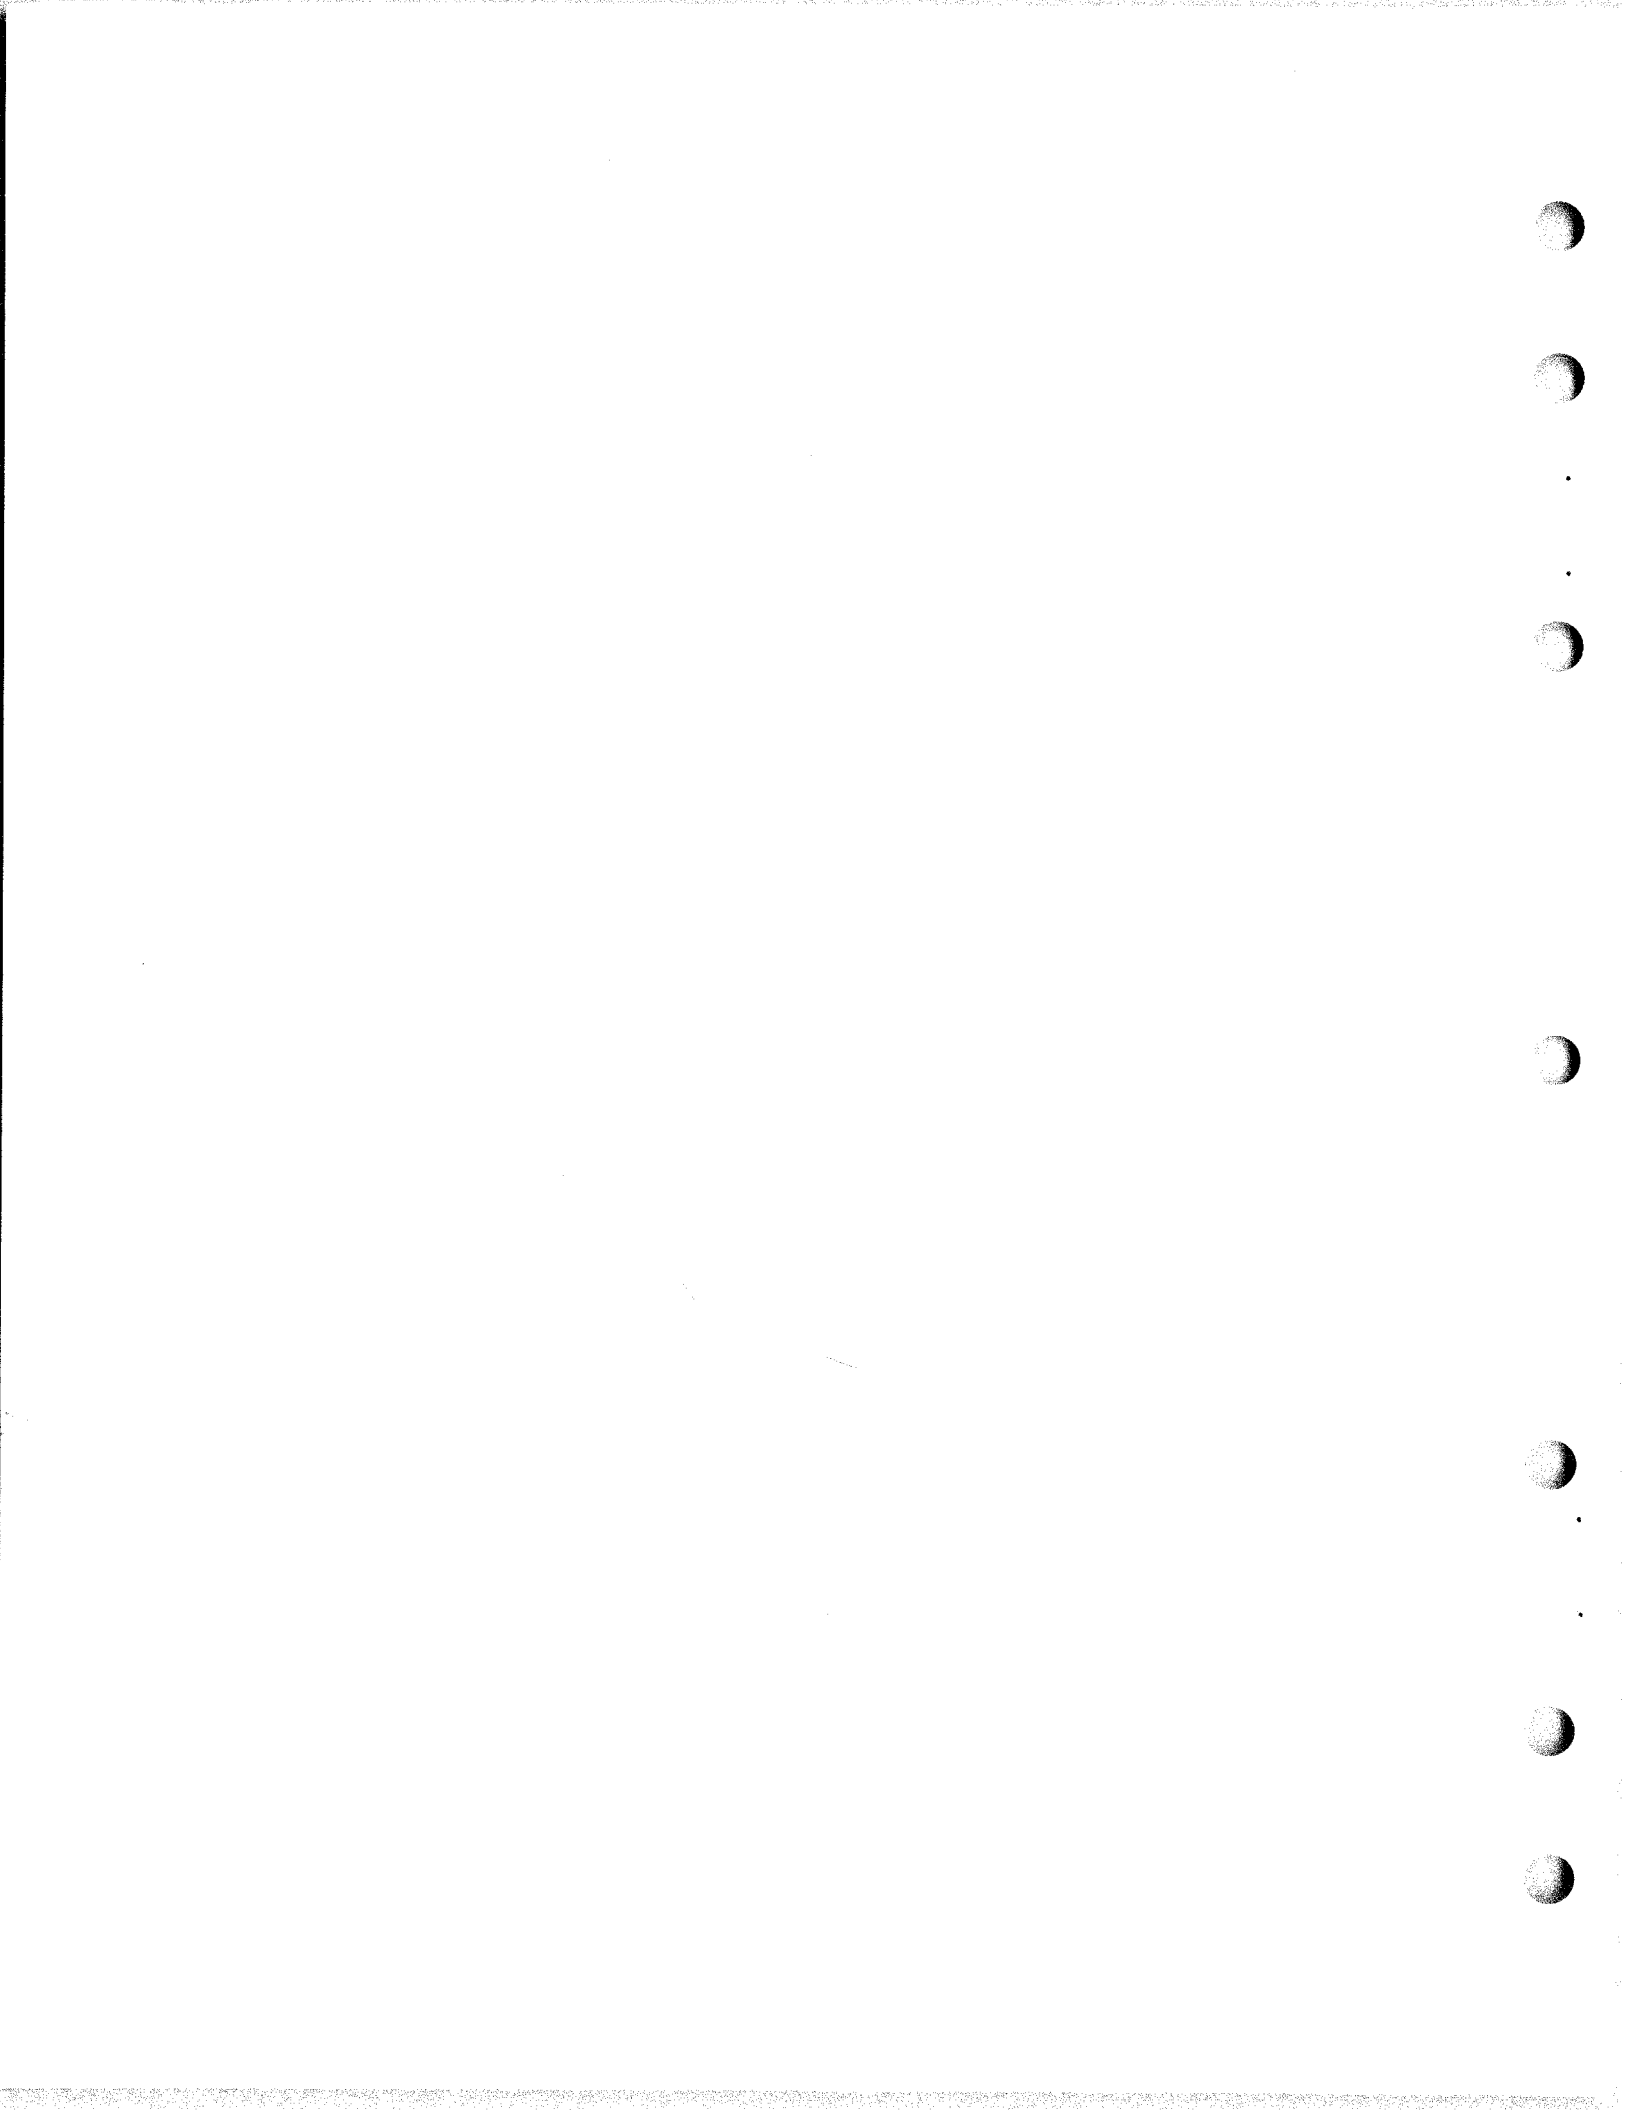

LIST OF EFFECTIVE PAGES

NOVEMBER, 1959

(Supersedes March, 1946 Issue)

Page Number	Change in Effect
A to B	Original
1 to 17	Original


The above list indicates the effective pages as of the date of issue. Upon receipt of Change Pages, insert them numerically and discard any superseded pages.

ALPHABETICAL INDEX


Description	Page No.	Description	Page No.
Adjusting Ring - Disc - - - - -	4	Mounting Plate - - - - -	8
Bail Assembly - - - - -	2	Motor Parts - - - - -	10, 11, 12
Base - Top View - - - - -	1	Name Plates - - - - -	8, 9
Base Plate - - - - -	5	Operating Lever Assembly- - - - -	2
Brush Holder Assembly - Old and New Styles - - - - -	3	Pinion - Motor - - - - -	10
Brush Springs- - - - -	3	Release Magnet Parts- - - - -	3
Cam Sleeve - Distortion Switch- - - - -	7	Resistor Parts - - - - -	2, 12
Cables - - - - -	1	Retaining Lid Assembly - - - - -	6
Contact Screw Bridge - - - - -	4	Slip Connection Strip Assembly - - - - -	4
Cover - - - - -	9	Snap Panel - - - - -	8
Disc Assembly - - - - -	4	Solenoid - - - - -	1
Distortion Switch Parts- - - - -	7, 8	Stop Arm Contact Assembly - - - - -	12
Distributor Mounting Plate Assembly- - - - -	13	Switch - Distortion- - - - -	7, 8
Feed Lever Parts - - - - -	5	Switch - Toggle - - - - -	1, 9
Feed Pawl - - - - -	5	Synchronous Motor- - - - -	10
Feed Roll - - - - -	6	Tape-out Contact Assembly - - - - -	6
Filter Unit Assembly- - - - -	9, 11	Tape Sensing Levers - - - - -	6
Gear - Main Shaft - - - - -	10	Tape Sensing Lever Bearing Bracket Assembly - - - - -	5
Gear Guard - - - - -	1	Tape Stop Assembly - - - - -	3
Governed Motor - - - - -	11	Terminal Block - - - - -	1, 4
Knob - Distortion Switch- - - - -	8	Terminal Strip - - - - -	1
Magnet - - - - -	3	Toggle Switch - - - - -	1, 9
Main Shaft Assembly - - - - -	2	Top Plate - Top and Bottom View - - - - -	6
Main Shaft Bracket Assembly - - - - -	3	Transmitter Cover - - - - -	8

PAINT FINISH COLOR CODE CHART (for parts and assemblies requiring a print finish)					
SMOOTH FINISHES			WRINKLE FINISHES		
Suffix	Color	Bell System Code	Suffix	Color	Bell System Code
BB	Black Semi-gloss Black High Gloss Gray Green	34	AA	Black	37
BA			AB	Gray Green	40
BK			AC AD	Light Brown Dark Brown	38
BH	Light Gray Light Gray Semi-gloss Federal Gray Charcoal Gray Sunland Beige		AF	Federal Gray	
BU					
BV					
BZ					
BX					

 
Suffix to be applied following the part number.

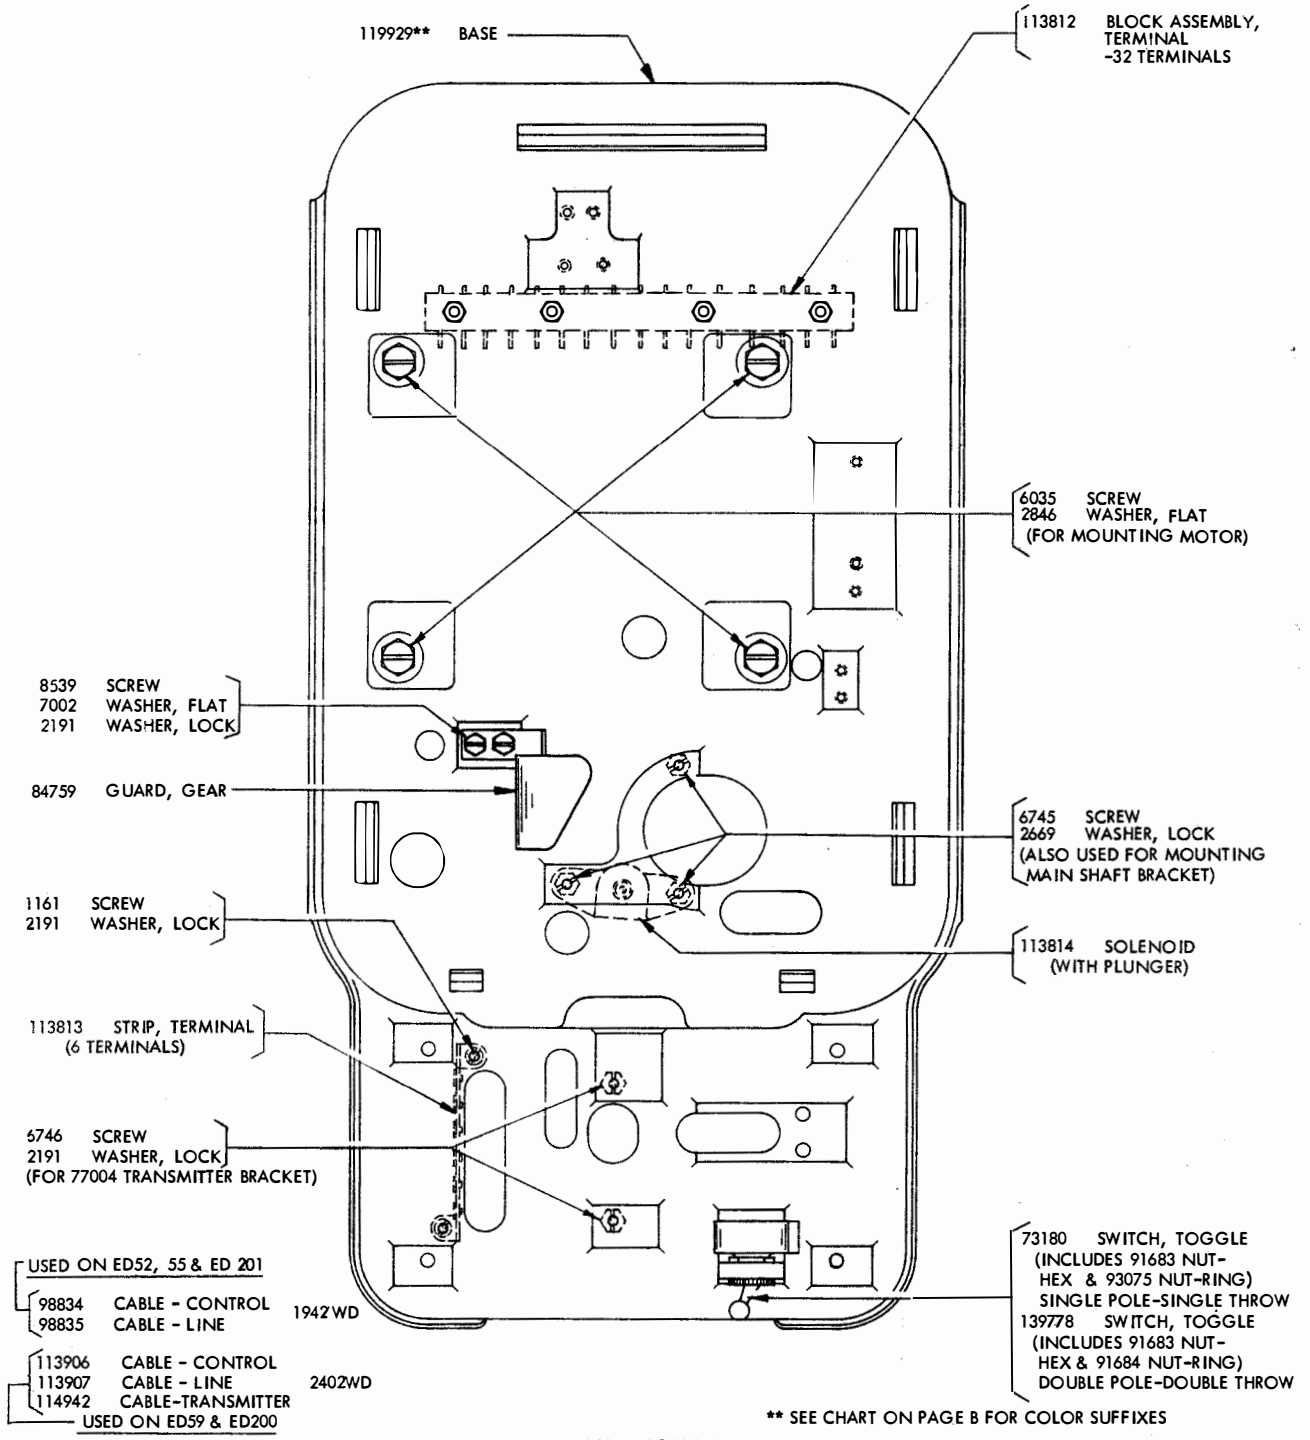


BASE - TOP VIEW

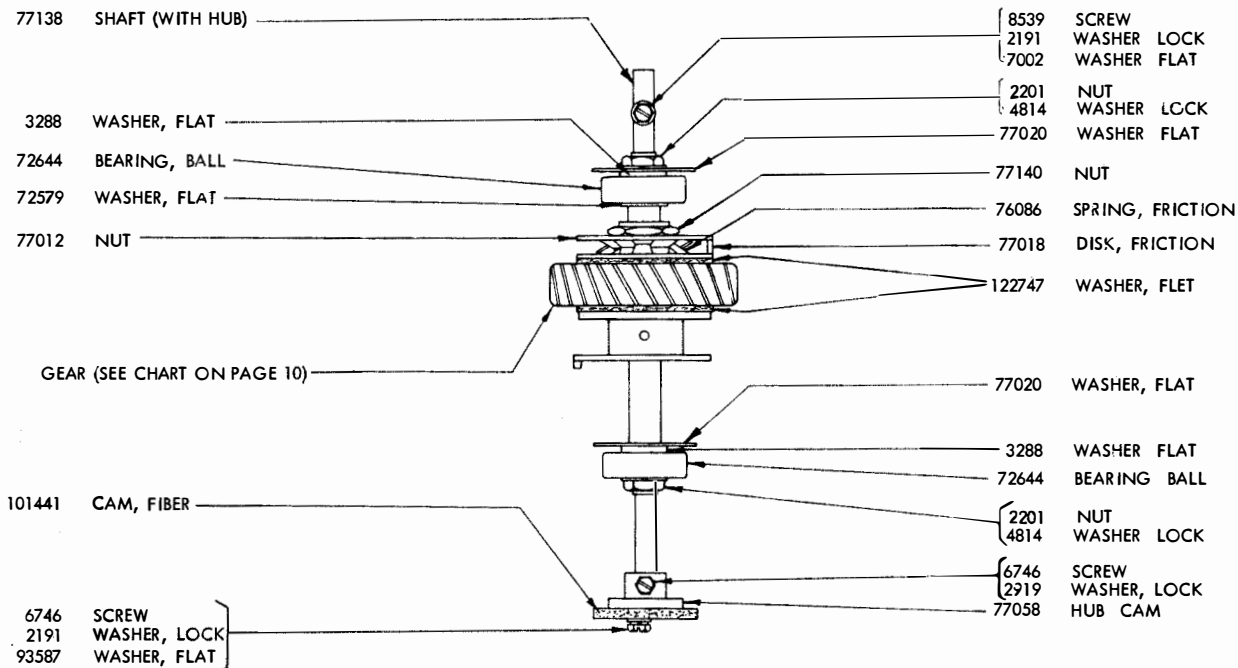 


MAIN SHAFT ASSEMBLY

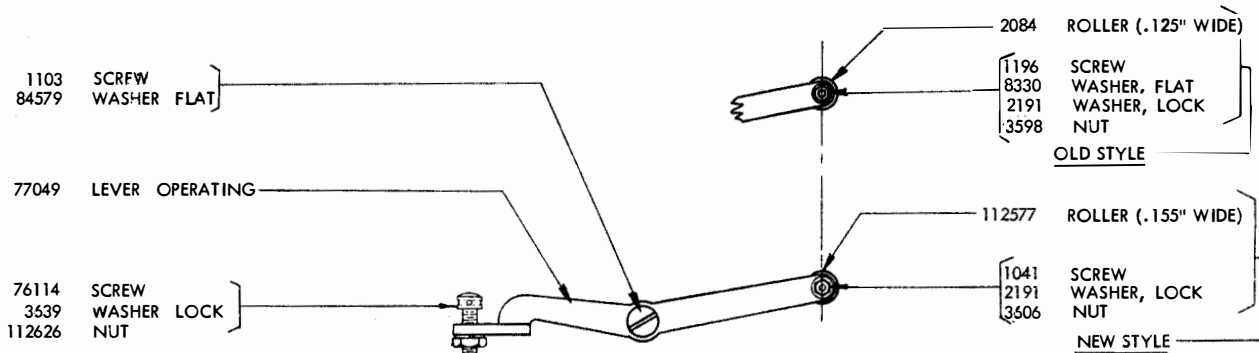 


OPERATING LEVER ASSEMBLY

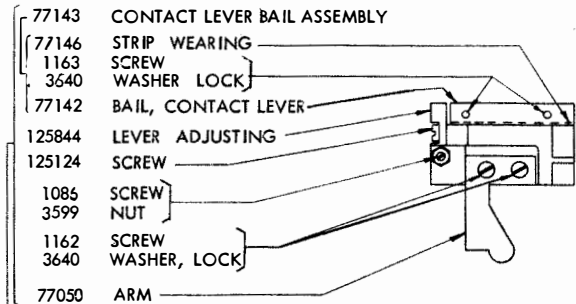 



77087 BAIL ASSEMBLY

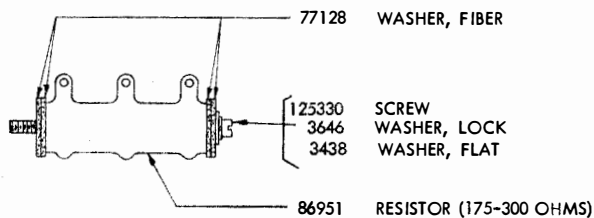 


RESISTOR PARTS

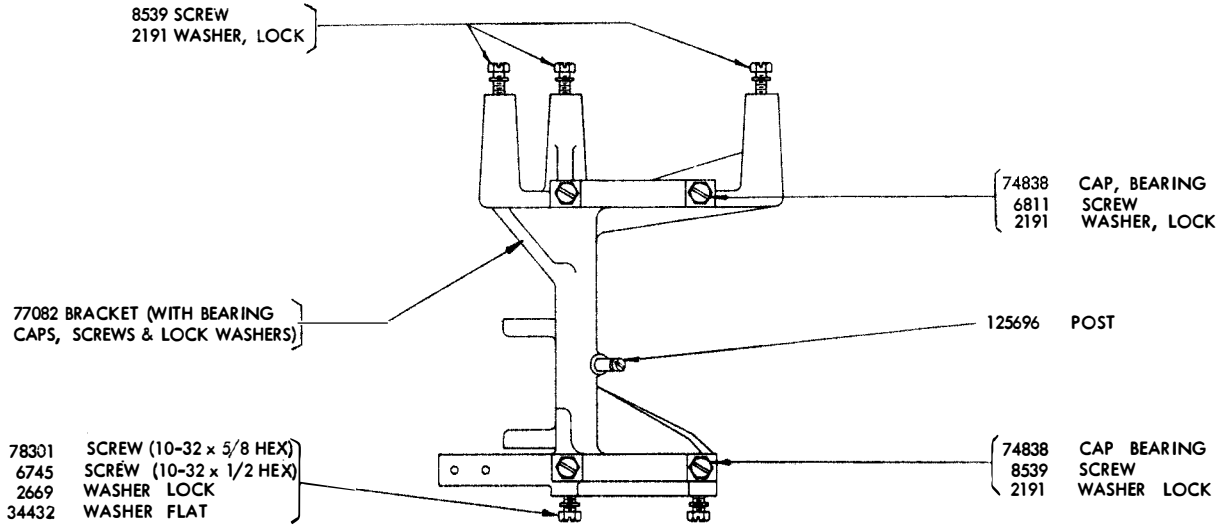 


MAIN SHAFT BRACKET ASSEMBLY

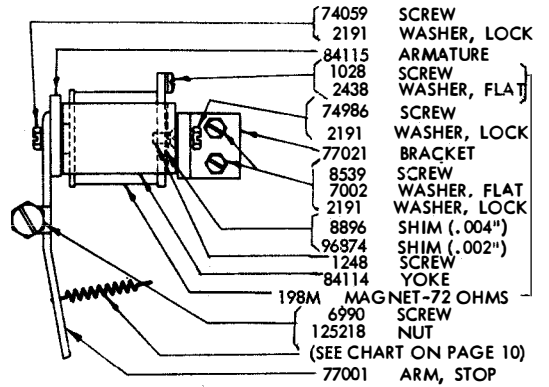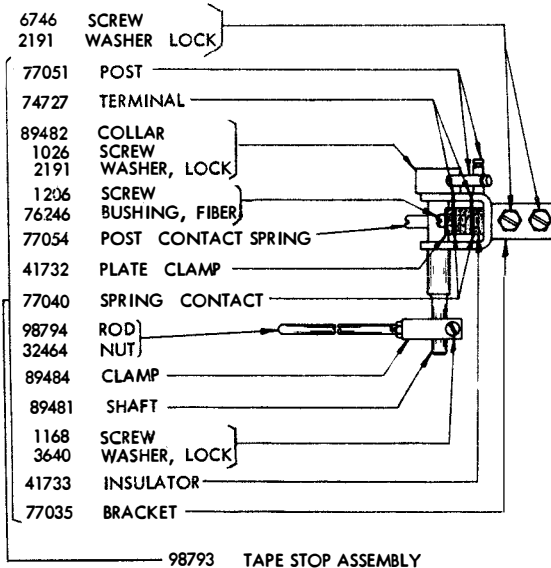  





RELEASE MAGNET PARTS

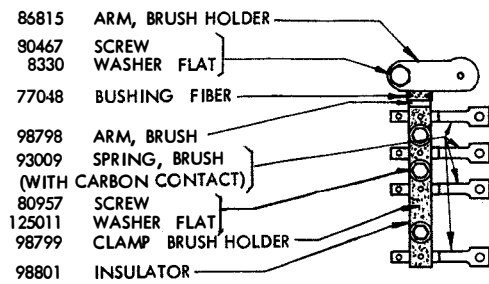 


BRUSH HOLDER ASSEMBLY
OLD STYLE

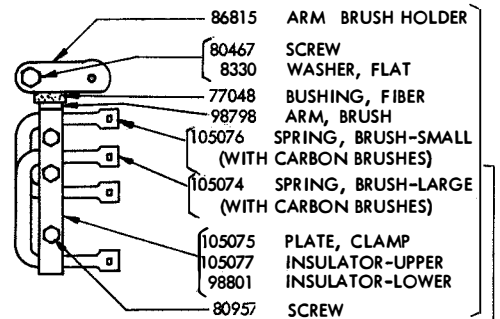 


98797 BRUSH HOLDER ASSEMBLY
NEW STYLE

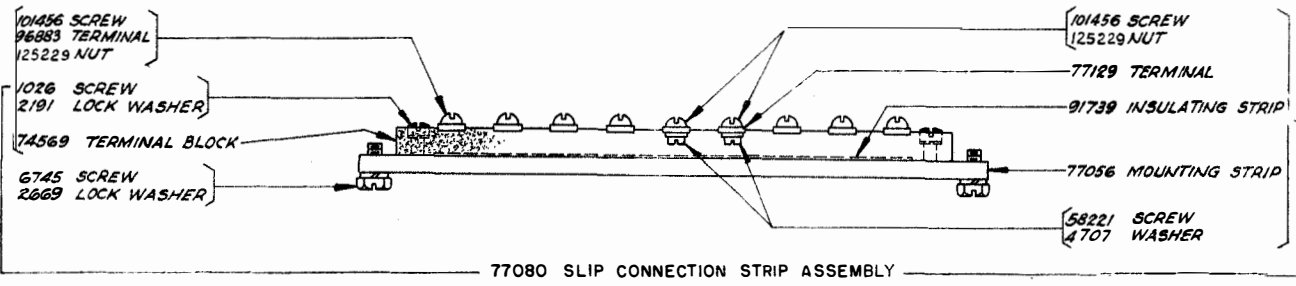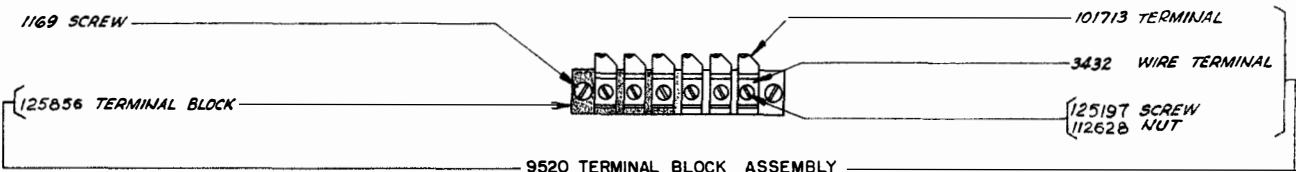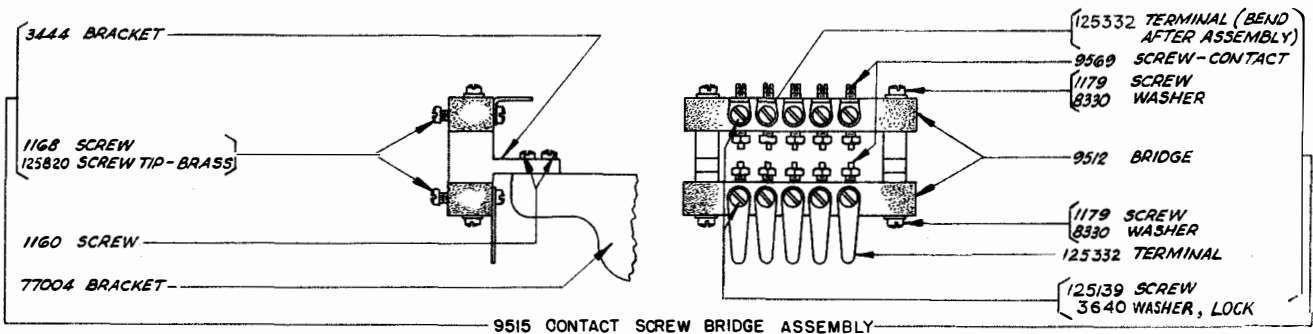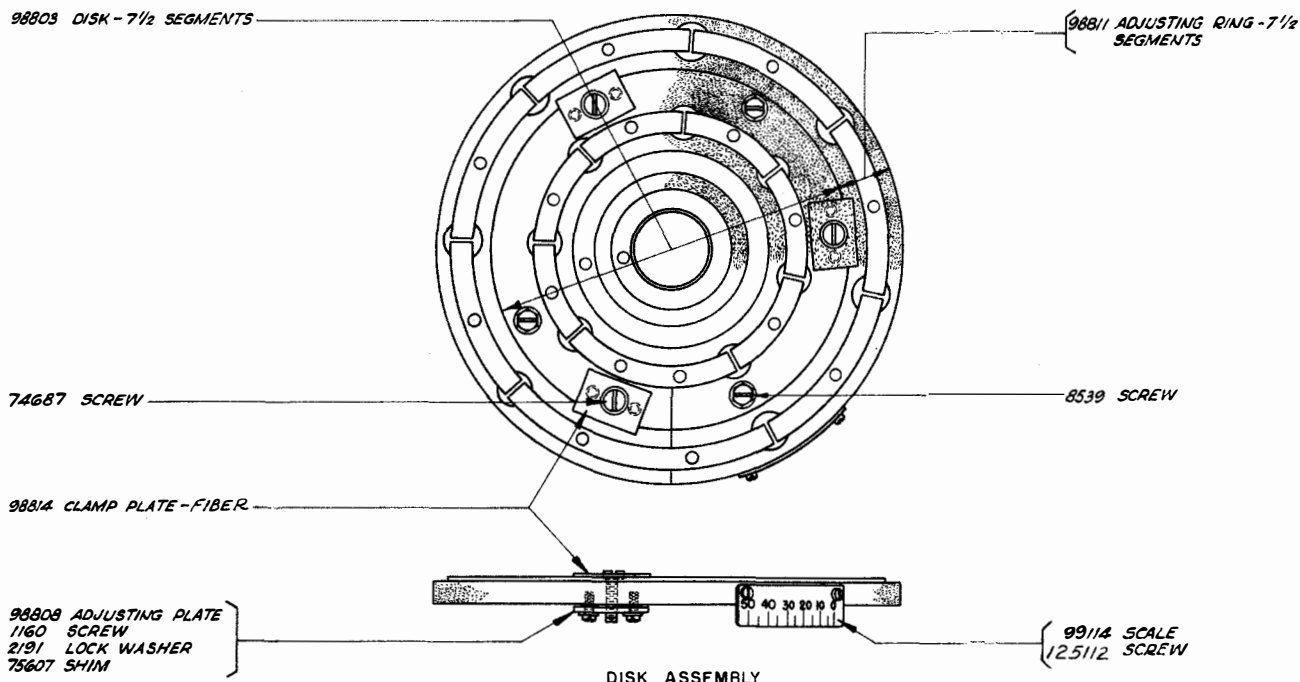    


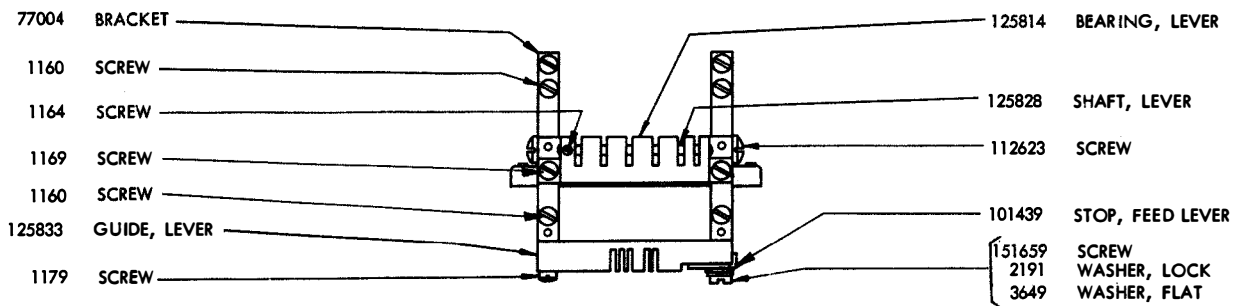 

 
TAPE SENSING LEVER BEARING BRACKET ASSEMBLY

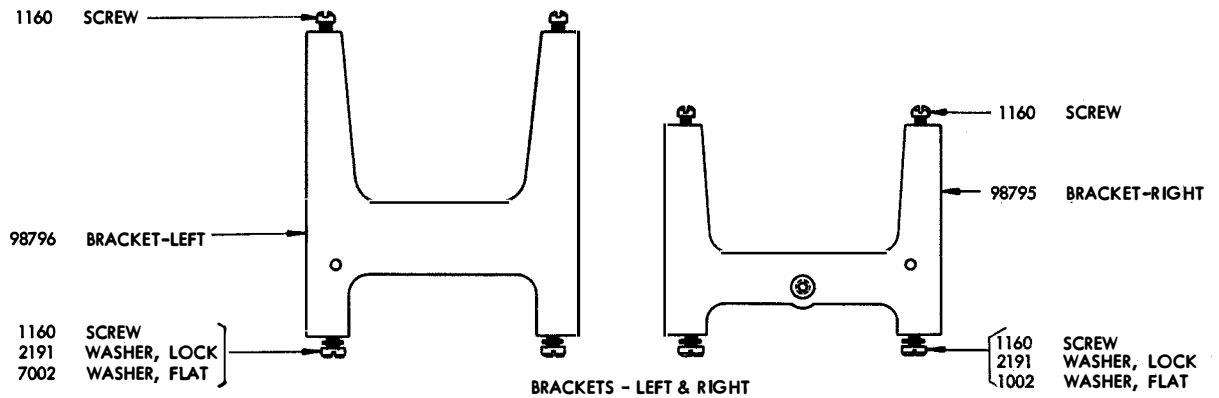





BRACKETS - LEFT & RIGHT

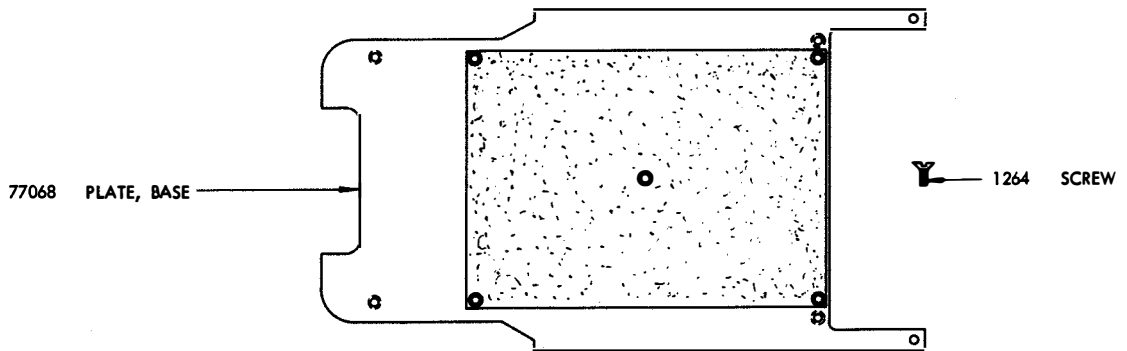 


BASE PLATE

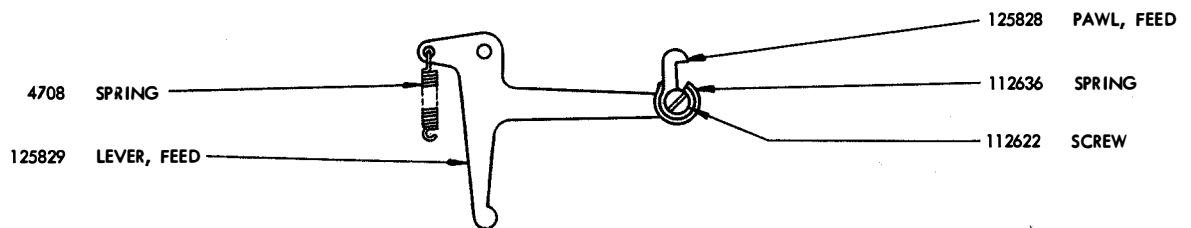 

FEED LEVER PARTS

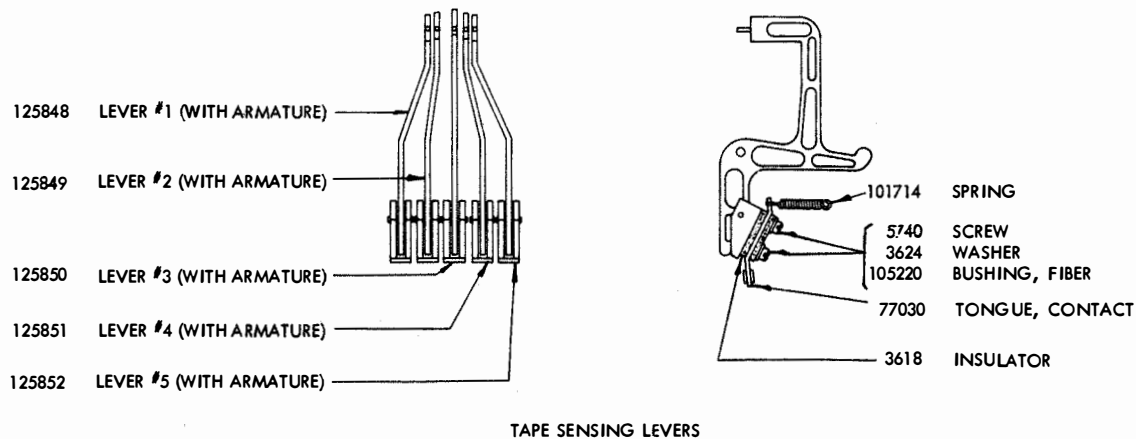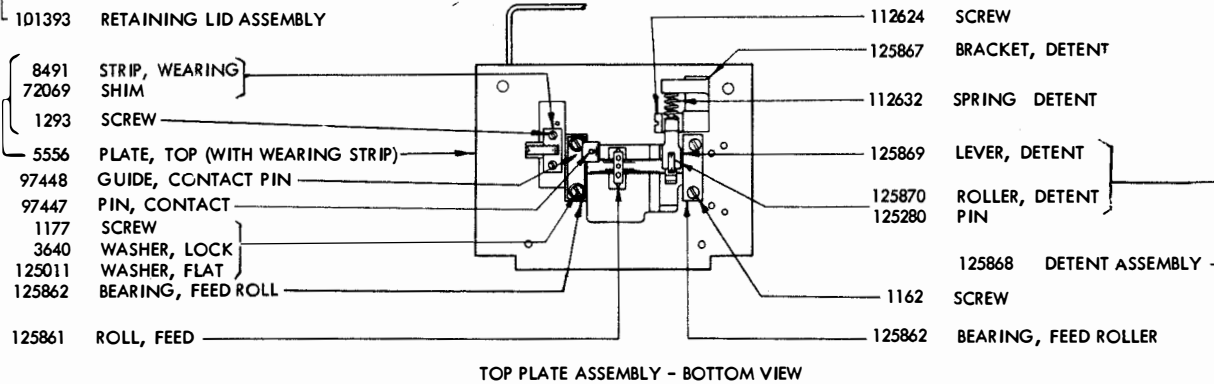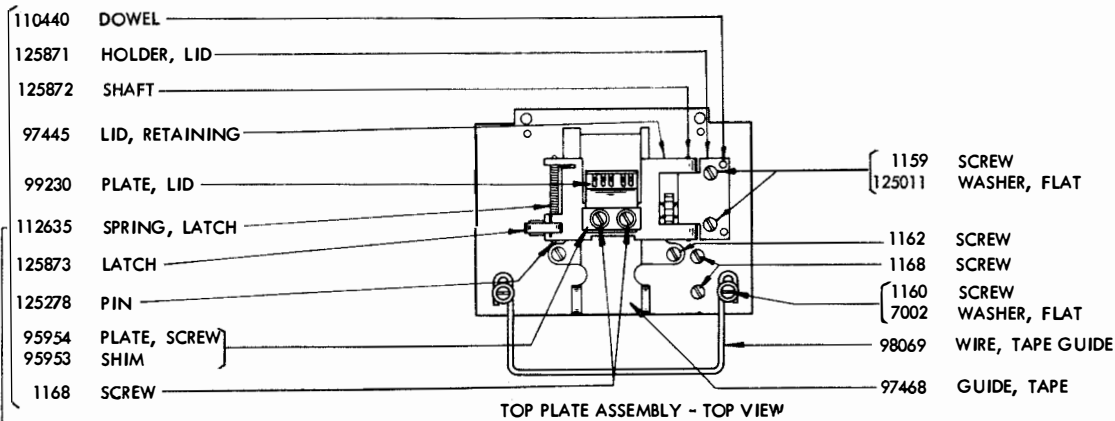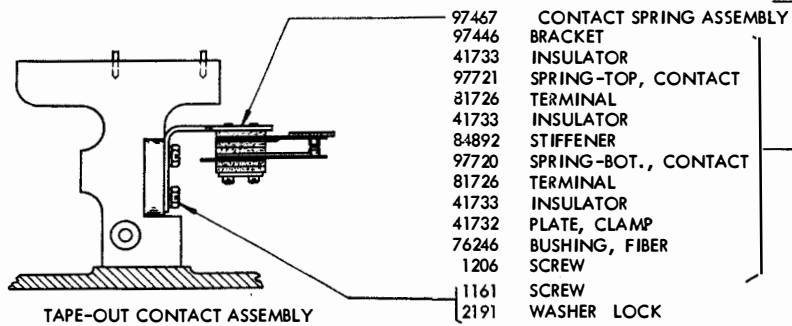    


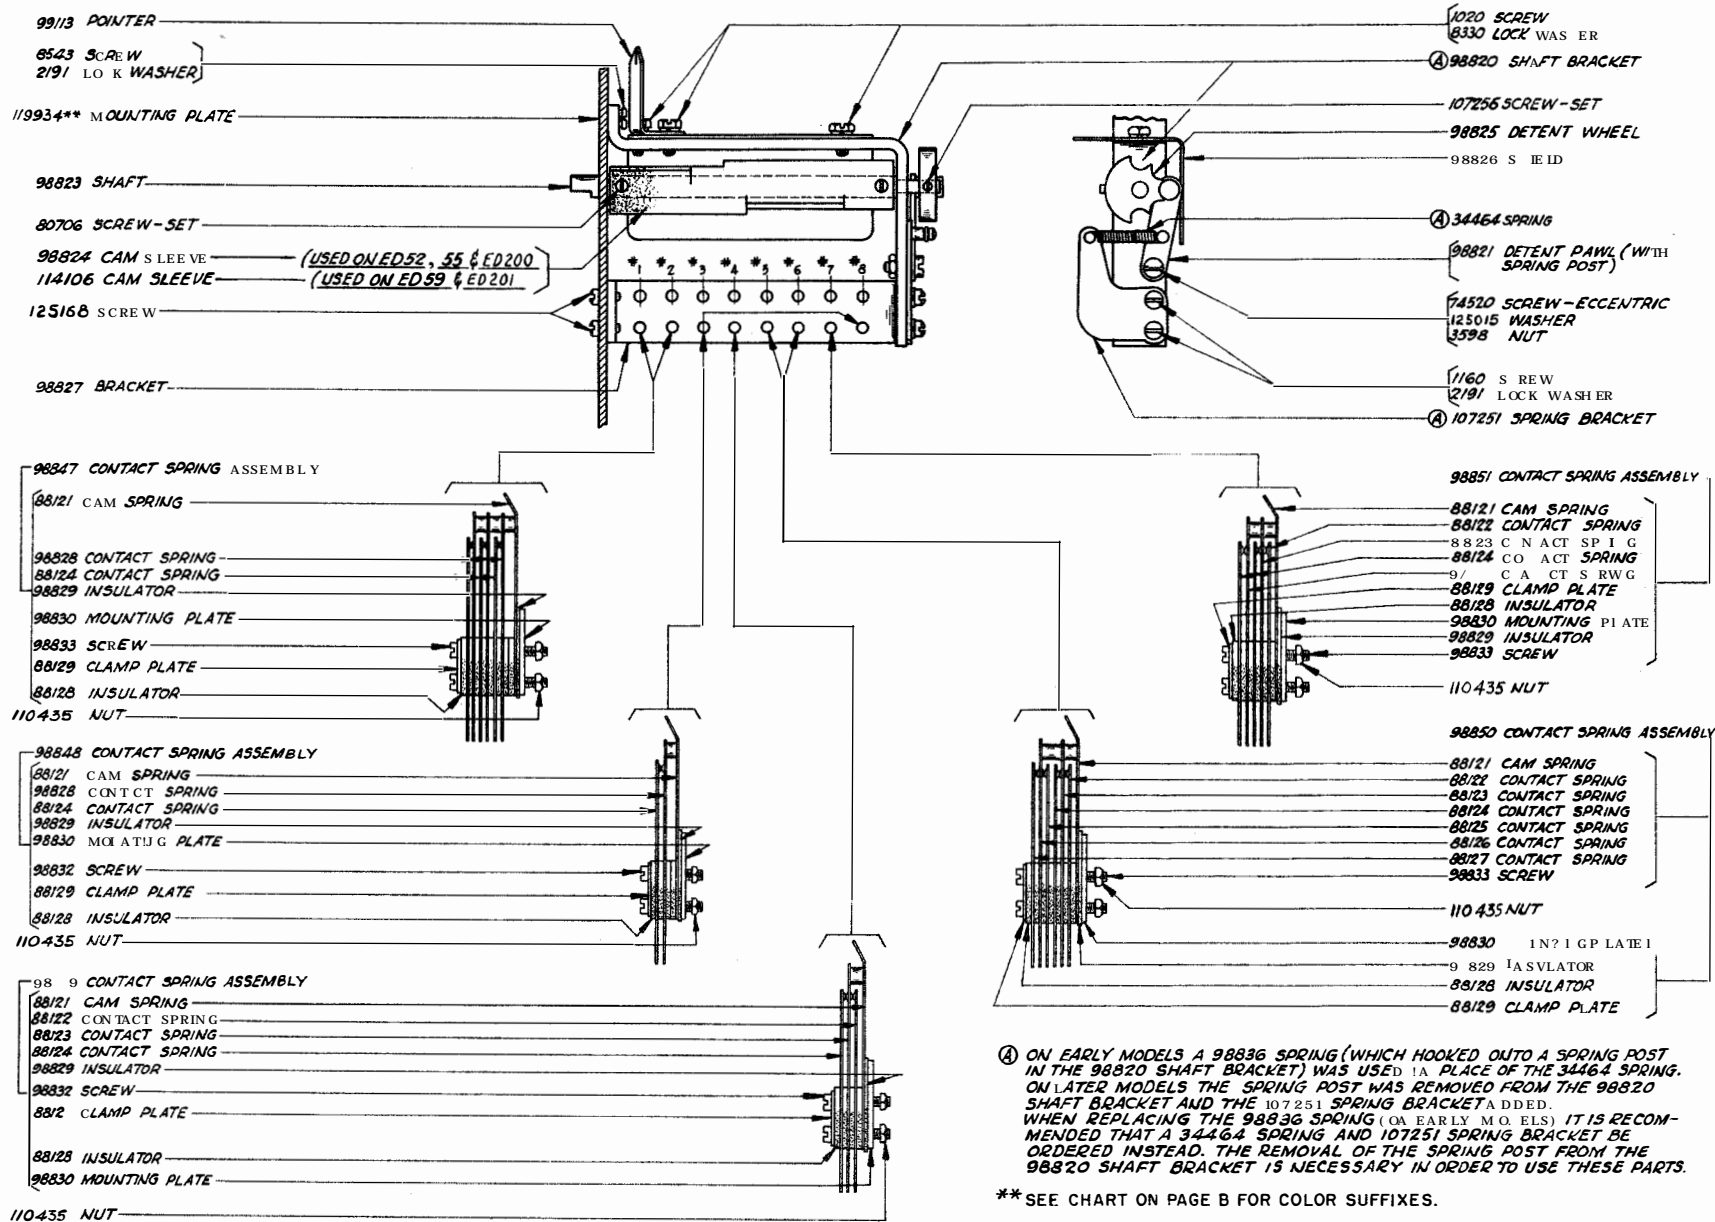 


Ⓐ ON EARLY MODELS A 98836 SPRING (WHICH HOOKED ONTO A SPRING POST IN THE 98820 SHAFT BRACKET) WAS USED IN PLACE OF THE 34464 SPRING. ON LATER MODELS THE SPRING POST WAS REMOVED FROM THE 98820 SHAFT BRACKET AND THE 107251 SPRING BRACKET ADDED. WHEN REPLACING THE 98836 SPRING (ON EARLY MODELS) IT IS RECOMMENDED THAT A 34464 SPRING AND 107251 SPRING BRACKET BE ORDERED INSTEAD. THE REMOVAL OF THE SPRING POST FROM THE 98820 SHAFT BRACKET IS NECESSARY IN ORDER TO USE THESE PARTS.

** SEE CHART ON PAGE B FOR COLOR SUFFIXES.

 
DISTORTION SWITCH PARTS

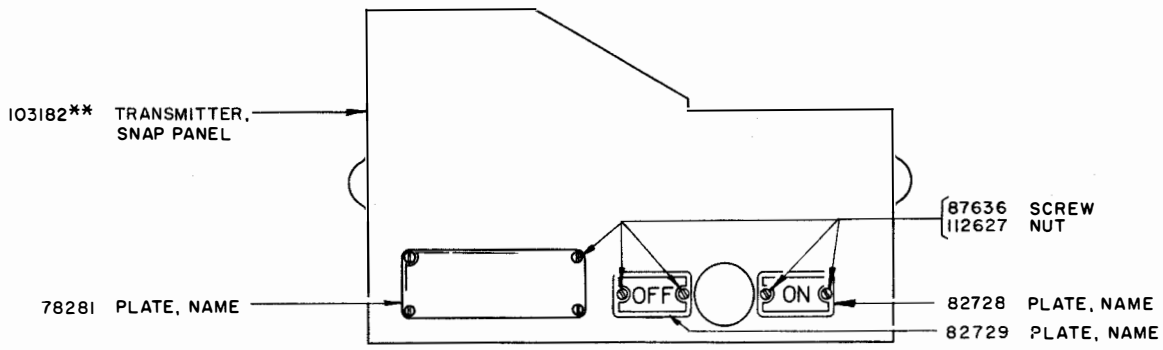

SNAP PANEL ASSEMBLY

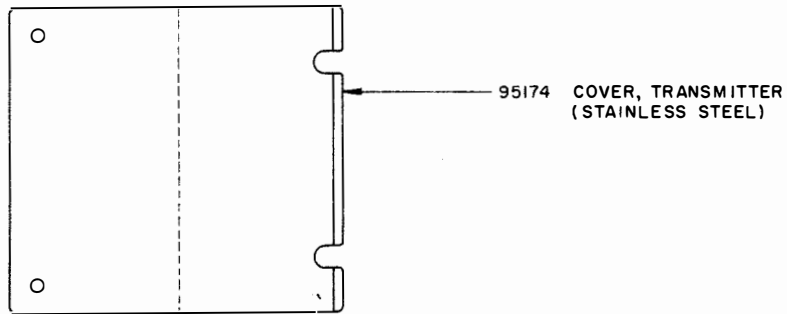 


TRANSMITTER COVER

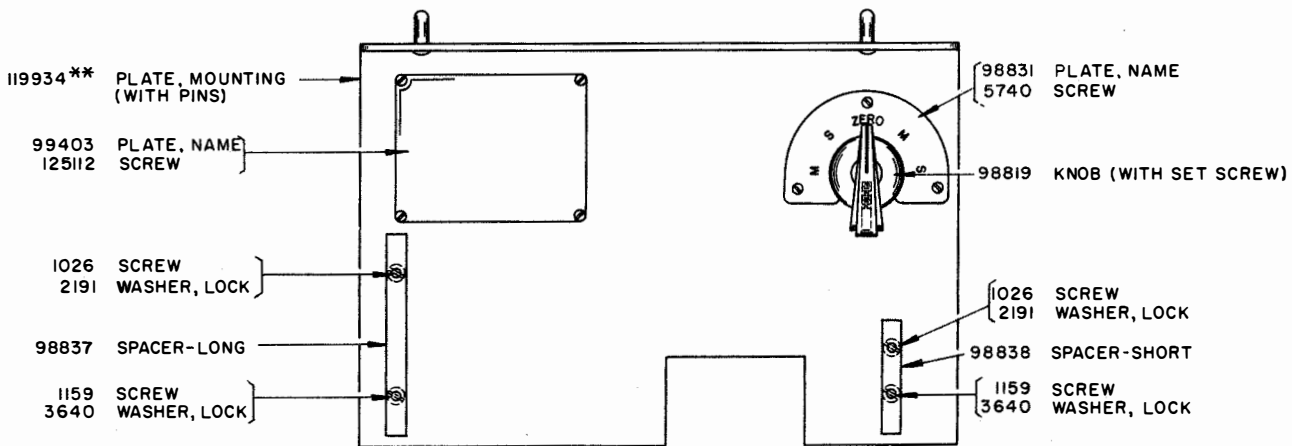 


** SEE CHART ON PAGE B FOR COLOR SUFFIXES.

 MOUNTING PLATE ASSEMBLY

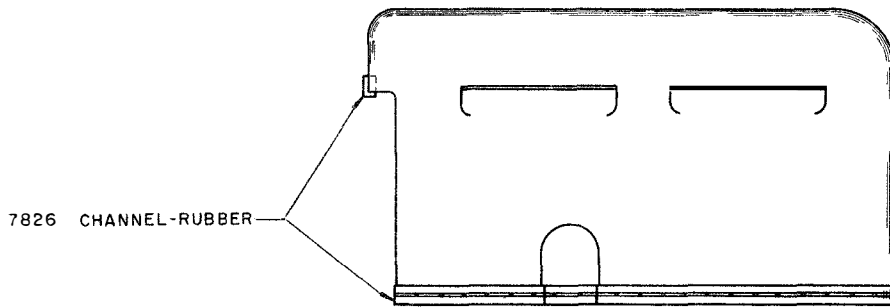

7826 CHANNEL-RUBBER

 119933** COVER ASSEMBLY

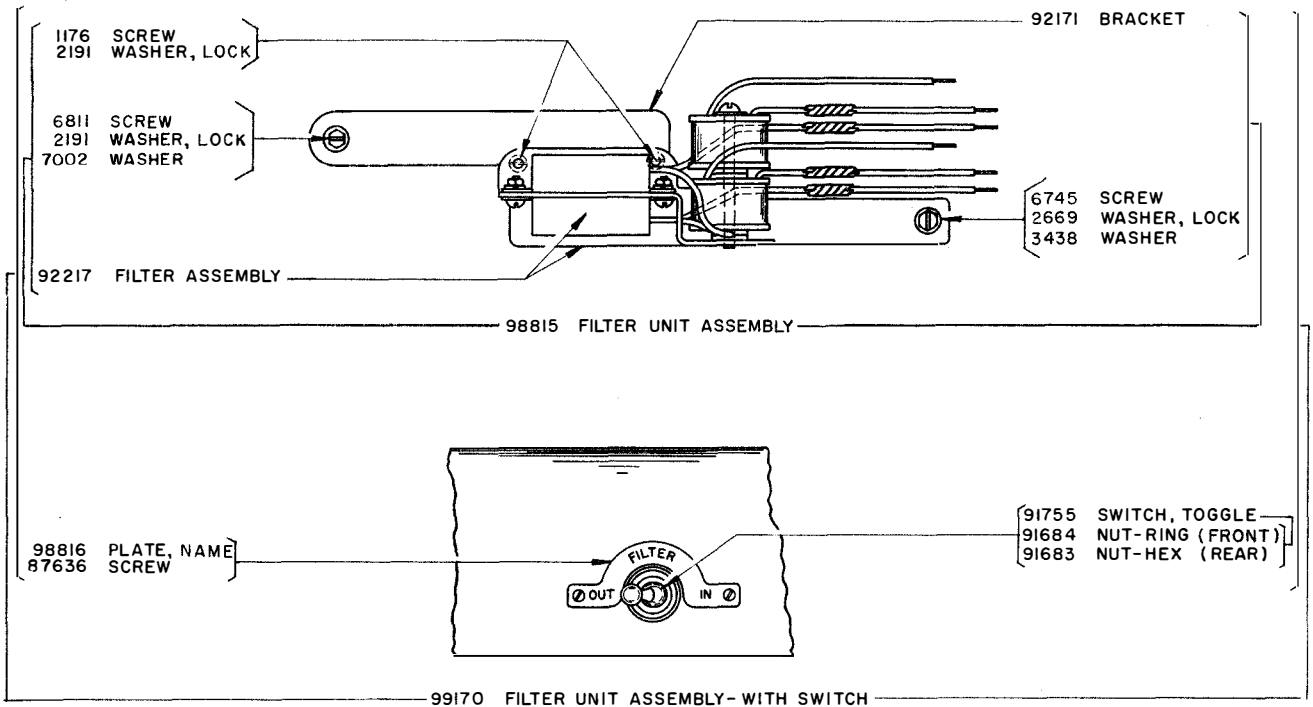

1176 SCREW
2191 WASHER, LOCK

6811 SCREW
2191 WASHER, LOCK
7002 WASHER

92217 FILTER ASSEMBLY

98815 FILTER UNIT ASSEMBLY

92171 BRACKET

 
6745 SCREW
2669 WASHER, LOCK
3438 WASHER

98816 PLATE, NAME
87636 SCREW

91755 SWITCH, TOGGLE
91684 NUT-RING (FRONT)
91683 NUT-HEX (REAR)


99170 FILTER UNIT ASSEMBLY-WITH SWITCH

** SEE CHART ON PAGE B FOR COLOR SUFFIXES.





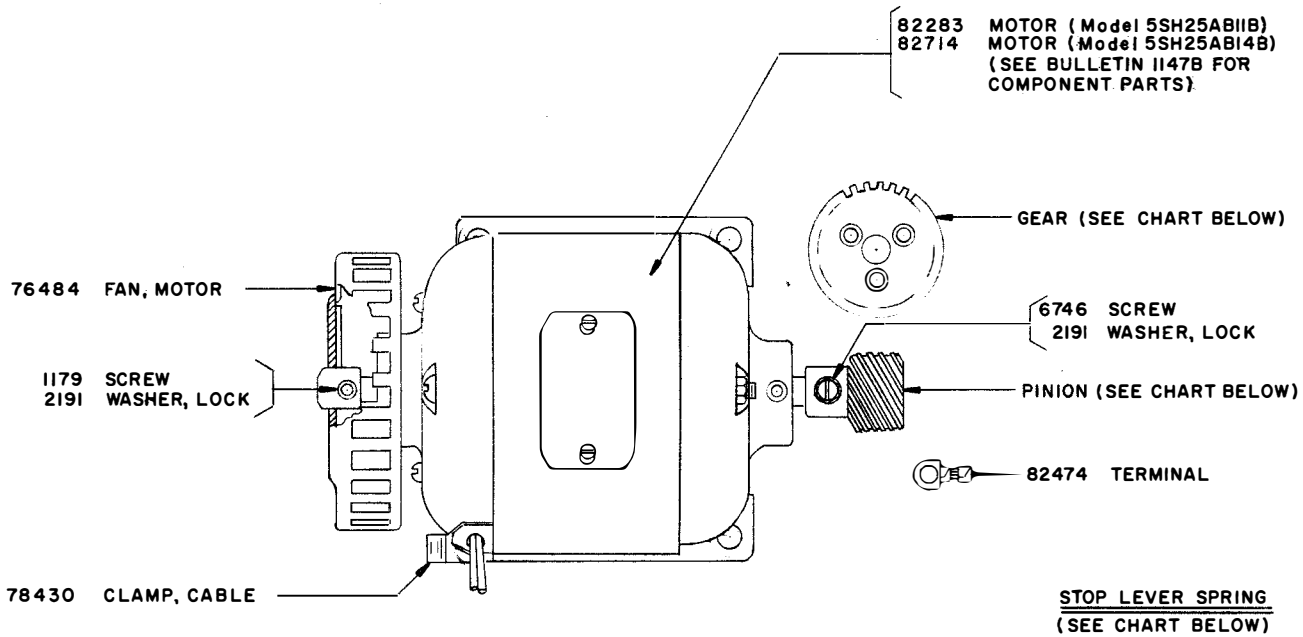


SYNCHRONOUS MOTOR


VARIABLE FEATURES OF MOTOR ARRANGEMENTS								
MOTOR ARRANGEMENTS	W P M	O P M	SET NO.	PINION	GEAR	TYPE	SPEED (RPM)	STOP LEVER SPRING
AJ-86707	60	368	111132	80166-9T	80165-44T	110V, AC, 60 CYC, SYN.	1800	55669
BX-91121	60	368	111146	91131-13T	91132-53T	110V, AC, 50 CYC, SYN.	1500	55669
GJ-106882	60	368	111129	77034-7T	77036-40T	110V, AC, 50/60 CYC, GOV.	2102	4703
HJ-113396	100	600	113206	110883-12T	110884-36T	110V, AC, 60 CYC, SYN.	1800	55669

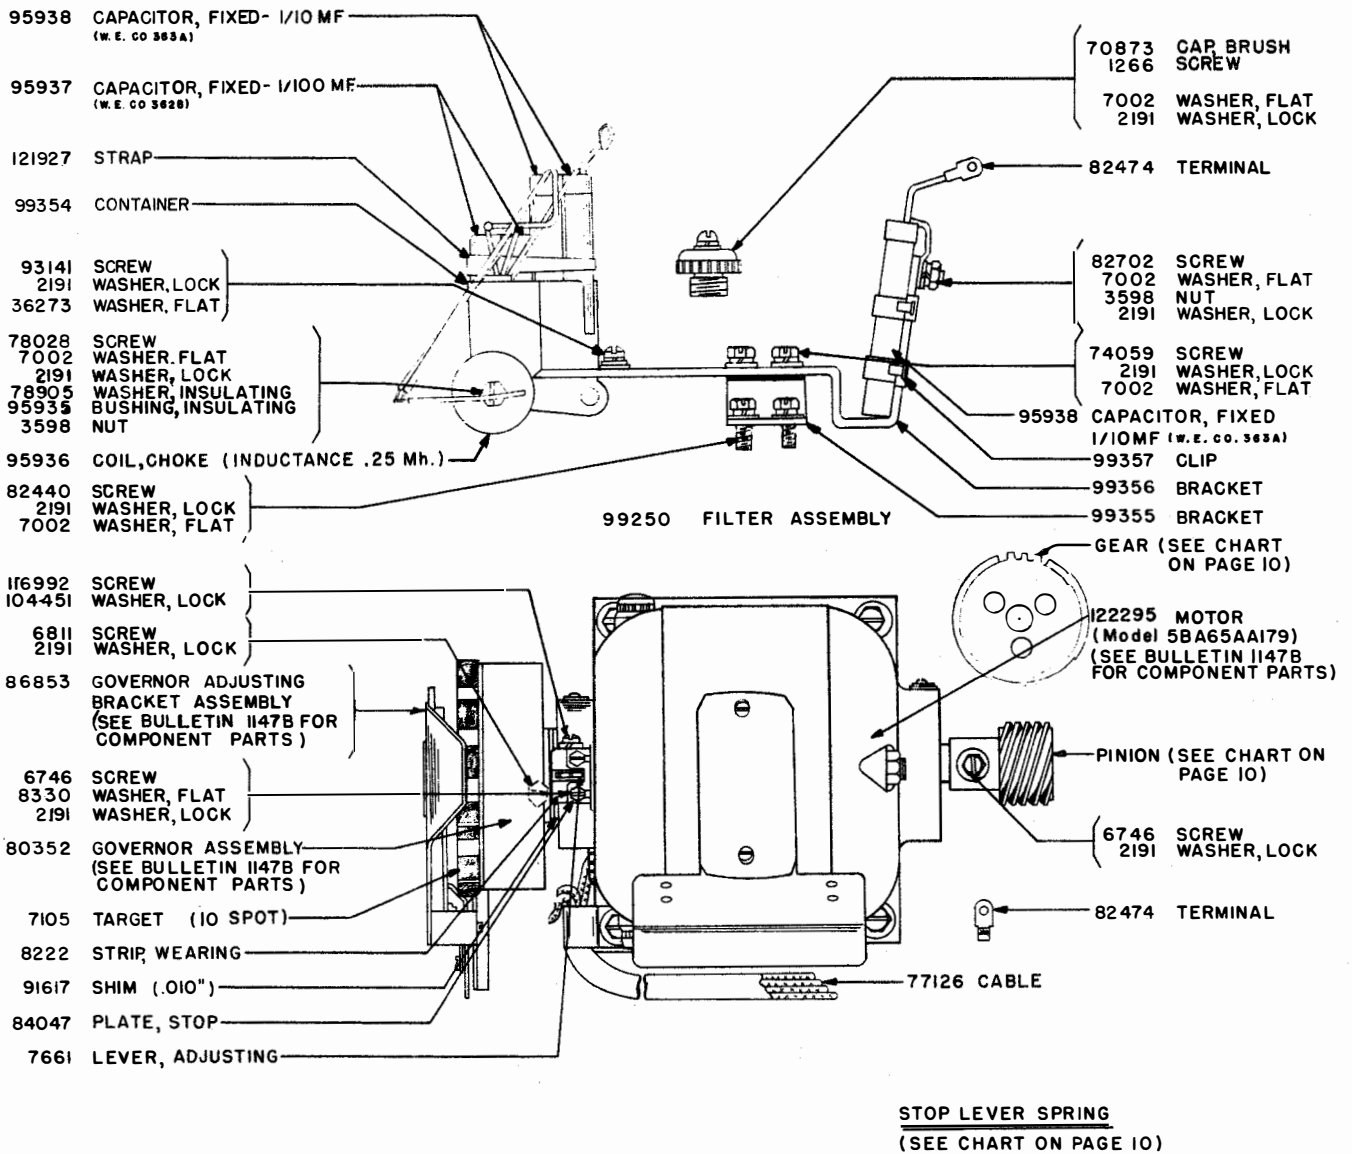 

     
GOVERNED MOTOR ARRANGEMENT
(ALSO SEE PAGE 12)

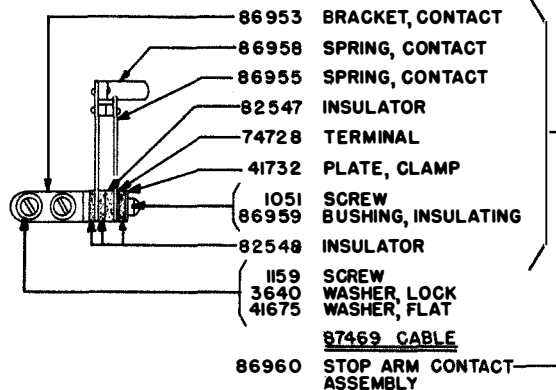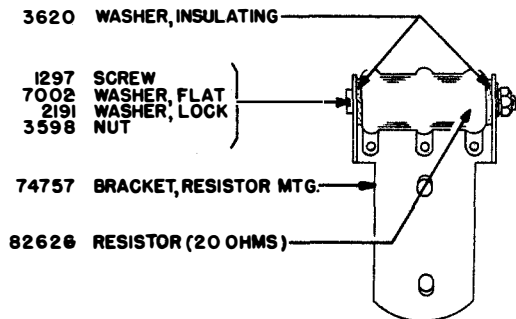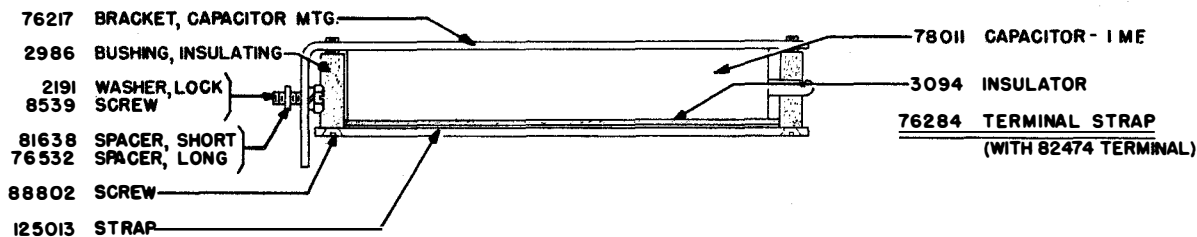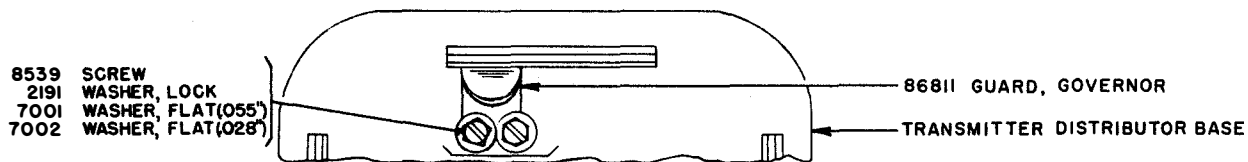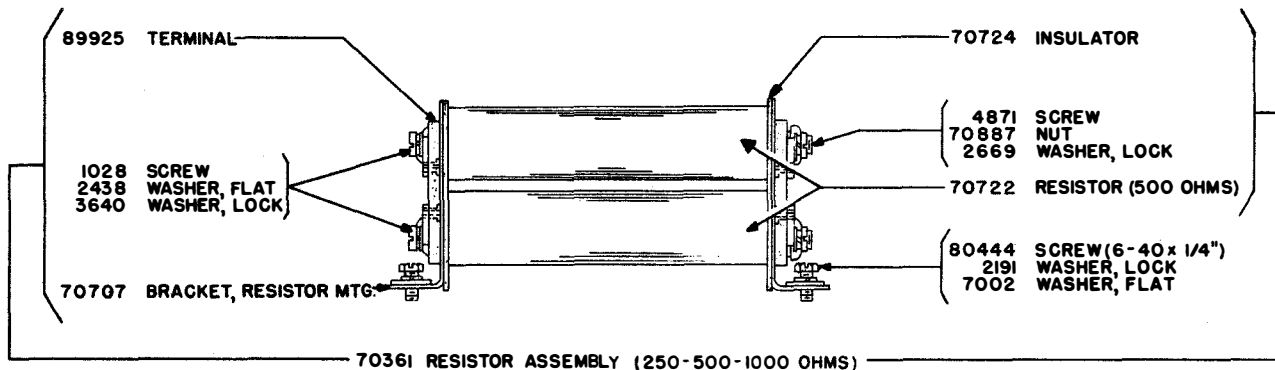

 GOVERNED MOTOR ARRANGEMENT
(ALSO SEE PAGE 11)

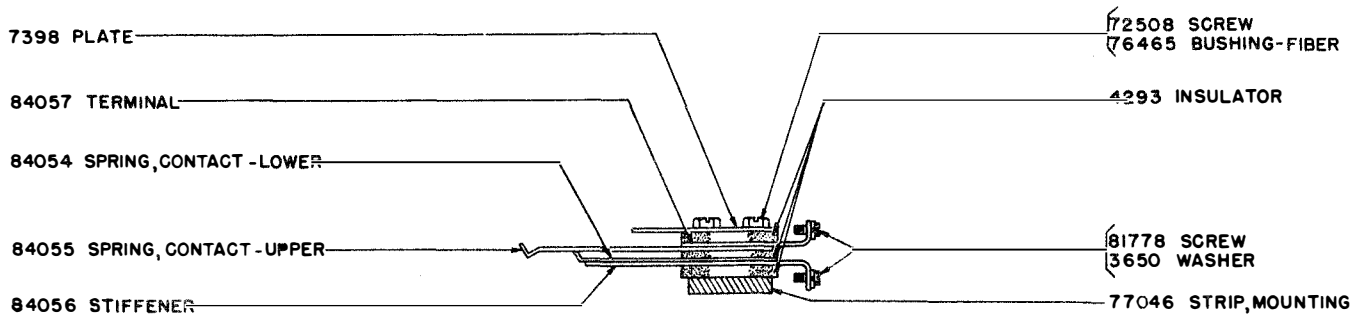

SECTION "A-A"
77125 CONTACT ASSEMBLY

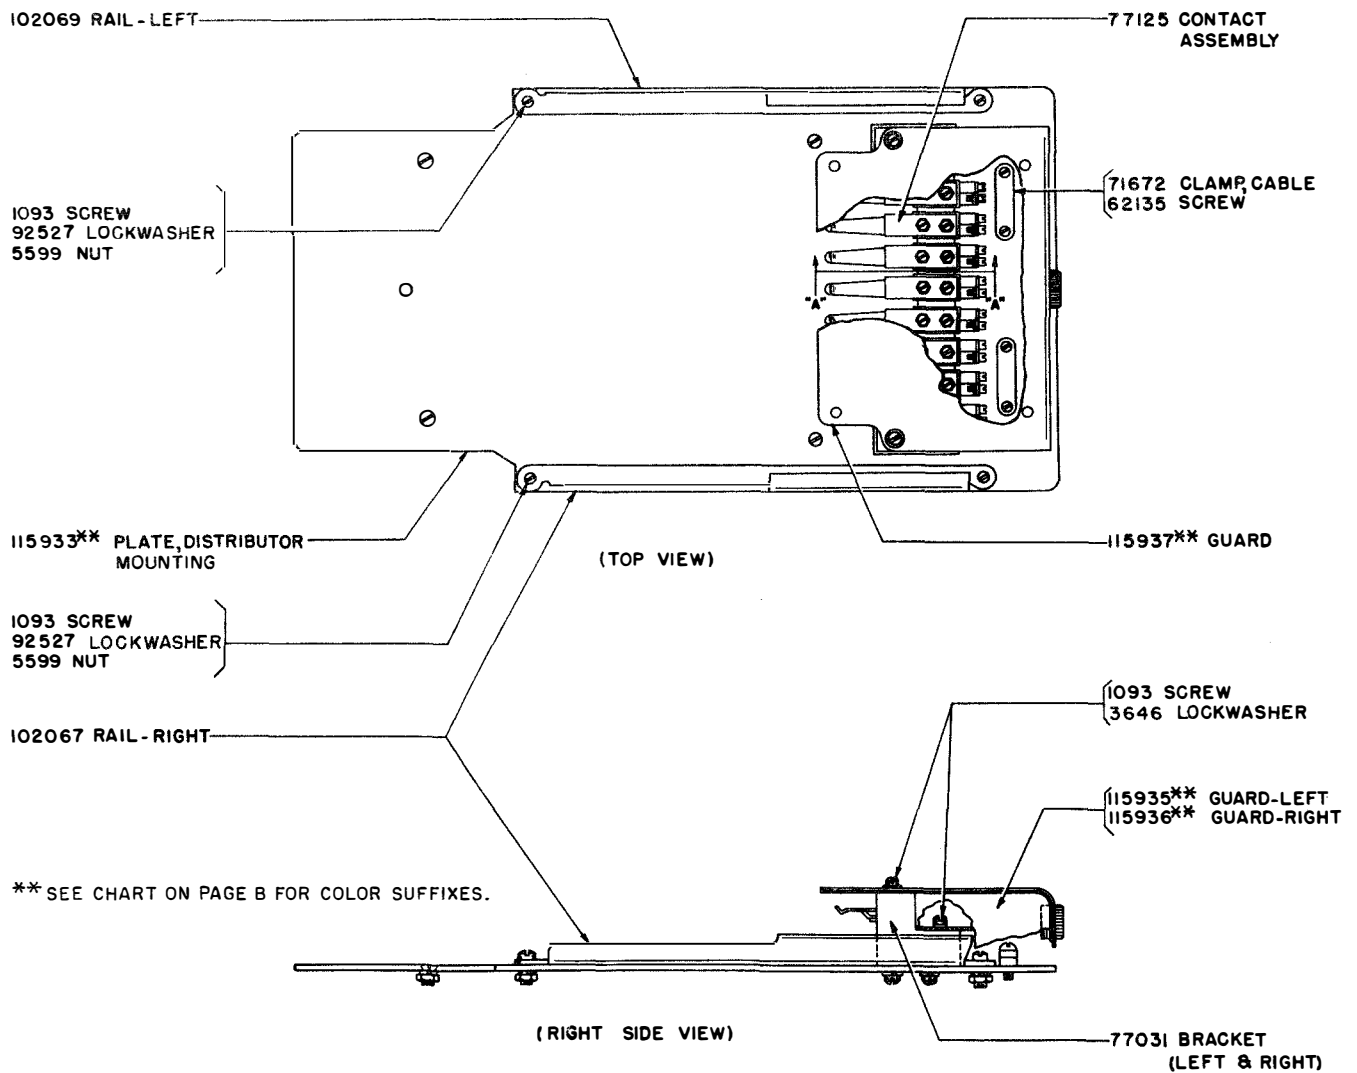 

115932** DISTRIBUTOR MOUNTING PLATE ASSEMBLY

NUMERICAL INDEX

Part Number	Description and Page Number	Part Number	Description and Page Number
198M	Magnet - 72 Ohms 3	5740	Screw (2-56 x 1/4 Fil) 6, 8
1020	Screw (6-40 x 1/4 Hex) 7	6035	Screw (1/4-20 x 5/8 Hex) 1
1026	Screw (6-40 x 3/8 Fil) 3, 4, 8	6745	Screw (10-32 x 1/2 Hex) 1, 3, 4, 9
1028	Screw (4-40 x 1/4 Fil) 3, 12	6746	Screw (6-40 x 5/16 Hex) 1, 2, 3, 5, 10, 11
1041	Screw (6-40 Shoulder) 2	6811	Screw (6-40 x 5/8 Hex) 3, 9, 11
1051	Screw (4-40 x 1/2 Fil) 12	6990	Screw (1/4-32 Pilot) 3
1086	Screw (4-40 x 3/8 Set) 2	7001	Washer, Flat 12
1093	Screw (8-32 x 7/16 Fil) 13	7002	Washer, Flat 1, 2, 3, 5, 6, 9, 11, 12
1103	Screw (3/16 - 40 Shoulder) 2	7105	Target - 10 Spot 11
1159	Screw (4-40 x 3/8 Fil) 6, 8, 12	7398	Plate 13
1160	Screw (6-40 x 5/16 Fil) 4, 5, 6, 7	7661	Lever, Adjusting 11
1161	Screw (6-40 x 1/4 Fil) 1/6	7826	Channel - Rubber 9
1162	Screw (4-40 x 1/4 Fil) 2, 6	8222	Strip, Wearing 11
1163	Screw (4-40 x 3/16 Fil) 2	8330	Washer, Flat 2, 3, 4, 7, 11
1164	Screw (2-56 x 3/16 Fil) 5	8491	Strip, Wearing 6
1168	Screw (4-40 x 5/16 Fil) 3, 4, 6	8539	Screw (6-40 x 1/2 Hex) 1, 2, 3, 4, 12
1169	Screw (6-40 x 7/16 Fil) 4, 5	8543	Screw (6-40 x 1/4 Fil) 7
1177	Screw (4-40 x 11/32 Fil) 6	8896	Shim (.004") 3
1179	Screw (6-40 x 5/8 Fil) 4, 5, 9, 10	9512	Bridge 4
1196	Screw (6-40 Shoulder) 2	9515	Bridge Assembly 4
1206	Screw (6-40 x 9/16 Fil) 3, 6	9520	Block Assembly 4
1248	Screw (6-40 x 1/2 Flat) 3	9569	Screw (3-56 Contact) 4
1264	Screw (10-32 x 5/16 Flat) 5	32464	Nut (5-40 Hex) 3
1266	Screw (6-32 x 7/16 Rd) 11	34432	Washer, Flat 3
1293	Screw (4-40 Special) 6	34464	Spring 7
1297	Screw (6-40 x 5/16 Fil) 12	36273	Washer, Flat 11
2084	Roller (.125" Wide) 2	41675	Washer, Flat 12
2191	Washer, Lock 1 to 12	41732	Plate, Clamp 3, 6, 12
2201	Nut (5/16 - 32 Hex) 2	41733	Insulator 3, 6
2438	Washer, Flat 3, 12	55669	Spring 10
2669	Washer, Lock 1, 3, 4, 9, 12	58221	Screw (6-32 x 1/4 Fil) 4
2846	Washer, Flat 1	62135	Screw (6-32 x 5/8 Rd) 13
2986	Bushing, Insulating 12	70722	Resistor - 500 Ohms 12
3094	Insulator 12	70724	Insulator 12
3288	Washer, Flat 2	70873	Cap, Brush 11
3432	Terminal, Wire 4	70887	Nut (10-24 Hex) 12
3438	Washer, Flat 2, 9	71672	Clamp, Cable 13
3444	Bracket 4	72069	Shim (.002") 6
3598	Nut (6-40 Hex) 2, 7, 11, 12	72508	Screw (6-40 x 3/4 Hex) 13
3599	Nut (4-40 Hex) 2	72579	Washer, Flat 2
3606	Nut (6-40 Hex) 2	72644	Bearing, Ball 2
3618	Insulator 6	73180	Switch, Toggle 1
3620	Washer, Insulating 12	74059	Screw (6-40 x 7/32 Hex) 3, 11
3624	Washer, Flat 6	74520	Screw (6-40 Shoulder) 7
3639	Washer, Lock 2	74569	Block, Terminal 4
3640	Washer, Lock 2, 3, 4, 6, 8, 12	74687	Screw (6-40 x 5/8 Fil) 4
3646	Washer, Lock 2, 13	74727	Terminal 3
3649	Washer, Flat 5	74728	Terminal 12
3650	Washer, Flat 13	74757	Bracket 12
4293	Insulator 13	74838	Cap, Bearing 3
4703	Spring 10	74986	Screw (6-40 x 13/32 Hex) 3
4707	Washer, Flat 4	75607	Shim 4
4708	Spring 5	76086	Spring, Friction 2
4814	Washer, Lock 2	76114	Screw (10-32 x 9/16 Special) 2
4871	Screw (10-24 x 1-1/4 Rd.) 12	76217	Bracket 12
5556	Plate, Top 6	76246	Bushing 3, 6
5599	Nut (8- 32 Hex) 13		

NUMERICAL INDEX (Continued)

Part Number	Description and Page Number	Part Number	Description and Page Number
76465	Bushing 13	82548	Insulator 12
76484	Fan 10	82626	Resistor - 20 Ohms 12
76532	Spacer 12	82702	Screw (6-40 x 9/32 Rd) 11
77001	Arm, Stop 3	82714	Motor (Model 5SH25AB14B) 10
77004	Bracket, Transmitter 1, 4, 5	84047	Plate, Stop 11
77012	Nut (9/16-32 Special) 2	84054	Spring, Contact 13
77018	Disk, Friction 2	84055	Spring, Contact 13
77020	Cover, Bearing 2	84056	Stiffener 13
77021	Bracket 3	84057	Terminal 13
77030	Tongue, Contact 6	84114	Yoke 3
77031	Bracket 13	84115	Armature 3
77034	Pinion - 7 T. 10	84579	Washer, Flat 2
77035	Bracket 3	84759	Guard, Gear 1
77036	Gear - 40 T. 10	84892	Stiffener 6
77040	Spring, Contact 3	86707	Motor Arrangement "AJ" 10
77046	Strip, Mounting 13	86811	Guard, Governor 12
77048	Bushing 3	86815	Arm, Brush Holder 3
77049	Lever, Operating 2	86853	Bracket Assembly 11
77050	Arm 2	86951	Resistor - 475 Ohms 2
77051	Post 3	86953	Bracket, Contact 12
77054	Post 3	86955	Spring, Contact 12
77056	Strip, Mounting 4	86958	Spring, Contact 12
77058	Hub, Cam 2	86959	Bushing, Insulating 12
77068	Plate, Base 5	86960	Contact Assembly 12
77080	Strip Assembly 4	87469	Cable 12
77082	Bracket 3	87636	Screw (2-25 x 3/16 Rd) 8, 9
77087	Bail Assembly 2	88121	Spring, Cam 7
77125	Contact Assembly 13	88122	Spring, Contact 7
77126	Cable 11	88123	Spring, Contact 7
77128	Washer, Fiber 2	88124	Spring, Contact 7
77129	Terminal 4	88125	Spring, Contact 7
77138	Shaft (with Hub) 2	88126	Spring, Contact 7
77140	Nut (9/16 - 32 Hex) 2	88127	Spring, Contact 7
77142	Bail 2	88128	Insulator 7
77143	Bail Assembly 2	88129	Plate, Clamp 7
77146	Strip, Wearing 2	88802	Screw (6-32 x 1-1/16 Flat) 12
78011	Capacitor - 1MF 12	89481	Shaft 3
78028	Screw (6-40 x 15/16 Hex) 11	89481	Shaft 3
78281	Plate, Name 8	89482	Collar 3
78301	Screw (10-32 x 5/8 Hex) 3	89484	Clamp 3
78430	Clamp, Cable 10	89925	Terminal 12
78905	Washer, Insulating 11	91121	Motor Arrangement "BX" 10
80165	Gear - 44 T. 2, 10	91131	Pinion - 13 T. 10
80166	Pinion - 9 T. 10	91132	Gear - 53 T. 10
80255	Screw (4-40 x 21/64 Fil) 8	91617	Shim (.010") 11
80352	Governor Assembly 11	91683	Nut (15/32 x 32 Hex) 1, 9
80444	Screw (6-40 x 1/4 Hex) 12	91684	Nut (15/32 x 32 Ring) 1, 9
80467	Screw (6-40 x 3/8 Fil) 3	91739	Strip, Insulating 4
80706	Screw (6-40 x 3/16 Set) 7	91755	Switch, Toggle 9
80957	Screw (4-40 x 1/4 Hex) 3	91739	Strip, Insulating 4
81638	Spacer 12	92217	Filter Assembly 9
81726	Terminal 6	92527	Washer, Lock 13
81778	Screw (4-40 x 3/16 Fil) 13	93009	Spring, Brush 3
82283	Motor, Synchronous 10	93075	Nut (15/32-32 Special) 1
82440	Screw (6-40 x 7/16 Hex) 11	93141	Screw (6-40 x 7/32 Rd) 11
82474	Terminal 10, 11	93587	Washer, Flat 2
82547	Insulator 12	95174	Cover, Transmitter 8

NUMERICAL INDEX (Continued)

Page Number	Description and Page Number	Page Number	Description and Page Number
95935	Bushing, Insulating 11	107256	Screw (4-40 x 5/16 Headless) 7
95936	Coil, Choke 11	110435	Nut (4-40 Hex) 7
95937	Capacitor-1/100 MF 11	110440	Dowel 6
95938	Capacitor-1/10 MF 11	110883	Pinion - 12 T. 10
95953	Shim 6	110884	Gear - 36 T. 10
95954	Plate, Screw 6	111129	Gear Set 10
96874	Shim (.002") 3	111132	Gear Set 10
96883	Terminal 4	111146	Gear Set 10
97445	Lid, Retaining 6	112577	Roller (.155" Wide) 2
97446	Bracket 6	112622	Screw (4-40 Shoulder) 5
97447	Pin, Contact 6	112623	Screw (1/4 - 32 Pilot) 5
97448	Guide 6	112624	Screw (4-40 Shoulder) 6
97467	Spring Assembly 6	112626	Nut (10-32 Hex) 2
97468	Guide, Tape 6	112627	Nut (2-56 Hex) 8
97720	Spring, Contact 6	112628	Nut (3-48 Square) 4
97721	Spring, Contact 6	112632	Spring, Detent 6
98069	Wire, Tape Guide 6	112635	Spring, Latch 6
98793	Stop Assembly 3	112636	Spring 5
98794	Rod 3	113396	Motor Arrangement "HJ" 10
98795	Bracket - Right 5	113812	Block Assembly 1
98796	Bracket - Left 5	113813	Strip, Terminal 1
98797	Holder Assembly 3	113814	Solenoid 1
98798	Arm, Brush 3	113906	Cable - Control 1
98799	Clamp, Brush Holder 3	113907	Cable - Line 1
98801	Insulator - Lower 3	114106	Sleeve, Cam 7
98803	Disk 4	114942	Cable - Transmitter 1
98808	Plate, Adjusting 4	115932**	Plate Assembly 13
98811	Ring, Adjusting 4	115933**	Plate 13
98814	Plate, Clamp 4	115935**	Guard - Left 13
98815	Filter Unit 9	115936**	Guard - Right 13
98816	Plate, Name 9	115937**	Guard 13
98819	Knob 8	116992	Screw (1/4-32 Pilot) 11
98820	Bracket 7	119929**	Base 1
98821	Pawl, Detent 9	119933**	Cover Assembly 9
99230	Plate, Lid 6	119934**	Plate, Mounting 7, 8
99354	Container 11	121927	Strap 11
99355	Bracket 11	122295	Motor (Model 5BA65AA179) 11
99356	Bracket 11	122747	Washer, Flat 2
99357	Clip 11	125011	Washer, Flat 3, 6
99403	Plate, Name 8	125013	Strap 12
101393	Lid Assembly 6	125015	Washer, Flat 7
101439	Stop, Feed Lever 5	125112	Screw (2-56 x 1/8 Fil) 4, 8
101441	Cam 2	125124	Screw (4-40 Shoulder) 2
101456	Screw (6-32 x 9/32 Rd) 4	125139	Screw (4-40 x 1/8 Fil) 4
101713	Terminal 4	125155	Screw (6-40 x 1/2 Fil) 5
101714	Spring 6	125168	Screw (6-40 x 1/2 Set) 7
102067	Rail-Right 13	125197	Screw (3-48 x 5/16 Rd) 4
102069	Rail-Left 13	125218	Nut (1/4-32 Hex) 3
103182**	Panel 8	125229	Nut (6-32 Hex) 4
104451	Washer, Lock 11	125278	Pin 6
105074	Spring, Brush 3	125280	Pin 6
105075	Plate, Clamp 3	125330	Screw (8-40 x 2-1/2) 2
105076	Spring, Brush 3	125332	Terminal 4
105077	Insulator - Upper 3	125427	Bushing 6
105220	Bushing 6	125696	Post, Spring 3
106882	Motor Arrangement "GJ" 10	125814	Bearing, Lever 5
107251	Bracket, Spring 7	125820	Tip, Screw 4

NUMERICAL INDEX (Continued)

Part Number	Description and Page Number
125828	Shaft, Lever 5
125829	Lever, Feed 5
125833	Lever, Guide 5
125844	Lever, Adjusting 2
125848	Lever #1 6
125849	Lever #2 6
125850	Lever #3 6
125851	Lever #4 6
125852	Lever #5 6
125856	Block, Terminal 4
125858	Pawl, Feed 5
125861	Roll, Feed 6
125862	Bearing, Feed Roll 6
125867	Bracket, Detent 6
125868	Detent Assembly 6
125869	Lever, Detent 6
125870	Roller, Detent 6
125871	Holder, Lid 6
125872	Shaft 6
125873	Latch 6
139778	Switch, Toggle 1
151659	Screw (6-40 x 1/2 Fil) 5

