

28G AND 28H TRANSMITTER-DISTRIBUTOR
MOUNTING AND COVER ASSEMBLIES
WIRING DIAGRAM

1. GENERAL

- 1.01 This section contains the wiring of the 28G and 28H transmitter-distributor mounting and cover assemblies. These are the bases for the self-contained 28G multicontact and 28H single-contact fixed head transmitter-distributor units, respectively.
- 1.02 This section is reissued to include the wiring for the 28H-1 transmitter-distributor mounting and cover assembly.

NOTES FOR POWER SUPPLY FOR TRANSMITTER AND DISTRIBUTOR MAGNETS:

1. EXTERNAL 115V DC.
WIRING SHOWN IN SOLID LINES WITH STRAPS MARKED X.
2. EXTERNAL 48V DC.
WIRING SAME AS FOR EXTERNAL 115V DC EXCEPT ADD DOTTED STRAP FROM V6 TO V5 AND FROM V3 TO V2.
3. INTERNAL 115V DC.
WIRING SAME AS FOR EXTERNAL 115V DC EXCEPT:
A. ADD DC POWER SUPPLY AND CIRCUITS SHOWN IN DOTTED LINES.
B. REMOVE THE STRAPS MARKED X.
4. TERMINALS Z30 AND Z31 ARE USED FOR DIST AUX B CONTACTS.
5. FOR CONNECTORS "E" & "Z" PROVIDE EXTERIOR CONNECTORS 114466 CONNECTOR (PLUG) & 171554 CONNECTOR (MALE) RESPECTIVELY.

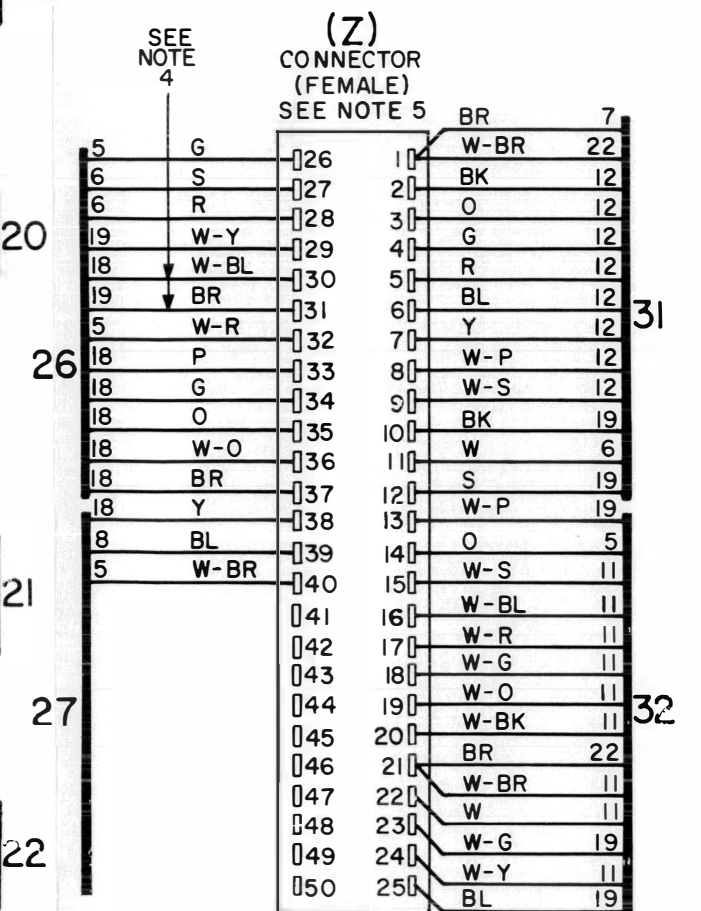
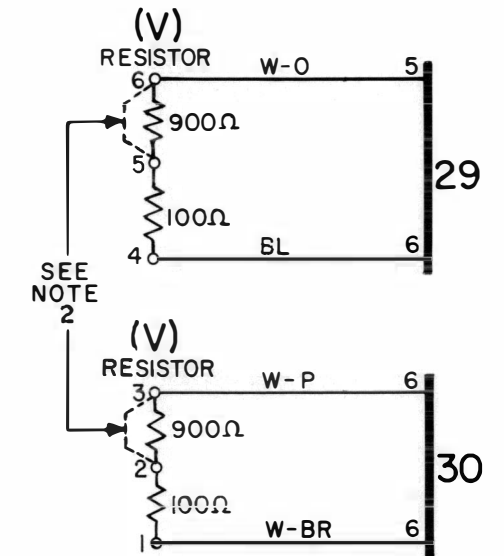
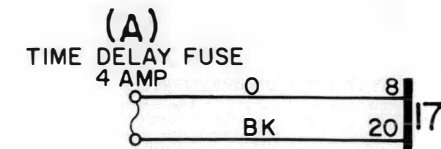
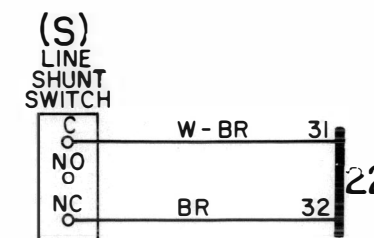
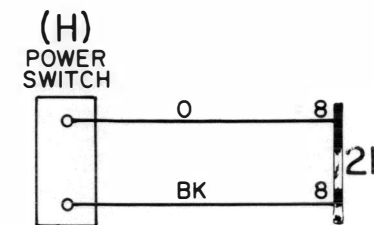
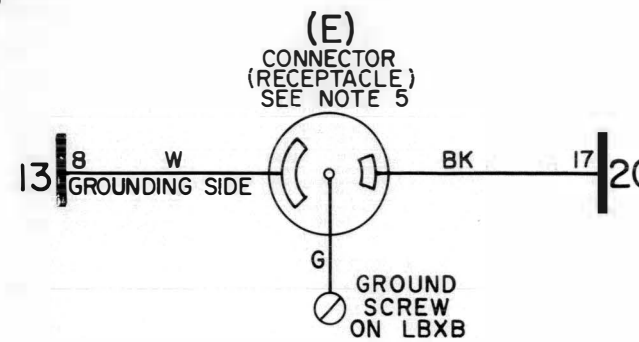
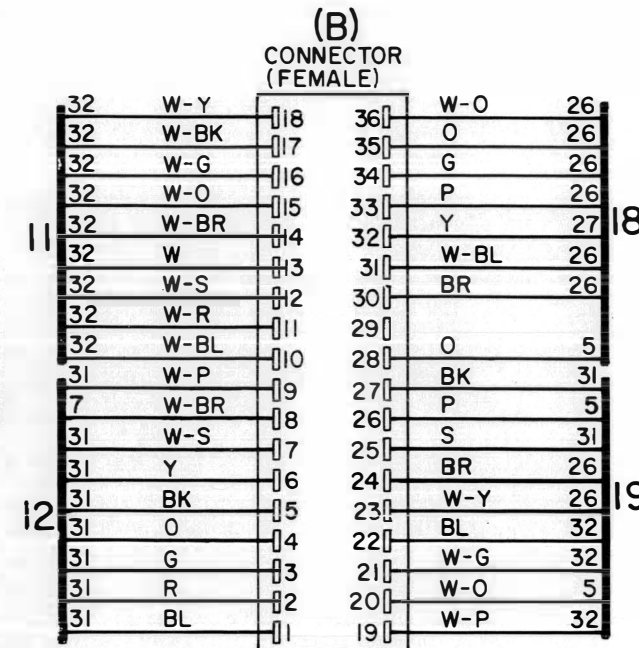
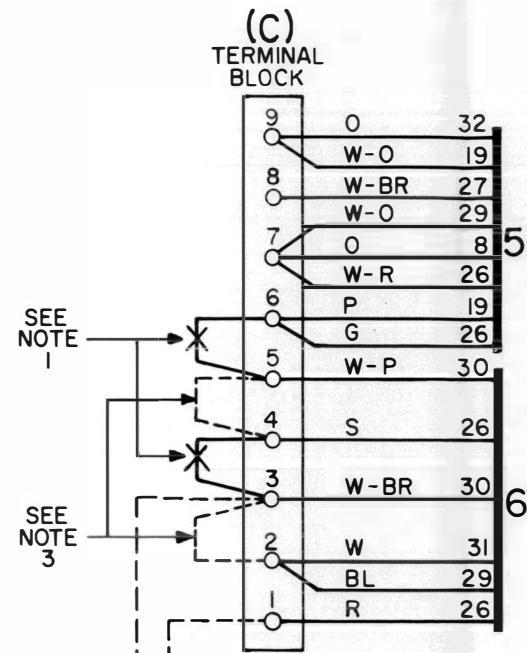
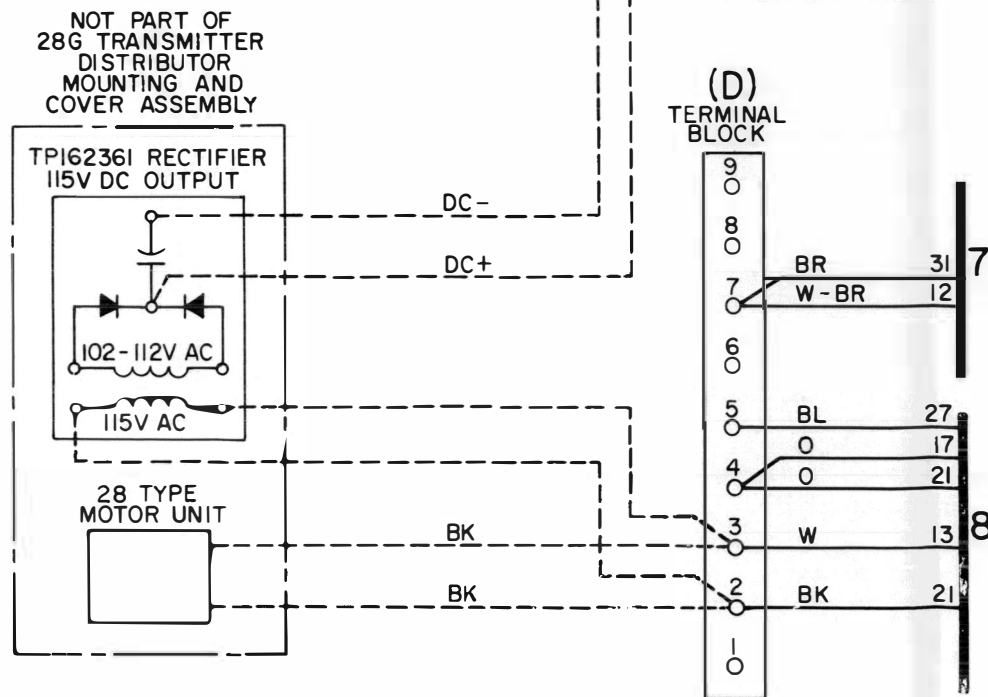


Figure 1 - 28G Transmitter-Distributor Mounting and Cover Assembly

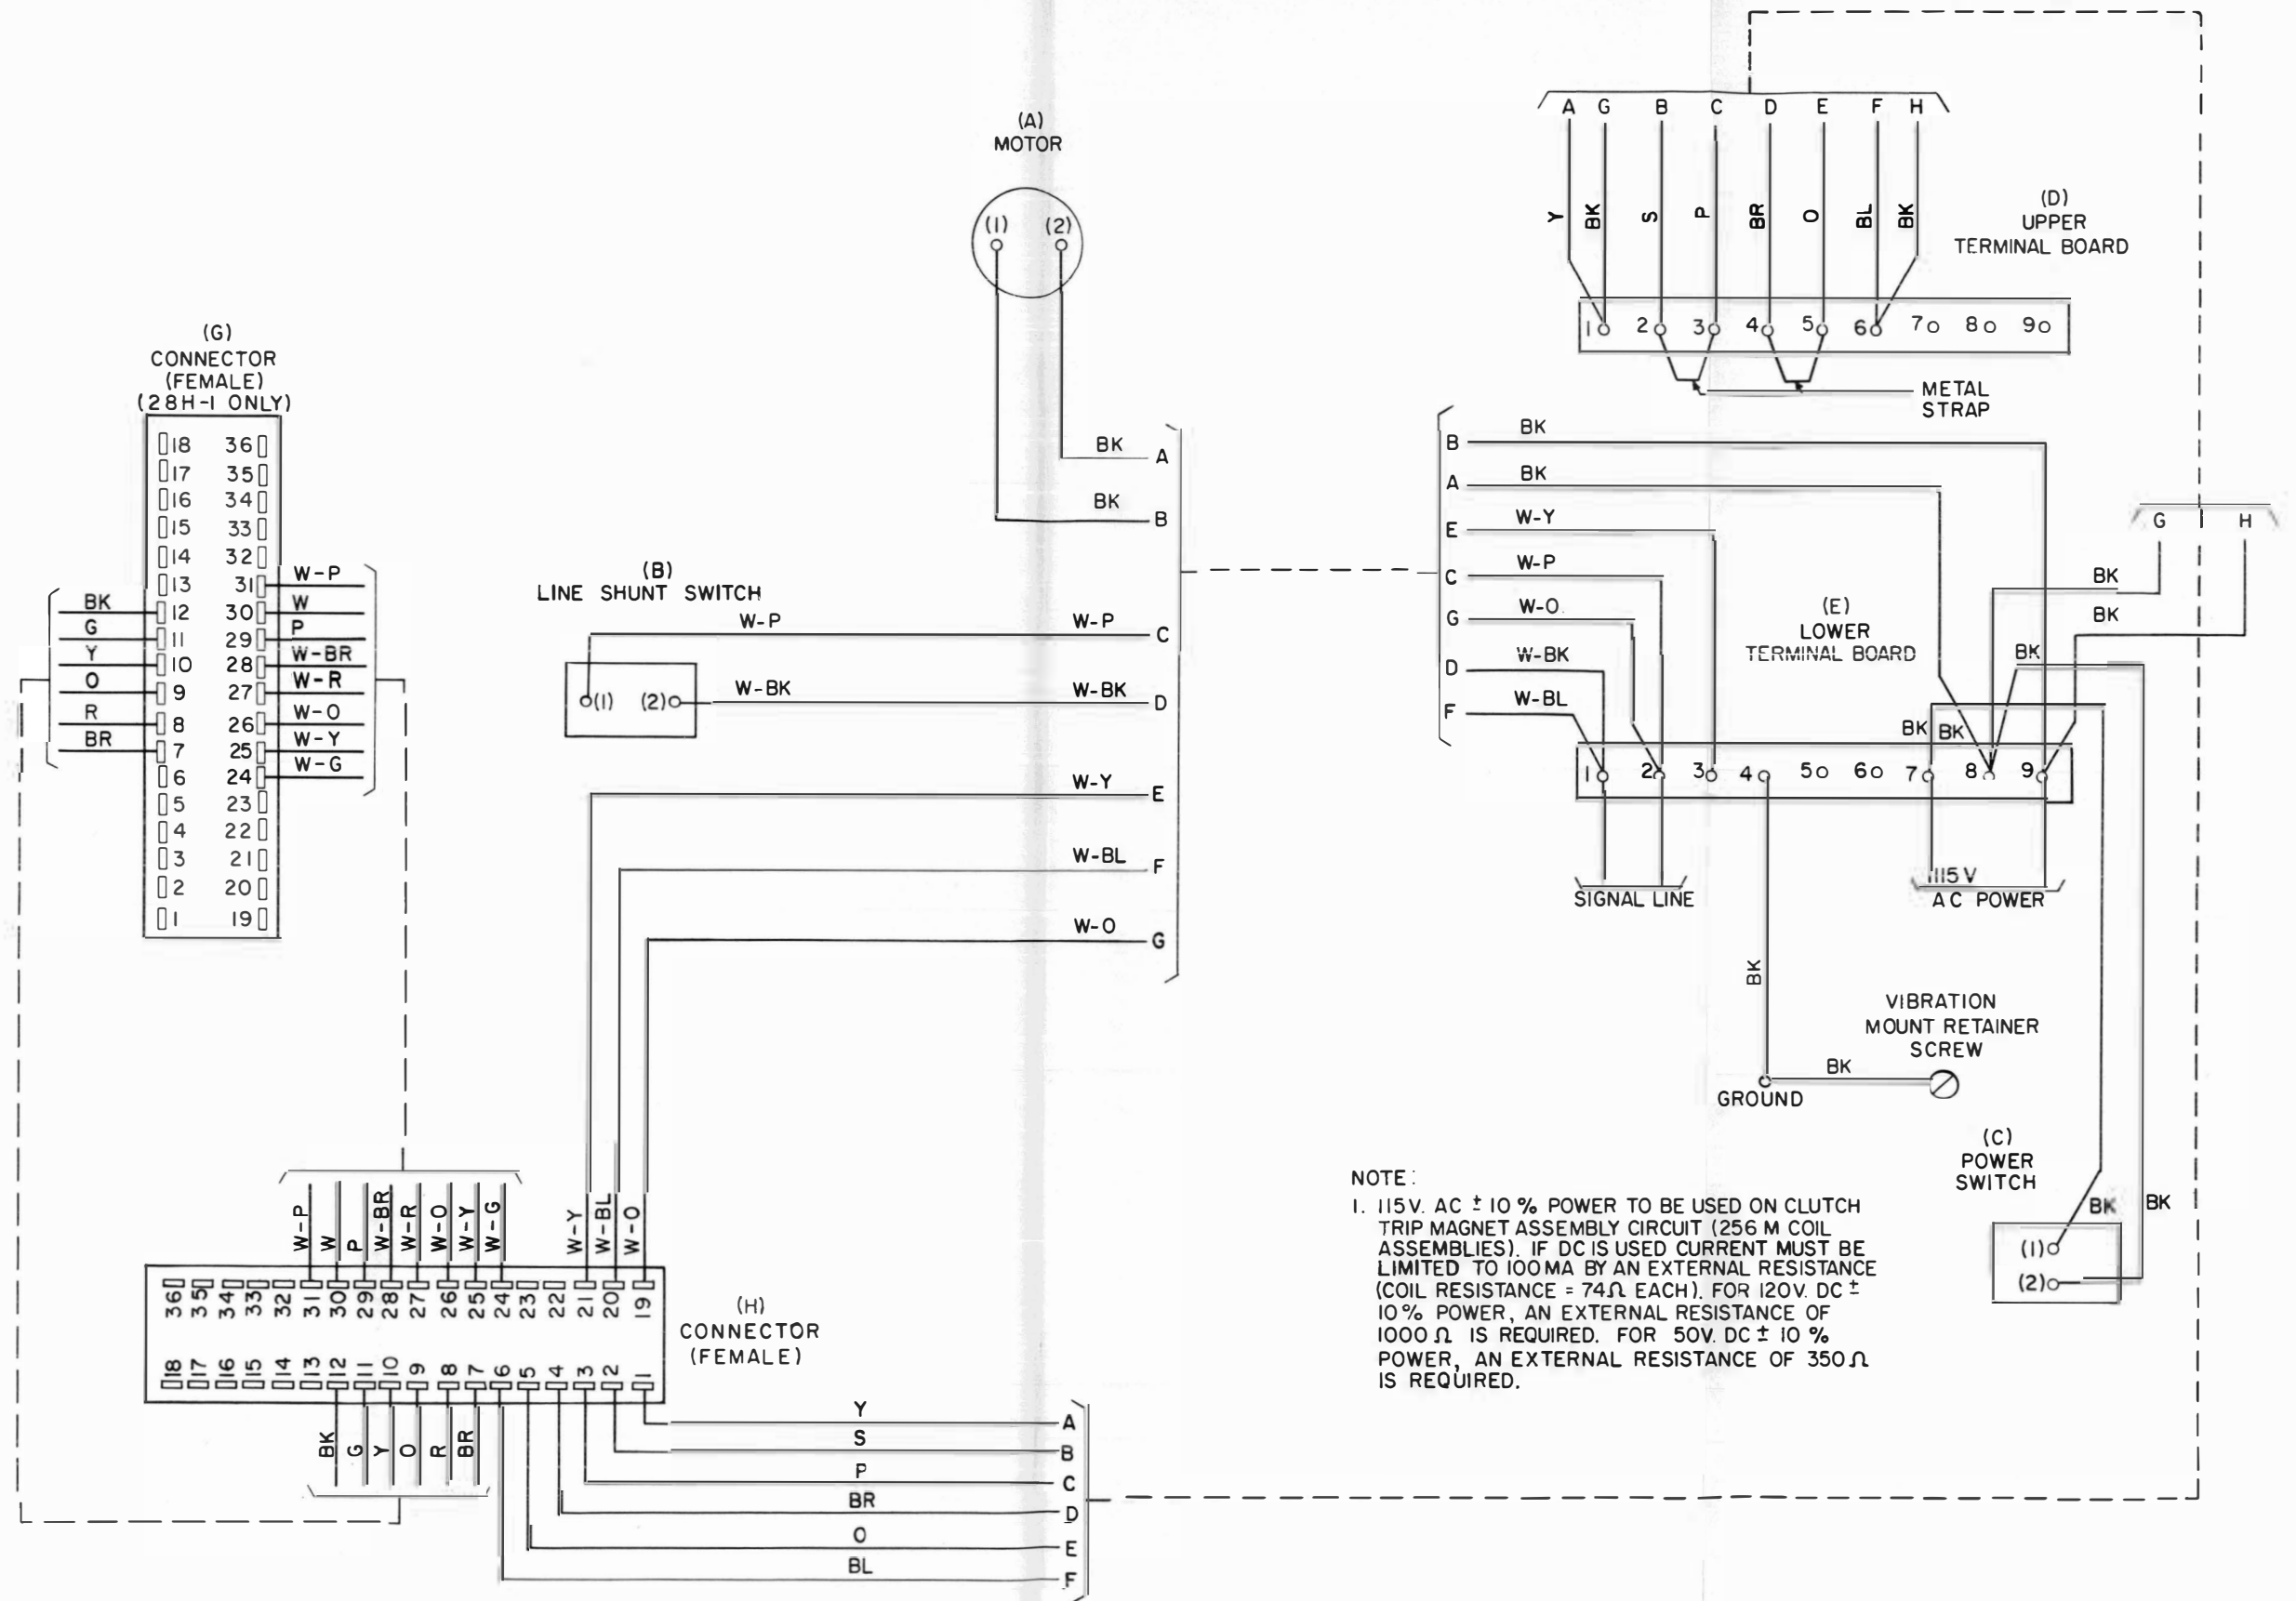


Figure 2 - 28H and 28H-1 Transmitter-Distributor Mounting and Cover Assembly