 


CODED TOOLS
665A TO 671A
DESCRIPTION

TOOL, 665A

A & M Only

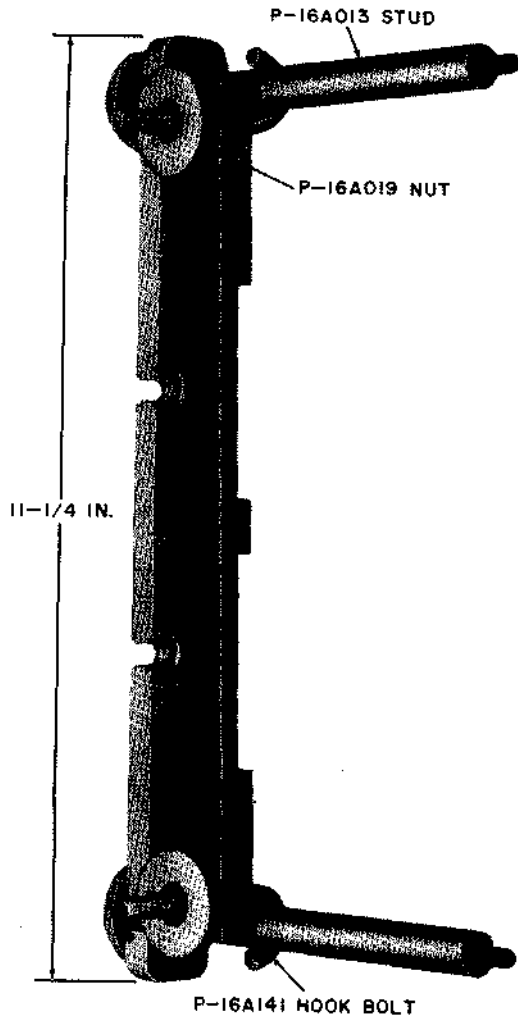

 
Bridge

Order this tool for replacement purposes only if the office is equipped with the 1012A tool kit. The 1012A tool kit is no longer available as a complete kit.

For use with 666A, 667A, and 668A tools in replacing core plates and coils of 287- and 288-type relays.

TOOL, 665B

A & M Only

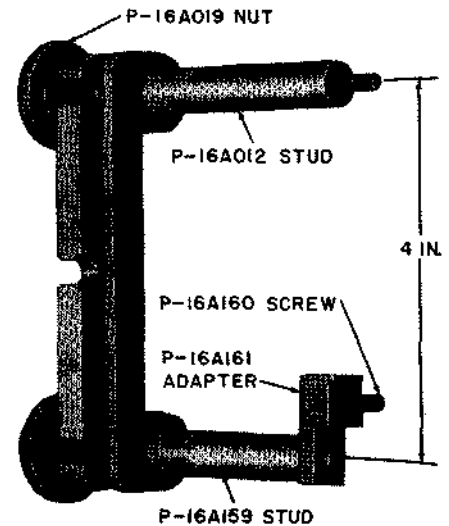


Bridge

Order this tool for replacement purposes only if the office is equipped with the 1012A tool kit. The 1012A tool kit is no longer available as a complete kit.

For use with 666A, 667A, and 668A tools in replacing core plates and coils of 286-type relays.

TOOL, 666A

 A & M Only

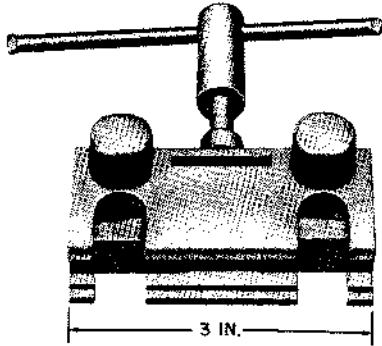


Core plate replacer

Order this tool for replacement purposes only if the office is equipped with the 1012A tool kit. The 1012A tool kit is no longer available as a complete kit.

For use in replacing core plates of 286-, 287-, and 288-type relays.

 TOOL, 666B

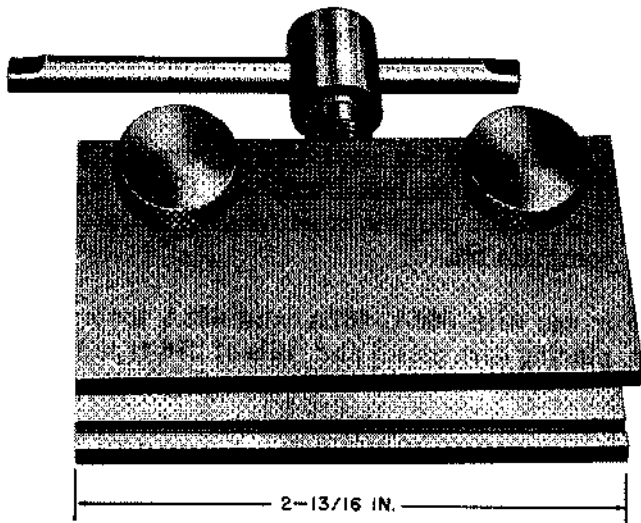

Core plate replacer

 
Replaces the 716C tool.

This tool forms a part of the 1014B tool kit.

For use in replacing core plates of 286-, 287-, and 288-type relays.

TOOL, 667A

A & M Only

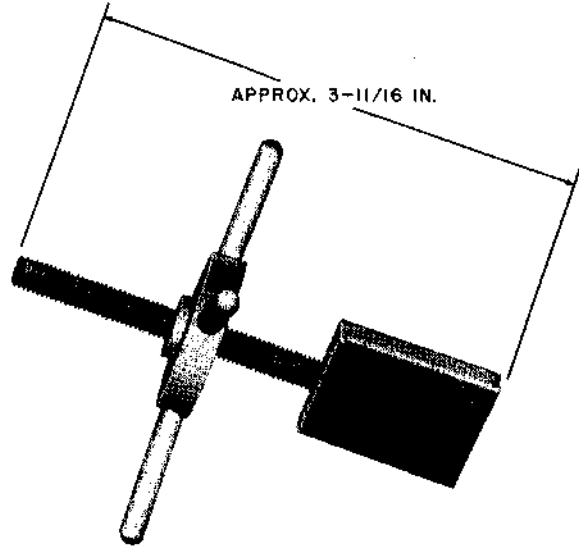


Coil Positioner

Order this tool for replacement purposes only if the office is equipped with the 1012A tool kit. The 1012A tool kit is no longer available as a complete kit.

For use in mounting coils of 286-, 287-, and 288-type relays.

TOOL, 668A

 A & M Only

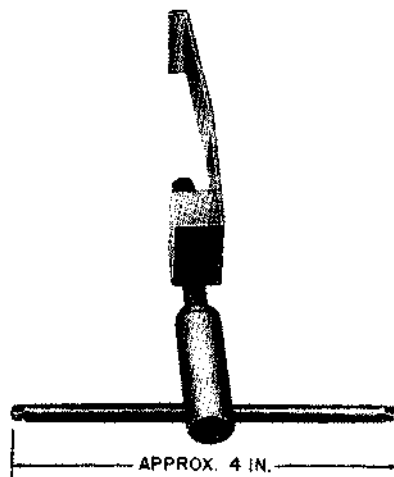


Coil remover

Order this tool for replacement purposes only if the office is equipped with the 1012A tool kit. The 1012A tool kit is no longer available as a complete kit.

For use in removing coils of 286-, 287-, and 288-type relays.

TOOL, 669A

 A & M Only




Contact separator

Order this tool for replacement purposes only if the office is equipped with the 1012A tool kit. The 1012A tool kit is no longer available as a complete kit.

For use in replacing parts of 286-, 287-, and 288-type relays.

 TOOL, 670A

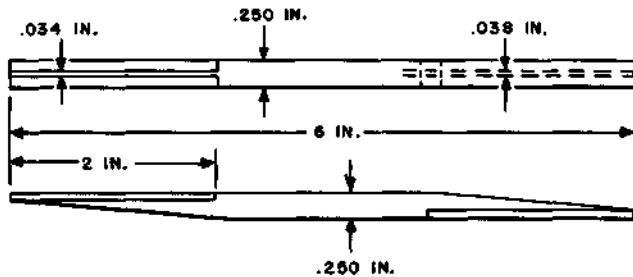


Screwdriver

Replaces the D-158524 double-end screwdriver.

For use in replacing step-by-step bank insulators.

 TOOL, 671A

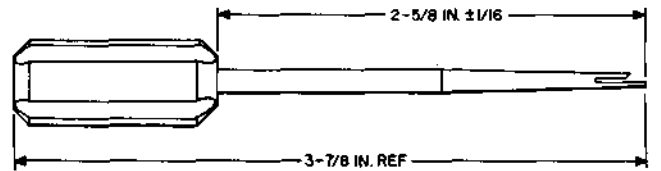

Magnetic separator adjuster

Replaces the D-167912 magnetic separator adjuster.

For use in applying magnetic separators to Y-type relays.