

TOOL

BREAKOFF, TANG - DESCRIPTION

1. GENERAL

- 1.01 This section covers a noncoded breakoff tang tool
- 1.02 When this section is reissued, the reason for reissue will be listed in this paragraph.
- 1.03 The information contained in this section supersedes the corresponding information in Section 074-800-101.

BREAKOFF, TANG, HELI-COIL CORP., NO. 1196-5

This tool is used for breaking off the 1191-5CN insert tangs after insertion. It consists of a steel rod and a holder in which the rod slides. The use of this tool is covered in Section 034-335-801.

NOTICE

Not for use or disclosure outside the
Bell System except under written agreement