

HIGH SPEED TAPE TO TAPE SYSTEM

**BULLETIN 285B
VOL. 1**

**TECHNICAL MANUAL
TYPE 1 AND TYPE 2
TAPE SENDERS AND RECEIVERS**



**TELETYPE[®]
CORPORATION**
5555 TOUHY AVENUE, SKOKIE, ILLINOIS

HIGH SPEED TAPE TO TAPE SYSTEM

**BULLETIN 285B
VOL. 1**

**TECHNICAL MANUAL
TYPE 1 AND TYPE 2
TAPE SENDERS AND RECEIVERS**



**TELETYPE[®]
CORPORATION**
5555 TOUHY AVENUE, SKOKIE, ILLINOIS

INTRODUCTION

Bulletin 285B provides general and specific technical information for the Type 1 and Type 2 Tape Sender and Tape Receiver Sets.

The Bulletin is made up of two volumes. Volume 1 is a technical manual and consists of the general description and operating procedures; installation and checkout procedures; test, adjustment, and trouble shooting guide; and tools and maintenance supplies for both the Tape Sender and Tape Receiver Sets. The electronic circuitry, power supply, cabinets, tape reader, and tape punch, used with each or either set, are covered in individual sections within the manual. Volume 2 contains schematic and actual wiring diagrams.

Each volume is made up of a group of independent sections. The sections are complete within themselves; they are separately identified by title and section number, and the pages of each section are numbered consecutively, independent of other sections.

The identifying number of a section, a 9-digit number, appears at the top of each page of the section, in the left corner of left-hand pages and the right corner of right-hand pages. The sections are placed in the manual in ascending numerical order.

To locate specific information refer to the table of contents on the following page. Find the name of the involved component in column one and the title of the section in column two. The correct 9-digit section number will then be found in column three. Turn to page one of the section indicated, where the contents of that section will be found (except where a section is small and does not require a listing of contents).

The sections comprising this bulletin are now stocked separately and may be individually ordered if the entire bulletin is not required.

VOLUME 1
TABLE OF CONTENTS

FILING INSTRUCTIONS

1. The following filing instructions apply to changes sent to the field.
2. Asterisks (*) in the table of contents indicate changes.
3. When the issue of a section changes, replace the old issue with the attached new one.
4. In the case of addendums, turn to the affected section and follow the instructions on the first page of the attached addendum.
5. Replace the old table of contents with this new one.

<u>Equipment</u>	<u>Title</u>	<u>Section</u>	<u>Issue</u>
Overall	General Description and Operating Procedure	592-800-100TC	4
Electronic Circuitry	General Description and Principles of Operation	592-800-101TC	2
Tape Reader	General Description and Principles of Operation	592-801-100TC	5*
Tape Reader	Requirements and Adjustments	592-801-700TC	5*
Tape Reader	Lubrication	592-801-701TC	5*
Tape Reader	Disassembly and Reassembly	592-801-702TC	5*
Tape Punch	General Description and Principles of Operation	592-802-100TC	3
Tape Punch	Requirements and Adjustments	592-802-700TC	3
Tape Punch	Lubrication	592-802-701TC	3
Tape Punch	Disassembly and Reassembly	592-802-702TC	3
Overall	Installation and Checkout Procedure	592-805-200TC	3
Power Supply 1A	Description and Wiring Diagrams	592-805-402TC	2
Overall	Test, Adjustment, and Trouble Shooting Guide	592-805-501TC	4
Cabinets	Requirements and Adjustments	592-805-700TC	3
Cabinets	Lubrication	592-805-701TC	3
Overall	Tools and Maintenance Supplies	592-805-702TC	2

Note: Issue 4 of Sections 592-801-100TC, -700TC, 701TC, and -702TC, received only limited distribution, therefore were not used in 285B, Volume 1.