

*Received from
B.S. ... 10/37*

TELETYPE

PRINTING TELEGRAPH SYSTEMS

RETURN TO
E. R. MCMURRY

*PAGE TELETYPE PARTS
(MODEL 18)*



TELETYPE

TELETYPE CORPORATION

Formerly MORKRUM-KLEINSCHMIDT CORPORATION

CHICAGO, U. S. A.

EE 205
CHICAGO, ILLINOIS
MAY 2, 1929.

CHANGE IN BULLETIN 1035
PAGE TELETYPE PARTS (MODEL 18)

On Pages 9, 10 and 49.

W-1764-C should be changed to 77400

W-1764-D should be changed to 77401

W-1764-E should be changed to 77402

W-1764-F should be changed to 77403

W-1764-G should be changed to 77404

W-1764-H should be changed to 77405

TELETYPE CORPORATION.

EFR

CHANGE IN BULLETIN #1035
PAGE TELETYPE PARTS (MODEL 18)

Pages 1 and 9.

Numbers have been assigned to the five and six unit receiving distributor units, which are to be used in place of #8701 when ordering.

#82140 is to be used for a five-unit receiving distributor unit, and #82141 is to be used for a six-unit receiving distributor unit.

Pages 37 and 38.

In order to get a slight tension on the #7318 contact levers, to prevent rebounding, the #2535 spacing collar, long, has been omitted, and a #75606 compression spring has been put around the shaft between the contact lever and the front bracket, using a #75607 washer at each end of the spring.

Pages 32 and 40, and Numerical Index.

The keylevers listed under the numbers given below should be described as follows:

#7482	Keylever - lower -	{ without disc }
#72983	" - center -	{ " " }
#72984	" - upper -	{ " " }

If it is desired to order these keylevers with the discs included, the following numbers should be used:

#74762	Keylever - lower -	{ with disc }
#9209	" - center -	{ " " }
#9210	" - upper -	{ " " }

Page 40, and Numerical Index.

The keylevers listed under the numbers given below should be described as follows:

#71067	Keylever - upper -	{ beveled (without disc) }
#71068	" - lower -	{ " " " }
#72985	" - upper -	{ (without disc) }

If it is desired to order these keylevers with the discs included, the following numbers should be used:

#77894	Keylever - upper -	{ beveled (with disc) }
#77895	" - upper -	{ " " " }
#9211	" - upper -	{ (with disc) }

Pages 32, 40, 50, and Numerical Index.

Part #5925 listed as "Break Key (With Knob)", should read "Break Key (Without Knob)". The knob is listed separately under #8256.


TELETYPE


PRINTING TELEGRAPH SYSTEMS

*PAGE TELETYPE PARTS
(MODEL 18)*




TELETYPE CORPORATION
Formerly MORKRUM-KLEINSCHMIDT CORPORATION
CHICAGO, U. S. A.

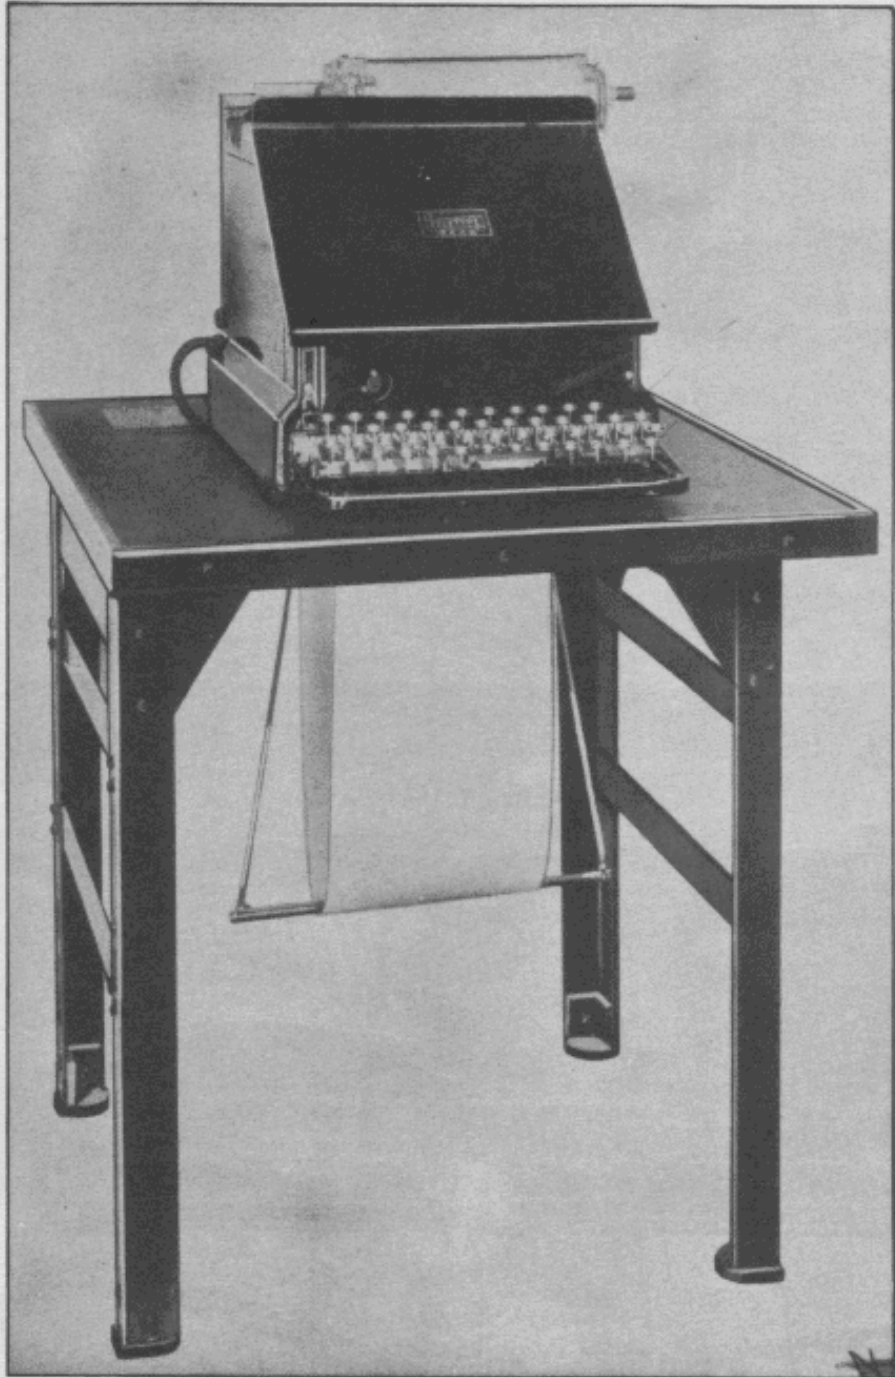



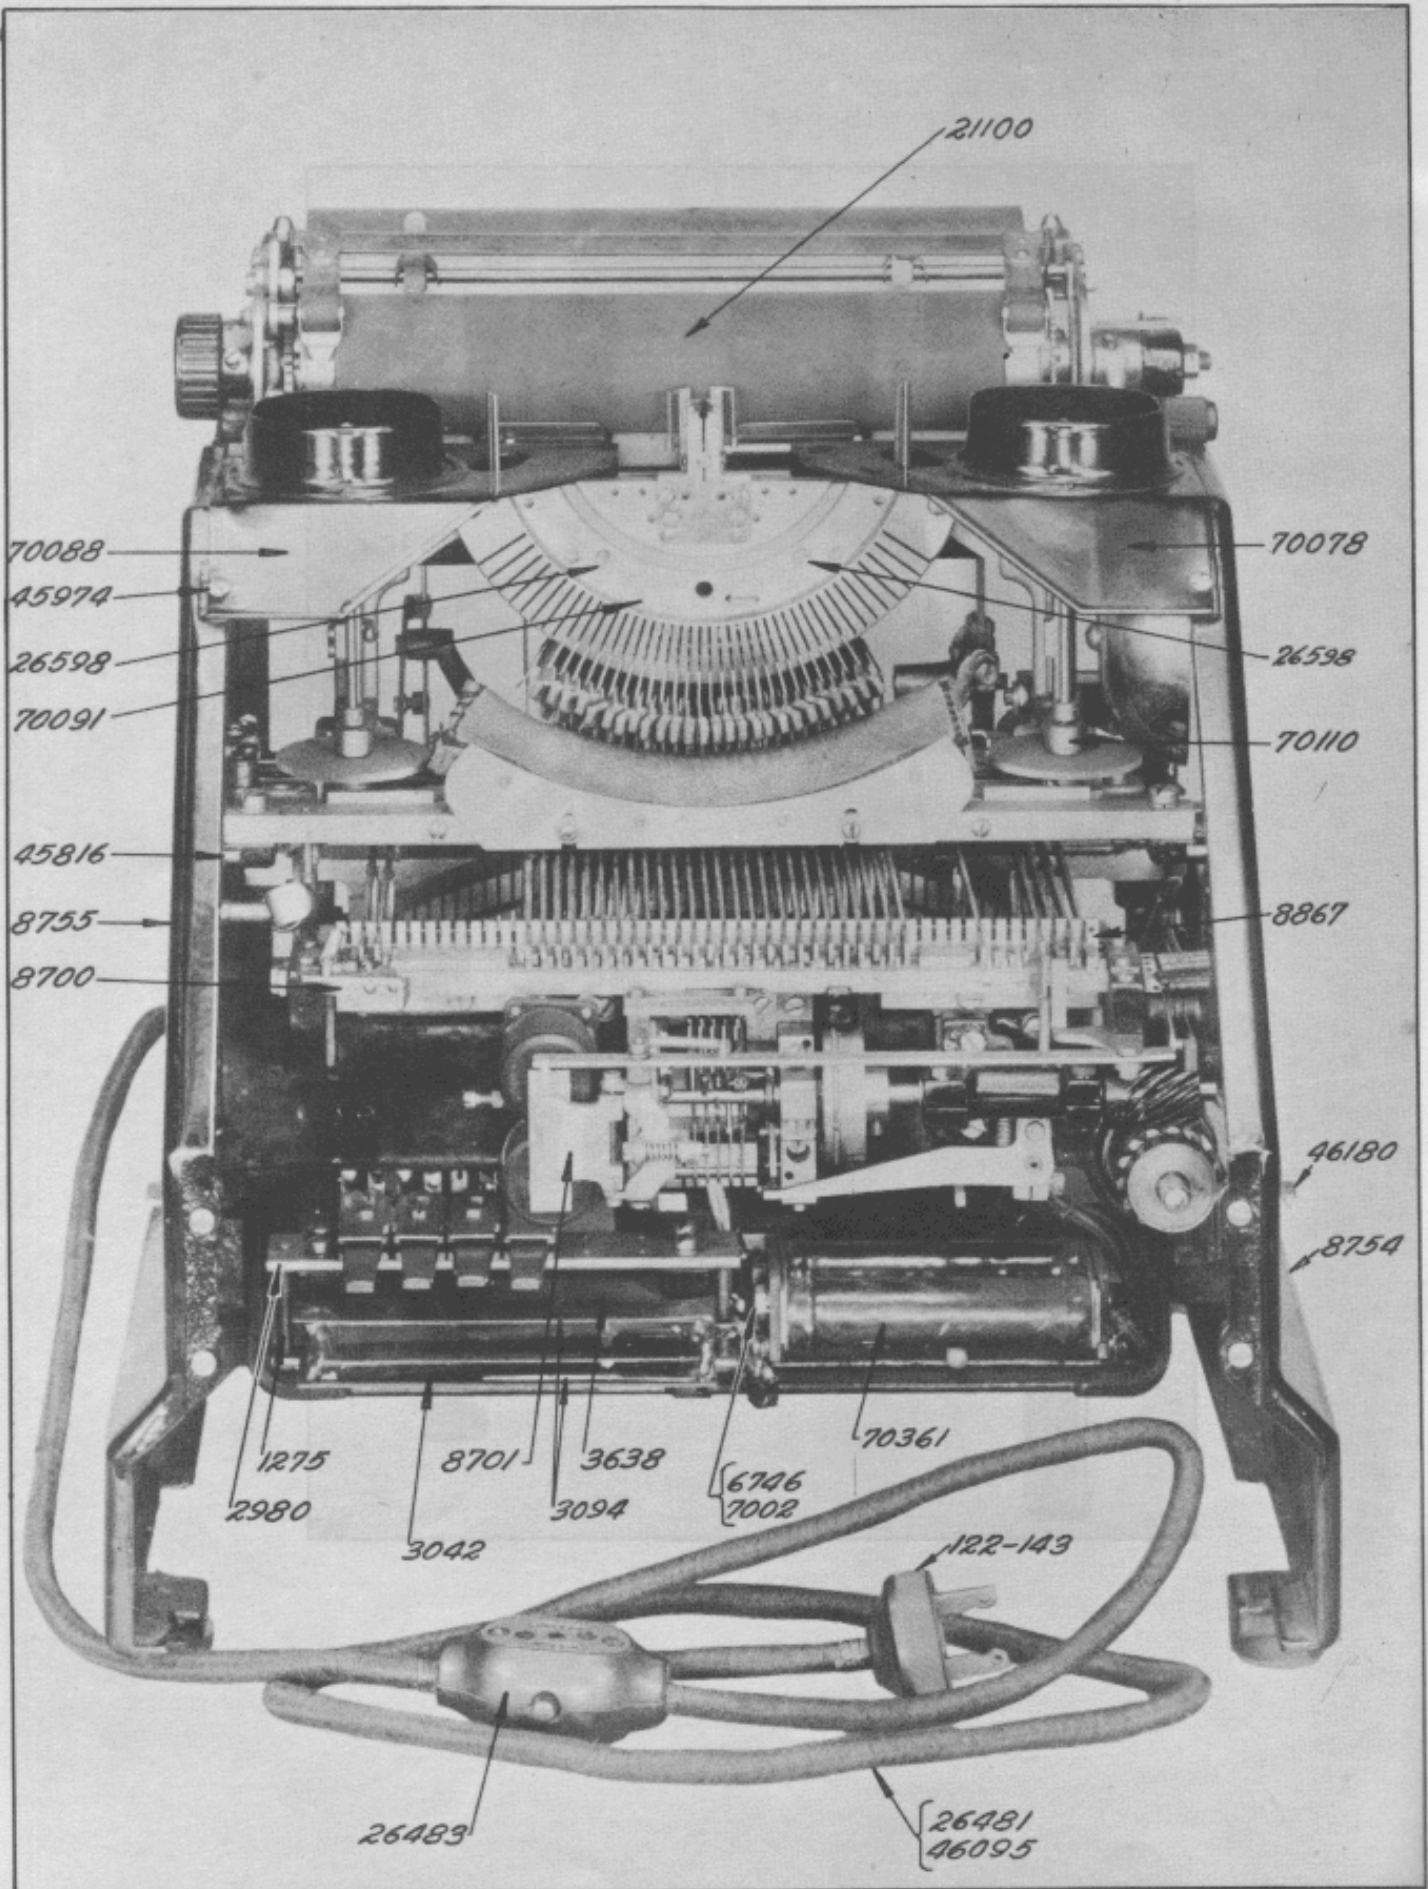


122-143 Hubbell Plug Cap
1275 Condenser Strap Screw
(10-32x1 1/2)
2980 Condenser Strap
3042 Resistance Unit
3094 Insulator
3638 1/2 M. F. Condenser
6746 Resistor Unit Screw
(6-40x5/16)
7002 Washer
8700 Selector Cross Bar (Assem).
See Pages 7 and 9
8701 Receiving Distributor Unit.
See Page 9
8754 Side Frame (R. H.) See Page 5
8755 Side Frame (L. H.) See Page 5
8867 Bail Shaft Unit. See Page 19
21100 Carriage (Complete).
See Page 15
26481 18 Cotton Covered Lamp Cord
(6 ft)
26483 Feed Thru Snap Switch
26598 Type Bar Segment Mtg. Screw
(8-32x7/16)
45816 Message Rack Holding Pin
45974 Top Cover Screw (5-40x1/4)
46095 Cord Clamp
46180 Cover Clamp (Assem).
See Page 5
70078 Top Cover R. H.
70088 Top Cover L. H.
70091 Type Bar Segment (Comp).
See Page 9
70110 Ribbon Feed Unit (Assem).
See Page 11
70361 Resistor Unit (Comp).
See Page 13

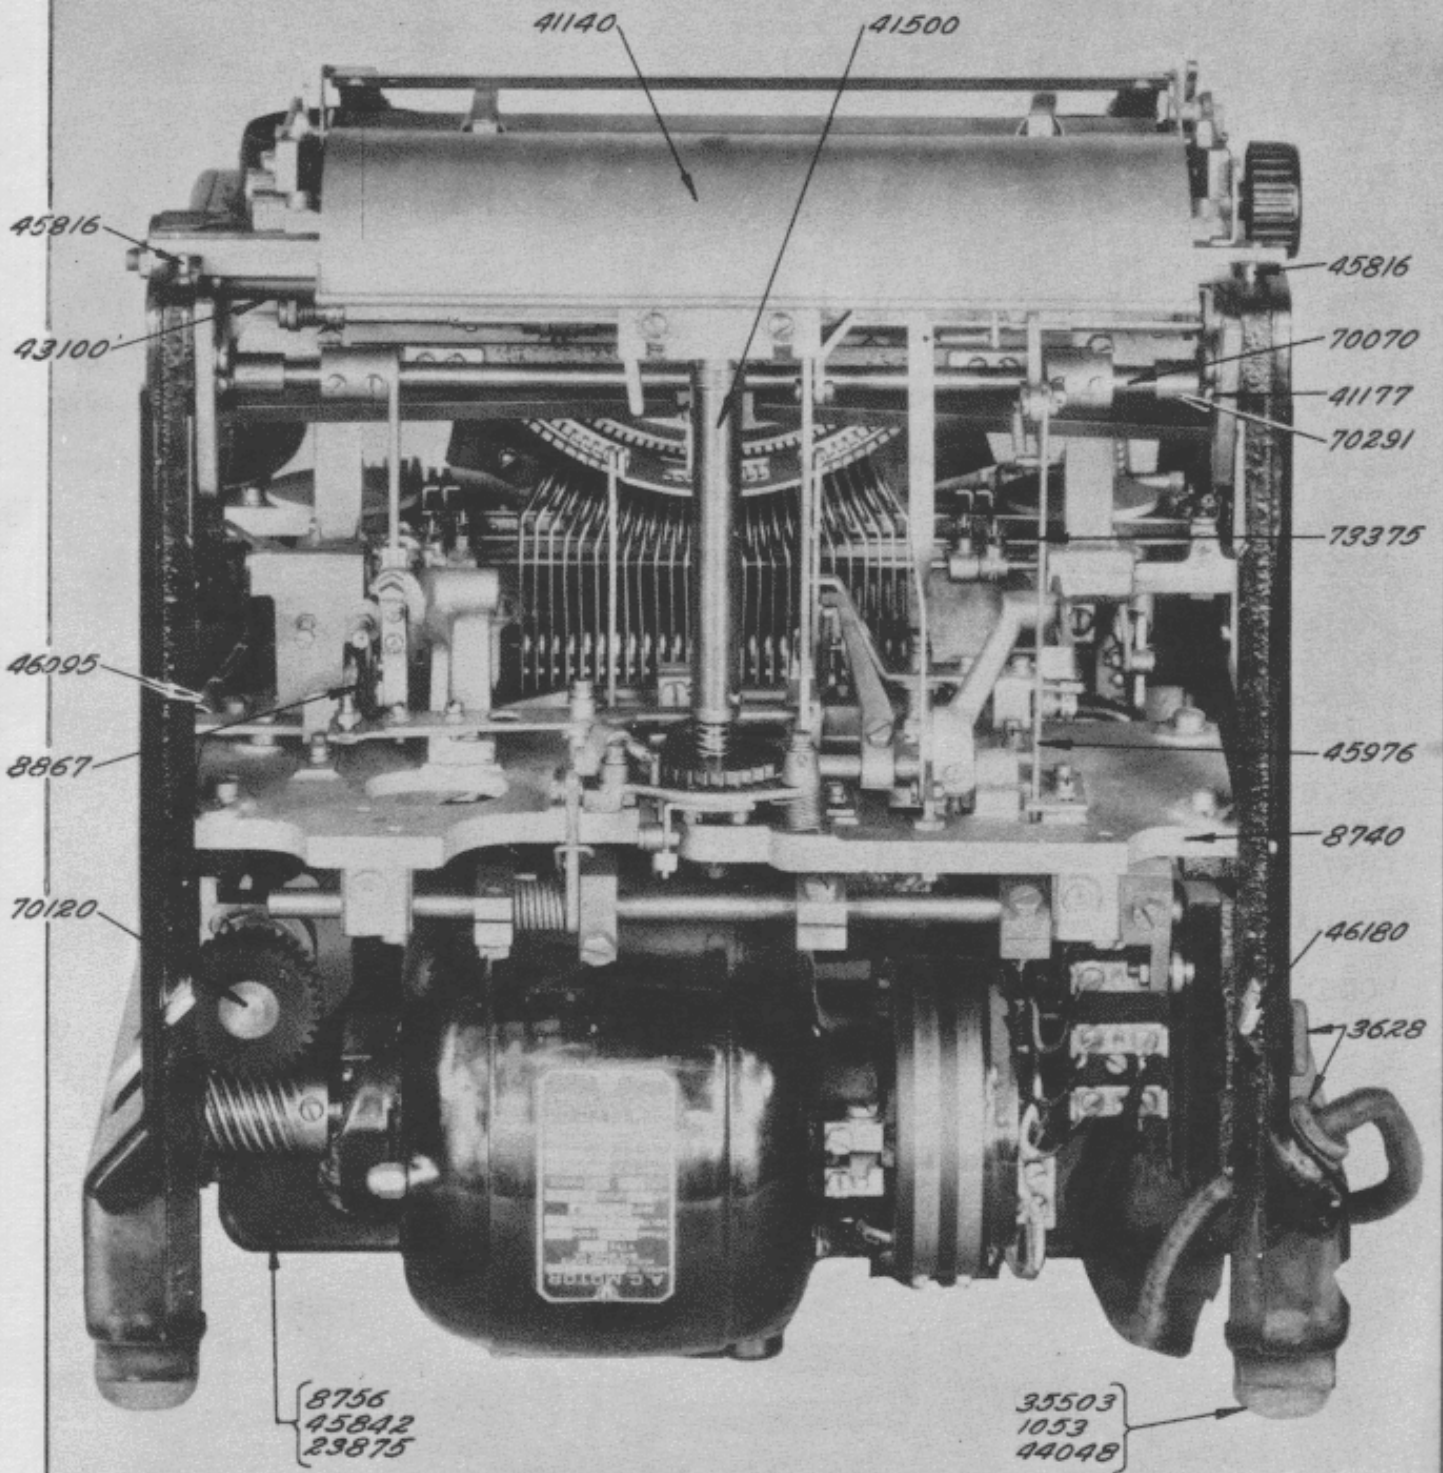


1053 8-32x1/2 Rd. Hd. Screw
3628 Cable Bushing
8740 Rear Plate (Assem). See Page 7
8756 Motor Cross Bar
8867 Bail Shaft Unit. See Page 19
23875 Dowel
35503 Frame Rest Foot (Rubber)
41140 Carriage Basket (Assem).
See Page 17
41177 Bearing Set Screw (8-40x7/32)
41500 Spacing Shaft Unit.
See Page 21
43100 Carriage Return Dash Pot Unit
(Assem). See Page 17
44048 Washer
45816 Rear Cover Stud
45842 Cross Bar Mtg. Screw
(12-24x1/2)
45976 Connecting Bar Spring
46095 Cord Clamp
46180 Cover Clamp (Assem).
See Page 5
70070 Shift Shaft Unit (Assem)
See Page 11
70120 Clutch Shaft Unit. See Page 21
70291 Shift Shaft Bearing
73375 Shift Shaft Conn. Bar
(With Stud)

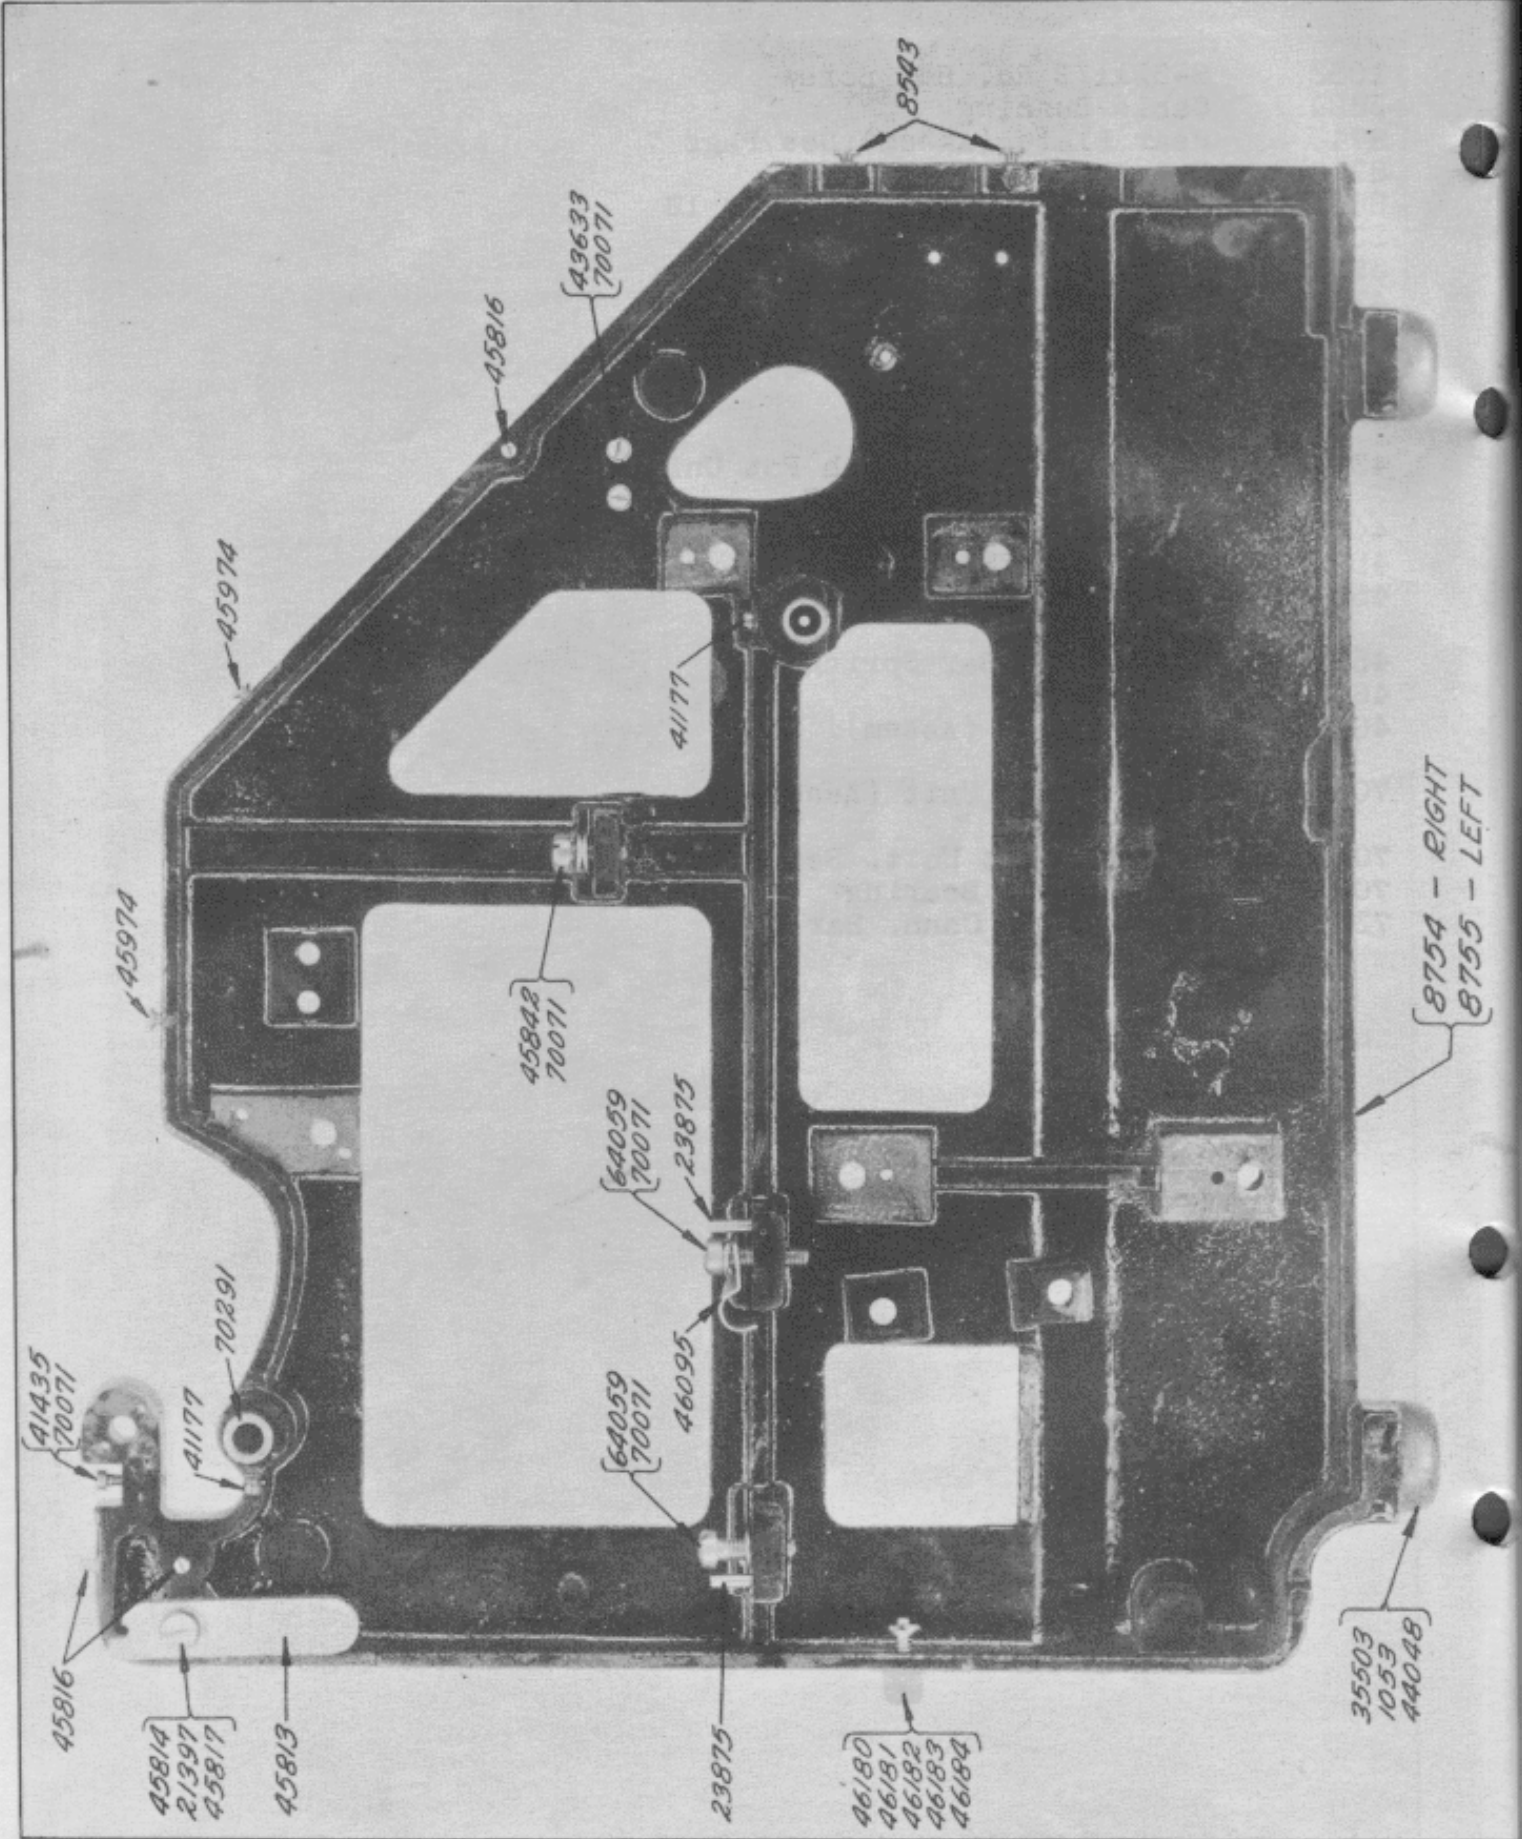


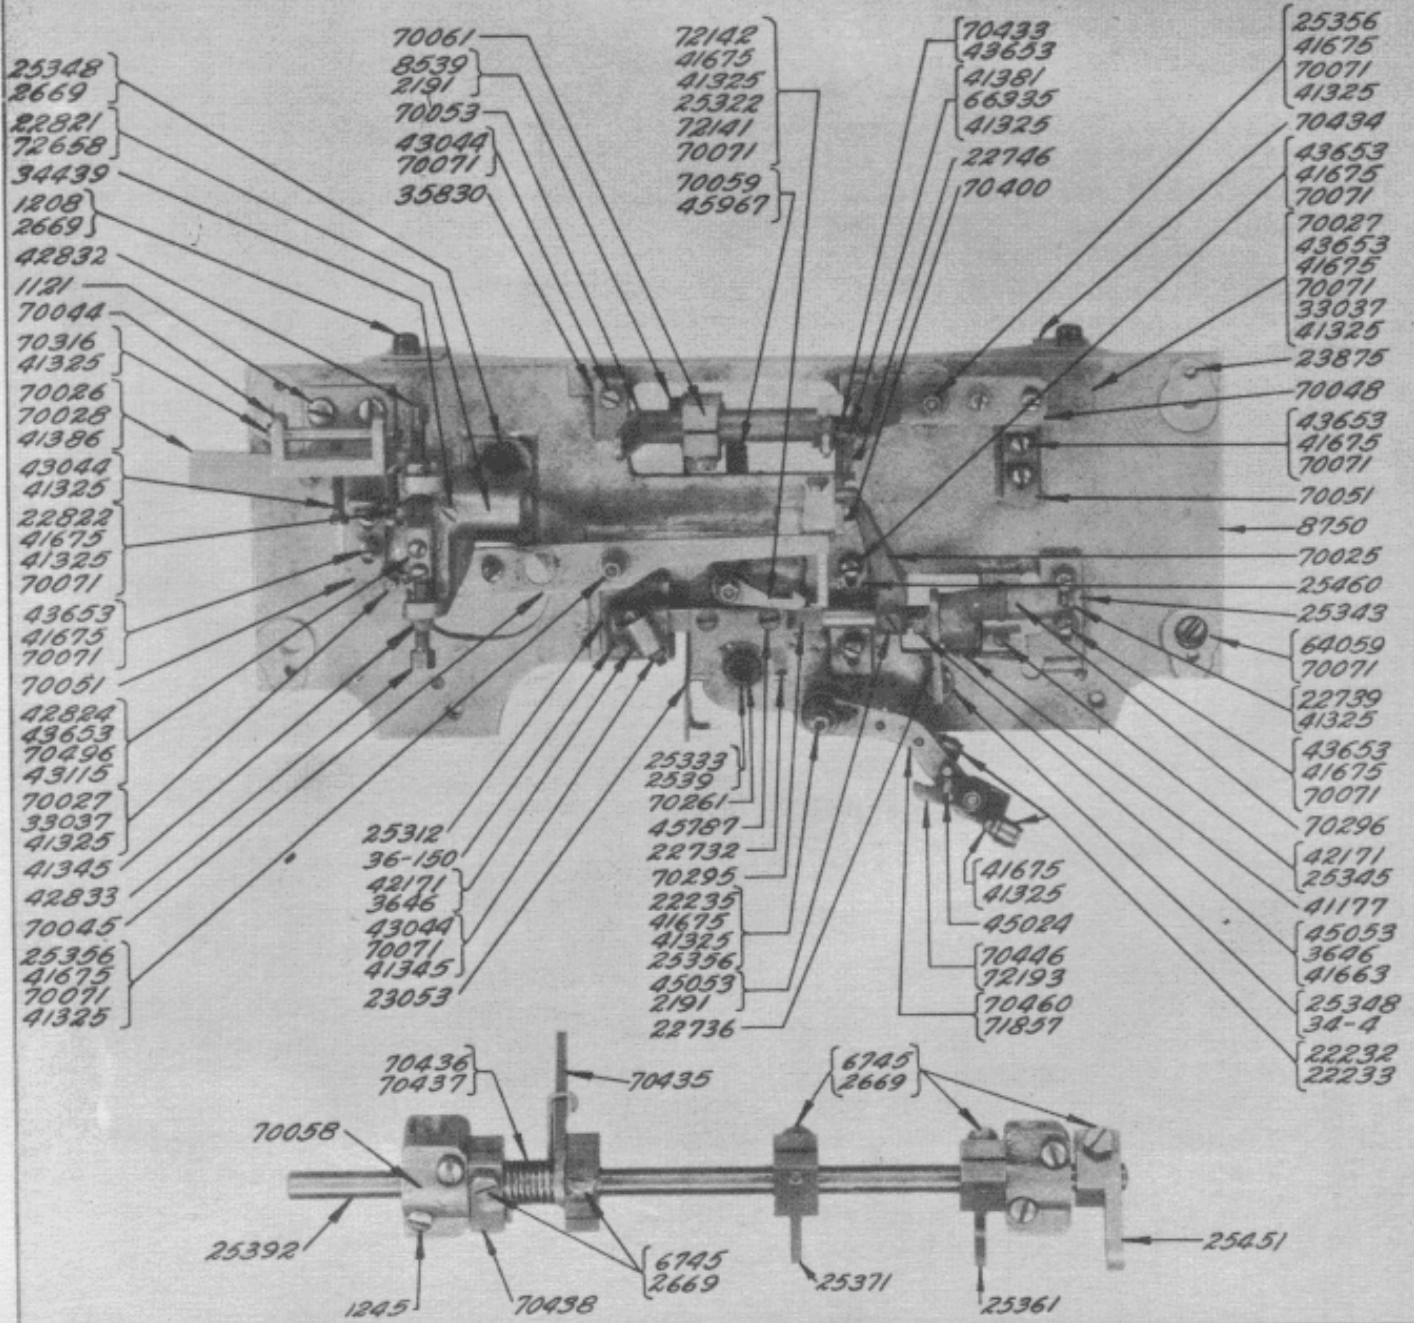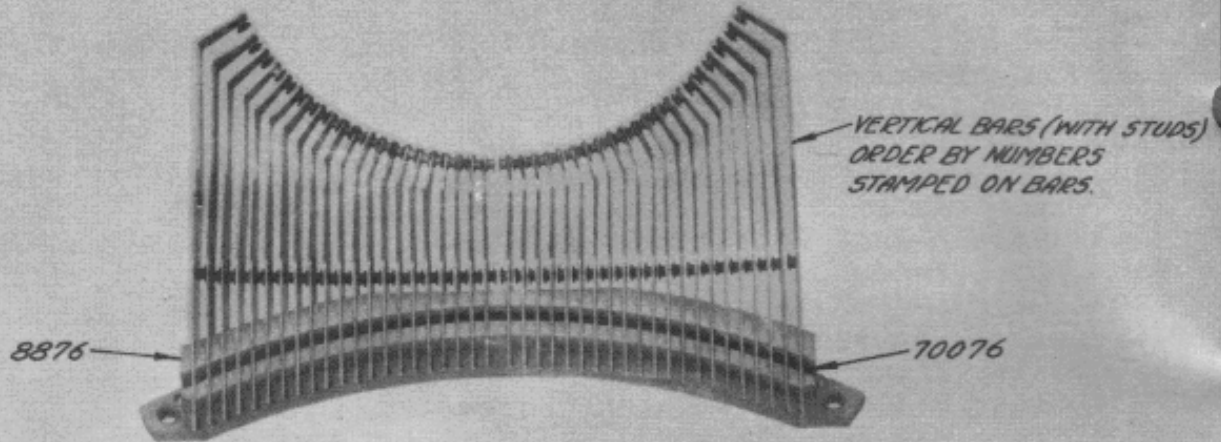


34-4	10-32 Locknut (R. H.)	42832	Shift Adjusting Screw - Long
36-150	Dowel	42833	Shift Adjusting Screw - Short
1121	10-32x3/8 Screw	43044	5-40x13/16 Hex. Screw
1208	10-32x5/8 Fil. Hd Screw	43115	2-56x3/16 Fil. Hd. Screw
1245	10-32x1 Screw	43653	5-40x5/16 Fil. Hd. Screw
2191	Lockwasher	45024	Spacing Pawl Spring
2539	3/8-32 Hex. Nut	45053	8-40x1/2 Adjusting Screw
2669	Lockwasher	45787	5-40x5/16 Fil. Hd. Screw
3646	Lockwasher	45967	Spring
6745	10-32x1/2 Hex. Screw	64059	12-24x3/4 Fil. Hd. Screw
8539	6-40x1/2 Screw	66335	Washer
8750	Rear Plate	70025	Carriage Return Arm Lock Arm
8876	Vertical Bar Segment	70026	Manual Shift Release Lever
22232	Spacing Arm Roller	70027	Space Cross Lever Extension
22233	5-40x3/8 Shoulder Screw	70028	Manual Shift Release Collar
22235	Spacing Arm Spring	70044	Bell Hammer Bracket
22732	Carriage Return Release Fork	70045	Line Feed Cross Lever
22736	Arm Extension	70048	Space Cross Lever
22739	5-40x3/8 Shoulder Screw	70051	Space Cross Lever Backstop
22746	Spring	70053	Universal Bar Support
22821	Shift Bracket	70058	Rear Shaft Bearing (With Oiler)
22822	Shift Latch Lever Shaft	70059	Spring Post
23053	Space Control Arm	70061	Space Control Arm Clamp (Assem)
23875	Dowel	70071	Lockwasher
25312	Carriage Return Shaft Bearing - Large	70076	Fulcrum Rod
25322	Spacing Retaining Pawl Stud	70261	Spacing Shaft Lower Bearing
25333	8-40x1/2 Adjusting Screw	70295	Carriage Return Shaft
25343	Shift Rod Backstop	70296	Carriage Return Arm
25345	Carriage Return Shaft Bearing	70316	Bell Hammer Shaft
25348	Carriage Return Arm Backstop Screw (10-32x9/16)	70400	Carriage Return Lock Arm Pawl (With Post)
25356	Spacing Arm Stud	70433	Carriage Lockup Pawl Stop
25361	Shift Operating Arm	70434	Spring Hook
25371	Line Feed Operating Arm	70435	Space Operating Arm
25392	Rear Shaft	70436	Spacing Spring
25451	Rear Shaft Operating Arm	70437	Spacing Spring Tube
25460	Line Feed Cross Lever Stop Stud	70438	Spacing Spring Clamp (With Pin)
33037	Stud	70446	Spacer Cutout Latch (Double Spacing)
34439	3-48x17/64 Fil. Hd. Screw	70460	Space Arm (Assem) (Double Spacing)
35830	Universal Bar Bearing	70496	Shift Latch Lever
41177	8-40x7/32 Screw	71857	Spacing Arm (Assem) (Single Spacing)
41325	5-40 Hex. Nut	72141	Spacing Retaining Pawl
41345	8-40 Locknut	72142	Spacing Retaining Pawl Spring
41381	5-40x11/32 Shoulder Screw	72193	Spacer Cutout Latch (Single Spacing)
41386	5-40x7/16 Shoulder Screw	72658	Shift Bracket Shim
41663	Washer		
41675	Washer		
42171	8-32x7/16 Fil. Hd. Screw		
42824	Shift Latch		

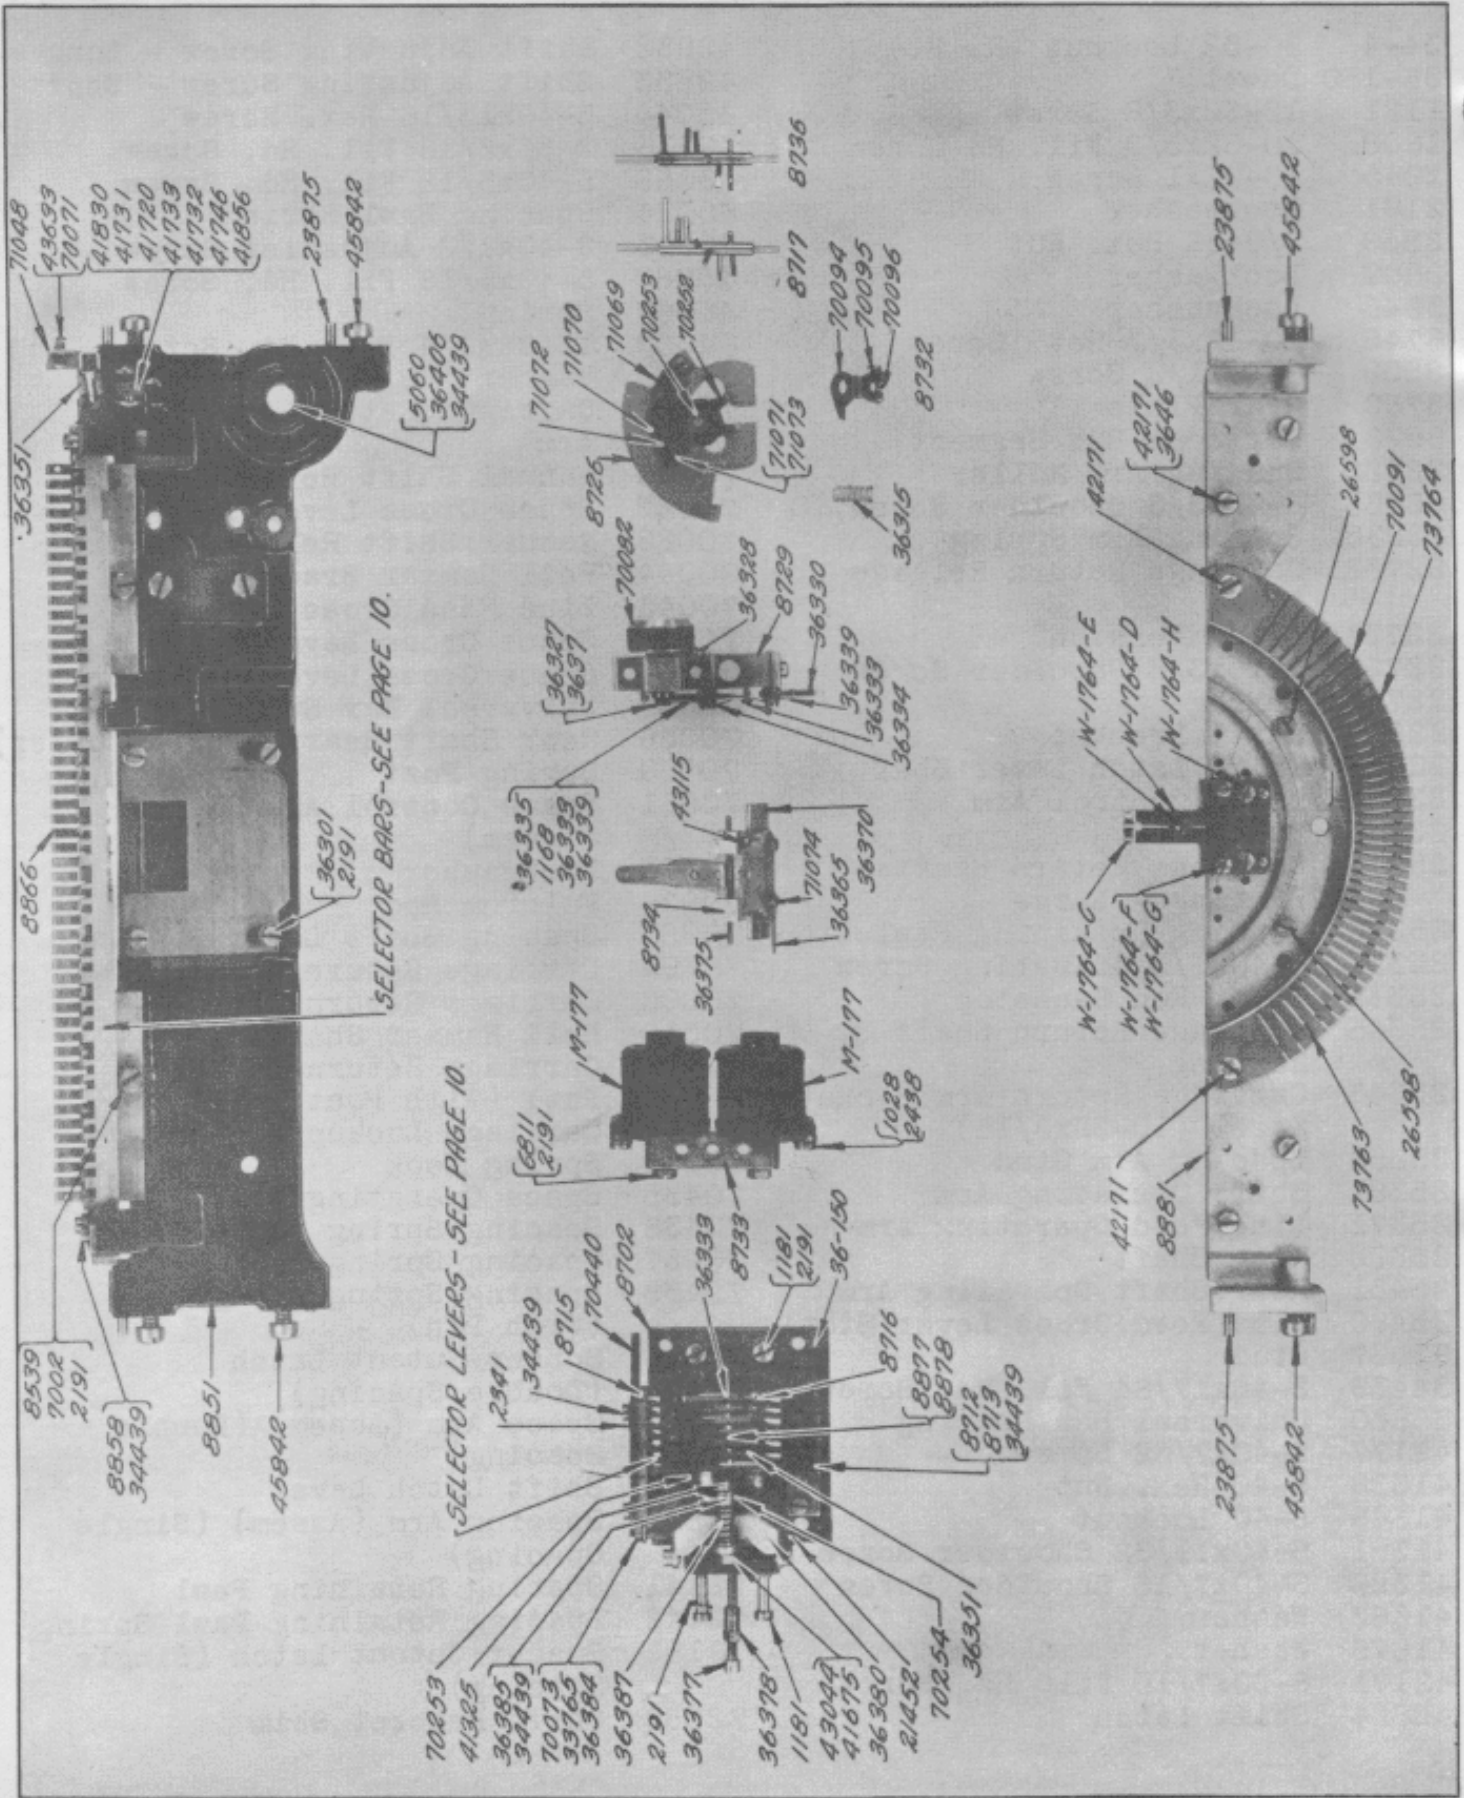


36-150	Dowel	36301	6-40x7/32 Fil. Hd. Screw
M-177	Magnet Coil	36315	Spring
1168	4-40x3/16 Rd. Hd. Screw	36327	Driving Shaft
1181	6-40x11/16 Fil. Hd. Screw	36328	5-40 Hex. Nut
W-1764-C	Type Bar Guide	36330	Clutch Trip Lever
W-1764-D	2-56 Typebar Guide Set Screw	36333	Clutch Trip Lever Stud
W-1764-E	5-40 Guide Opening Adj. Screw	36334	Clutch Trip Lever Spring
W-1764-F	5-40 Centering Screw	36335	Intermediate Lever
W-1764-G	5-40 Centering Screw Nut	36339	Spring
W-1764-H	5-40 Typebar Guide Mtg. Screw	36351	Spring
2191	Lockwasher	36365	Armature Latch
2341	Dowel	36370	Armature
3637	Drive Shaft Balls 1/16	36375	Armature Shaft
3646	Lockwasher	36377	Armature Backstop
5060	Ball Bearing	36378	5-40 Special Nut
6811	6-40x5/8 Screw	36380	Gap Adjusting Bridge
7002	Washer	36384	Stud
7007	Plunger	36385	Gap Adjusting Bracket
8539	6-40x1/2 Screw	36387	Spring
8702	Sel. Unit Frame (With Bushing)	36406	Ball Bearing Retainer
8705	Sel. Lever #0 - 6 Unit	41325	5-40x3/32 Nut
8706	Sel. Lever #1 - 5 & 6 Unit	41675	Washer
8707	Sel. Lever #2 - 5 & 6 Unit	41720	Contact Plate
8708	Sel. Lever #3 - 5 & 6 Unit	41731	Contact Terminal
8709	Sel. Lever #4 - 5 & 6 Unit	41732	Clamp Plate
8710	Sel. Lever #5 - 5 & 6 Unit	41733	Contact Insulation Plate
8712	Sel. Lever Shaft	41746	Insulation Bushing
8713	Sel. Lever Clamp Plate	41830	Contact Spring
8715	Sel. Lever Guide	41856	4-36x3/4 Rd. Hd. Screw
8716	Sel. Lever Latch	42171	8-32x7/16 Fil. Hd. Screw
8717	Pin Barrel - 6 Unit	43044	5-40x13/16 Hex. Screw
8726	Orientation Scale	43115	2-56x3/16 Fil. Hd. Screw
8729	Cam Shaft Bearing (Assem)	43633	5-40x3/16 Fil. Hd. Screw
8732	Drive Shaft Dog (Assem)	45842	12-24x1/2 Fil. Hd. Screw
8733	Magnet Yoke	70071	Lockwasher
8734	Armature Bracket	70073	3-48 Hex. Nut
8736	Pin Barrel - 5 Unit	70082	Friction Disc
8851	Sel. Cross Bar	70091	Type Bar Segment (With Type Bar Guide)
8852	Sel. Bar #0 - 6 Unit	70094	Drive Shaft Dog
8853	Sel. Bar #1 - 6 Unit	70095	Drive Shaft Dog Link
8854	Sel. Bar #2 - 6 Unit	70096	Drive Shaft Dog Pivot
8855	Sel. Bar #3 - 6 Unit	70252	Orientation Scale Clamp
8856	Sel. Bar #4 - 6 Unit	70253	Nut
8857	Sel. Bar #5 - 6 Unit	70254	Armature Forward Stop Screw
8858	Sel. Bar Forward Stop	70440	Sel. Bar Stop
8866	Pull Bar Guide Comb	71048	Sel. Bar Spring Bracket
8877	Sel. Lever Latch Spacer - 6 Unit	71069	Orientation Stop
8878	Sel. Lever Latch Spacer - 5 Unit	71070	Shim
8881	Type Bar Segment Cross Bar	71071	2-56x5/32 Stop Screw
21452	3-48x3/8 Shoulder Screw	71072	Auxiliary Stop
23875	Dowel	71073	Washer
26598	8-32x7/16 Fil. Hd. Screw	71074	3-48x3/16 Screw
33765	Washer	71881	Sel. Bar #1 - 5 Unit
34439	3-48x17/64 Fil. Hd. Screw	71882	Sel. Bar #2 - 5 Unit
		71883	Sel. Bar #3 - 5 Unit
		71884	Sel. Bar #4 - 5 Unit
		71885	Sel. Bar #5 - 5 Unit
		72525	Shift Code Bar #0
		72526	Shift Code Bar #0 (Bell on "A")
		73763	Fulcrum Rod
		73764	Typebar Segment (With Pins)

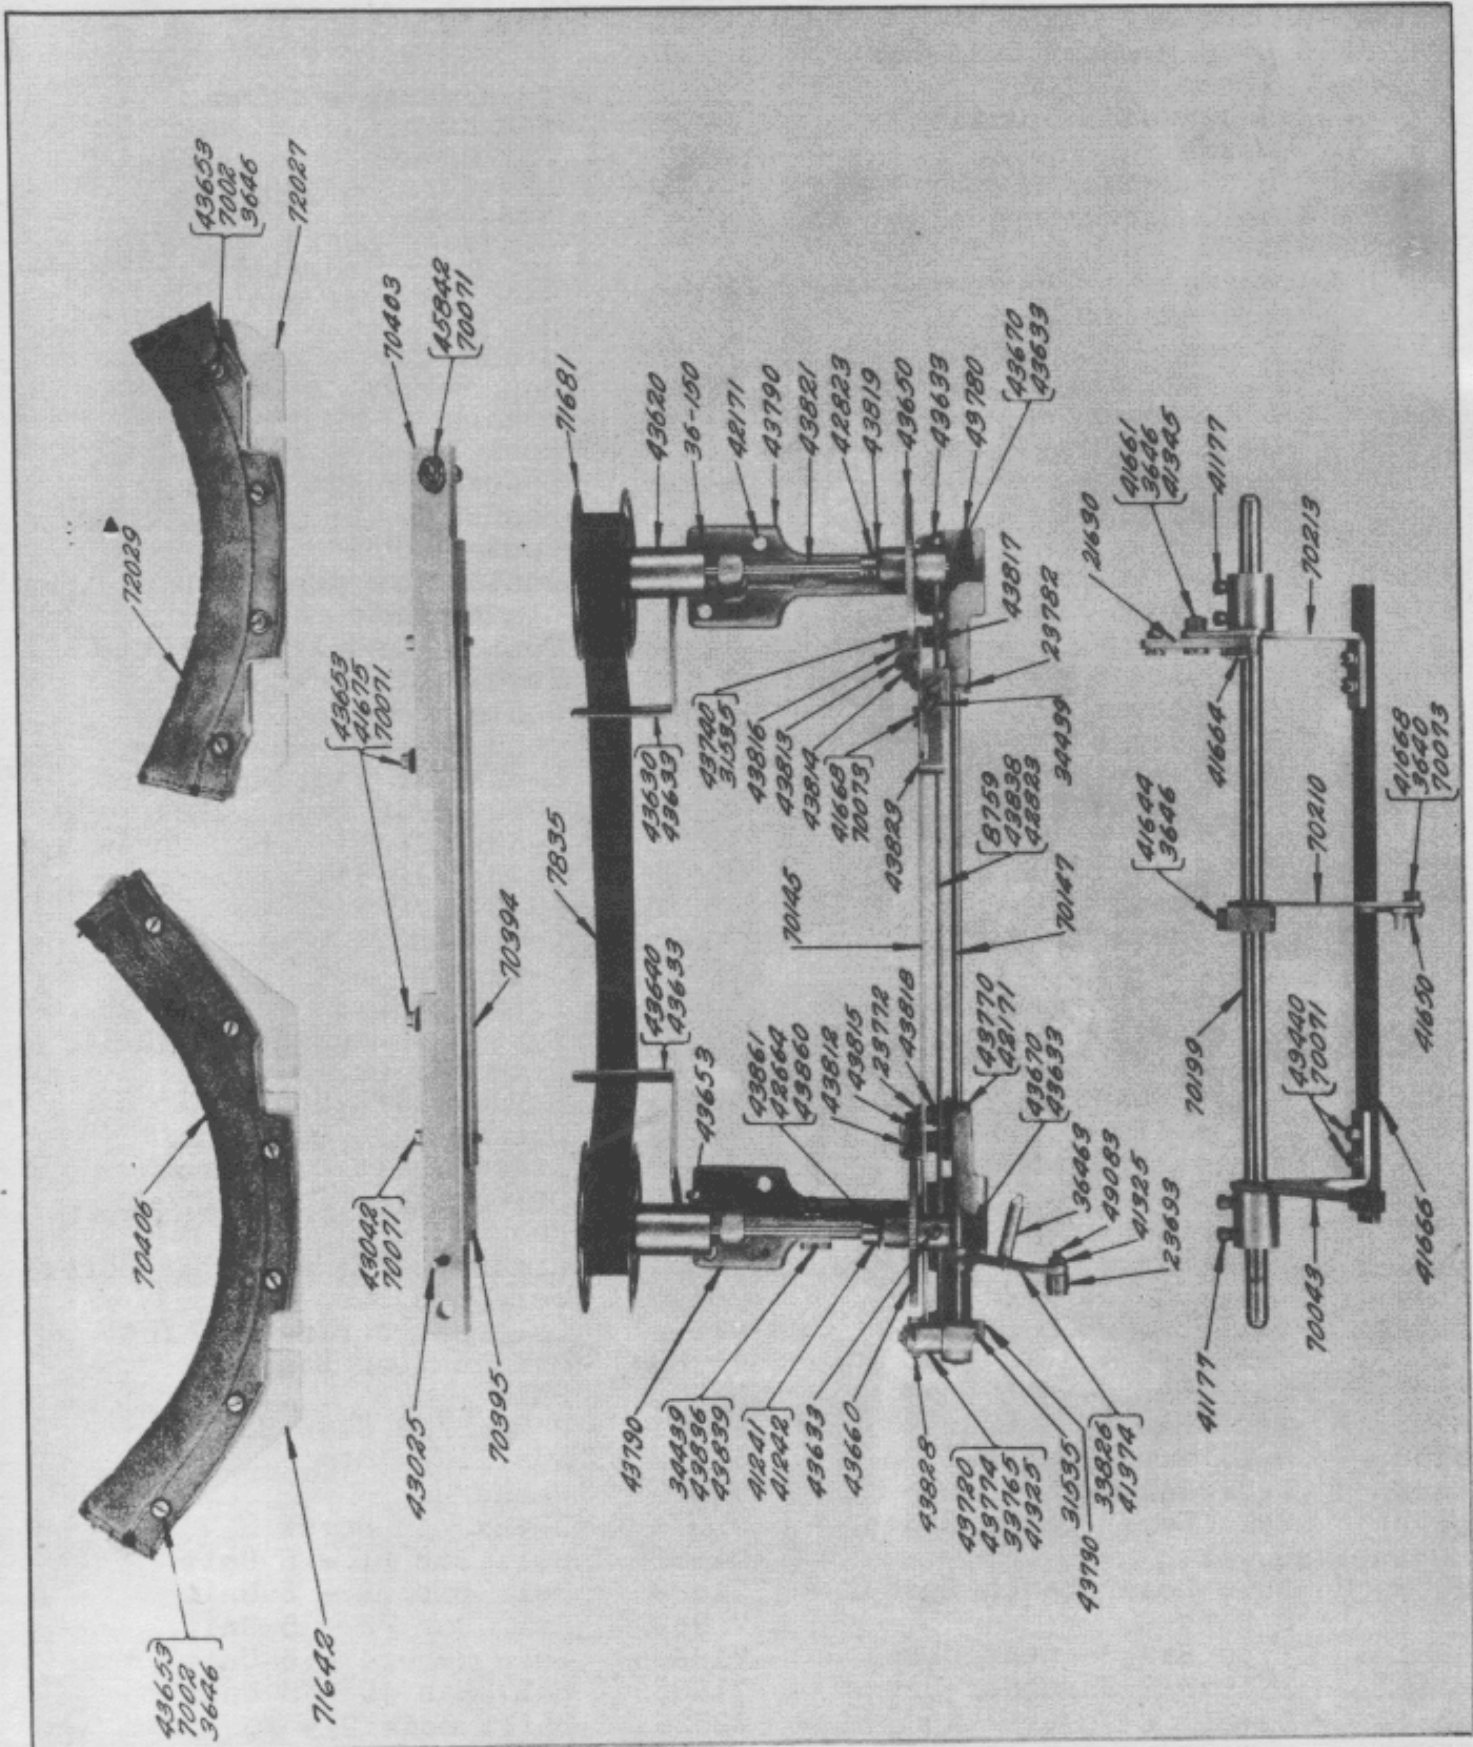


36-150	Dowel	43720	Ribbon Feed Pawl Shift Rod Arm
3640	Lockwasher	43730	Ribbon Feed Reverse Arm
3646	Lockwasher	43740	Ribbon Feed Pawl Arm
7002	Washer	43770	Ribbon Feed Rear Bracket
7835	Ribbon Spool-Black Ribbon	43774	5-40x9/16 Fil. Hd. Screw
8759	Ribbon Feed Corn. Link	43780	Ribbon Feed Rear Bracket
21630	Shift Latch Lever	43790	Ribbon Feed Main Bracket
23693	Roller	43812	Ribbon Feed Pawl
23772	Ribbon Feed Retaining Pawl Support	43813	Ribbon Feed Pawl Retaining Pawl
23782	Ribbon Feed Bracket Retaining Pawl Support	43814	Retaining Pawl
31535	Ribbon Feed Reverse Arm Set Screw	43815	Retaining Pawl
33765	Washer	43816	2-56x3/32 Bearing Screw
33826	Ribbon Feed Operating Lever	43817	Ribbon Feed Pawl Spring
34439	3-48x17/64 Fil. Hd. Screw	43818	Ribbon Feed Pawl Spring
36463	Ribbon Feed Operating Arm Spring	43819	Ribbon Feed Spool Shaft
41177	8-40x7/32 Set Screw	43821	Ribbon Feed Trip Shaft
41241	Ribbon Spool Shaft Supporting Collar	43823	Ribbon Feed Reverse Bar Lock Spring
41242	Ribbon Spool Shaft Collar Screw	43828	Ribbon Feed Pawl Shift Hook
41325	5-40 Hex. Nut	43836	Lockwasher
41345	8-40 Hex. Nut	43838	Cotter Pin
41374	5-40x5/16 Hex. Screw	43839	Trip Shaft Collar Spring
41644	8-40x9/16 Hex. Screw	43860	Ribbon Feed Trip Lock Shaft Collar (With Screw)
41650	Ribbon Shield Hook	43861	Ribbon Feed Trip Lock Shaft Collar
41661	8-40x7/16 Shoulder Screw	45842	12-24x1/2 Fil. Hd. Screw
41664	Shift Latch Lever Spring	49083	5-40x7/16 Shoulder Screw
41666	Shift Rail	49440	5-40x3/16 Hex. Hd. Screw
41668	3-48x1/4 Shoulder Screw	70043	Shift Shaft Latch Arm
41675	Washer	70071	Lockwasher
42171	8-32x7/16 Fil. Hd. Screw	70073	3-48 Hex. Nut
42664	5-40x1/4 Fil. Hd. Screw	70145	Ribbon Feed Reverse Bar (With Pin)
42823	Washer	70147	Ribbon Feed Operating Shaft
43025	Type Bar Pad Support Spring Post	70199	Shift Shaft
43042	5-40x3/4 Fil. Hd. Screw	70210	Ribbon Shield Adjusting Arm
43620	Ribbon Spool Head	70213	Shift Operating Arm
43630	Ribbon Reverse Arm	70394	Pull Bar Retainer Clamp
43633	5-40x3/16 Fil. Hd. Screw	70395	Pull Bar Retainer
43640	Ribbon Reverse Arm	70403	Typebar Pad Support Bar
43650	Ribbon Feed Ratchet	70406	Typebar Pad
43653	5-40x5/16 Fil. Hd. Screw	71642	Typebar Pad Support
43660	Ribbon Feed Ratchet	71681	Ribbon Spool - Empty
43670	Rear Arm	72027	Typebar Pad Support
		72029	Typebar Pad

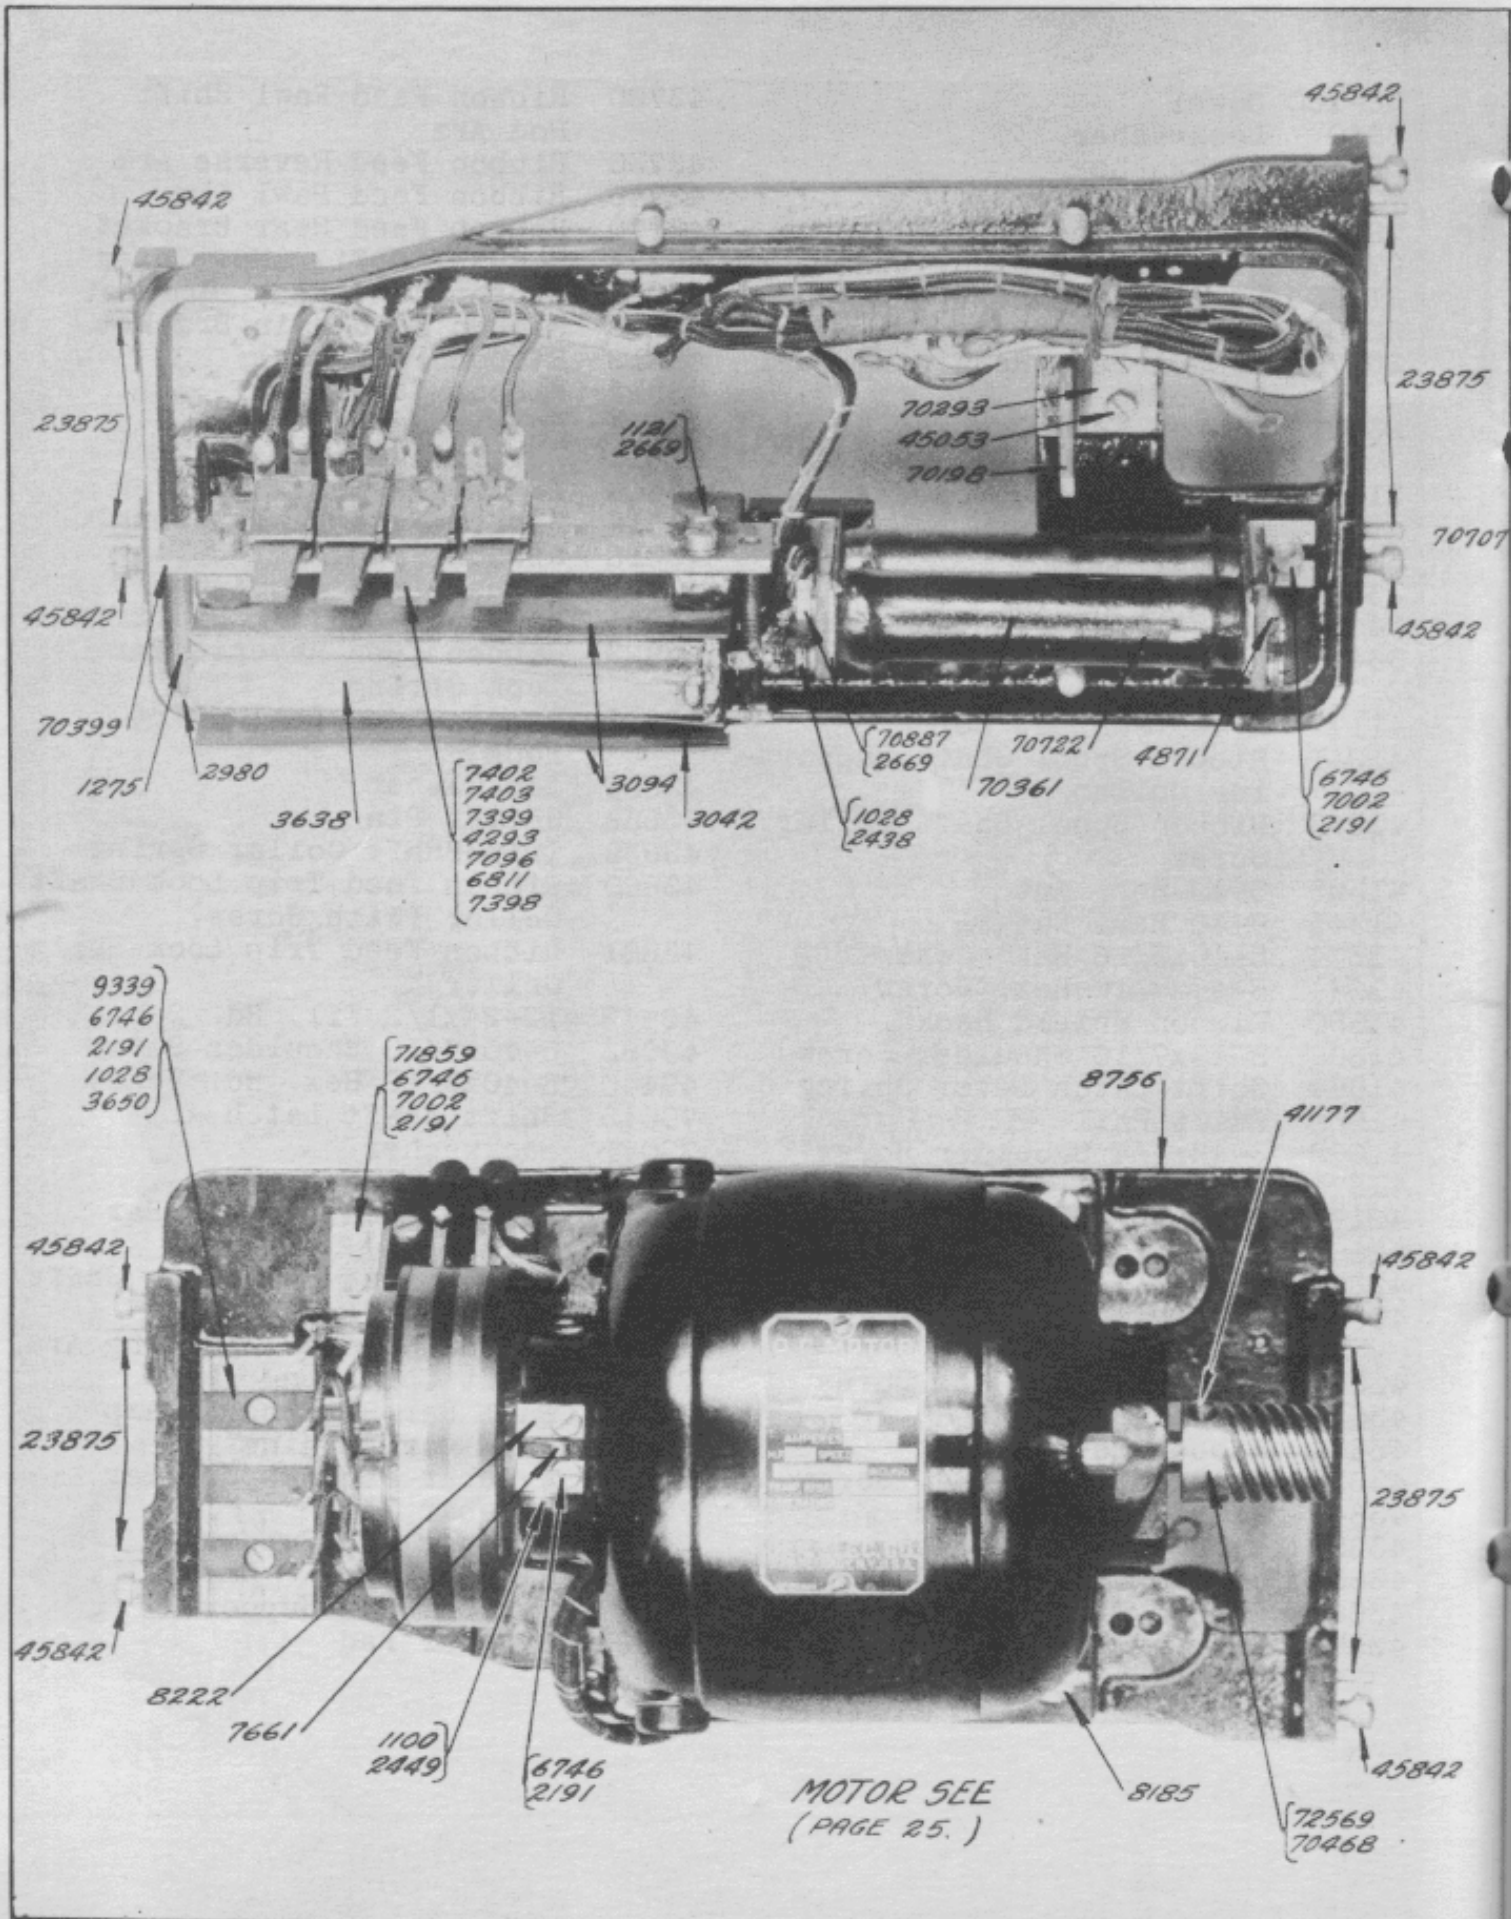


1028	4-40 Special Screw
1100	1/4-32 Screw
1121	10-32x3/8 Fil. Hd. Screw
1275	10-32xl 1/2 Rd. Hd. Screw
2191	Lockwasher
2449	Lockwasher
2669	Lockwasher
2980	Condenser Strap
3042	Resistance Unit
3094	Insulator
3638	1/2 M. F. Condenser
3650	Washer
4293	Insulating Plate
4871	Resistance Mtg. Screw
6746	6-40x5/16 Screw
6811	6-40x5/8 Screw
7002	Washer
7096	Contact Screw Bushing
7398	Contact Spring Screw Plate
7399	Contact Spring Stiffener
7402	Contact Spring - Lower
7403	Contact Spring - Upper
7661	Governor Adjusting Lever
8185	1/4-20x3/4 Fil. Hd. Screw
8222	Wearing Strip
8756	Motor Cross Bar
9339	Terminal Block (Assem)
23875	Dowel
41177	8-40x7/32 Screw
45053	8-40xl/2 Adjusting Screw
45842	12-24xl/2 Fil. Hd. Screw
70198	Keyboard Locating Bracket
70293	Keyboard Locating Bracket Plate
70361	Resistor Unit (Comp)
70399	Slip Connection Mtg. Strip
70468	Motor Pinion - 8 Teeth
70722	Resistance Unit - 500 Ohms
70887	Nut
71859	Brush Holder Bracket
72569	Motor Pinion - 6 Teeth

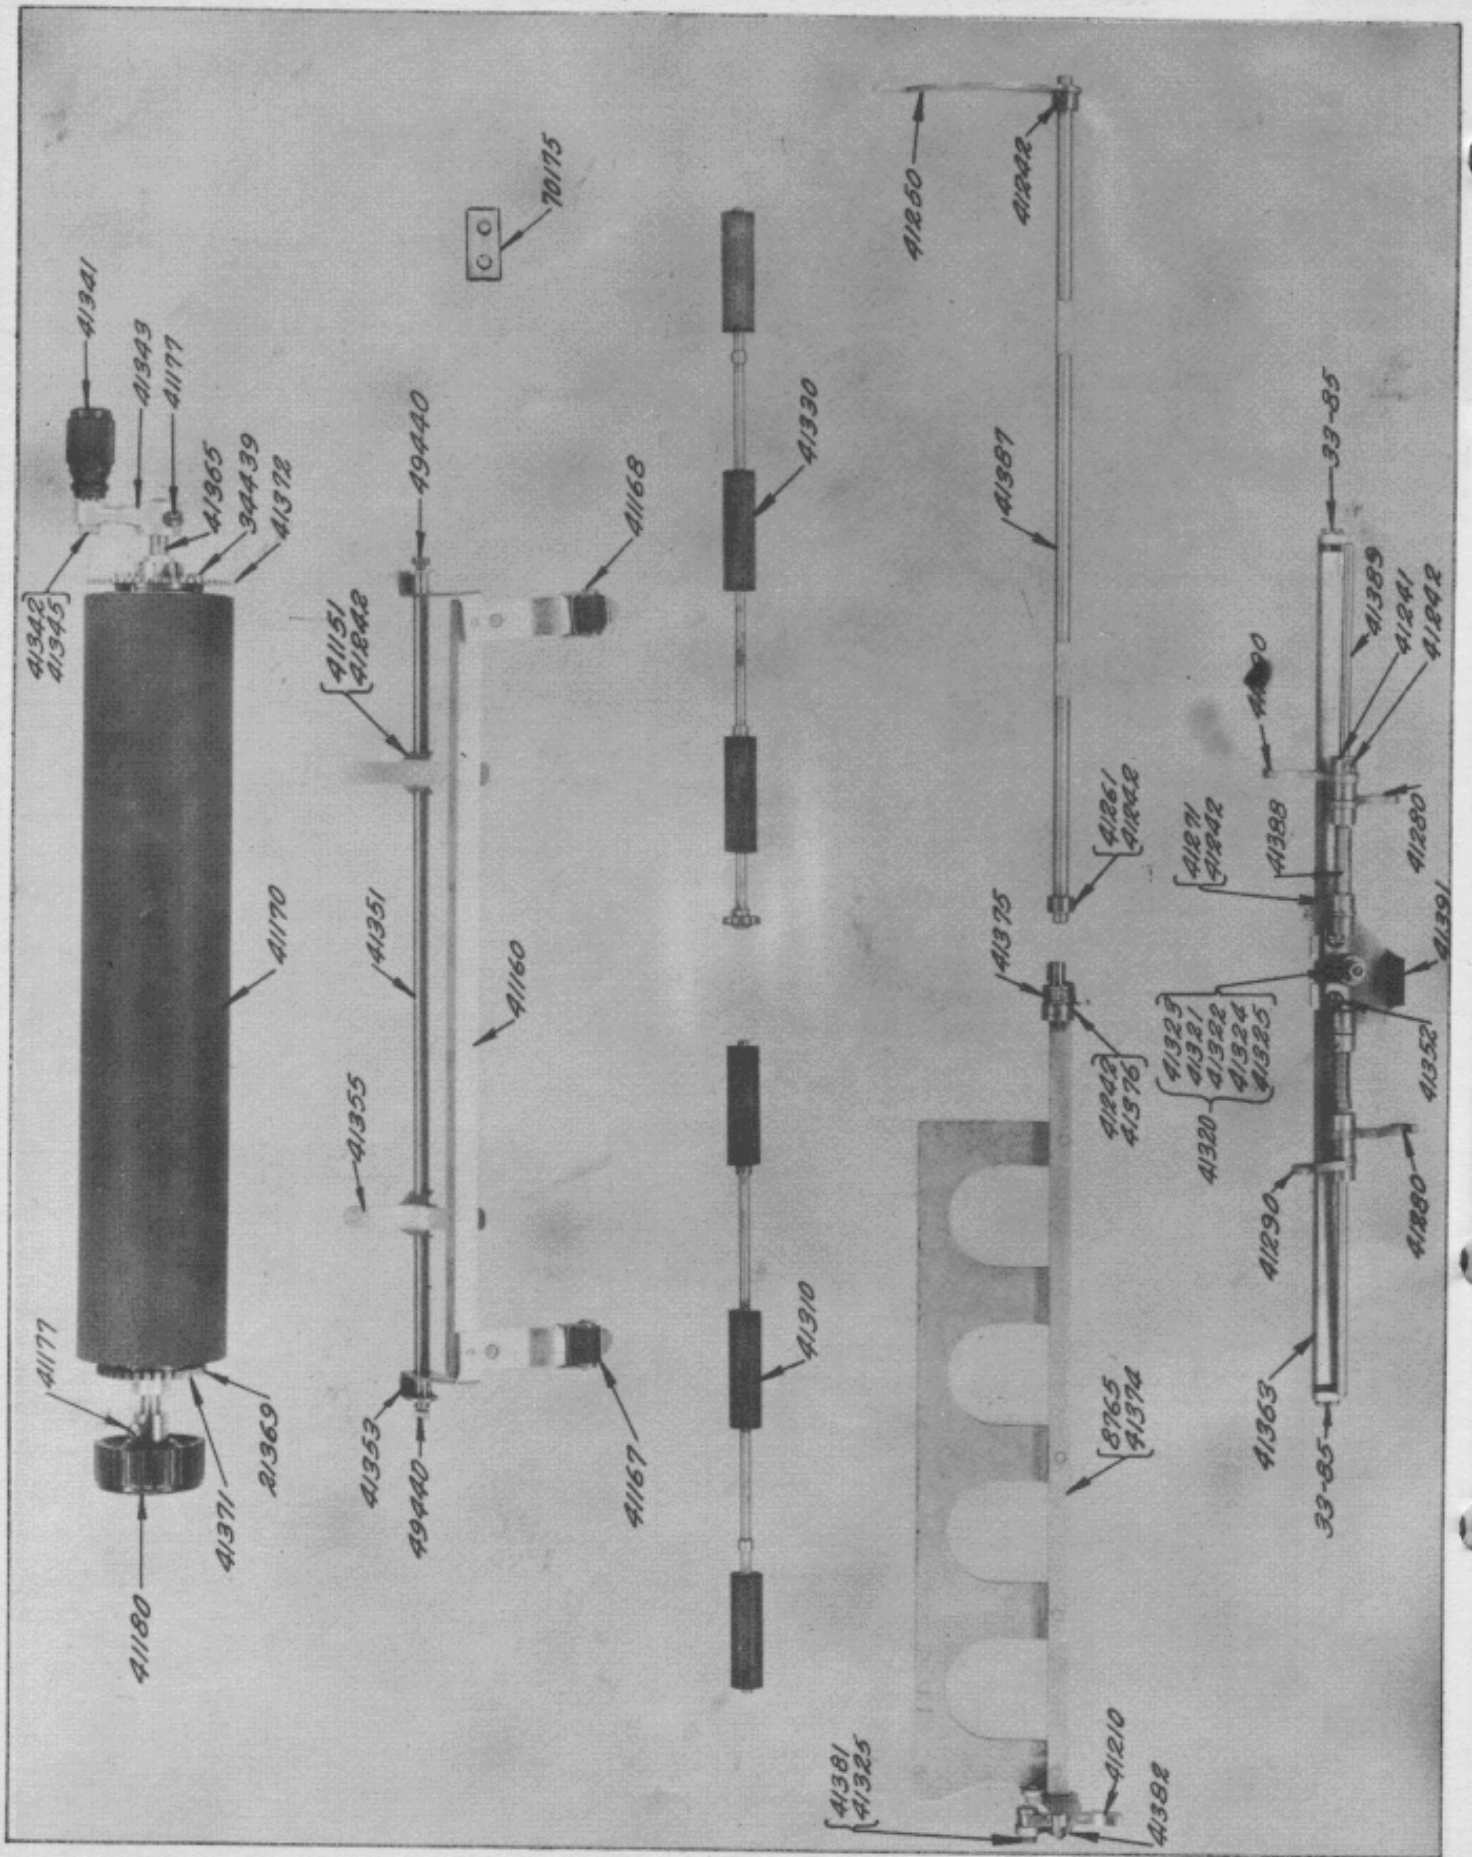


33-85	2-56x3/8 Fil. Hd. Screw	41330	Pressure Roll Shaft - Front (Assem)
8765	Line Feed Bail	41341	Platen Handle
21369	Line Feed Ratchet	41342	Platen Handle Shoulder Screw
34439	3-48x17/64 Fil. Hd. Screw	41343	Platen Crank
41151	Paper Guide Spring Collar	41345	8-40x1/8 Hex. Nut
41160	Paper Knife (Assem)	41351	Paper Knife Shaft
41167	Paper Guide Finger Roller	41352	5-40x1/4 Rd. Hd. Screw
41168	Paper Guide Finger Shaft	41353	Paper Knife Spring
41170	Platen	41355	Paper Guide
41177	8-40x7/32 Special Set Screw	41363	Carriage Tie Bar
41180	Twirler (With Set Screw)	41365	Platen Shaft
41210	Line Feed Pawl	41371	3-48x1/4 Special Screw
41241	Pressure Roller Arm Spacing Collar	41372	Pressure Roll Gear
41242	5-40x3/32 Set Screw	41374	5-40x5/16 Hex. Screw
41250	Pressure Roller Release Handle	41375	Line Feed Bail Spring
41261	Pressure Roll Shaft Collar	41376	Line Feed Bail Spring Sleeve
41271	Pressure Roll Spring Adjusting Collar	41381	Line Feed Pawl Screw
41280	Pressure Roll Free Arm	41382	Line Feed Pawl Spring
41290	Pressure Roll Clamp Arm	41387	Pressure Roll Release Shaft
41310	Pressure Roll Shaft - Rear (Assem)	41388	Pressure Roll Spring
41321	Shift Roller	41389	Pressure Roll Spring Rod
41322	1/16 Dia. Roller Ball	41391	Pressure Roll Spring Rod Bracket
41323	Stud	49440	5-40x3/16 Hex. Hd. Screw
41324	Sleeve	70175	Release Spring Holding Plate
41325	5-40x3/32 Hex. Nut		

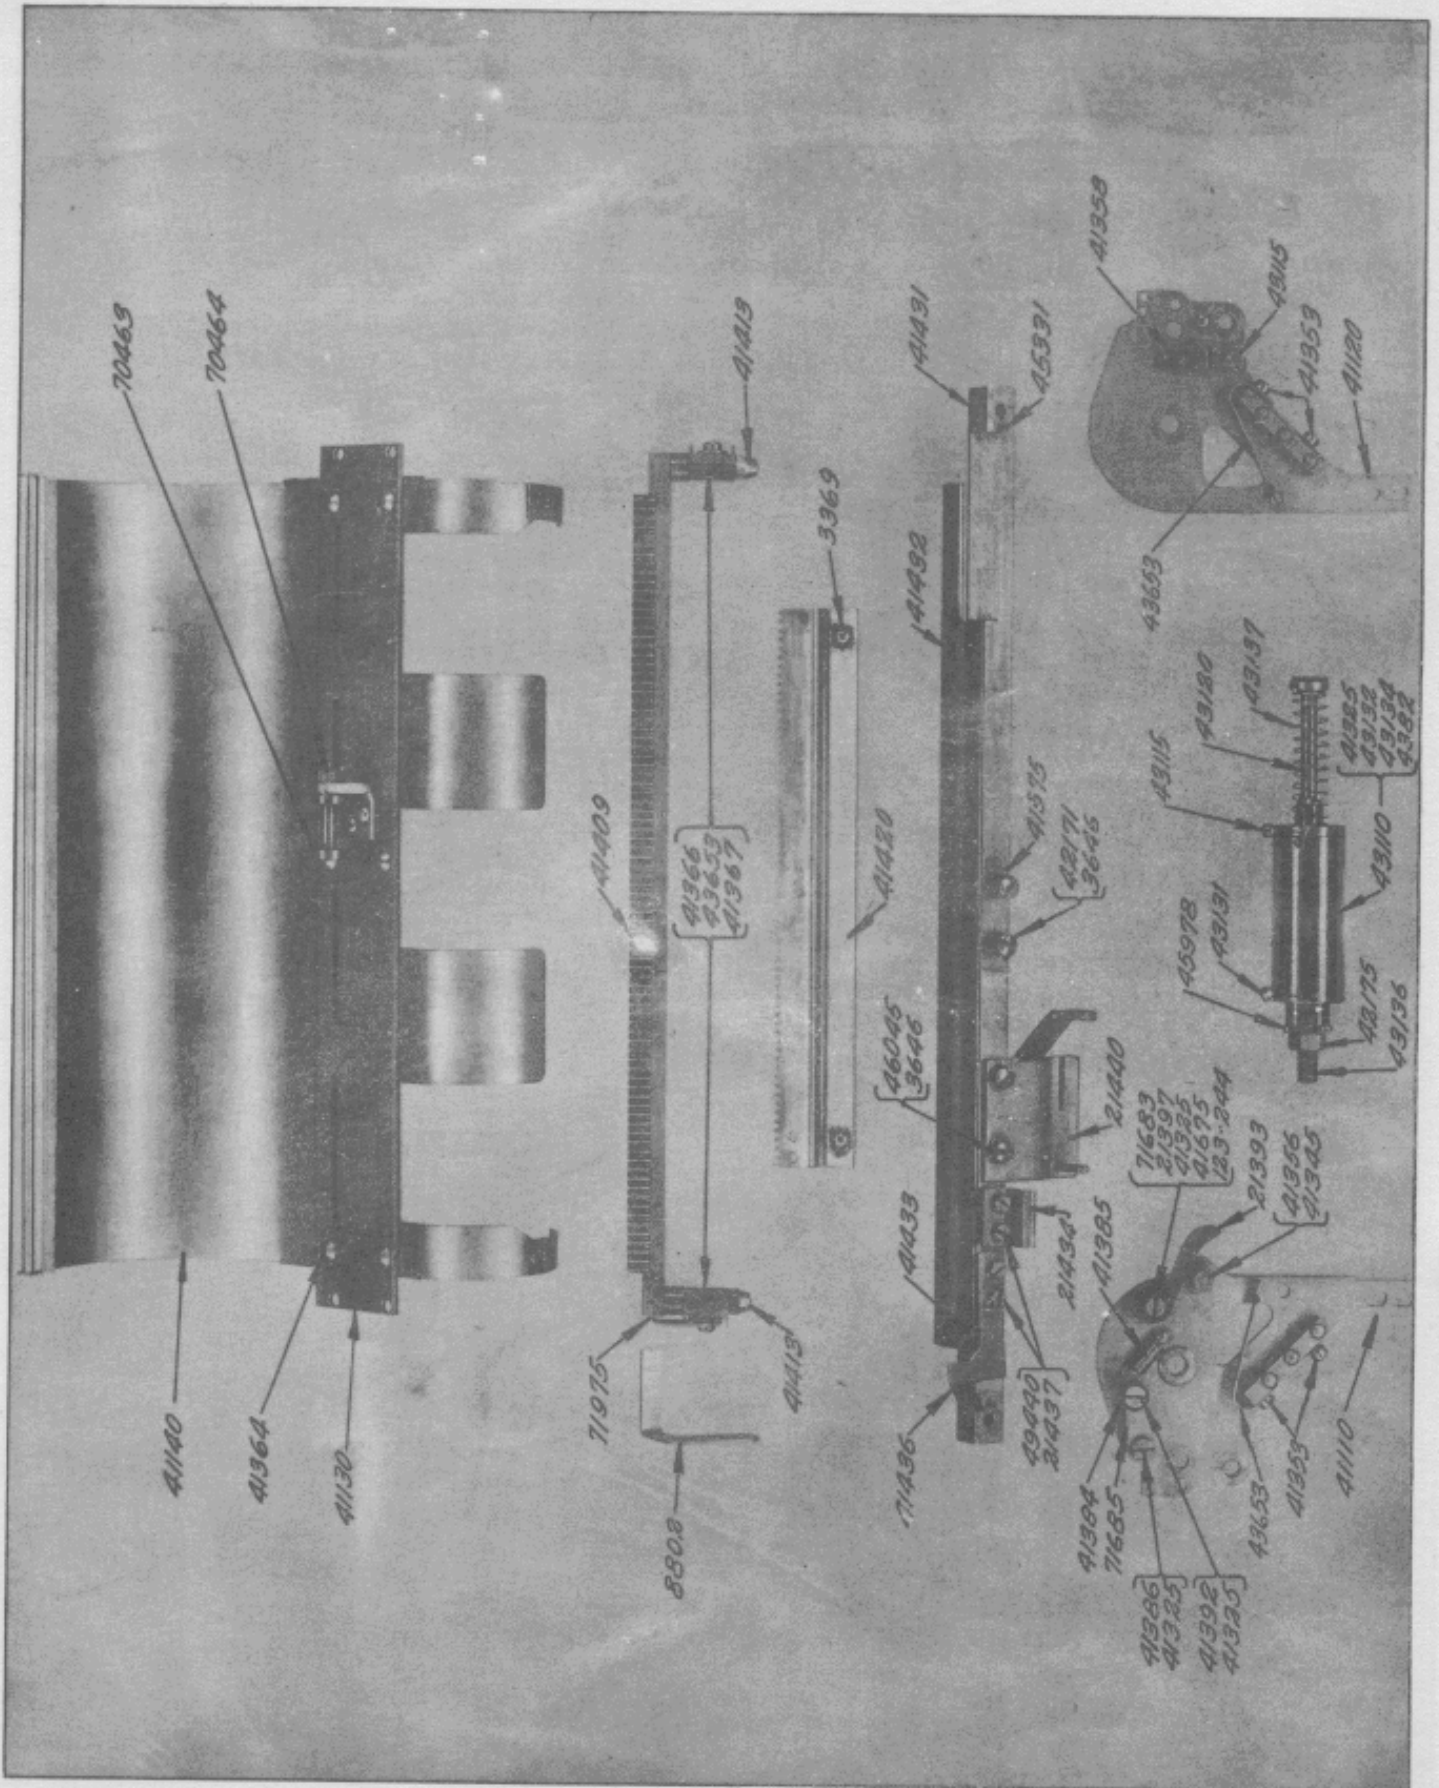


123-244	Washer	41420	Carriage Retainer (With Balls)
3369	Ball	41431	Carriage Lower Race
3646	Lockwasher	41432	Carriage Retainer
4382	Washer (Leather)	41433	5-40x1/4 Flat Hd. Screw
8802	Carriage Return Trip Brkt.	41436	Carriage End Stop
21393	Line Feed Regulator	41575	Spacing Unit Dowel
21397	Lockwasher	41675	Washer
21434	Shift Stop	42171	8-32x7/16 Fil. Hd. Screw
21437	Shim	42175	1/4-32 Locknut
21440	Carriage Return Lockbar Guide	43110	Dash Pot Cylinder
41110	Carriage Frame - Left	43115	Spring Screw
41120	Carriage Frame - Right	43120	Dash Pot Shaft
41130	Carriage Basket Support	43131	Dash Pot Vent Screw
41140	Carriage Basket	43132	Dash Pot Plunger Seat
41325	5-40 Hex. Nut	43134	Dash Pot Plunger Gasket Washer
41345	8-40x1/8 Hex. Nut	43136	Dash Pot Plunger Stop Screw
41353	Spring	43137	Dash Pot Plunger Spring
41356	Eccentric Stop	43653	5-40x5/16 Fil. Hd. Screw
41358	Pressure Handle Spring	45331	Dowel
41364	3-48x3/16 Fil. Hd. Screw	45978	3-48x5/8 Fil. Hd. Screw
41366	Carriage Frame Extention	46045	8-32x1/4 Fil. Hd. Screw
41367	Washer	49440	5-40x3/16 Hex. Hd. Screw
41384	Jockey Roller	70463	Carriage Bumper
41385	Jockey Roller Arm Spring	70464	Carriage Bumper Nut
41386	5-40x7/16 Shoulder Screw	71683	Stud
41392	5-40x9/32 Shoulder Screw	71685	Jockey Roller Arm
41409	Upper Ball Race	71975	Carriage Return Trip Brkt.
41413	5-40 Hex. Nut		

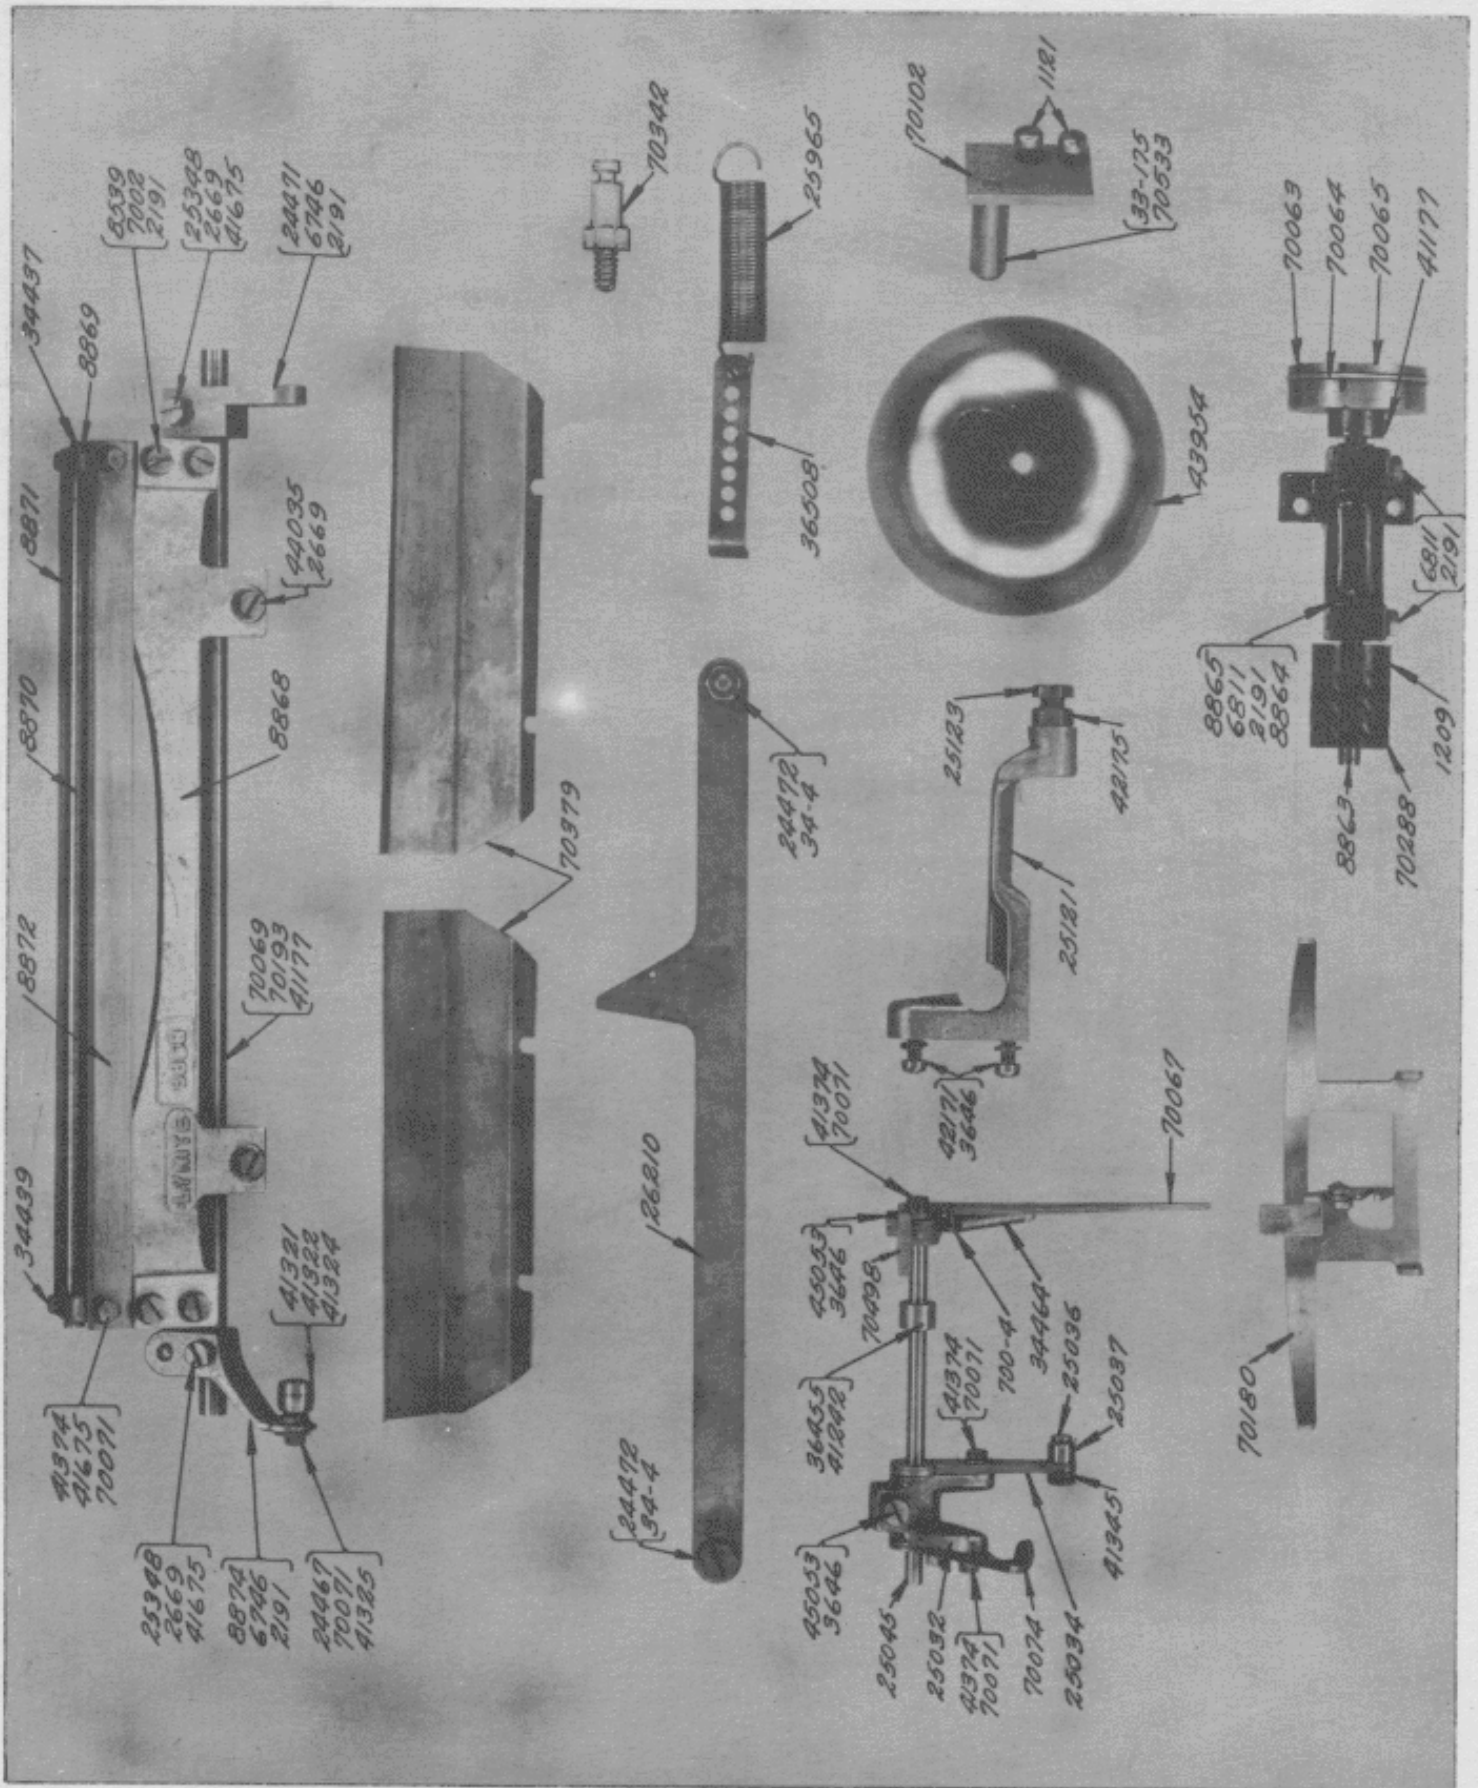

33-175	10-32x1 Rd. Hd. Screw	34437	Bail Roller Pivot
34-4	10-32 Locknut (R. H.)	34439	3-48x17/64 Fil. Hd. Screw
700-4	Clutch Release Spring Post	34464	Clutch Release Arm Spring
1121	10-32x3/8 Fil. Hd. Screw	36455	Collar
1209	10-32x3/16 Fil. Hd. Screw	36508	Bail Spring Handle
2191	Lockwasher	41177	8-40x7/32 Set Screw
2669	Lockwasher	41242	5-40x3/32 Set Screw
3646	Lockwasher	41321	Roller
6746	6-40x5/16 Screw	41322	Balls 1/16
6811	6-40x5/8 Screw	41324	Sleeve
7002	Washer	41325	5-40x3/32 Hex. Nut
8539	6-40x1/2 Screw	41345	8-40x1/8 Locknut
8863	Selector Drive Shaft	41374	5-40x5/16 Hex. Screw
8864	Selector Drive Shaft	41675	Washer
	Bearing	42171	8-32x7/16 Fil. Hd. Screw
8865	Selector Drive Shaft Bracket	42175	1/4 - 32 Nut
8868	Bail Frame	43954	Bell
8869	Bail Arm	44035	10-32x9/16 Hex. Screw
8870	Bail Roller	45053	8-40x1/2 Adjusting Screw
8871	Bail Roller Shelf	70063	Friction Spring
8872	Bail	70064	Friction Spring Retainer
8874	Bail Shaft Operating Arm	70065	Friction Spring Container (With Pins)
24467	Stud	70067	Clutch Release Arm
24471	Connecting Link Arm	70069	Bail Shaft
24472	10-32x37/64 Shoulder Screw	70071	Lockwasher
25032	Clutch Stop Arm Bracket	70074	Clutch Stop Arm
25034	Restoring Roller Arm	70102	Bell Bracket
25036	8-40x7/16 Fil. Hd. Screw	70180	Universal Bar
25037	Restoring Roller	70193	Bail Shaft Bearing
25045	Clutch Release Arm Shaft	70288	Selector Pinion
25121	Clutch Release Shaft Bracket	70342	Operating Spring Stud
25123	1/4-32x7/8 Screw	70379	Dust Catcher
25348	10-32x9/16 Screw	70498	Selector Bar Return Lever
25965	Bail Shaft Spring	70533	Spacer
26210	Connecting Link		

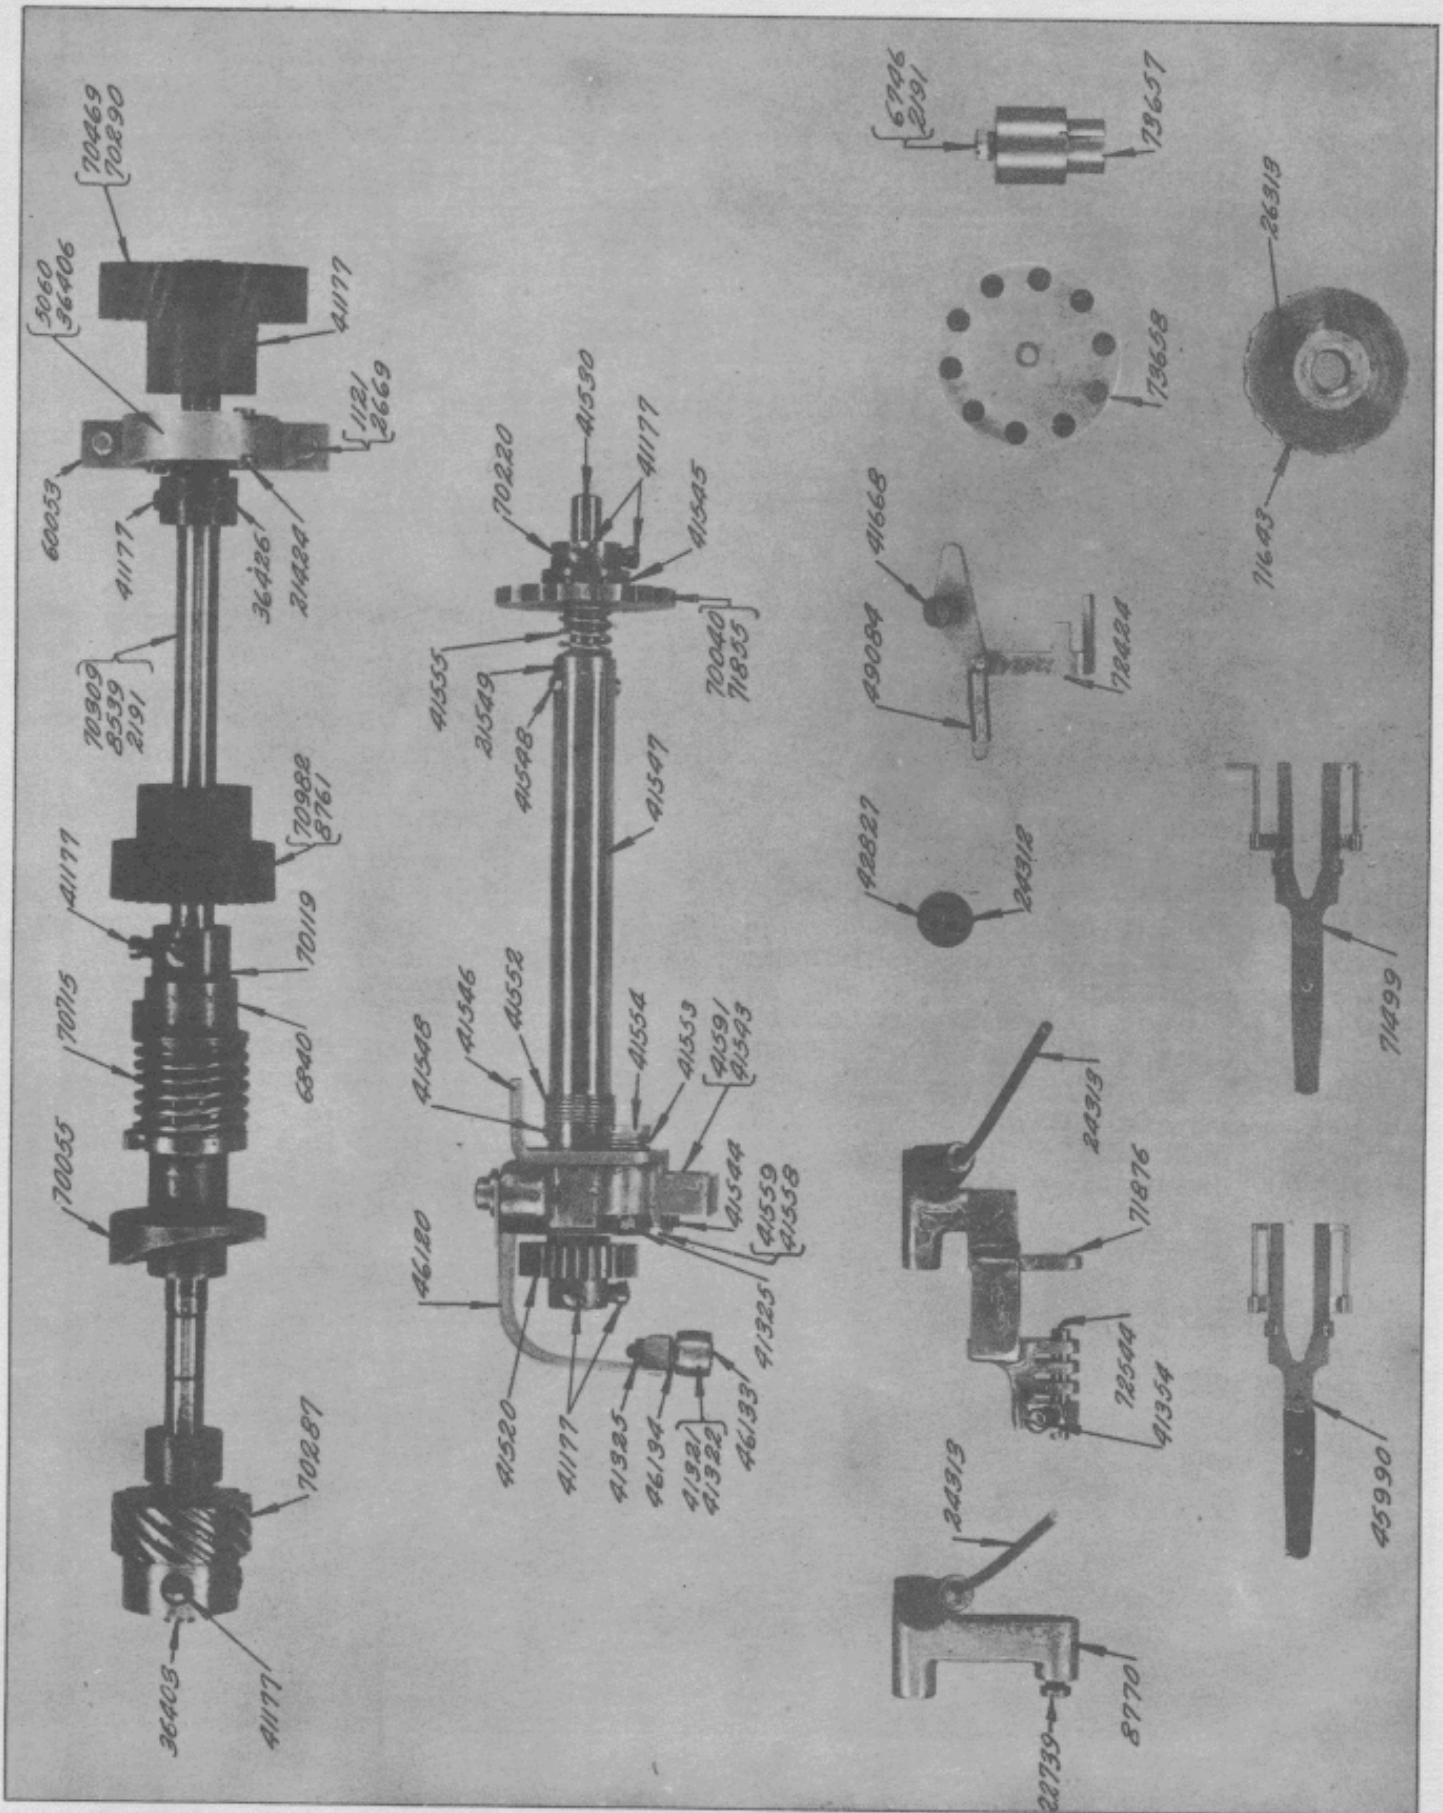

1121	10-32x3/8 Fil. Hd. Screw	41554	5-40x3/4 Screw
2191	Lockwasher	41555	Spacing Ratchet Spring
2669	Lockwasher	41558	2-56x1/4 Fil. Hd. Screw
5060	Ball Bearing	41559	Spacing Shaft Ball
6746	6-40x5/16 Screw		Bearing Clamp Plate
6840	Clutch - Driven	41591	Spacing Shaft Bracket
8539	6-40x1/2 Screw	41668	3-48x1/4 Shoulder Screw
8761	Trans. Gear - 24 Teeth	42827	3-48x1/4 Fil. Hd. Screw
8770	Bell Hammer Arm (With Rod)	45990	Ribbon Shield
21424	3-48x1/8 Fil. Hd. Screw	46120	Carriage Clamp
21549	Spacing Shaft Spring Collar	46133	Stud
22739	5-40x3/8 Shoulder Screw	46134	Sleeve
24312	Bell Hammer	49084	Shift Code Bar Latch Spring
24313	Bell Hammer Rod	60053	Ball Bearing Housing
26313	8-40x13/64 Set Screw	70040	Spacing Ratchet - Double Space
36403	Oiler	70055	Main Bail Cam
36406	Ball Bearing Retainer	70119	Clutch - Driving
36426	Spacing Collar	70220	Spacing Ratchet Clutch
41177	8-40x7/32 Screw	70287	Selector Drive Gear
41321	Roller	70290	Motor Gear (With Bushing) 36 Teeth
41322	Balls	70309	Clutch Shaft
41325	5-40 Hex. Nut	70469	Motor Gear (With Bushing) 32 Teeth
41354	5-40x1/4 Fil. Hd. Screw	70715	Clutch Spring
41520	Spacing Gear	70982	Trans. Gear - 28 Teeth
41530	Spacing Shaft (Assem)	71499	Ribbon Shield
41543	Ball Bearing	71643	Speed Disc
41544	Spacing Shaft Escapement Ratchet	71855	Spacing Ratchet-Single Space
41545	Spacing Shaft Ratchet Sleeve	71876	Bell Hammer Arm With Rod
41546	Spacing Shaft Escapement Lever	72424	Shift Code Bar Latch (With Post)
41547	Spacing Spring Housing	72544	Bell Pull Bar Shaft
41548	2-56x3/32 Fil. Hd. Screw	73657	Speed Disc Hub
41552	Carriage Return Spring	73658	Speed Disc
41553	Escapement Lever Spring		

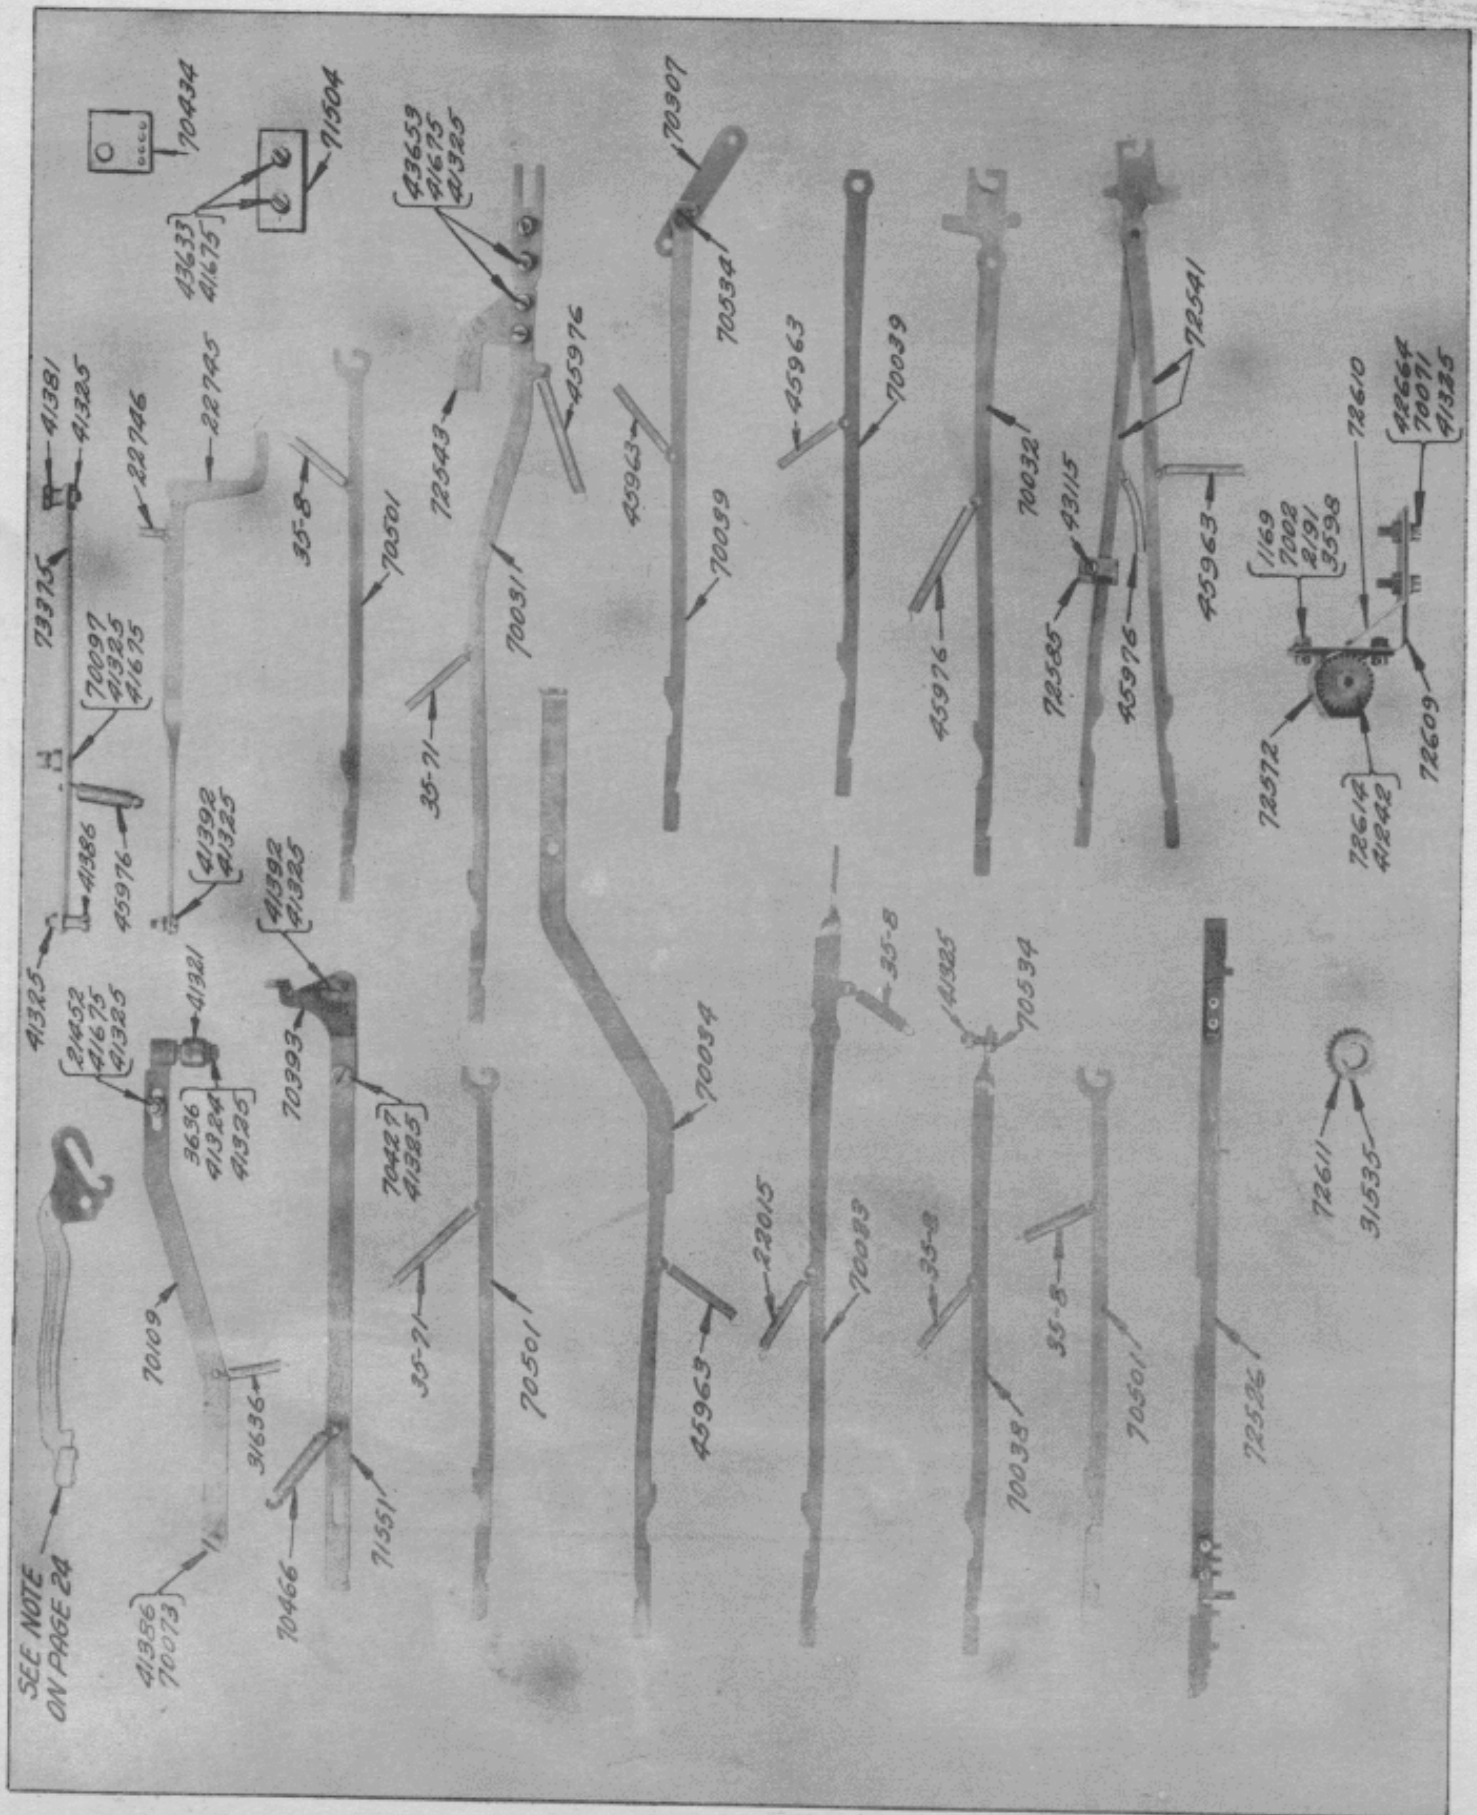

35-8	Spring - Short	70034	Pull Bar Carriage Return
35-71	Spring - Long	70038	Pull Bar - Space
1169	6-40x7/32 Rd. Hd. Screw	70039	Pull Bar
2191	Lockwasher	70071	Lockwasher
3598	6-40 Hex. Nut	70073	3-48 Hex. Nut
3637	Bearing Ball	70097	Shift Shaft Connecting Bar Stud
7002	Washer	70109	Line Feed Bar (With Stud)
21452	3-48x3/8 Shoulder Screw	70307	Motor Stop Pull Bar Arm
22015	Spring	70393	Motor Stop Carriage Arm
22745	Carriage Return Lock Bar	70427	5-40x1/4 Shoulder Screw
22746	Carriage Return Lock Bar Spring	70434	Spring Hook
31535	5-40x3/16 Set Screw	70466	Motor Stop Latch Link Spring
31636	Spring	70501	Pull Bar
41242	5-40x3/32 Set Screw	70534	5-40x1/4 Shoulder Screw
41321	Roller	71504	Shift Pull Bar Plate
41324	Roller Stud Sleeve	71551	Motor Stop Latch Link (With Post)
41325	5-40 Hex. Nut	72526	Shift Code Bar Bell On "A"
41381	5-40x11/32 Shoulder Screw	72541	Unshift Pull Bar
41386	5-40x7/16 Shoulder Screw	72543	Shift Pull Bar Extension
41392	5-40x9/32 Shoulder Screw	72572	Veeder Counter
41675	Washer	72585	Clip
42664	5-40x1/4 Fil. Hd. Screw	72609	Counter Spring
43115	2-56x3/16 Fil. Hd. Screw	72610	Counter Spring Stop
43633	5-40x3/16 Fil. Hd. Screw	72611	Reverse Counter Drive Gear
43653	5-40x5/16 Fil. Hd. Screw	72614	Reverse Counter Gear
45963	Spring	73375	Shift Shaft Connecting Bar (With Stud)
45976	Spring		
70031	Pull Bar-Shift		
70032	Shift Release Pull Bar		
70033	Pull Bar-Line Feed		

NOTE:-

Typebars should be ordered by numbers stamped on bar.


Type Pallets should be ordered by name

For example order:-



Typebar #15

Type Pallet (E-3)


Typebar #15 (With Type Pallet) (E-3)

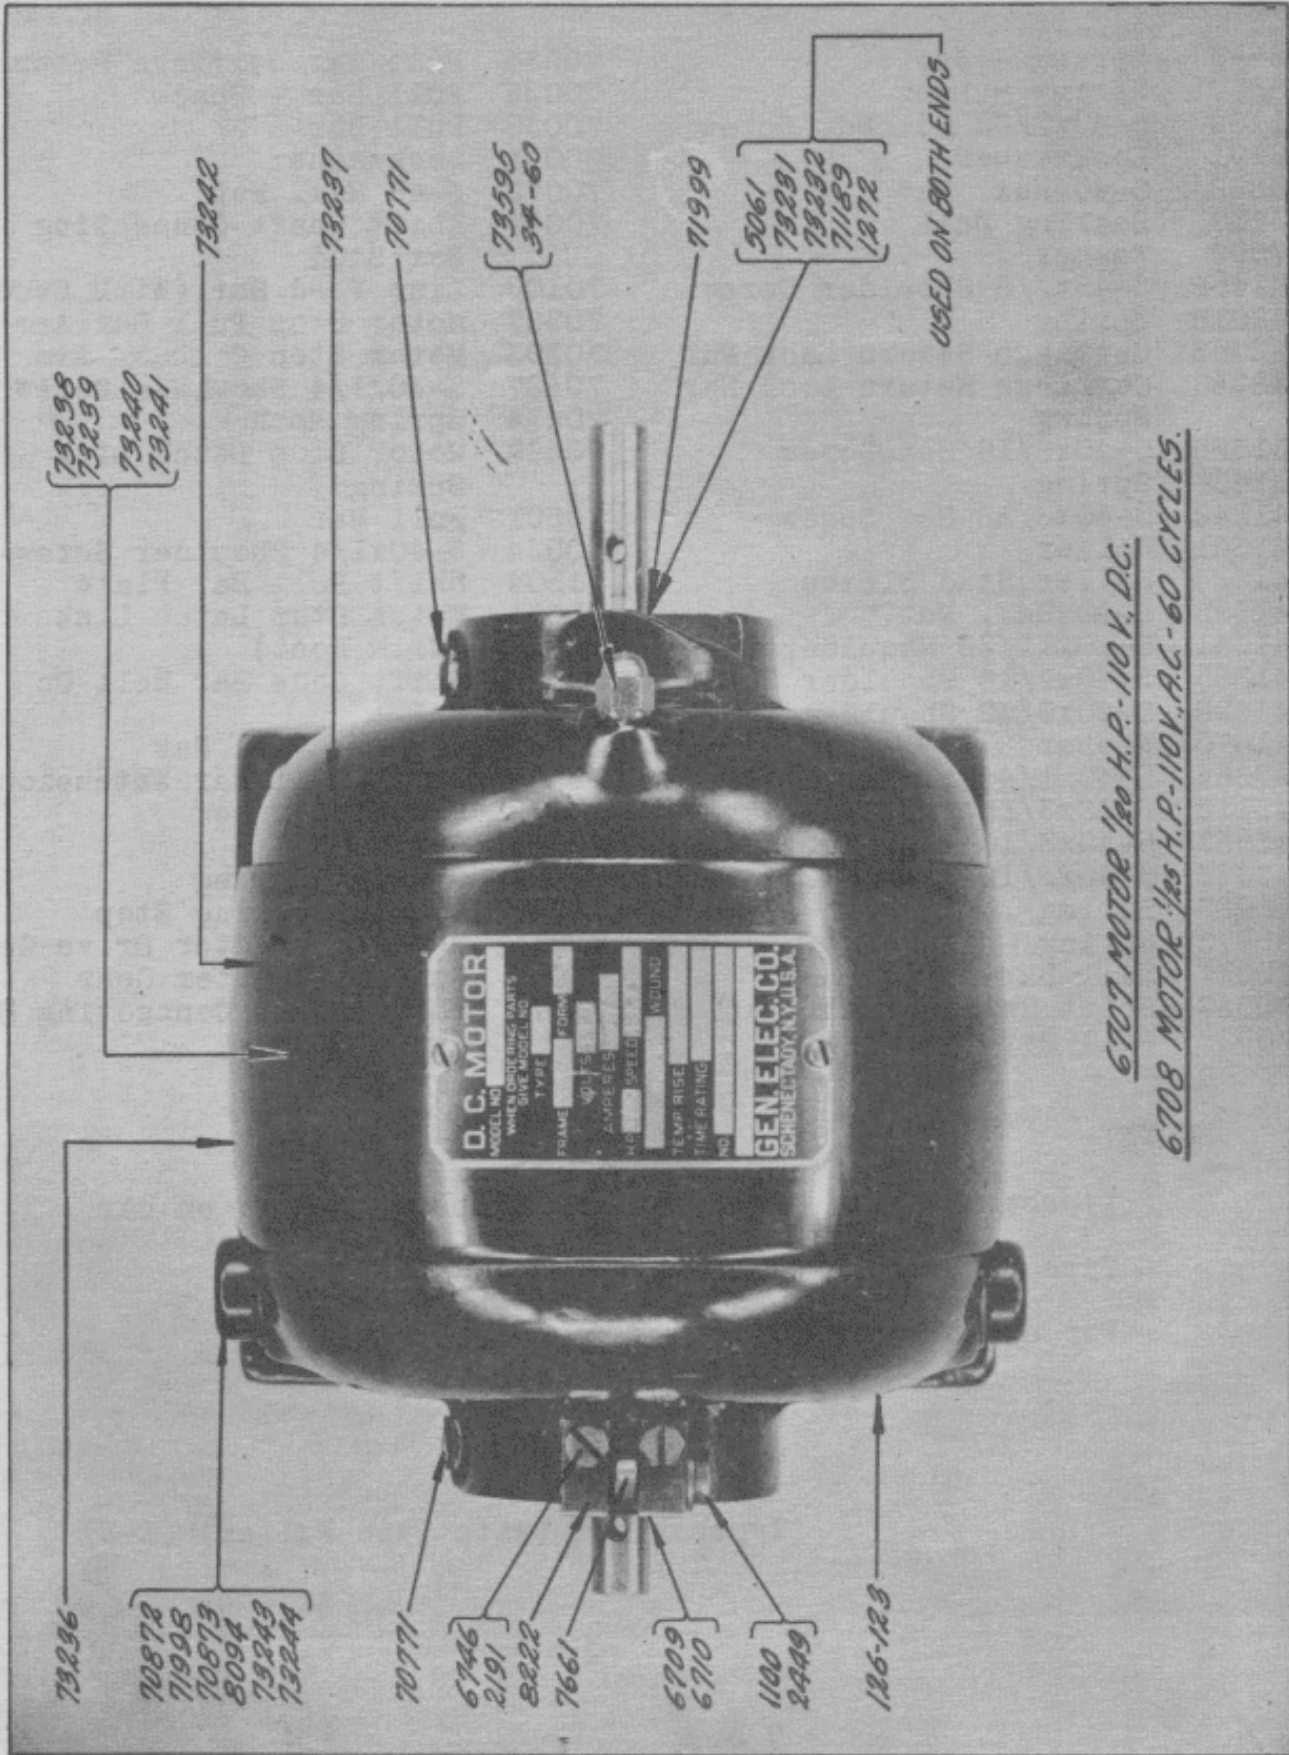


34-60 Acorn Nut
126-123 Outlet Bushing
1100 1/4-32 Screw
1272 6-40x11/16 Screw
2191 Lockwasher
2449 Lockwasher
5061 Ball Bearing
6707 Motor 1/20 H.P. 110 V. D.C.
6708 Motor 1/25 H.P. 110 V. A.C.-60 Cycles
6709 Armature for 6707 Motor
6710 Armature for 6708 Motor
6746 6-40x5/16 Screw
7661 Adjusting Lever
8094 Brush (With Spring)
8222 Wearing Strip
70771 Oil Cup
70872 Brush Holder (With Insulator)
70873 Brush Holder Cap
71189 Copper Bearing Retainer
71998 Brush Holder Ring (With Set Screw)
71999 End Play Spring
73231 Steel Bearing Retainer
73232 Felt Washer
73236 Field Frame (With Oil Cup)
73237 End Shield (With Oil Cup)
73238 Field Core (For 6708 Motor)
73239 Field Coils (For 6708 Motor)
73240 Field Core (For 6707 Motor)
73241 Field Coils (For 6707 Motor)
73242 Insulation (For Field Coils)
73243 Locking Wedge
73244 Locking Wedge Screw
73595 Clamping Rod

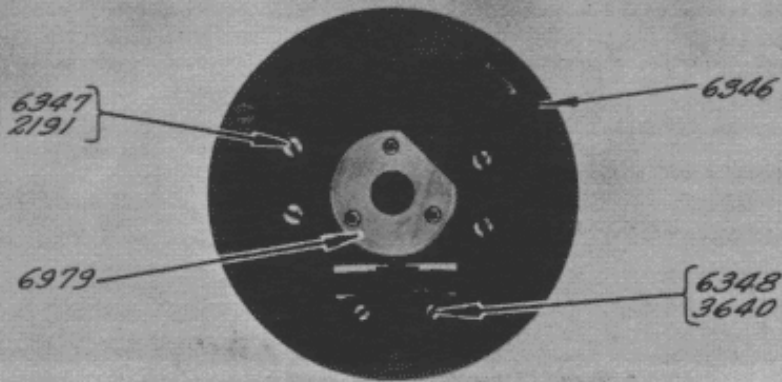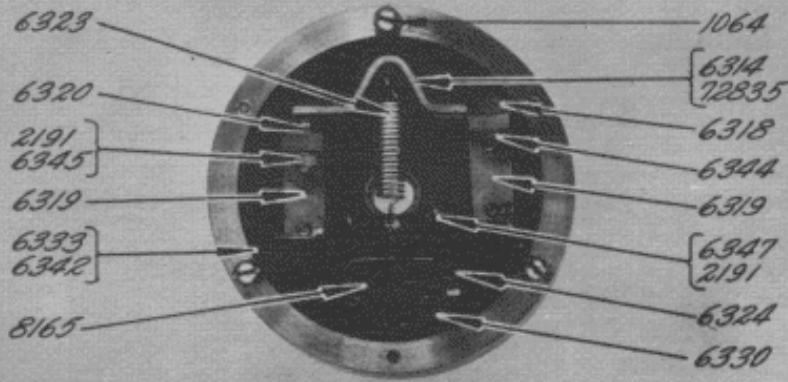

THESE GOVERNOR RINGS ARE MADE OVERSIZE AND CAN BE USED FOR REPLACEMENT ONLY AT POINTS WHERE FACILITIES ARE AVAILABLE FOR TURNING THEM DOWN AFTER RINGS HAVE BEEN ASSEMBLED IN GOVERNOR.

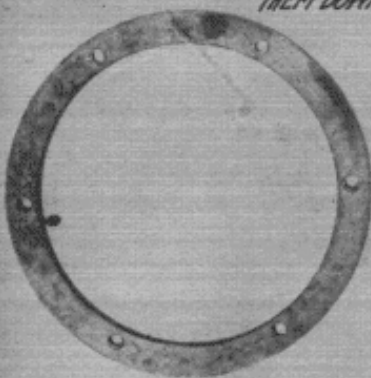


6339

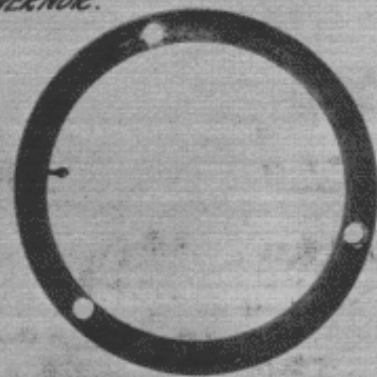


6340

6341


7485 GOVERNOR COMPLETE
 (GOVERNOR COMPLETE DOES NOT INCLUDE BRUSH HOLDER AND BRUSHES)

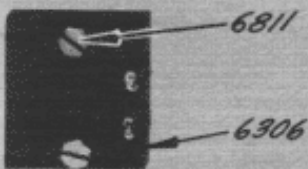

1064	6-32x1/4 Screw
2191	Lockwasher
3640	Lockwasher
6305	Governor Brush
6306	Brush Holder
6314	Contact Spring (With Point)
6318	Contact Spring Clamp
6319	Contact Spring Block
6320	Contact Screw
6323	Spring
6324	Adjusting Wheel
6330	Adjusting Wheel Bearing
6333	Terminal
6339	Inner Governor Ring (With Terminal)
6340	Outer Governor Ring (With Terminal)
6341	Bushing (Fibre)
6342	Wire
6344	6-32x11/32 Screw
6345	6-32 Hex. Nut
6346	6-32x3/4 Screw
6347	6-32x3/8 Screw
6348	4-36x3/4 Screw
6811	6-40x5/8 Screw
6979	Governor Hub
7485	Governor Complete
8165	Washer
72835	Contact Point

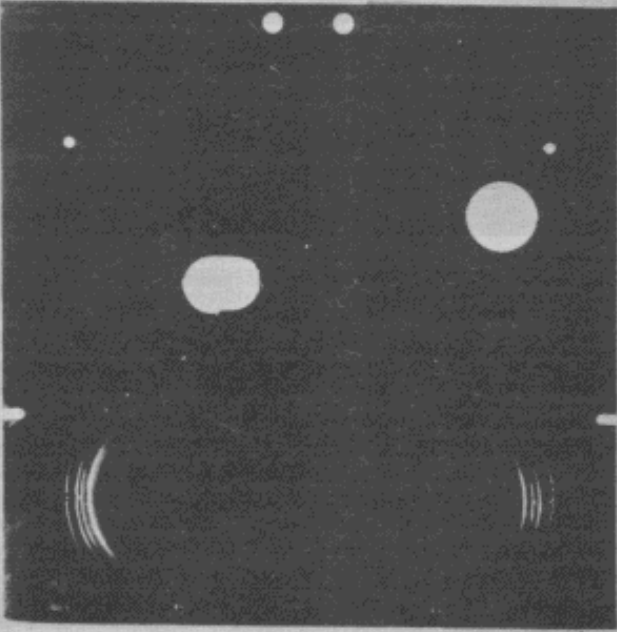


70506

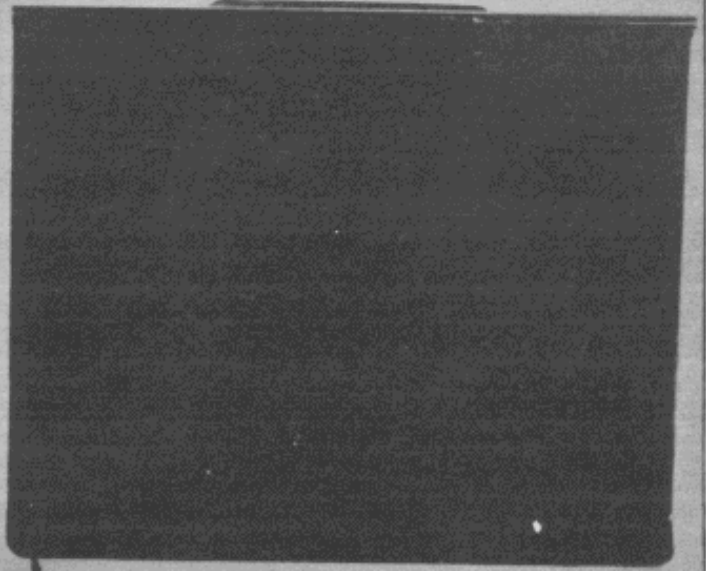


70836

45783
89440

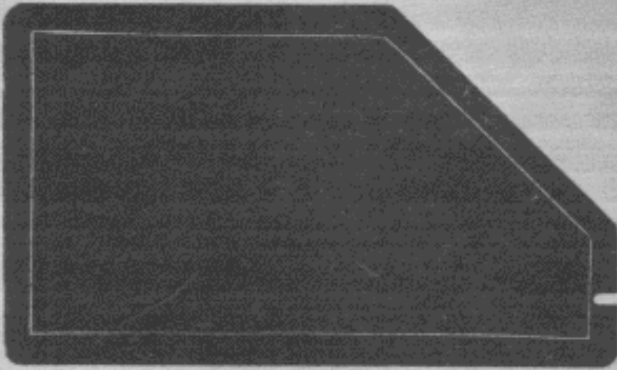

70113

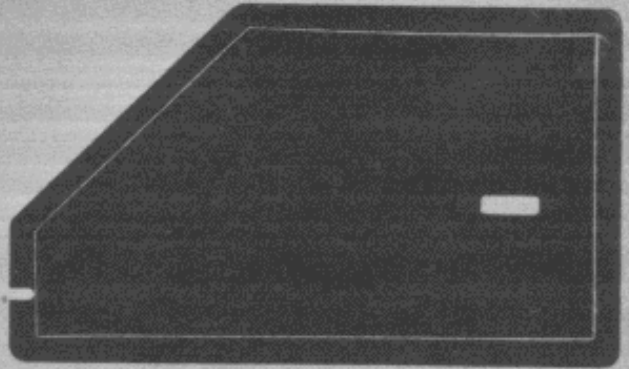


70111



72190




70088

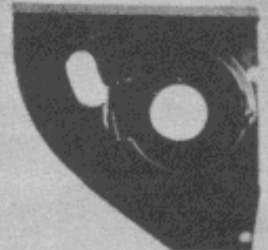

70078





70115

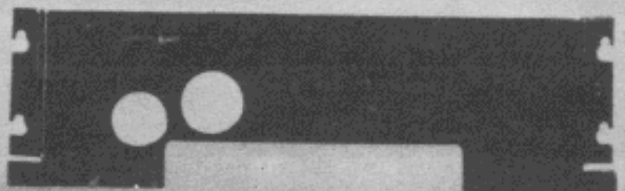

72460



45783	Message Rack Spring
49440	5-40x3/16 Hex. Hd. Screw
70078	Top Cover - Right Hand
70088	Top Cover - Left Hand
70111	Side Cover - Right Hand
70113	Side Cover - Left Hand
70115	Front Cover
70506	Rear Cover
70836	Message Rack
72190	Front Cover
72460	Front Cover (Special)

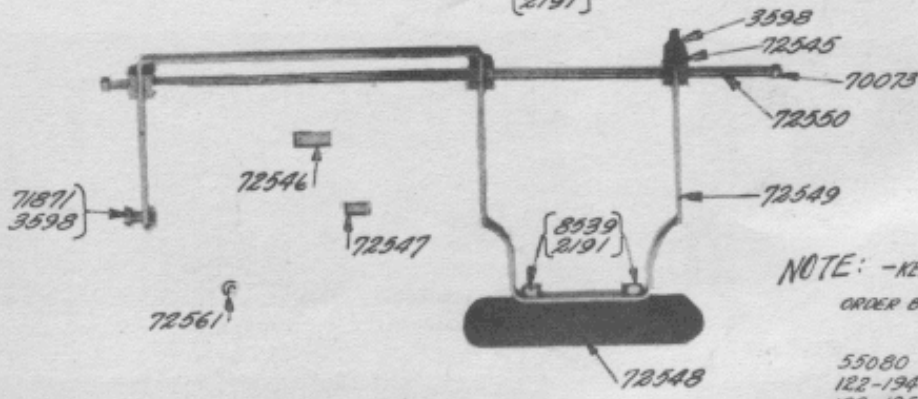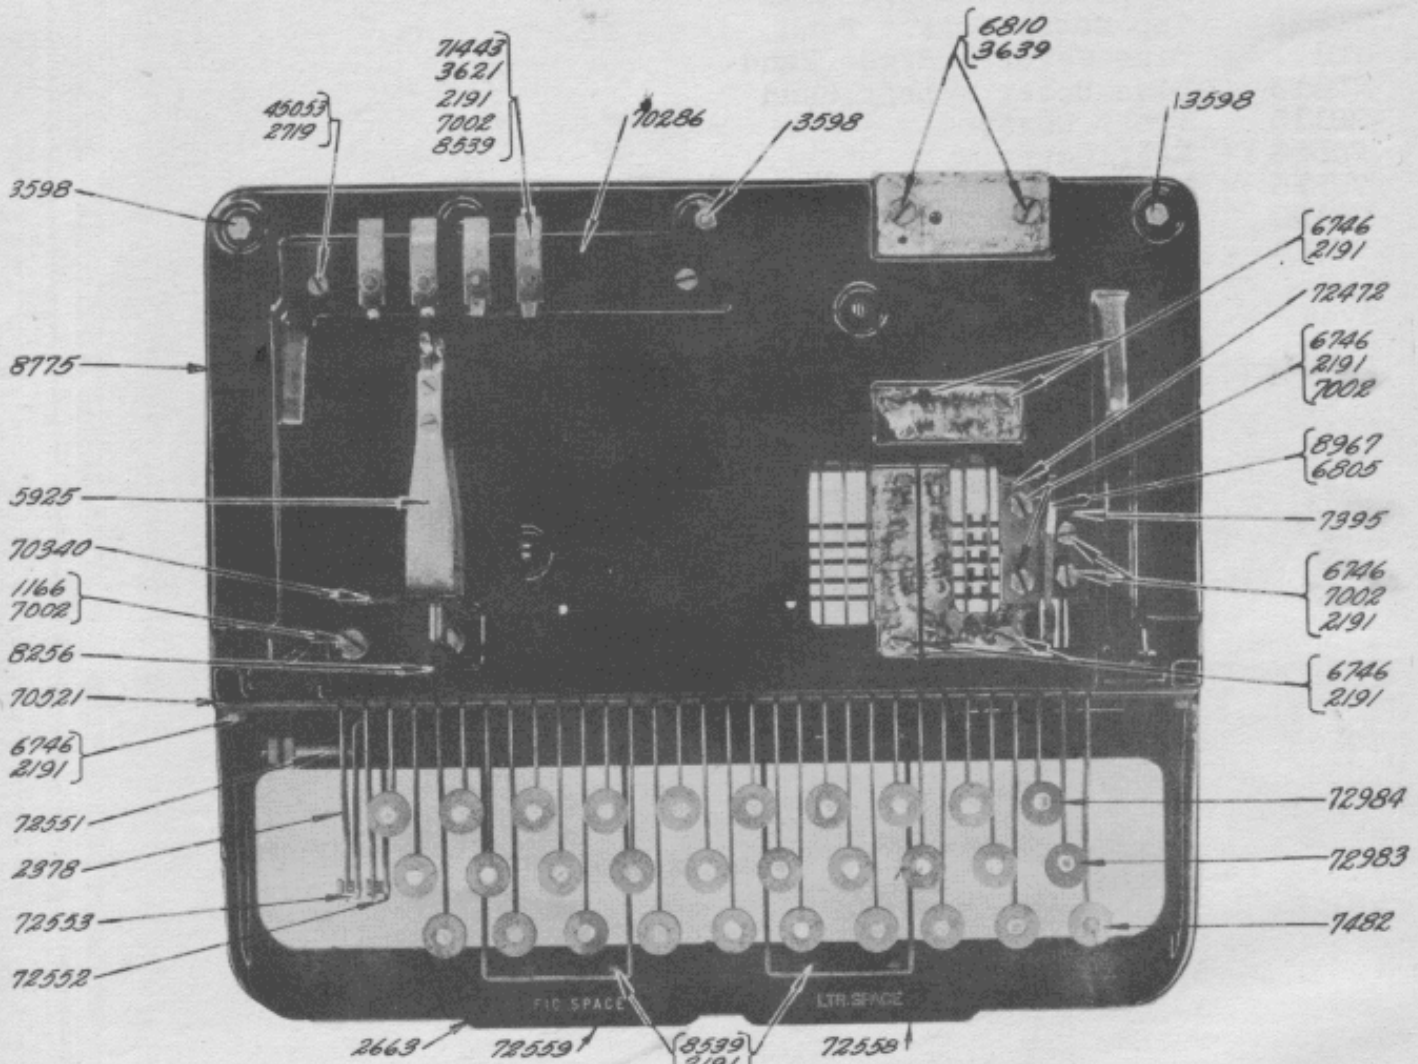


NOTE: -KEYTOPS-
 ORDER BY NAME - THUS: { RUBBER KEYTOP x
 OR
 PAPER KEYTOP x

55080 } USED WITH PAPERKEYTOPS.
 122-194 }
 122-195 }


122-194 Keylever Packing
122-195 Keylever Celluloid Cover
1166 4-36x1/4 Screw
2191 Lockwasher
2378 Spacer Keylever
2663 Rubber Buffer
2719 Washer
3598 6-40 Hex. Nut
3621 Terminal
3639 Lockwasher
5925 Break Key (With Knob)
6746 6-40x5/16 Screw
6805 6-40 Shoulder Screw
6810 10-32x3/8 Screw
7002 Washer
7395 Trip Off Pawl Stop Plate
7482 Keylever (Lower)
8256 Break Key Knob
8539 6-40x1/2 Screw
8775 Base
8967 Trip Off Pawl (With Spring)
45053 8-40x1/2 Adjusting Screw
55080 Bezel
70073 3-48 Hex. Nut
70286 Slip Connection Strip
70340 Key Bracket
70521 Keylever Guide - Front
71443 Slip Connection Spring
71871 Spacer Bar Loop Stud
72472 Shim
72545 Spacer Bar Standard
72546 Spacer Sleeve
72547 Spacer Sleeve
72548 Spacer Bar
72549 Spacer Lever Loop
72550 Spacer Lever Loop Shaft
72551 Double Spacer Sleeve
72552 Double Spacer Lever Loop -
Inner
72553 Double Spacer Lever Loop -
Outer
72558 Spacer Bar "Letters"
72559 Spacer Bar "Figures"
72561 Bushing
72983 Keylever (Center)
72984 Keylever (Upper)

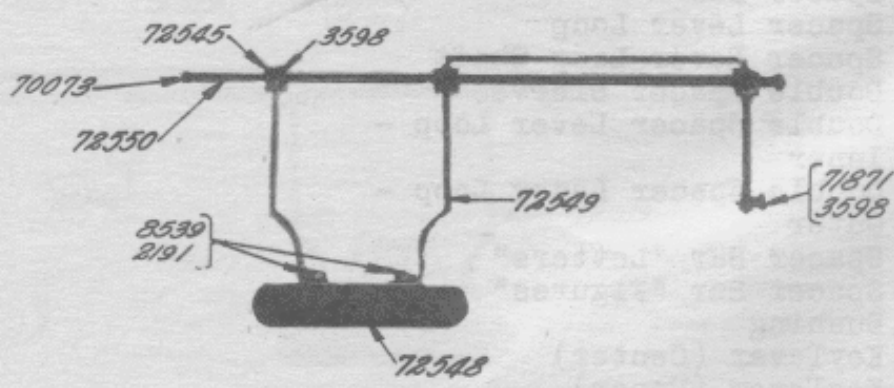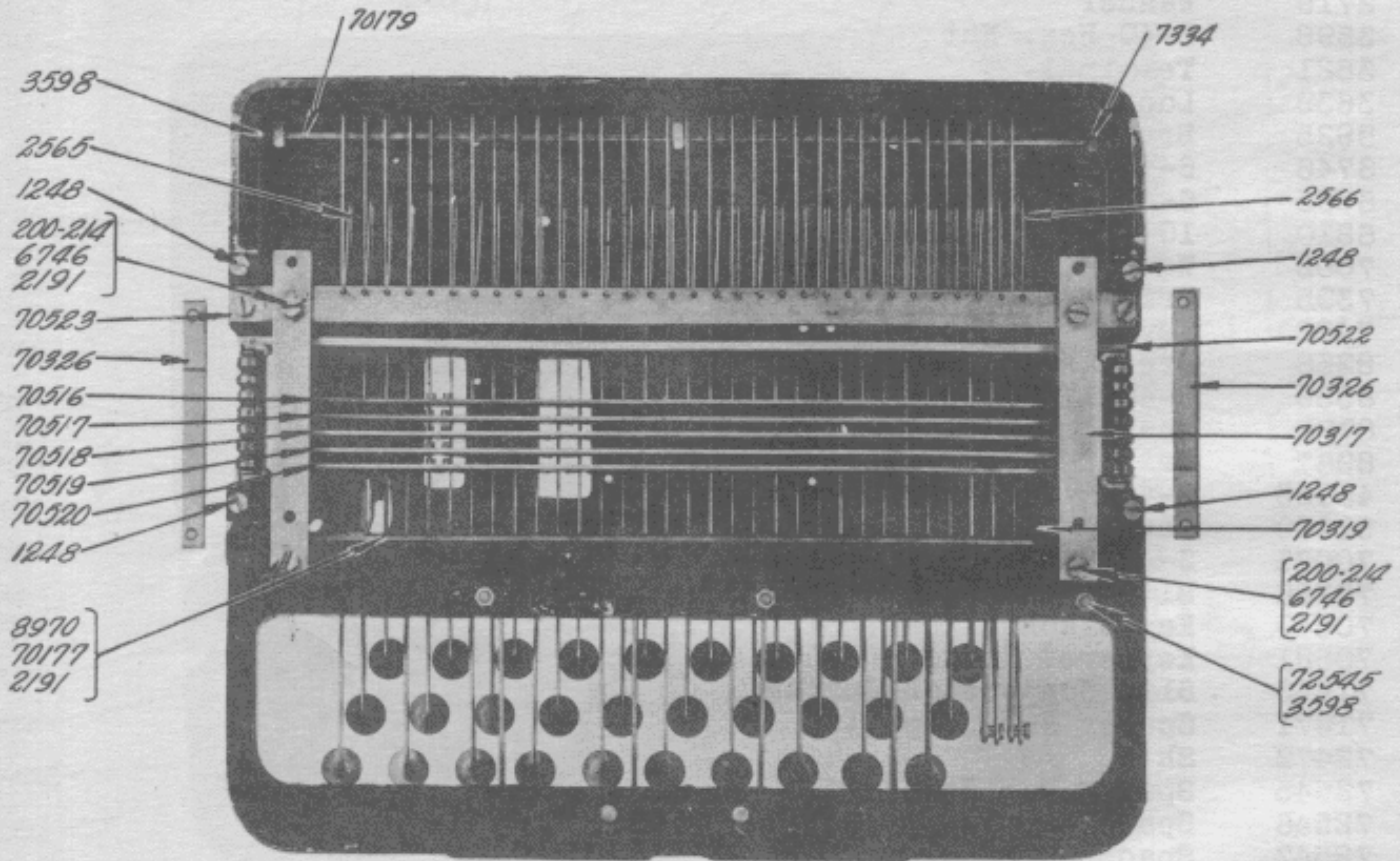


300-214 Shim
1248 6-40x9/32 Fl. Hd. Screw
2191 Lockwasher
2565 Keylever Spring
2566 Spacer Keylever Spring
3598 6-40 Hex. Nut
6746 6-40x5/16 Screw
7334 Keylever Shaft Post
8539 6-40x1/2 Screw
8970 Universal Bar (With Link)
70073 3-48 Hex. Nut
70177 Pilot Screw
70179 Keylever Shaft
70317 Selector Bar Bracket (Comp)
70319 Upstop
70326 Keyboard Rail
70516 Selector Bar #1 (With Pin)
70517 Selector Bar #2 (With Pin)
70518 Selector Bar #3 (With Pin)
70519 Selector Bar #4 (With Pin)
70520 Selector Bar #5 (With Pin)
70522 Keylever Guide - Rear
70523 Keylever Spring Bar
71871 Spacer Bar Loop Stud
72545 Spacer Bar Standard
72548 Spacer Bar
72549 Spacer Lever Loop
72550 Spacer Lever Loop Shaft

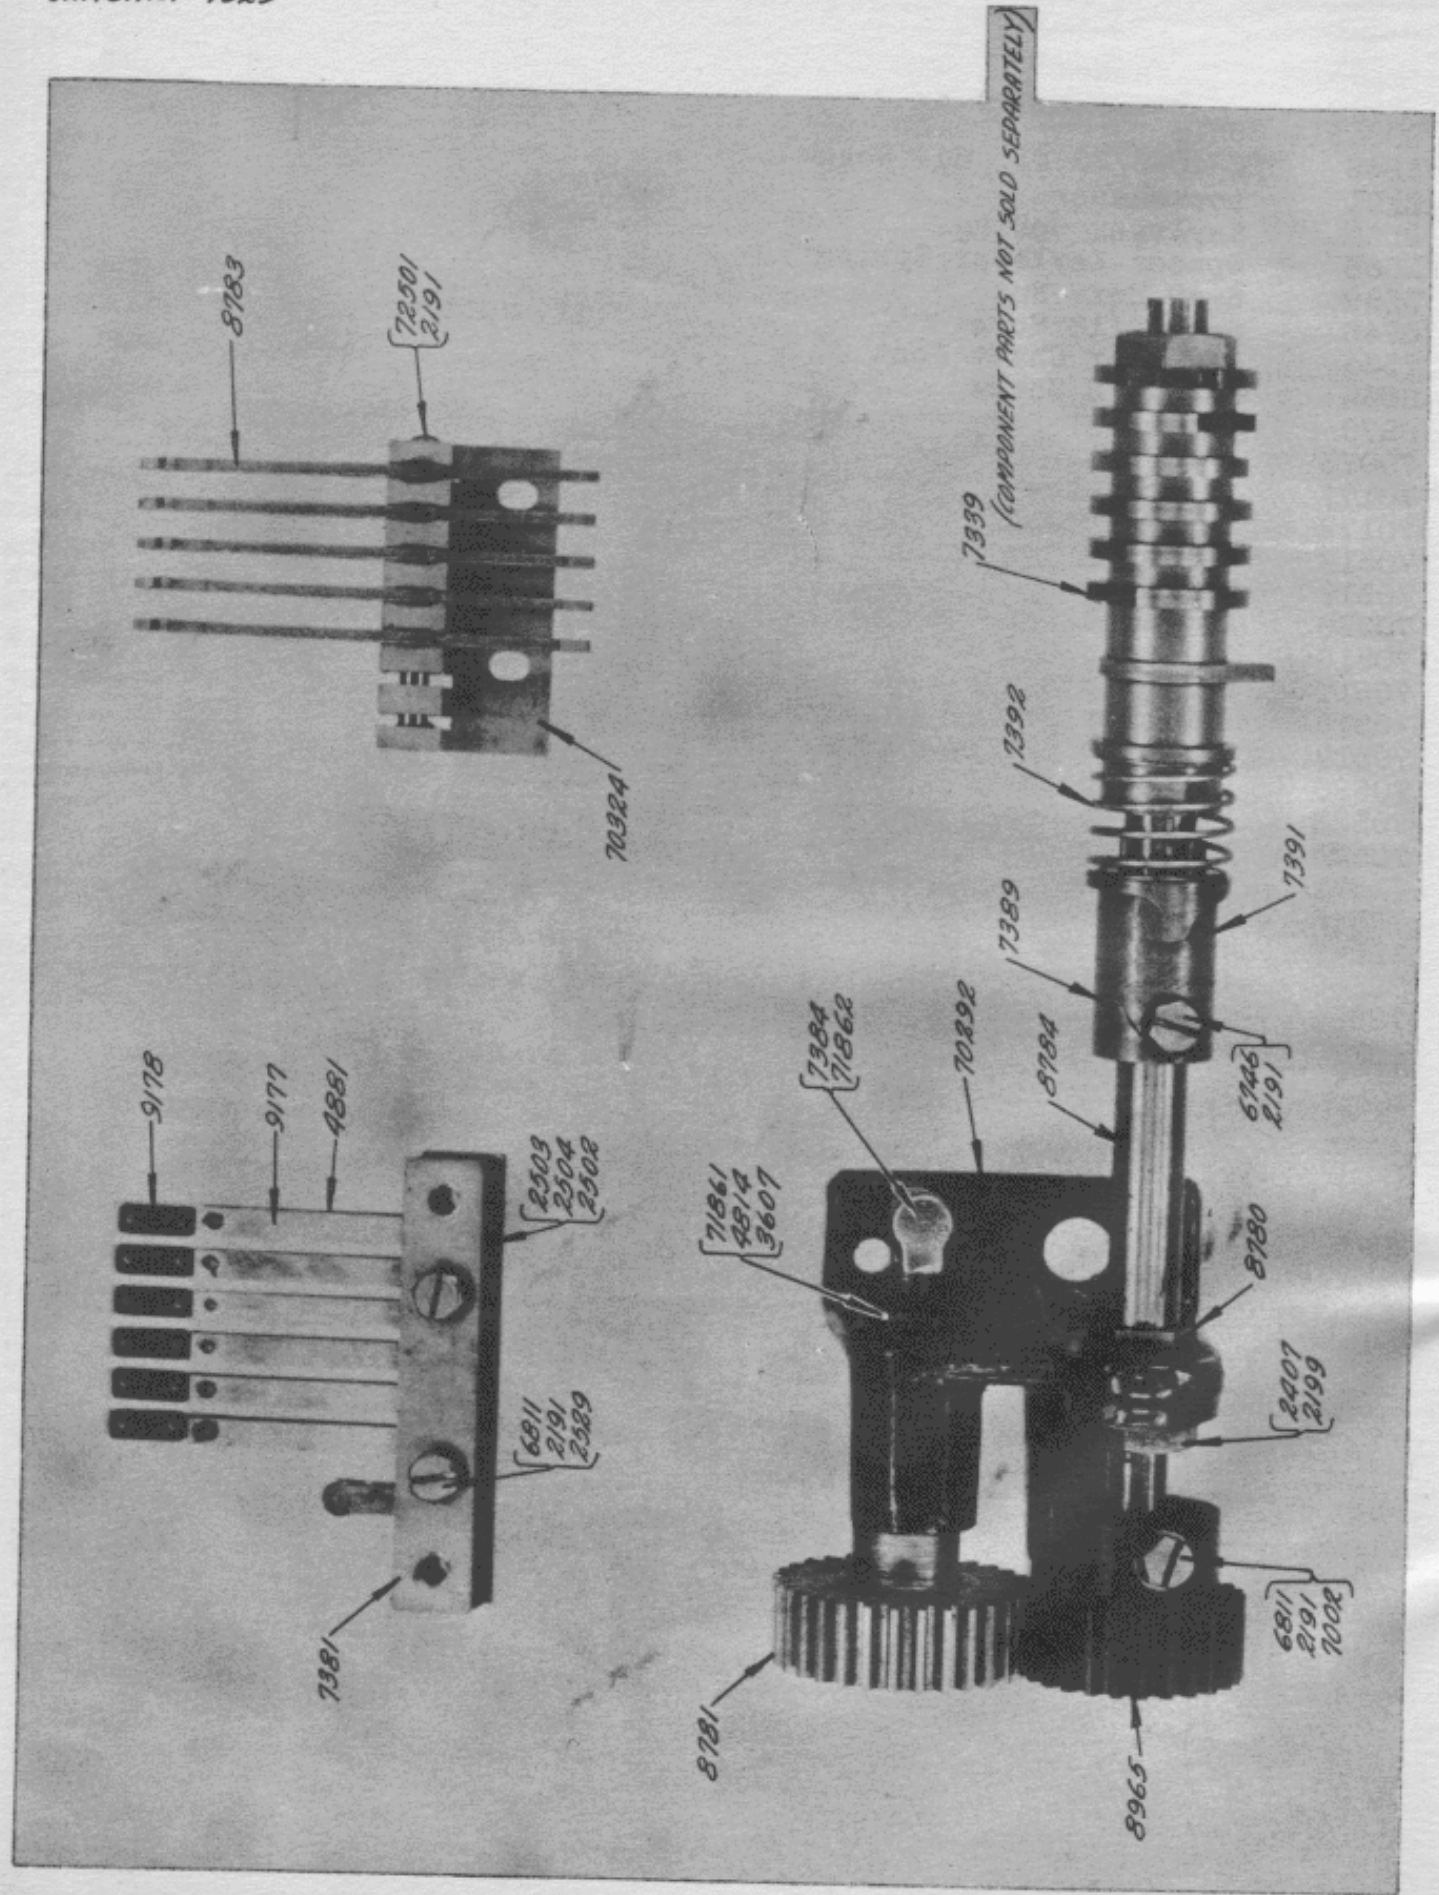

2191 Lockwasher
2199 7/16-32 Hex. Nut
2407 Lockwasher
2502 Mounting Strip
2503 Cover Plate
2504 Insulator Strip
2529 Bushing (Fibre)
3607 5/16-32 Nut
4814 Lockwasher
4881 Spring Backing
6746 6-40x5/16 Screw
6811 6-40x5/8 Screw
7002 Washer
7339 Cam Sleeve (Assem)
7381 Contact Mounting (Comp)
7384 Oil Cup
7389 Driving Clutch
7391 Driven Clutch
7392 Clutch Spring
8780 Bushing
8781 Keyboard Drive Idler Gear - 31 Teeth
8783 Contact Lockout Lever
8784 Keyboard Shaft
8965 Keyboard Drive Gear - 26 Teeth
9177 Contact Stop
9178 Contact Spring
70292 Keyboard Shaft Bearing Bracket
70324 Contact Lockout Lever Bearing
71861 Stud
71862 Oil Wick
72501 Contact Lockout Lever Shaft

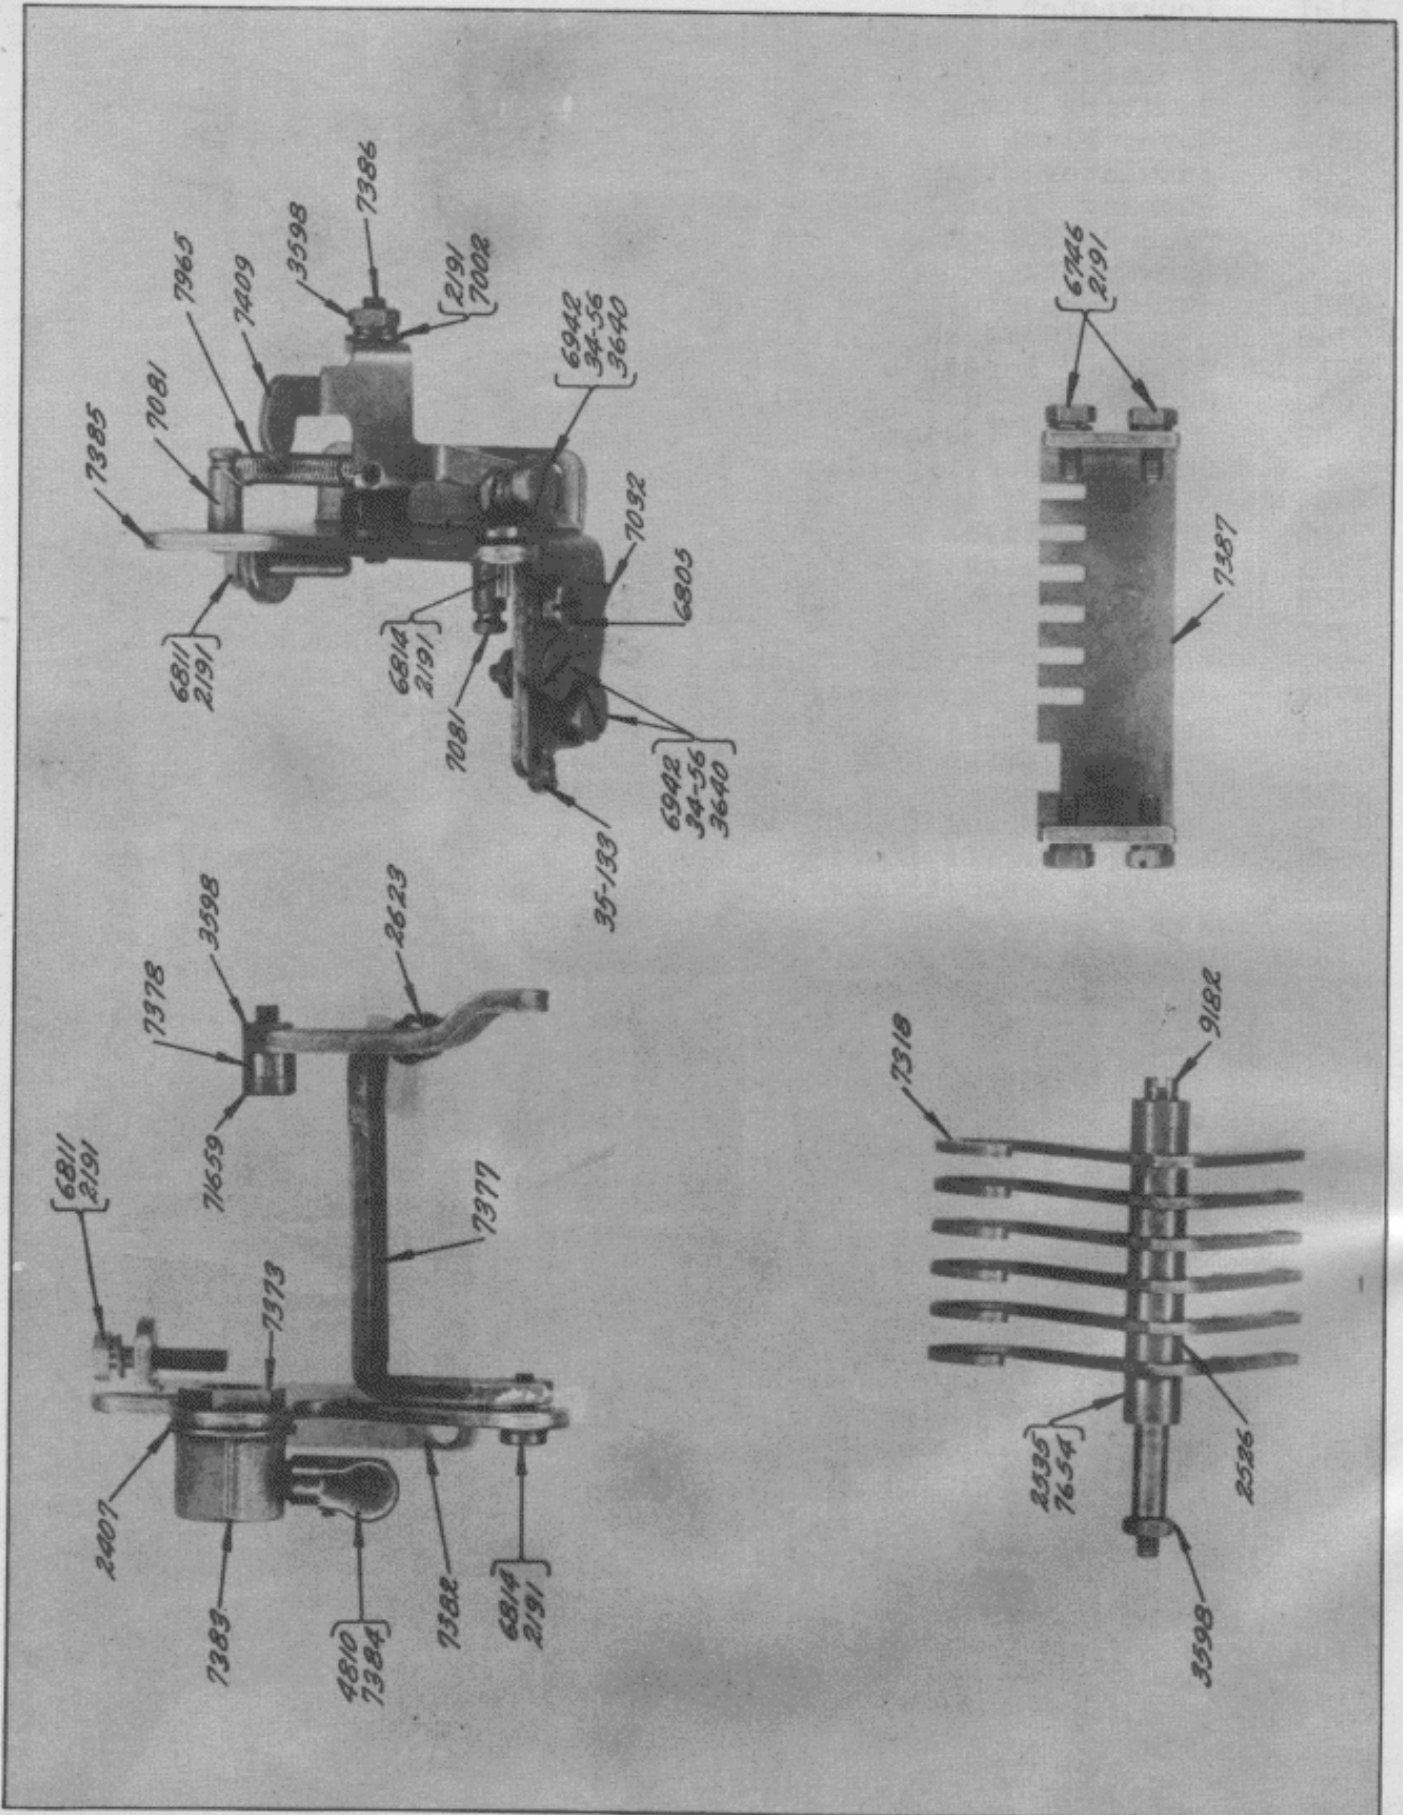

34-56	4-40 Hex. Nut
35-133	Trip Off Pawl Spring
2191	Lockwasher
2407	Lockwasher
2526	Spacing Collar (Short)
2535	Spacing Collar (Long)
2623	Spring
3598	6-40 Hex. Nut
3640	Lockwasher
4810	Oil Wick
6746	6-40x5/16 Screw
6805	6-40 Shoulder Screw
6811	6-40x5/8 Screw
6814	6-40 Pilot Screw
6942	Eccentric Screw
7002	Washer
7032	Clutch Lever Pawl
7081	Spring Post
7318	Contact Lever
7373	Front Bracket Bushing
7377	Lockloop
7378	Roller
7382	Front Bracket
7383	Bearing Bushing Oiler
7384	Oil Cup
7385	Rear Bracket (With Post)
7386	Clutch Lever Post
7387	Transmitter Brace
7409	Keyboard Clutch Lever
7654	Shim
7965	Clutch Lever Spring
9182	Contact Lever Shaft
71659	6-40 Shoulder Screw

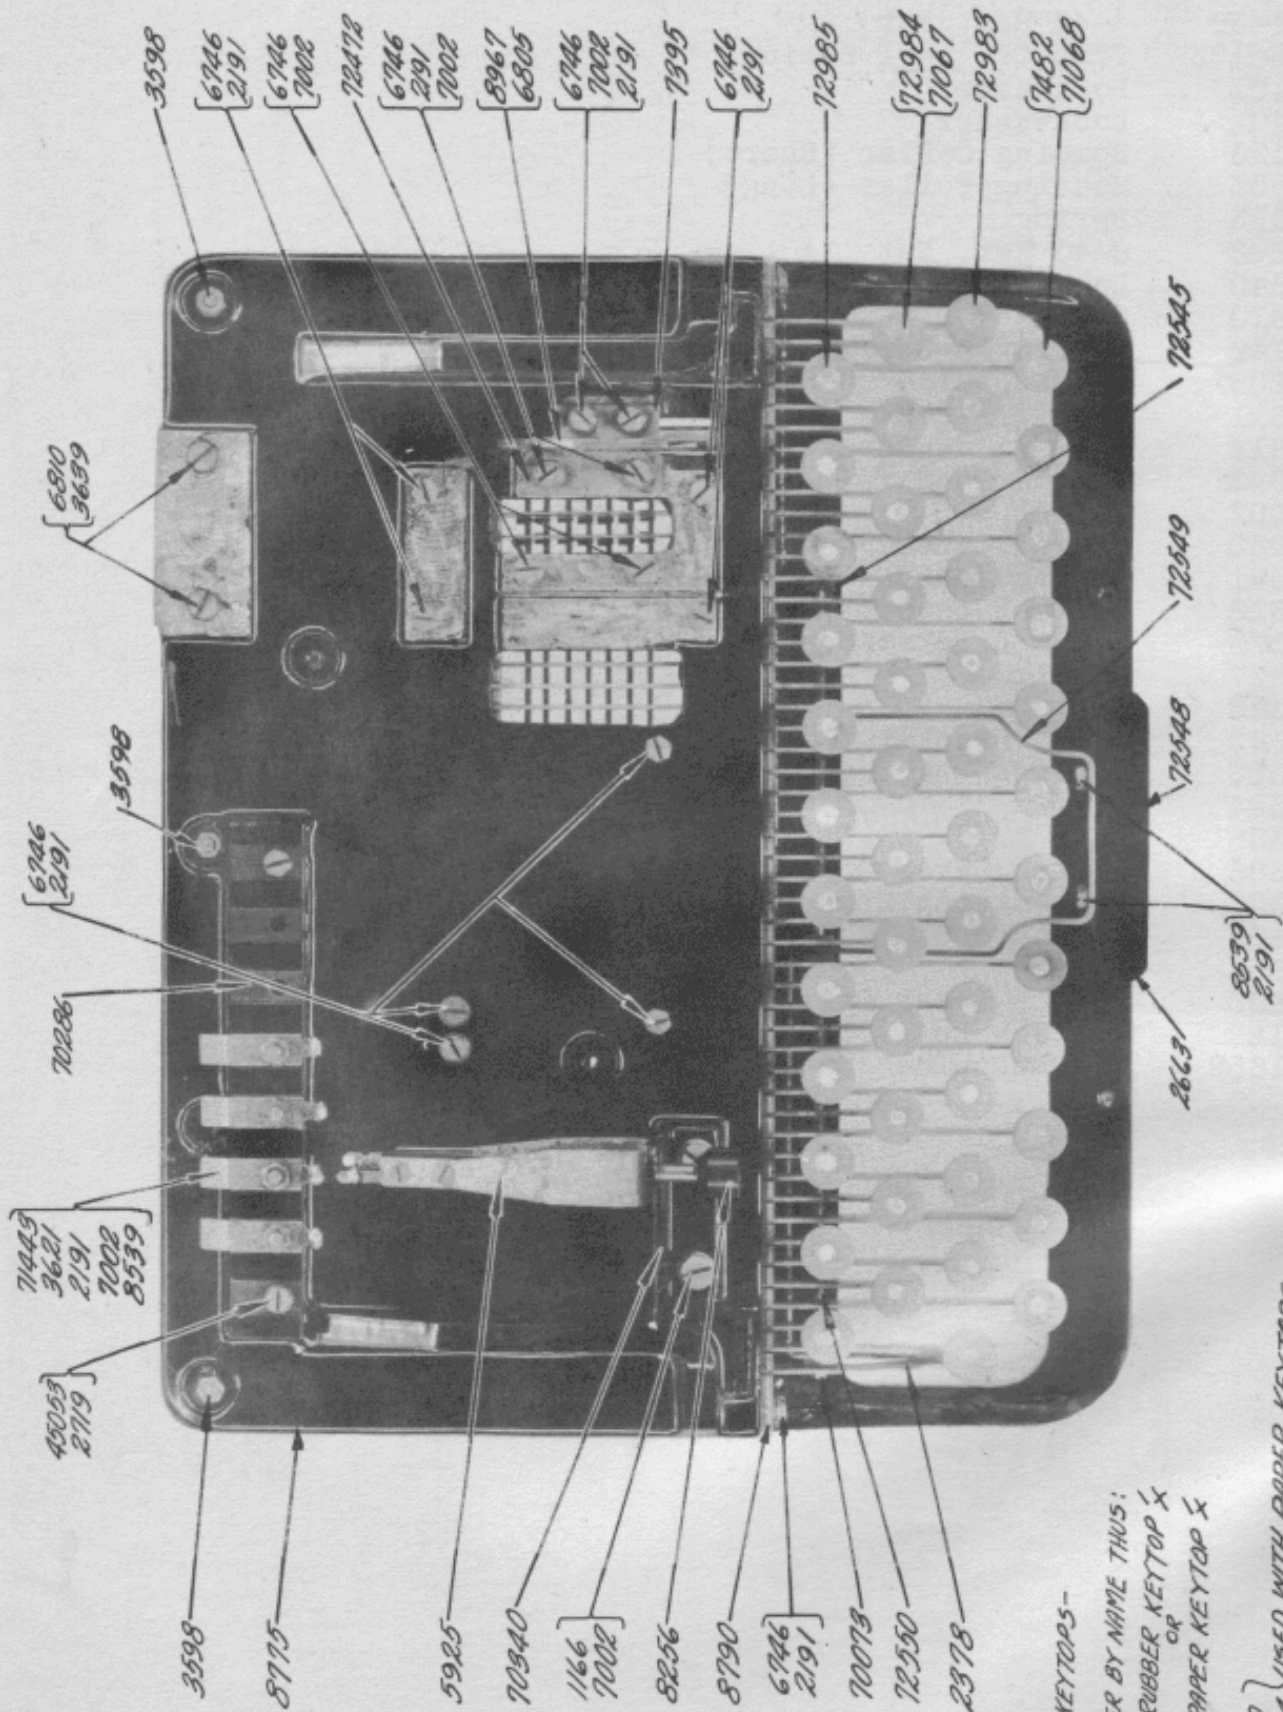


NOTE: KEYTOPS-

ORDER BY NAME THUS:
 RUBBER KEYTOP X
 OR
 PAPER KEYTOP X


55080 } USED WITH PAPER KEYTOPS
 122-194 }
 122-195 }

122-194 Keylever Packing
122-195 Keylever Celluloid Cover
1166 4-36x1/4 Screw
2191 Lockwasher
2378 Spacer Keylever
2663 Rubber Buffer
2719 Washer
3598 6-40 Hex. Nut
3621 Terminal
3639 Lockwasher
5925 Break Key (With Knob)
6746 6-40x5/16 Screw
6805 6-40 Shoulder Screw
6810 10-32x3/8 Screw
7002 Washer
7395 Trip Off Pawl Stop Plate
7482 Keylever (Lower)
8256 Break Key Knob
8539 6-40x1/2 Screw
8775 Base
8790 Keylever Guide - Front
8967 Trip Off Pawl (With Spring)
45053 8-40x1/2 Adjusting Screw
55080 Bezel
70073 3-48 Hex. Nut
70286 Slip Connection Strip
70340 Key Bracket
71067 Keylever - Upper - Beveled
71068 Keylever - Lower - Beveled
71443 Slip Connection Spring
72472 Shim
72545 Spacer Loop Standard
72548 Spacer Bar
72549 Spacer Lever Loop
72550 Spacer Loop Shaft
72983 Keylever (Center)
72984 Keylever (Upper)
72985 Keylever

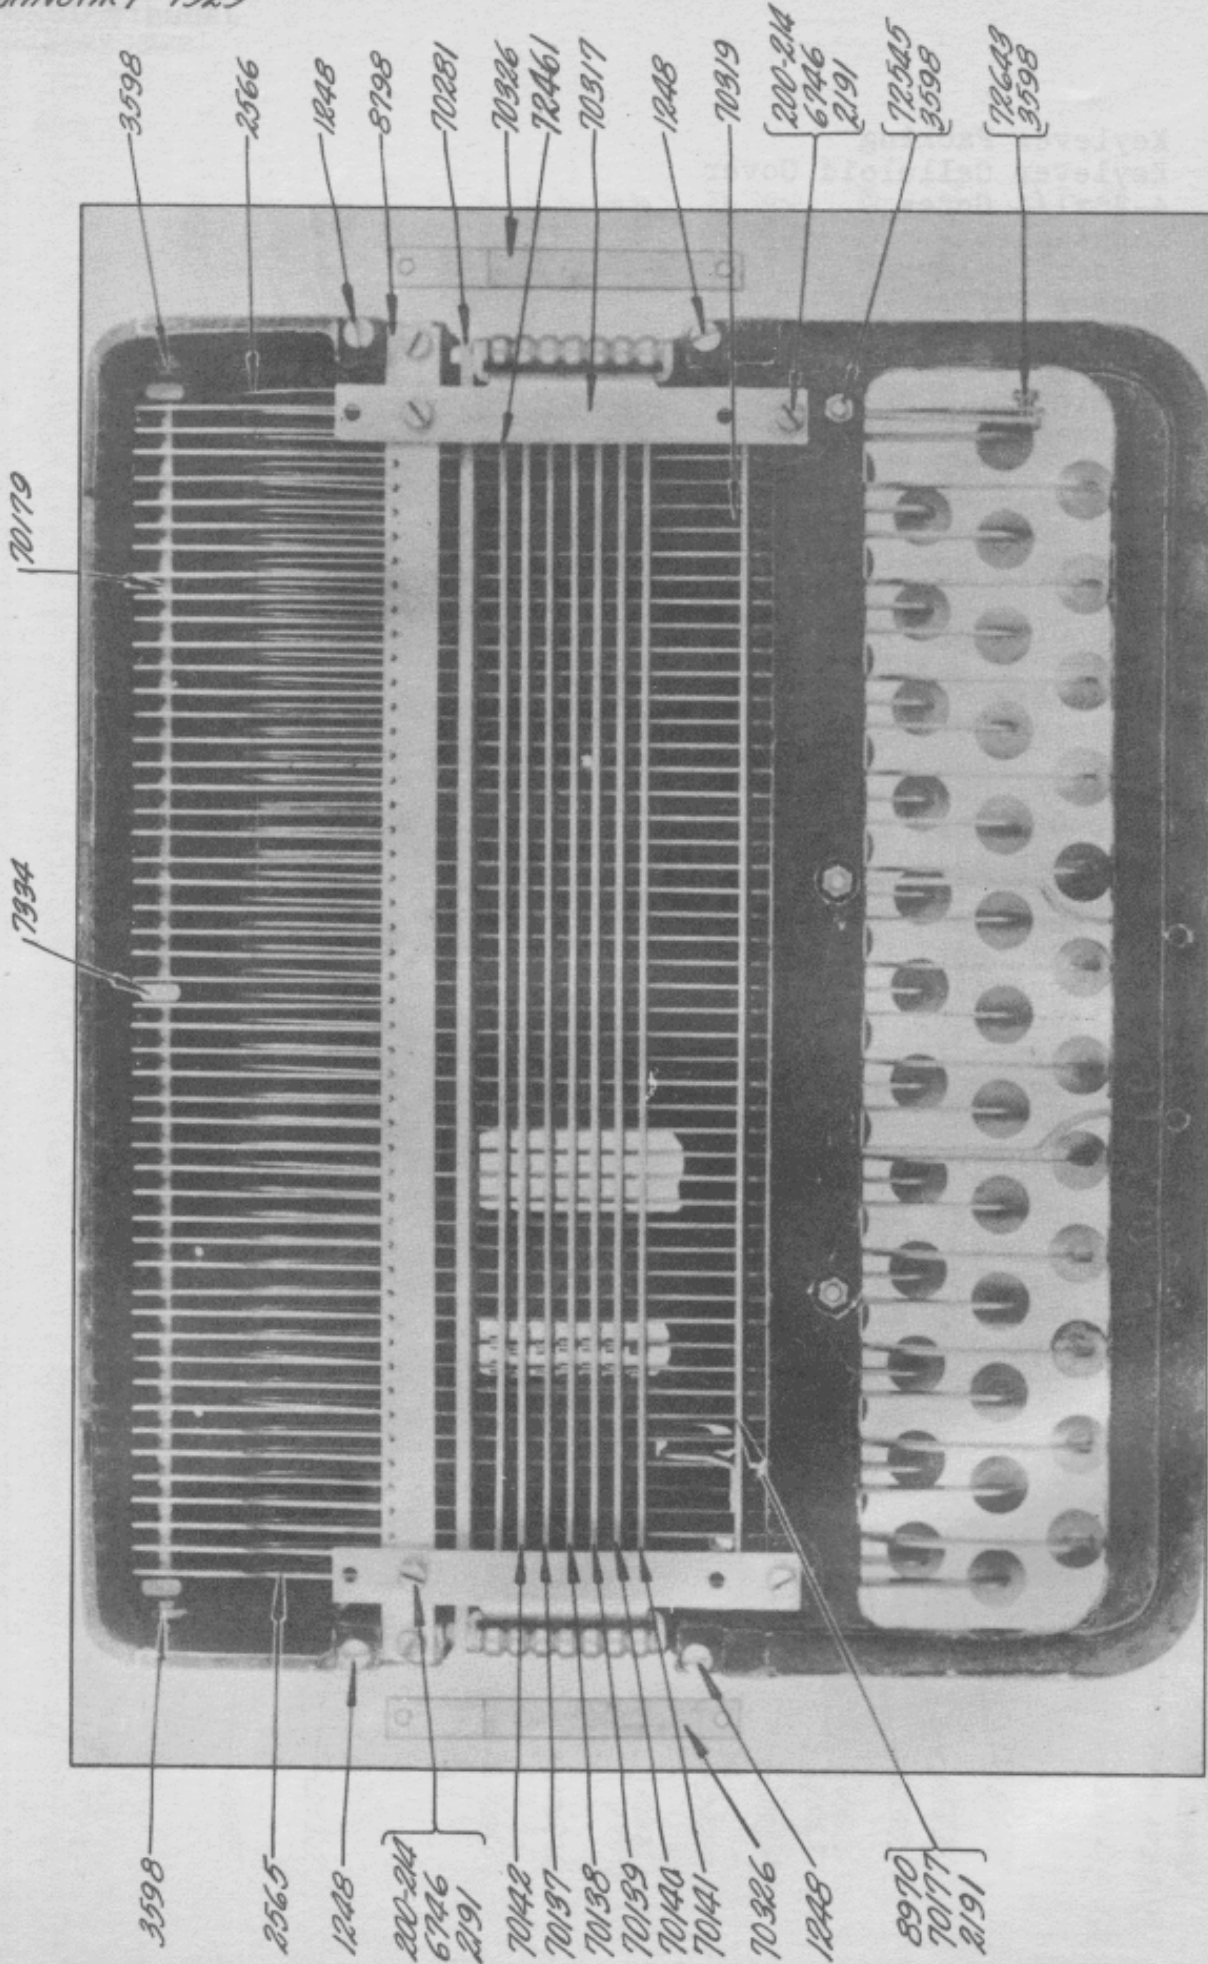


Faint, illegible text from the reverse side of the page is visible through the paper.


200-214	Shim
1248	6-40x9/32 Fl.Hd. Screw
2191	Lockwasher
2565	Keylever Spring
2566	Spacer Keylever Spring
3598	6-40 Hex. Nut
6746	6-40x5/16 Screw
7334	Keylever Shaft Post
8798	Keylever Spring Bar
8970	Universal Bar (With Link)
70137	Selector Bar #1 (With Pin)
70138	Selector Bar #2 (With Pin)
70139	Selector Bar #3 (With Pin)
70140	Selector Bar #4 (With Pin)
70141	Selector Bar #5 (With Pin)
70142	Selector Bar #6 (With Pin)
70177	Pilot Screw
70179	Keylever Shaft
70281	Keylever Guide - Rear
70317	Selector Bar Bracket (Comp)
70319	Upstop
70326	Keyboard Rail
72461	Function Selector Bar (With Pin)
72545	Spacer Loop Standard
72643	Spacer Loop Stud

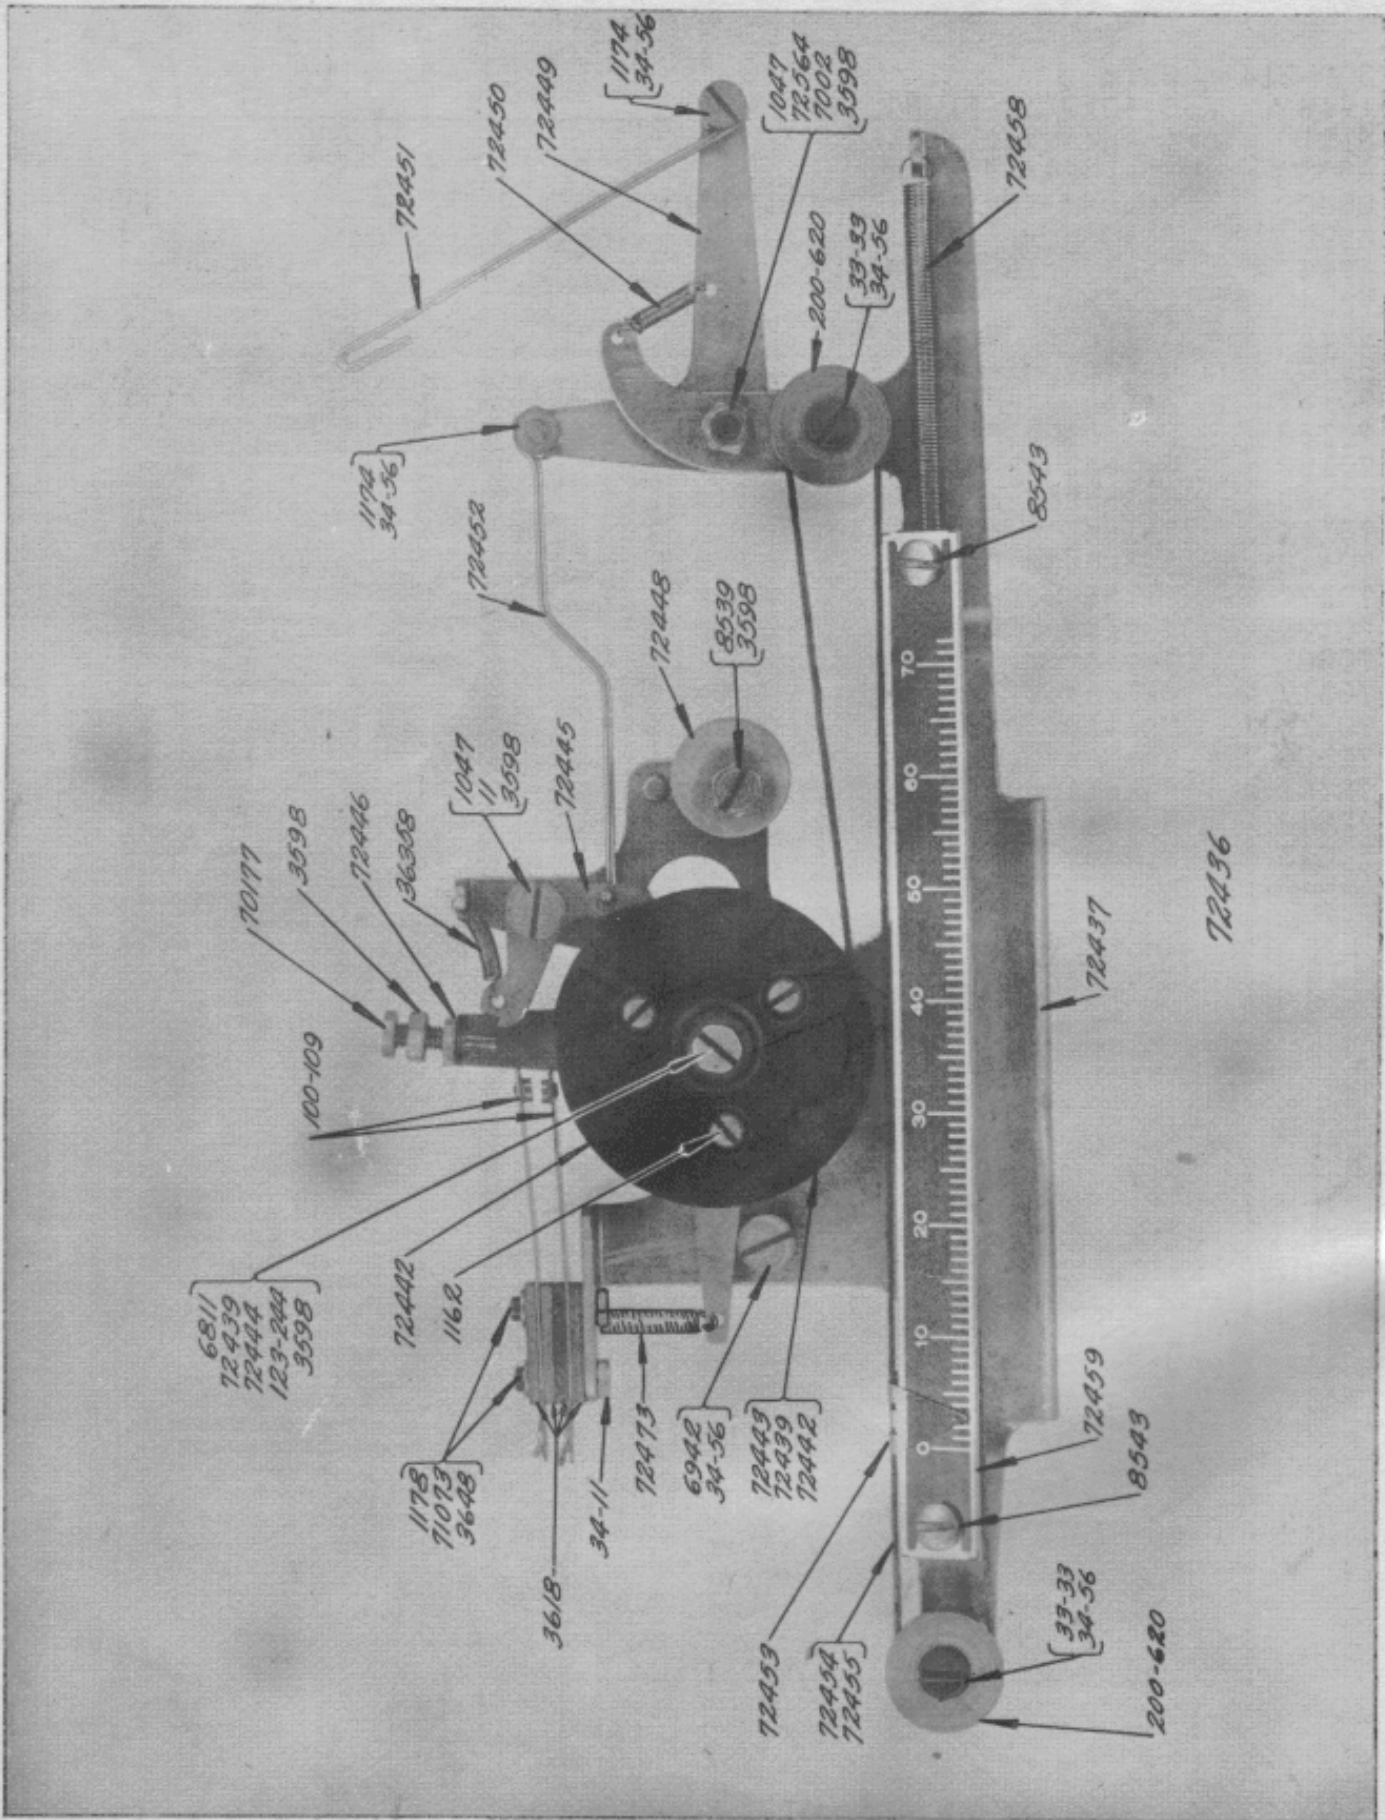

11 Retaining Pawl Spacer
33-33 4-40x1/4 Shoulder Screw
34-11 2-56 Hex. Nut
34-56 4-40 Hex. Nut
100-109 Contact Spring
123-244 Washer
200-620 Cord Pulley
1047 6-40x9/32 Shoulder Screw
1162 4-40x1/4 Screw
1174 4-40x9/32 Screw
1178 2-56x7/16 Fil. Hd. Screw
3598 6-40 Hex. Nut
3618 Insulator
3648 Bushing
6811 6-40x5/8 Screw
6942 Eccentric Screw
7002 Washer
8539 6-40x1/2 Screw
8543 6-40x1/4 Mtg. Screw
36358 Retaining Pawl Spring
70177 Pilot Screw
71073 Washer
72436 Spacer Counter Unit (Assem)
72437 Spacing Counter Bracket
72438 Spacing Counter Bracket
72439 Spacing Ratchet
72442 Spacing Pulley
72443 Contact Cam
72444 Spacing Pulley Bushing
72445 Retaining Pawl
72446 Retaining Pawl Latch
72448 Spacing Pawl Eccentric Guide
72449 Carriage Return Bell Crank
72450 Carriage Return Bell Crank Spring
72451 Vertical Pull Rod
72452 Horizontal Pull Rod
72453 Indicator
72454 Indicator Cord
72455 Cord Shackle
72458 Pulley Return Spring
72459 Counter Scale
72473 Retaining Pawl Latch Spring
72564 Bushing

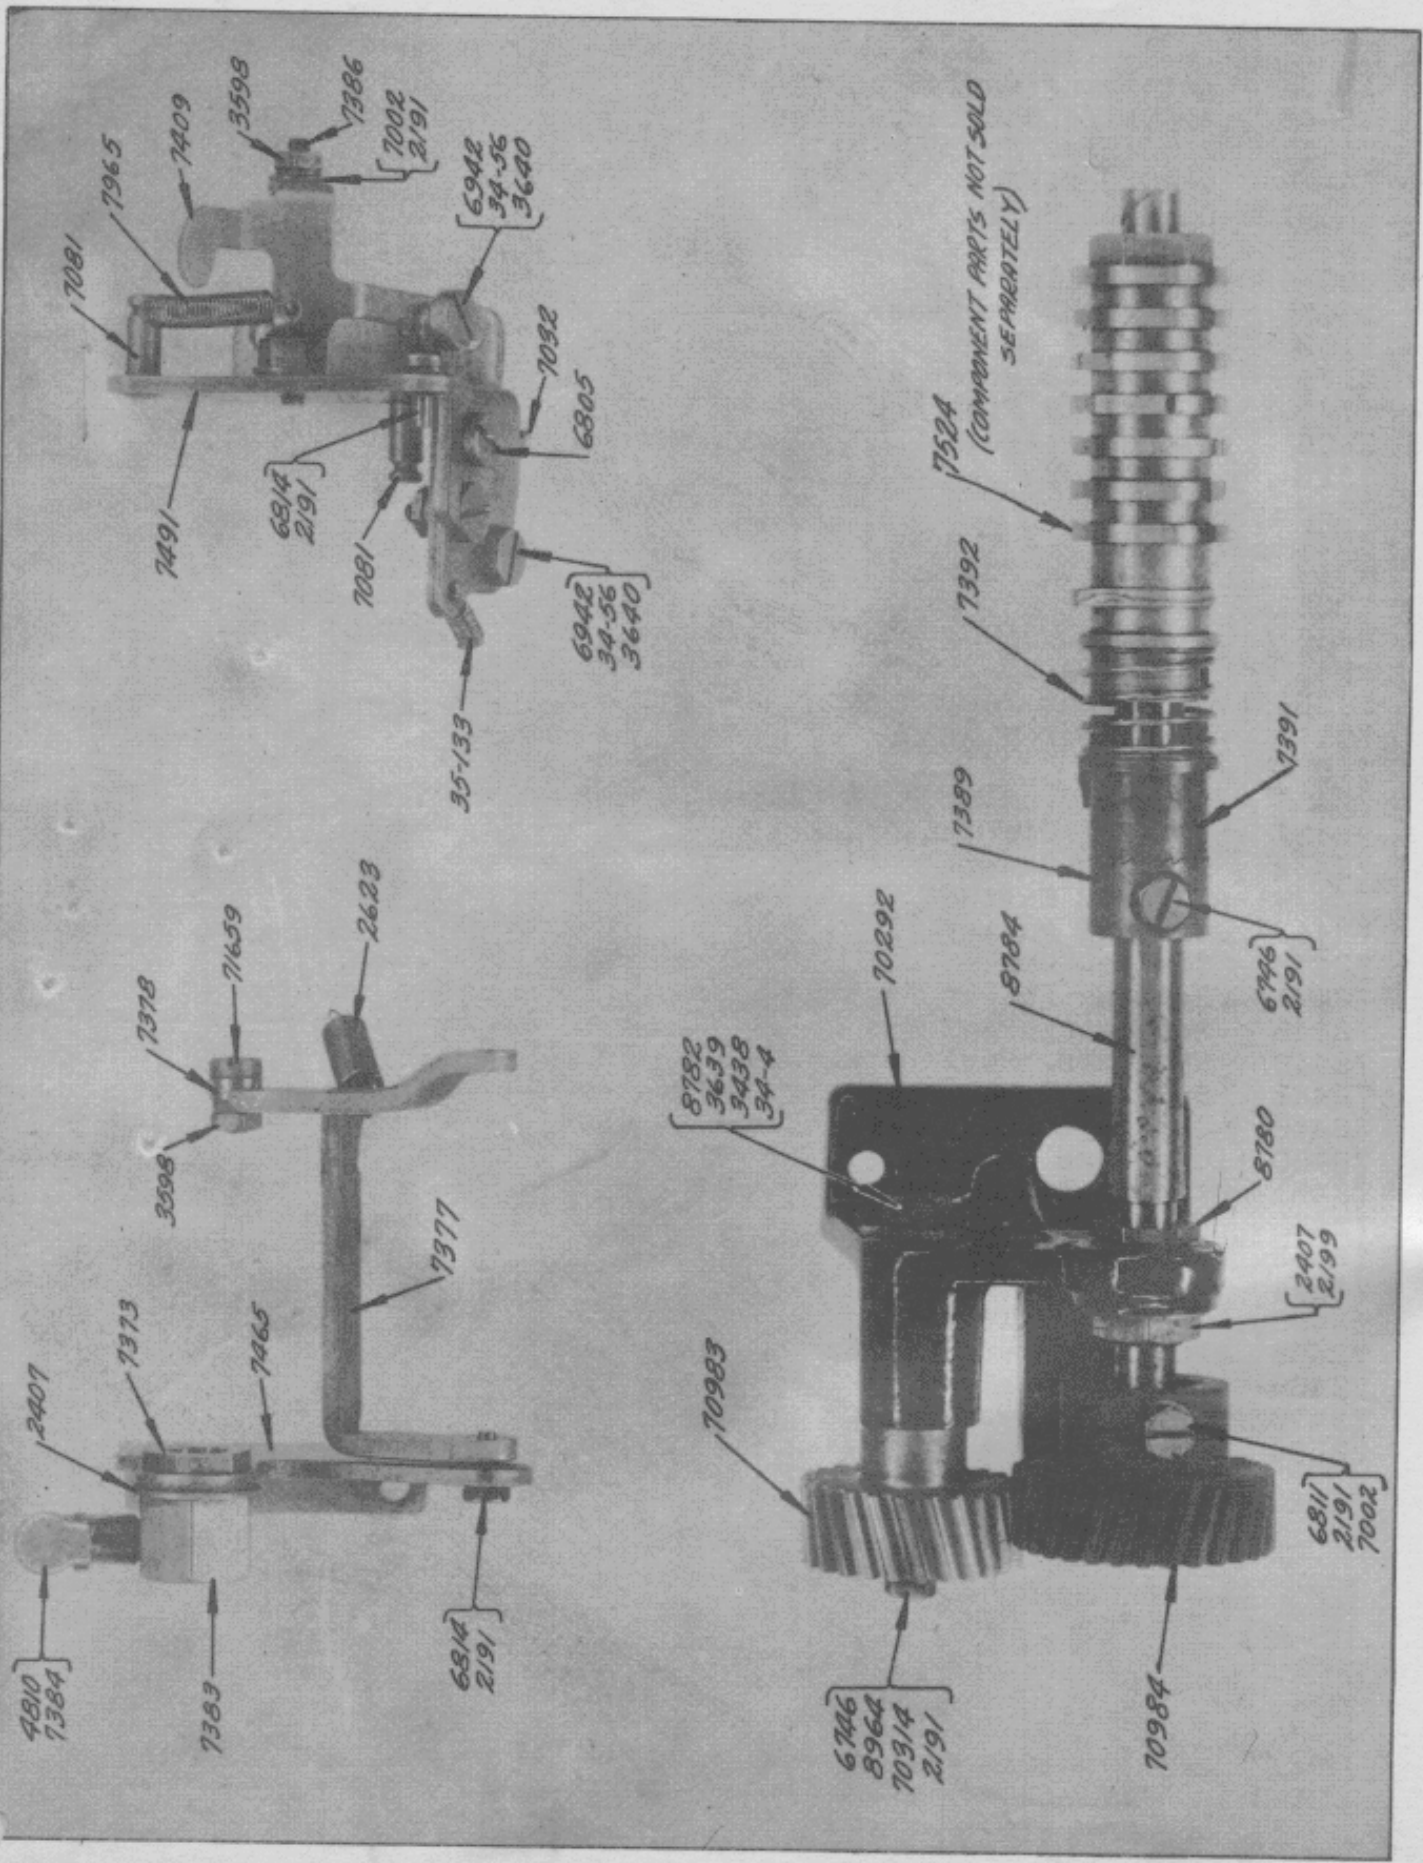

34-4	10-32 Hex. Nut
34-56	4-40 Hex. Nut
35-133	Trip Off Pawl Spring
2191	Lockwasher
2199	7/16-32 Hex. Nut
2407	Lockwasher
2623	Spring
3438	Washer
3598	6-40 Hex. Nut
3639	Lockwasher
3640	Lockwasher
4810	Oil Wick
6746	6-40x5/16 Screw
6805	6-40 Shoulder Screw
6811	6-40x5/8 Screw
6814	6-40 Pilot Screw
6942	Eccentric Screw
7002	Washer
7032	Clutch Lever Pawl
7081	Spring Post
7373	Front Bracket Bushing
7377	Lockloop
7378	Roller
7383	Bearing Bushing Oiler
7384	Oil Cup
7386	Clutch Lever Post
7389	Driving Clutch
7391	Driven Clutch
7392	Clutch Spring
7409	Keyboard Clutch Lever
7465	Transmitter Front Bracket
7491	Transmitter Rear Bracket (With Post)
7524	Cam Sleeve (Assem)
7965	Clutch Lever Spring
8780	Bushing
8782	Keyboard Idler Gear Stud
8784	Keyboard Shaft
8964	Oil Wick
70292	Keyboard Bearing Bracket
70314	Washer
70983	Keyboard Drive Idler Gear - 25 Teeth
70984	Keyboard Drive Gear - 30 Teeth
71659	6-40 Shoulder Screw

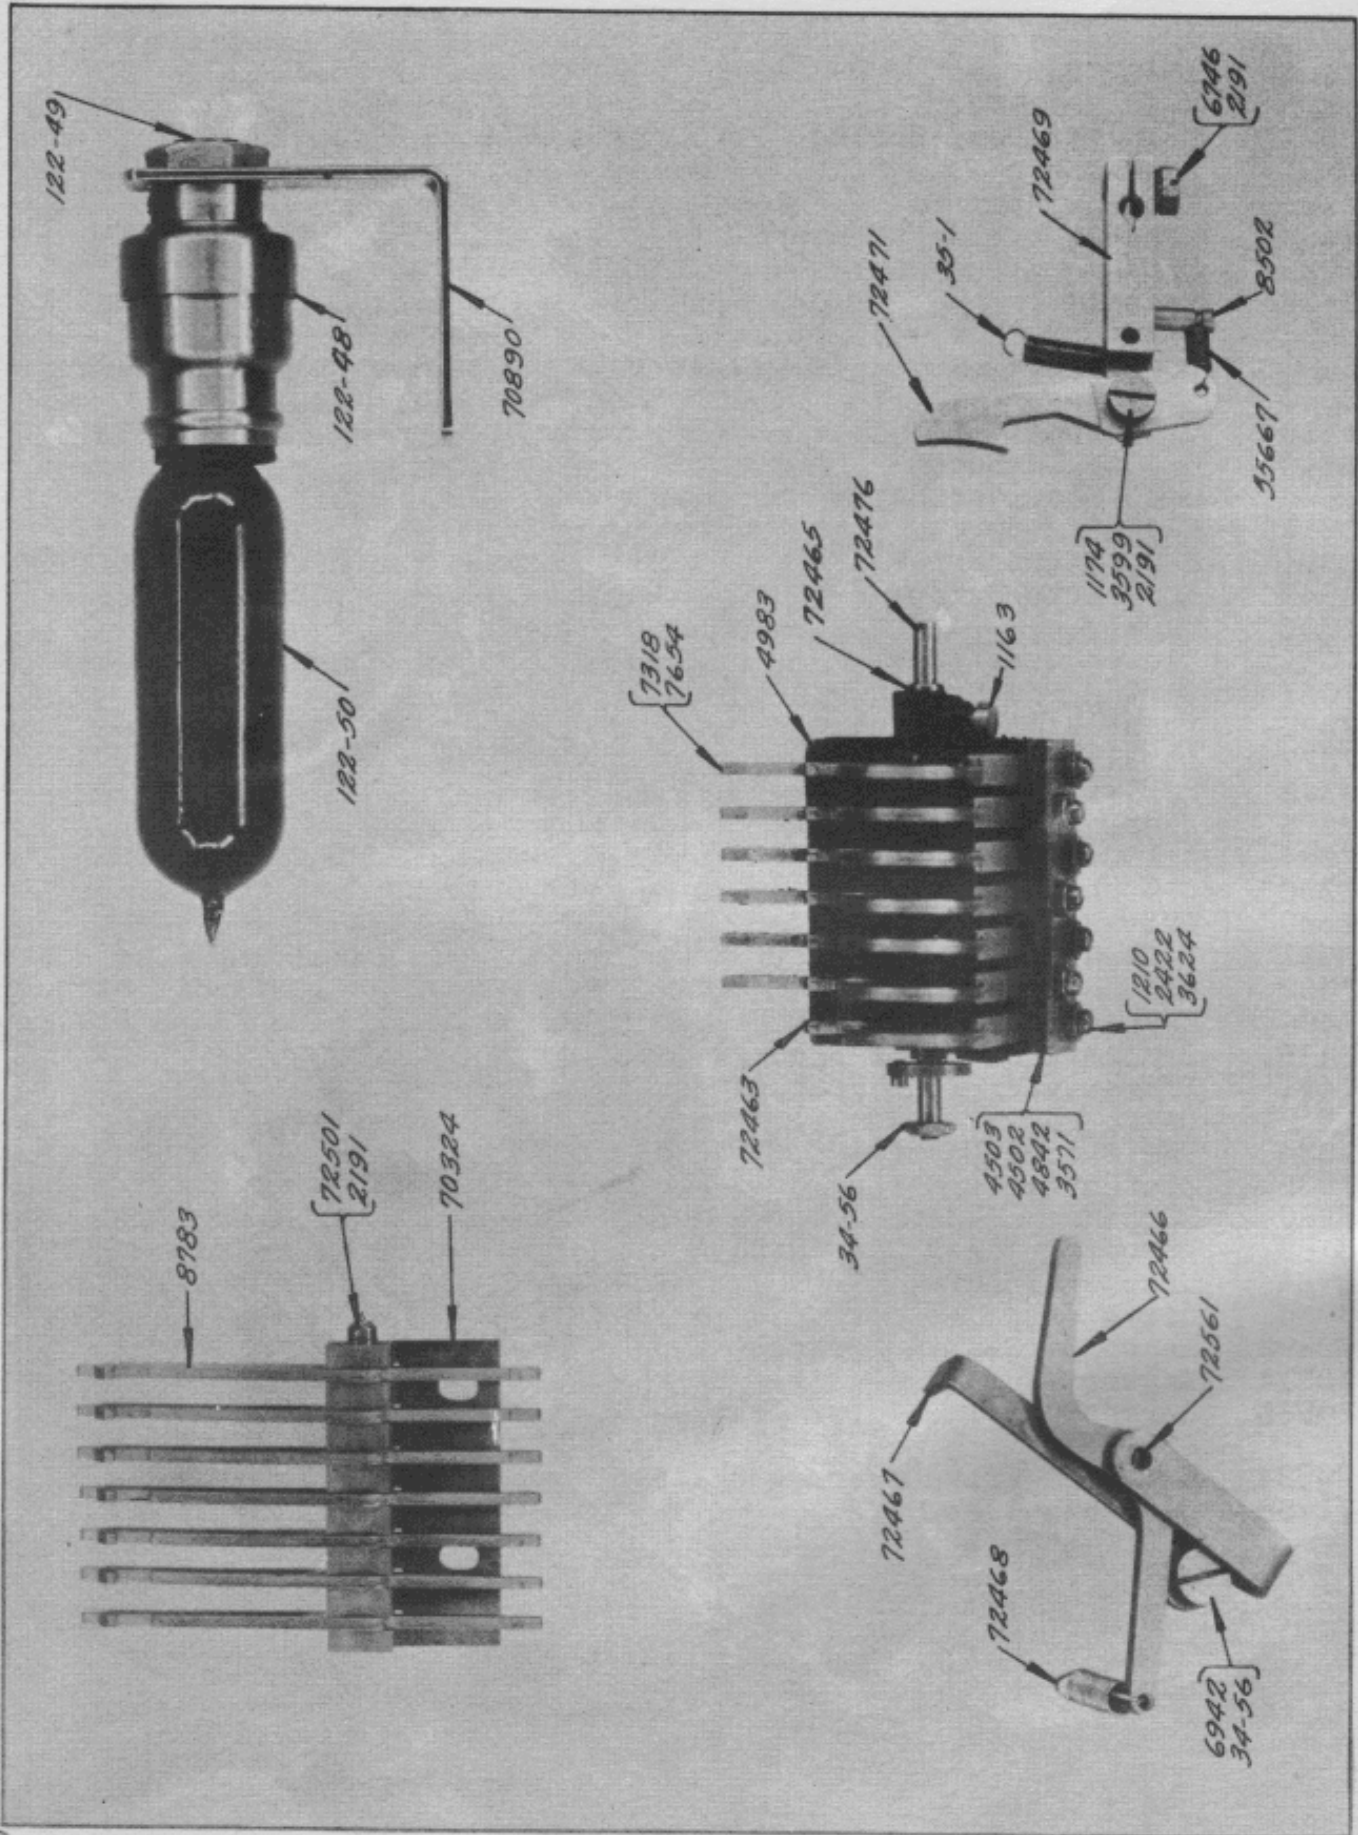

34-56	4-40 Hex. Nut	8502	Spring Post
35-1	Spacing Pawl Spring	8783	Contact Lockout Lever
122-48	Lamp Socket	55667	Spacing Spring
122-49	Lamp Socket Nipple	70324	Contact Lockout Lever
122-50	Lamp		Bearing
1163	4-40x3/16 Screw	70890	Lamp Bracket
1174	4-40x9/32 Shoulder Screw	72463	Contact Lever
1210	2-56x5/8 Fil. Hd. Screw	72465	Counter Operating Shaft
2191	Lockwasher		Sleeve
2422	Lockwasher	72466	Counter Operating Lever
3571	Bushing	72467	Locking Lever
3599	4-40 Nut	72468	Operating Lever Spring
3624	Washer	72469	Spacing Pawl Lever
4502	Insulator		(With Post)
4503	Contact Cover Plate	72471	Spacing Pawl
4842	Insulator	72476	Counter Operating Shaft
4983	Contact Bracket (With Pins)	72501	Contact Lockout Lever
6746	6-40x5/16 Screw		Shaft
6942	Eccentric Screw	72561	Counter Operating Lever
7318	Contact Lever		Bushing
7654	Shim		

PARTS FOR PAPER ROLL SPINDLE

200-2800	Paper Roll Spindle	3950	Paper Slack Bar Line Hook
3181	Paper Slack Bar	5988	Paper Roll Spindle Stop
3841	Paper Slack Bar Line	71650	Paper Roll Spindle Bracket

NUMERICAL INDEX

11	Retaining Pawl Spacer, 43	1208	10-32x5/8 Fil. Hd. Screw, 7
33-33	4-40x1/4 Shoulder Screw, 43	1209	10-32x3/16 Fil. Hd. Screw, 19
33-85	2-56x3/8 Fil. Hd. Screw, 15	1210	2-56x5/8 Fil. Hd. Screw, 47
33-175	10-32x1 Rd. Hd. Screw, 19	1245	10-32x1 Screw, 7
34-4	10-32 Locknut (R.H.), 7, 19, 45	1248	6-40x9/32 Flat Hd. Screw, 33, 41
34-11	2-56 Hex. Nut, 43	1272	6-40x11/16 Screw, 25
34-56	4-40 Hex. Nut, 37, 43, 45, 47	1275	10-32x1 1/2 Rd. Hd. Screw, 1, 13
34-60	Acorn Nut, 25	W-1764-C	Typebar Guide, 9
35-1	Spacing Pawl Spring, 47	W-1764-D	2-56 Typebar Guide Set Screw, 9
35-8	Spring - Short, 23	W-1764-E	5-40 Guide Opening Adj. Screw, 9
35-71	Spring - Long, 23	W-1764-F	5-40 Centering Screw, 9
35-133	Spring, 37, 45	W-1764-G	5-40 Centering Screw Nut, 9
36-150	Dowel, 7, 9, 11	W-1764-H	5-40 Typebar Guide Mtg. Screw, 9
100-109	Contact Spring, 43	2191	Lockwasher, 7, 9, 13, 19, 21, 23, 25, 27, 31, 33, 35, 37, 39, 41, 45, 47
122-48	Lamp Socket, 47	2199	7/16x32 Hex. Nut, 35, 45
122-49	Lamp Socket Nipple, 47	2341	Dowel, 9
122-50	Lamp, 47	2378	Spacer Keylever, 31, 39
122-143	Hubbell Plug Cap, 1	2407	Lockwasher, 35, 37, 45
122-194	Keylever Packing, 31, 39	2422	Lockwasher, 47
122-195	Keylever Celluloid Cover, 31, 39	2449	Lockwasher, 13, 25
123-244	Washer, 17, 43	2502	Mounting Strip, 35
126-123	Outlet Bushing, 25	2503	Cover Plate, 35
200-214	Shim, 33, 41	2504	Insulator Strip, 35
200-620	Cord Pulley, 43	2526	Spacing Collar - Short, 37
200-2800	Paper Roll Spindle, 48	2529	Bushing (Fibre), 35
M-177	Magnet Coil, 9	2535	Spacing Collar - Long, 37
700-4	Spring Post, 19	2539	3/8-32 Hex. Nut, 7
1028	4-40 Special Screw, 13	2565	Keylever Spring, 33, 41
1047	6-40x9/32 Shoulder Screw, 43	2566	Spacer Keylever Spring, 33, 41
1053	8-32x1/2 Rd. Hd. Screw, 3, 5	2623	Spring, 37, 45
1064	6-32x1/4 Screw, 27	2663	Rubber Buffer, 31, 39
1100	1/4-32 Screw, 13, 25	2669	Lockwasher, 7, 13, 19, 21
1121	10-32x3/8 Fil. Hd. Screw, 7, 13, 19, 21	2719	Washer, 31, 39
1162	4-40x1/4 Screw, 43	2980	Condenser Strap, 1, 13
1163	4-40x3/16 Screw, 47	3042	Resistance Unit, 1, 13
1166	4-36x1/4 Screw, 31, 39	3094	Insulator, 1, 13
1168	4-40x3/16 Rd. Hd. Screw, 9	3181	Paper Slack Bar, 48
1169	6-40x7/32 Rd. Hd. Screw, 23	3369	Ball Bearing, 17
1174	4-40x9/32 Screw, 43, 47	3438	Washer, 45
1178	2-56x7/16 Fil. Hd. Screw, 43		
1181	6-40x11/16 Fil. Hd. Screw, 9		

3571	Bushing, 47	6340	Outer Governor Ring, (With Terminal), 27
3598	6-40 Hex. Nut, 23, 31, 33, 37, 39, 41, 43, 45	6341	Bushing (Fibre), 27
3599	4-40 Nut, 47	6342	Wire, 27
3607	5/16-32 Nut, 35	6344	6-32x1 1/32 Screw, 27
3618	Insulator, 43	6345	6-32 Hex. Nut, 27
3621	Terminal, 31, 39	6346	6-32 x 3/4 Screw, 27
3624	Washer, 47	6347	6-32x 3/8 Screw, 27
3628	Cable Bushing, 3	6348	4-36 x 3/4 Screw, 27
3637	Ball Bearing- 1/16, 9, 23	6707	Motor 1/20 H.P., 110 V. D.C., 25
3638	1/2 M.F. Condenser, 1, 13	6708	Motor 1/25 H.P., 110 V. A.C., 60 Cycles, 25
3639	Lockwasher, 31, 39, 45	6709	Armature For 6707 Motor, 25
3640	Lockwasher, 11, 27, 37, 45	6710	Armature For 6708 Motor, 25
3646	Lockwasher, 7, 9, 11, 17, 19	6745	10-32 x 1/2 Hex. Screw, 7
3648	Bushing, 43	6746	6-40 x 5/16 Screw, 1, 13, 19, 21, 25, 31, 33, 35, 37, 39, 41, 45, 47
3650	Washer, 13	6805	6-40 Shoulder Screw, 31, 37, 39, 45
3841	Paper Slack Bar Line, 48	6810	10-32x3/8 Screw, 31, 39
3950	Paper Slack Bar Line Hook, 48	6811	6-40x5/8 Screw, 9, 13, 19, 27, 35, 37, 43, 45
4293	Insulating Plate, 13	6814	6-40 Pilot Screw, 37, 45
4382	Washer (Leather), 17	6840	Clutch-Driven, 21
4502	Insulator, 47	6942	Eccentric Screw, 37, 43, 45, 47
4503	Contact Cover Plate, 47	6979	Governor Hub, 27
4810	Oil Wick, 37, 45	7002	Washer, 1, 9, 11, 13, 19, 23, 31, 35, 37, 39, 43, 45
4814	Lockwasher, 35	7007	Plunger, 9
4842	Insulator, 47	7032	Clutch Lever Pawl, 37, 45
4871	Resistance Mtg. Screw, 13	7081	Spring Post, 37, 45
4881	Spring Backing, 35	7096	Contact Screw Bushing, 13
4983	Contact Bracket (With Pins), 47	7318	Contact Lever, 37, 47
5060	Ball Bearing, 9, 21	7334	Keylever Shaft Post, 33, 41
5061	Ball Bearing, 25	7339	Cam Sleeve (Assem.), 35
5925	Break Key (With Knob), 31, 39	7373	Front Bracket Bushing, 37, 45
5988	Paper Roll Spindle Stop, 48	7377	Lockloop, 37
6305	Governor Brush, 27	7378	Roller, 37, 45
6306	Brush Holder, 27	7381	Contact Mounting (Comp.), 35
6314	Contact Spring (With Point), 27	7382	Front Bracket, 37
6318	Contact Spring Clamp, 27	7383	Bearing Bushing Oiler, 37, 45
6319	Contact Spring Block, 27	7384	Oil Cup, 35, 37, 45
6320	Contact Screw, 27	7385	Rear Bracket (With Post), 37
6323	Spring, 27	7386	Clutch Lever Post, 37, 45
6324	Adjusting Wheel, 27	7387	Transmitter Brace, 37
6330	Adjusting Wheel Bearing, 27	7389	Driving Clutch, 35, 45
6333	Terminal, 27	7391	Driven Clutch, 35, 45
6339	Inner Governor Ring, (With Terminal), 27	7392	Clutch Spring, 35, 45

7395	Trip Off Pawl Stop Plate, 31, 39	8710	Selector Lever #5 -5 & 6 Unit, 9
7398	Contact Spring Screw Plate, 13	8712	Selector Lever Shaft, 9
7399	Contact Spring Stiffener, 13	8713	Selector Lever Clamp Plate, 9
7402	Contact Spring-Lower, 13	8715	Selector Lever Guide, 9
7403	Contact Spring-Upper, 13	8716	Selector Lever Latch, 9
7409	Keyboard Clutch Lever, 37, 45	8717	Pin Barrel -6 Unit, 9
7465	Transmitter Front Bracket, 45	8726	Orientation Scale, 9
7482	Keylever (Lower), 31, 39	8729	Cam Shaft Bearing (Assem.), 9
7485	Governor Complete, 27	8732	Drive Shaft Dog (Assem.), 9
7491	Transmitter Rear Bracket (With Post), 45	8733	Magnet Yoke, 9
7524	Cam Sleeve (Assem.), 45	8734	Armature Bracket, 9
7654	Shim, 37, 47	8736	Pin Barrel -5 Unit, 9
7661	Governor Adjusting Lever, 13, 25	8740	Rear Plate (Assem.), 3, 7
7835	Ribbon Spool-Black Ribbon, 11	8750	Rear Plate, 7
7965	Spring, 37, 45	8754	Side Frame (R.H.), 1, 5
8094	Brush (With Spring), 25	8755	Side Frame (L.H.), 1, 5
8165	Washer, 27	8756	Motor Cross Bar, 3, 13
8185	1/4-20 x 3/4 Fil.Hd. Screw, 13	8759	Ribbon Feed Conn. Link, 11
8222	Wearing Strip, 13, 25	8761	Trans. Gear- 24 Teeth, 21
8256	Break Key Knob, 31, 39	8765	Line Feed Bail, 15
8502	Spring Post, 47	8770	Bell Hammer Arm (With Rod), 21
8539	6-40x1/2 Screw, 7, 9, 19, 21, 31, 33, 39, 43	8775	Base, 31, 39
8543	6-40x1/4 Mtg. Screw, 5, 43	8780	Bushing, 35, 45
8700	Selector Cross Bar (Assem.), 1, 7, 9	8781	Keyboard Drive Idler Gear, 31 Teeth, 35
8701	Receiving Distributor Unit, 1, 9	8782	Keyboard Idler Gear Stud, 45
8702	Selector Unit Frame (With Bushing), 9	8783	Contact Lockout Lever, 35, 47
8705	Selector Lever #0 -6 Unit, 9	8784	Keyboard Shaft, 35, 45
8706	Selector Lever #1 -5 & 6 Unit, 9	8790	Keylever Guide-Front, 39
8707	Selector Lever #2 -5 & 6 Unit, 9	8798	Keylever Spring Bar, 41
8708	Selector Lever #3 -5 & 6 Unit, 9	8802	Carriage Return Trip Bracket, 17
8709	Selector Lever #4 -5 & 6 Unit, 9	8851	Selector Cross Bar, 9
		8852	Selector Bar #0 -6 Unit, 9
		8853	Selector Bar #1 -6 Unit, 9
		8854	Selector Bar #2 -6 Unit, 9
		8855	Selector Bar #3 -6 Unit, 9
		8856	Selector Bar #4 -6 Unit, 9
		8857	Selector Bar #5 -6 Unit, 9
		8858	Selector Bar Forward Stop, 9
		8863	Selector Drive Shaft, 19
		8864	Selector Drive Shaft Bearing, 19

8865	Selector Drive Shaft Brkt., 19	22739	5-40x3/8 Shoulder Screw, 7,21
8866	Pull Bar Guide Comb, 9	22745	Carriage Return Lock Bar, 23
8867	Bail Shaft Unit, 1,3,19	22746	Spring, 7,23
8868	Bail Frame, 19	22821	Shift Bracket, 7
8869	Bail Arm, 19	22822	Shift Latch Lever Shaft, 7
8870	Roller, 19	23053	Space Control Arm, 7
8871	Bail Roller Shelf, 19	23693	Roller, 11
8872	Bail, 19	23772	Ribbon Feed Retaining Pawl Support, 11
8874	Bail Shaft Operating Arm, 19	23782	Ribbon Feed Bracket Re- taining Pawl Support, 11
8876	Vertical Bar Segment, 7	23875	Dowel, 3,5,7,9,13
8877	Selector Lever Latch Spacer -6 Unit, 9	24312	Bell Hammer, 21
8878	Selector Lever Latch Spacer -5 Unit, 9	24313	Bell Hammer Rod, 21
8881	Typebar Segment Cross Bar, 9	24467	Stud, 19
8964	Oil Wick, 45	24471	Connecting Link Arm, 19
8965	Keyboard Drive Gear- 26 Teeth, 35	24472	10-32x37/64 Shoulder Screw, 19
8967	Trip Off Pawl (With Spring), 31, 39	25032	Clutch Stop Arm Bracket, 19
8970	Universal Bar (With Link), 33, 41	25034	Restoring Roller Arm, 19
9177	Contact Stop, 35	25036	8-40x7/16 Fil. Hd. Screw, 19
9178	Contact Spring, 35	25037	Restoring Roller, 19
9182	Contact Lever Shaft, 37	25045	Clutch Release Arm Shaft, 19
9339	Terminal Block (Assem.), 13	25121	Clutch Release Shaft Bracket, 19
21100	Carriage (Complete), 1,15	25123	1/4-32x7/8 Screw, 19
21369	Line Feed Ratchet, 15	25312	Carriage Return Shaft Bearing- Large, 7
21393	Line Feed Regulator, 17	25322	Stud, 7
21397	Lockwasher, 5, 17	25333	8-40x1/2 Adjusting Screw, 7
21424	3-48x1/8 Fil. Hd. Screw,21	25343	Shift Rod Backstop, 7
21434	Shift Stop, 17	25345	Carriage Return Shaft Bearing, 7
21437	Shim, 17	25348	10-32x9/16 Stop Screw, 7,19
21440	Carriage Return Lockbar Guide, 17	25356	Stud, 7
21452	3-48x3/8 Shoulder Screw, 9,23	25361	Shift Operating Arm, 7
21549	Collar, 21	25371	Line Feed Operating Arm,7
21630	Shift Latch Lever, 11	25392	Rear Shaft, 7
22015	Spring, 23	25451	Rear Shaft Operating Arm, 7
22232	Roller, 7	25460	Line Feed Cross Lever Stop, 7
22233	5-40 x 3/8 Shoulder Screw, 7	25965	Spring, 19
22235	Spring, 7		
22732	Carriage Return Release Fork, 7		
22736	Arm Extension, 7		

26210	Connecting Link, 19	41140	Carriage Basket (Assem.), 3,17
26313	8-40x13/64 Set Screw, 21	41151	Collar, 15
26481	18 Cotton Covd. Lamp Cord, (6 ft.), 1	41160	Paper Knife (Assem.), 15
26483	Feed Thru Snap Switch, 1	41167	Paper Guide Finger Roller, 15
26398	8-32x7/16 Fil. Hd. Screw, 1,9	41168	Paper Guide Finger Shaft, 15
31535	5-40x3/16 Set Screw, 11,23	41170	Platen, 15
31636	Spring, 23	41177	8-40x7/32 Set Screw, 3,5,7,11,13,15,19,21
33037	Stud, 7	41180	Twirler (With Set Screw), 15
33765	Washer, 9,11	41210	Line Feed Pawl, 15
33826	Ribbon Feed Operating Lever, 11	41241	Collar, 11, 15
34437	Bail Roller Pivot, 19	41242	5-40x3/32 Set Screw, 11, 15,19,23
34439	3-48x17/64 Fil. Hd. Screw, 7,9,11,15,19	41250	Pressure Roller Release Handle, 15
34464	Spring, 19	41261	Collar, 15
35503	Frame Rest Foot (Rubber), 3,5	41271	Collar, 15
35830	Universal Bar Bearing, 7	41280	Pressure Roll Free Arm, 15
36301	6-40x7/32 Fil. Hd. Screw, 9	41290	Pressure Roll Clamp Arm, 15
36315	Spring, 9	41310	Pressure Roll Shaft- Rear (Assem.), 15
36327	Driving Shaft, 9	41321	Roller, 15,19,21,23
36328	5-40 Hex. Nut, 9	41322	1/16 Dia. Roller Ball, 15,19,21
36330	Clutch Trip Lever, 9	41323	Stud, 15
36333	Stud, 9	41324	Sleeve, 15,19,23
36334	Spring, 9	41325	5-40x3/32 Hex. Nut, 7,9,11,15,17,19,21,23
36335	Intermediate Lever, 9	41330	Pressure Roll Shaft- Front (Assem.), 15
36339	Spring, 9	41341	Platen Handle, 15
36351	Spring, 9	41342	8-40 Shoulder Screw, 15
36358	Spring, 43	41343	Platen Crank, 15
36365	Armature Latch, 9	41345	8-40x1/8 Hex. Nut, 7,11,15,17,19
36370	Armature, 9	41351	Paper Knife Shaft, 15
36375	Armature Shaft, 9	41352	5-40x1/4 Rd.Hd. Screw, 15
36377	Armature Backstop, 9	41353	Spring, 15, 17
36378	5-40 Special Nut, 9	41354	5-40x1/4 Fil.Hd. Screw, 21
36380	Gap Adjusting Bridge, 9	41355	Paper Guide, 15
36384	Stud, 9	41356	Eccentric Stop, 17
36385	Gap Adjusting Bracket, 9	41358	Spring, 17
36387	Spring, 9	41363	Carriage Tie Bar, 15
36403	Oiler, 21	41364	3-48x3/16 Fil.Hd. Screw, 17
36406	Ball Bearing Retainer, 9, 21	41365	Platen Shaft, 15
36426	Collar, 21	41366	Carriage Frame Extension, 17
36455	Collar, 19		
36463	Ribbon Feed Operating Arm Spring, 11		
36508	Bail Spring Handle, 19		
41110	Carriage Frame- Left, 17		
41120	Carriage Frame- Right, 17		
41130	Carriage Basket Support, 17		

41367	Washer, 17	41591	Spacing Shaft Bracket, 21
41371	3-48x1/4 Special Screw, 15	41644	8-40x9/16 Hex. Screw, 11
41372	Pressure Roll Gear, 15	41650	Ribbon Shield Hook, 11
41374	5-40x5/16 Hex. Screw, 11, 15, 19	41661	8-40x7/16 Shoulder Screw, 11
41375	Spring, 15	41663	Washer, 7
41376	Sleeve, 15	41664	Spring, 11
41381	5-40x11/32 Shoulder Screw, 7, 15, 23	41666	Shift Rail, 11
41382	Spring, 15	41668	3-48x1/4 Shoulder Screw, 11, 21
41384	Roller, 17	41675	Washer, 7, 9, 11, 17, 19, 23
41385	Spring, 17	41720	Contact Plate, 9
41386	5-40x7/16 Shoulder Screw, 7, 17, 23	41731	Contact Terminal, 9
41387	Pressure Roll Release Shaft, 15	41732	Clamp Plate, 9
41388	Pressure Roll Spring, 15	41733	Contact Insulation Plate, 9
41389	Pressure Roll Spring Rod, 15	41746	Insulation Bushing, 9
41391	Pressure Roll Spring Rod Bracket, 15	41830	Contact Spring, 9
41392	5-40x9/32 Shoulder Screw, 17, 23	41856	4-36x3/4 Rd. Hd. Screw, 9
41409	Upper Ball Race, 17	42171	8-32x7/16 Fil. Hd. Screw, 7, 9, 11, 17, 19
41413	5-40 Hex. Nut, 17	42175	1/4-32 Locknut, 17, 19
41420	Carriage Retainer, (With Balls), 17	42664	5-40x1/4 Fil. Hd. Screw, 11, 23
41431	Carriage Lower Race, 17	42823	Washer, 11
41432	Carriage Retainer, 17	42824	Shift Latch, 7
41433	5-40x1/4 Flat Hd. Screw, 17	42827	3-48x1/4 Fil. Hd. Screw, 21
41435	5-40x3/8 Fil. Hd. Screw, 5	42832	Shift Adj. Screw- Long, 7
41436	Carriage End Stop, 17	42833	Shift Adj. Screw- Short, 7
41500	Spacing Shaft Unit, 3, 21	43035	Spring Post, 11
41520	Spacing Gear, 21	43042	5-40x3/4 Fil. Hd. Screw, 11
41530	Spacing Shaft (Assem.), 21	43044	5-40x13/16 Hex. Screw, 7, 9
41543	Ball Bearing, 21	43100	Carriage Return Dash Pot Unit (Assem.), 3, 17
41544	Spacing Shaft Escapement Ratchet, 21	43110	Dash Pot Cylinder, 17
41545	Sleeve, 21	43115	2-56x3/16 Fil. Hd. Screw, 7, 9, 17, 23
41546	Spacing Shaft Escapement Lever, 21	43120	Dash Pot Shaft, 17
41547	Spacing Spring Housing, 21	43131	Dash Pot Vent Screw, 17
41548	2-56x3/32 Fil. Hd. Screw, 21	43132	Dash Pot Plunger Seat, 17
41552	Carriage Return Spring, 21	43134	Dash Pot Plunger Gasket Washer, 17
41553	Escapement Lever Spring, 21	43136	Dash Pot Plunger Stop Screw, 17
41554	5-40x3/4 Stud Screw, 21	43137	Dash Pot Plunger Spring, 17
41555	Spacing Ratchet Spring, 21	43620	Ribbon Spool Head, 11
41558	2-56x1/4 Fil. Hd. Screw, 21	43630	Ribbon Reverse Arm, 11
41559	Spacing Shaft Ball Bearing Clamp Plate, 21	43633	5-40x3/16 Fil. Hd. Screw, 5, 9, 11, 23
41575	Dowel, 17	43640	Ribbon Reverse Arm, 11

43650	Ribbon Feed Ratchet, 11	45813	Frame Rest, 5
43653	5-40x5/16 Fil.Hd. Screw, 7, 11, 17, 23	45814	8-40x33/64 Shoulder Screw, 5
43660	Ribbon Feed Ratchet, 11	45816	Stud, 1, 3, 5
43670	Rear Arm, 11	45817	Washer, 5
43720	Ribbon Feed Pawl Shift Rod Arm, 11	45843	12-24x1/2 Fil.Hd. Screw, 3, 5, 9, 11, 13
43730	Ribbon Feed Reverse Arm, 11	45963	Spring, 23
43740	Ribbon Feed Pawl Arm, 11	45967	Spring, 7
43770	Ribbon Feed Rear Bracket, 11	45974	5-40x1/4 French Hd. Screw, 1, 5
43774	5-40x9/16 Fil.Hd. Screw, 11	45976	Connecting Bar Spring, 3, 23
43780	Ribbon Feed Rear Bracket, 11	45978	3-48x5/8 Fil.Hd. Screw, 17
43790	Ribbon Feed Main Bracket, 11	45990	Ribbon Shield, 21
43812	Ribbon Feed Pawl, 11	46045	8-32x1/4 Fil.Hd. Screw, 17
43813	Ribbon Feed Pawl, 11	46095	Cord Clamp, 1, 3, 5
43814	Retaining Pawl, 11	46120	Carriage Clamp, 21
43815	Retaining Pawl, 11	46133	Stud, 21
43816	2-56x3/32 Bearing Screw, 11	46134	Sleeve, 21
43817	Ribbon Feed Pawl Spring, 11	46180	Cover Clamp (Assem.), 1, 3, 5
43818	Ribbon Feed Pawl Spring, 11	46181	Cover Clamp, 5
43819	Ribbon Feed Spool Shaft, 11	46182	Cover Clamp Spring, 5
43821	Ribbon Feed Trip Shaft, 11	46183	Washer, 5
43823	Ribbon Feed Reverse Bar Lock Spring, 11	46184	Cotter Pin, 5
43828	Ribbon Feed Pawl Shift Hook, 11	49083	5-40x7/16 Shoulder Screw, 11
43836	Lockwasher, 11	49084	Spring, 21
43838	Cotter Pin, 11	49440	5-40x3/16 Hex. Hd. Screw, 11, 15, 17, 29
43839	Trip Shaft Collar Spring, 11	55080	Bezel, 31, 39
43860	Ribbon Feed Trip Lock Shaft Collar (With Screw), 11	55667	Spacing Spring, 47
43861	Ribbon Feed Trip Lock Shaft Collar, 11	60053	Ball Bearing Housing, 21
43954	Bell, 19	64059	12-24x3/4 Fil.Hd. Screw, 5, 7
44035	10-32x9/16 Hex. Screw, 19	66335	Washer, 7
44048	Washer, 3, 5	70025	Carriage Return Arm Lock Arm, 7
45024	Spring, 7	70026	Manual Shift Release Lever, 7
45053	8-40x1/2 Adjusting Screw, 7, 13, 19, 31, 39	70027	Space Cross Lever Extension, 7
45331	Dowel, 17	70028	Collar, 7
45783	Message Rack Spring, 29	70031	Pull Bar-Shift, 23
45787	5-40x5/16 Fil.Hd. Screw, 7	70032	Shift Release Pull Bar, 23
		70033	Pull Bar-Line Feed, 23
		70034	Pull Bar Carriage Return, 23
		70038	Pull Bar-Space, 23
		70039	Pull Bar, 23
		70040	Spacing Ratchet-Double Space, 21
		70043	Shift Shaft Latch Arm, 11
		70044	Bell Hammer Bracket, 7
		70045	Line Feed Cross Lever, 7
		70048	Space Cross Lever, 7

- 70051 Space Cross Lever Backstop, 7
70053 Universal Bar Support, 7
70055 Main Bail Cam, 21
70058 Rear Shaft Bearing (With Oiler), 7
70059 Spring Post, 7
70061 Space Control Arm Clamp (Assem.), 7
70063 Friction Spring, 19
70064 Friction Spring Retainer, 19
70065 Friction Spring Container, (With Pins), 19
70067 Clutch Release Arm, 19
70069 Bail Shaft, 19
70070 Shift Shaft Unit (Assem.), 3, 11
70071 Lockwasher, 5, 7, 9, 11, 19, 23
70073 3-48 Hex. Nut, 9, 11, 23, 31, 33, 39
70074 Clutch Stop Arm, 19
70076 Fulcrum Rod, 7
70078 Top Cover- R.H., 1, 29
70082 Friction Disc, 9
70088 Top Cover- L.H., 1, 29
70091 Type Bar Segment (With Type-bar Guide), 1, 9
70094 Drive Shaft Dog, 9
70095 Drive Shaft Dog Link, 9
70096 Drive Shaft Dog Pivot, 9
70097 Stud, 23
70102 Bell Bracket, 19
70109 Line Feed Bar (With Stud), 23
70110 Ribbon Feed Unit (Assem.), 1, 11
70111 Side Cover- R.H., 29
70113 Side Cover- L.H., 29
70115 Front Cover, 29
70119 Clutch-Driving, 21
70120 Clutch Shaft Unit, 3, 21
70137 Selector Bar #1 (With Pin), 41
70138 Selector Bar #2 (With Pin), 41
70139 Selector Bar #3 (With Pin), 41
70140 Selector Bar #4 (With Pin), 41
70141 Selector Bar #5 (With Pin), 41
70142 Selector Bar #6 (With Pin), 41
70145 Ribbon Feed Reverse Bar, (With Pin), 11
70147 Ribbon Feed Operating Shaft, 11
70175 Release Spring Holding Plate, 15
70177 Pilot Screw, 33, 41, 43
70179 Keylever Shaft, 33, 41
70180 Universal Bar, 19
70193 Bail Shaft Bearing, 19
70198 Keyboard Locating Bracket, 13
70199 Shift Shaft, 11
70210 Ribbon Shield Adjusting Arm, 11
70213 Shift Operating Arm, 11
70220 Spacing Ratchet Clutch, 21
70252 Orientation Scale Clamp, 9
70253 Clamp Nut, 9
70254 Armature Forward Stop Screw, 9
70261 Spacing Shaft Lower Bearing, 7
70281 Keylever Guide- Rear, 41
70286 Slip Connection Strip, 31, 39
70287 Selector Drive Gear, 21
70288 Selector Pinion, 19
70290 Motor Gear (With Bushing) 36 Teeth, 21
70291 Shift Shaft Bearing, 3, 5
70292 Keyboard Shaft Bearing Bracket, 35, 45
70293 Keyboard Locating Bracket Plate, 13
70295 Carriage Return Shaft, 7
70296 Carriage Return Arm, 7
70307 Motor Stop Pull Bar Arm, 23
70309 Clutch Shaft, 21
70314 Washer, 45
70316 Bell Hammer Shaft, 7
70317 Selector Bar Bracket, (Comp.), 33, 41
70319 Upstop, 33, 41
70324 Contact Lockout Lever Bearing, 35, 47

- 70326 Keyboard Rail, 33, 41
70340 Key Bracket, 31, 39
70342 Stud, 19
70361 Resistor Unit (Comp.),
1, 13
70379 Dust Catcher, 19
70393 Motor Stop Contact Arm,
23
70394 Pull Bar Retainer Clamp,
11
70395 Pull Bar Retainer, 11
70399 Slip Connection Mtg.
Strip, 13
70400 Carriage Return Lock Arm
Pawl (With Post), 7
70403 Typebar Pad Support Bar,
11
70406 Typebar Pad, 11
70427 5-40x1/4 Shoulder Screw,
23
70433 Carriage Lockup Pawl
Stop, 7
70434 Spring Hook, 7, 23
70435 Space Operating Arm, 7
70436 Spring, 7
70437 Spacing Spring Tube, 7
70438 Spacing Spring Clamp
(With Pins), 7
70440 Selector Bar Stop, 9
70446 Spacer Cutout Latch,
(Double Spacing), 7
70460 Space Arm (Assem.)
(Double Spacing), 7
70463 Carriage Bumper, 17
70464 Carriage Bumper Nut, 17
70466 Spring, 23
70468 Motor Pinion, 8 Teeth, 13
70469 Motor Gear (With Bushing)
32 Teeth, 21
70496 Shift Latch Lever, 7
70498 Selector Bar Return Lever,
19
70501 Pull Bar, 23
70506 Rear Cover, 29
70516 Selector Bar #1 (With Pin),
33
70517 Selector Bar #2 (With Pin),
33
70518 Selector Bar #3 (With Pin),
33
70519 Selector Bar #4 (With Pin),
33
70520 Selector Bar #5 (With Pin),
33
70521 Keylever Guide-Front, 31
70522 Keylever Guide-Rear, 33
70523 Keylever Spring Bar, 33
70533 Spacer, 19
70534 5-40x1/4 Shoulder Screw, 23
70715 Clutch Spring, 21
70722 Resistance Unit- 500 Ohms, 13
70771 Oil Cup, 25
70836 Message Rack, 29
70872 Brush Holder (With Insula-
tor), 25
70873 Brush Holder Cap, 25
70887 Nut, 13
70890 Lamp Bracket, 47
70982 Trans. Gear- 28 Teeth, 21
70983 Keyboard Drive Idler Gear-
25 Teeth, 45
70984 Keyboard Drive Gear- 30
Teeth, 45
71048 Selector Bar Spring Brkt., 9
71067 Keylever- Upper- Beveled, 39
71068 Keylever- Lower- Beveled, 39
71069 Orientation Stop, 9
71070 Shim, 9
71071 2-56x5/32 Stop Screw, 9
71072 Auxiliary Stop, 9
71073 Washer, 9, 43
71074 3-48x3/16 Screw, 9
71189 Copper Bearing Retainer, 25
71443 Slip Connection Spring,
31, 39
71499 Ribbon Shield, 21
71504 Shift Pull Bar Plate, 23
71551 Motor Stop Latch Link,
(With Post), 23
71642 Typebar Pad Support, 11
71643 Speed Disc, 21
71650 Paper Roll Spindle Bracket,
48
71659 6-40 Shoulder Screw, 37, 45
71681 Ribbon Spool-Empty, 11
71683 Stud, 17
71685 Jockey Roller Arm, 17
71855 Spacing Ratchet-Single
Space, 21
71857 Spacing Arm (Assem.)
(Single Spacing), 7
71859 Brush Holder Bracket, 13
71861 Stud, 35
71862 Oil Wick, 35

71871	Stud, 31, 33	72467	Locking Lever, 47
71876	Bell Hammer Arm (With Rod), 21	72468	Operating Lever Spring, 47
71881	Selector Bar #1- 5 Unit, 9	72469	Spacing Pawl Lever (With Post), 47
71882	Selector Bar #2- 5 Unit, 9	72471	Spacing Pawl, 47
71883	Selector Bar #3- 5 Unit, 9	72472	Shim, 31, 39
71884	Selector Bar #4- 5 Unit, 9	72473	Spring, 43
71885	Selector Bar #5- 5 Unit, 9	72476	Counter Operating Shaft, 47
71975	Carriage Return Trip Brkt., 17	72501	Contact Lockout Lever Shaft, 35, 47
71998	Brush Holder Ring (With Set Screw), 25	72525	Shift Code Bar #0, 9
71999	End Play Spring, 25	72526	Shift Code Bar #0 (Bell on "A"), 9, 23
72027	Typebar Pad Support, 11	72541	Unshift Pull Bar, 23
72029	Typebar Pad, 11	72543	Shift Pull Bar Extension, 23
72141	Spacing Retaining Pawl, 7	72544	Bell Pull Bar Shaft, 21
72142	Spring, 7	72545	Spacer Bar Standard, 31, 33, 39, 41
72190	Front Cover, 29	72546	Sleeve, 31
72193	Spacer Outout Latch (Single Spacing), 7	72547	Sleeve, 31
72424	Shift Code Bar Latch (With Post), 21	72548	Spacer Bar, 31, 33, 39
72436	Spacing Counter Unit (Assem.), 43	72549	Spacer Lever Loop, 31, 33, 39
72437	Spacing Counter Bracket, 43	72550	Spacer Lever Loop Shaft, 31, 33, 39
72438	Spacing Counter Bracket, 43	72551	Double Spacer Sleeve, 31
72439	Spacing Ratchet, 43	72552	Double Spacer Lever Loop- Inner, 31
72442	Spacing Pulley, 43	72553	Double Spacer Lever Loop- Outer, 31
72443	Contact Cam, 43	72558	Spacer Bar- "Letters", 31
72444	Spacing Pulley Bushing, 43	72559	Spacer Bar- "Figures", 31
72445	Retaining Pawl, 43	72561	Bushing, 31, 47
72446	Retaining Pawl Latch, 43	72564	Bushing, 43
72448	Spacing Pawl Eccentric Guide, 43	72569	Motor Pinion- 6 Teeth, 13
72449	Carriage Return Bell Crank, 43	72572	Veeder Counter, 23
72450	Spring, 43	72585	Clip, 23
72451	Vertical Pull Rod, 43	72609	Counter Spring, 23
72452	Horizontal Pull Rod, 43	72610	Stop, 23
72453	Indicator, 43	72611	Rev. Counter Drive Gear, 23
72454	Indicator Cord, 43	72614	Rev. Counter Gear, 23
72455	Cord Shackel, 43	72643	Stud, 41
72458	Spring, 43	72658	Shim, 7
72459	Counter Scale, 43	72835	Contact Point, 27
72460	Front Cover (Special), 29	72983	Keylever (Center), 31, 39
72461	Function Selector Bar (With Pin), 41	72984	Keylever (Upper), 31, 39
72463	Contact Lever, 47	72985	Keylever, 39
72465	Counter Operating Shaft Sleeve, 47		
72466	Counter Operating Lever, 47		

- | | | | |
|-------|-------------------------------------|-------|--|
| 73231 | Steel Bearing Retainer,
25 | 73241 | Field Coils (For 6707
Motor), 25 |
| 73232 | Felt Washer, 25 | 73242 | Insulation (For Field
Coils), 25 |
| 73236 | Field Frame (With Oil
Cup), 25 | 73243 | Locking Wedge, 25 |
| 73237 | End Shield (With Oil
Cup), 25 | 73244 | Locking Wedge Screw, 25 |
| 73238 | Field Core (For 6708
Motor), 25 | 73375 | Shift Shaft Connecting Bar
(With Stud), 3, 23 |
| 73239 | Field Coils (For 6708
Motor), 25 | 73595 | Clamping Rod, 25 |
| 73240 | Field Core (For 6707
Motor), 25 | 73657 | Speed Disc Hub, 21 |
| | | 73658 | Speed Disc, 21 |
| | | 73763 | Fulcrum Rod, 9 |
| | | 73764 | Typebar Segment (With Pins), 9 |