

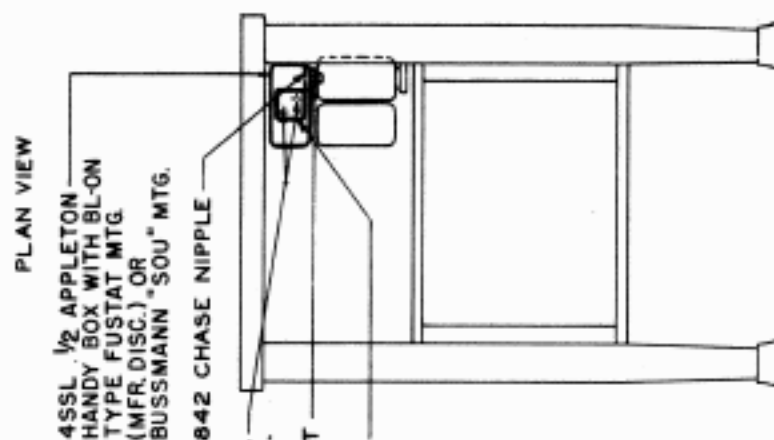
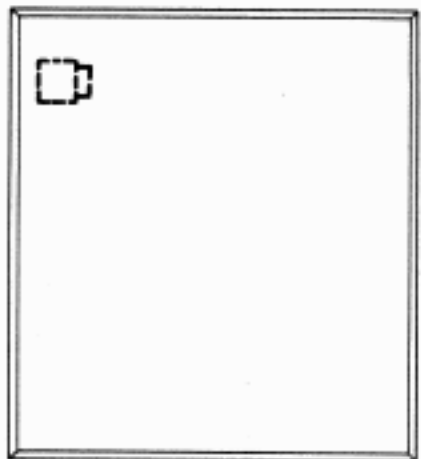
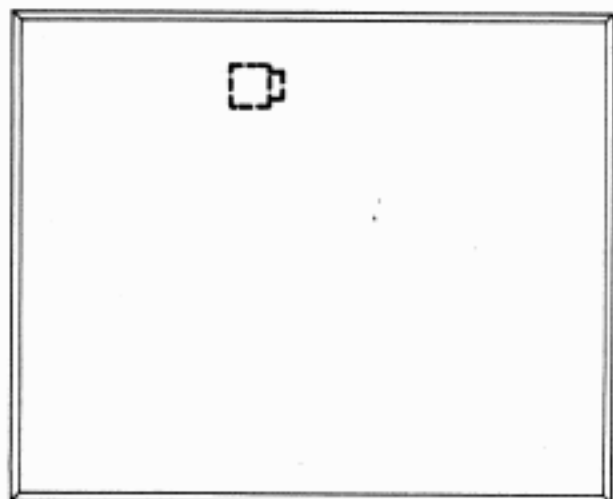



gc

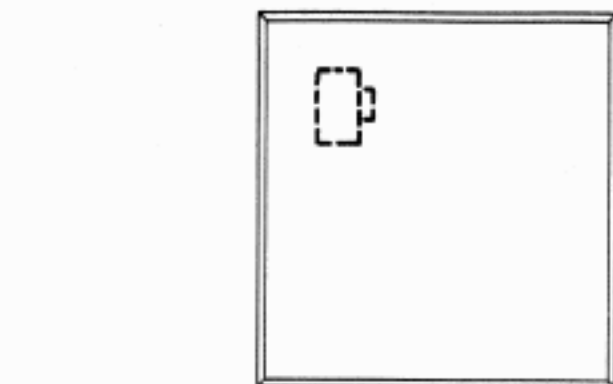

FRONT VIEW
15P & 26P TABLES
FIG. 3

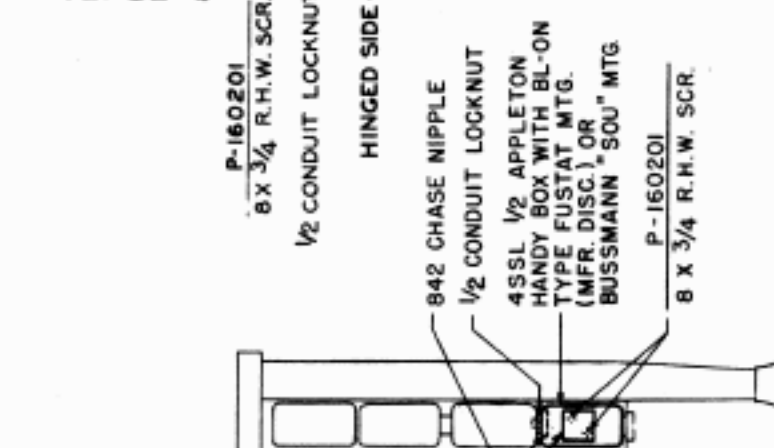

FRONT VIEW
26B TABLE
FIG. 2

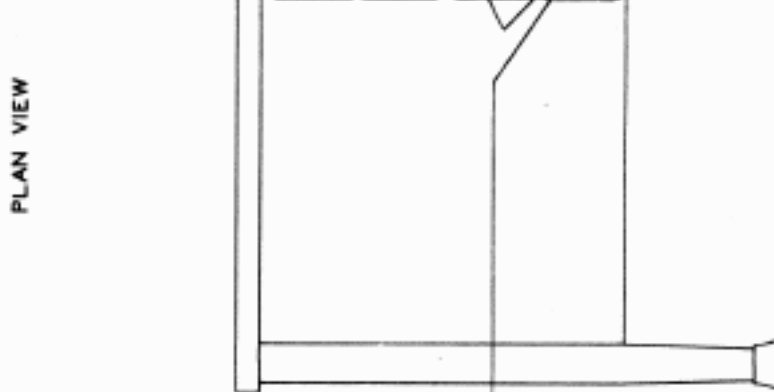

FRONT VIEW
26A TABLE
FIG. 1

NOTES:
1. START HOLES ARE PROVIDED FOR ALL SCREWS
NOT LOCATED BY DIMENSIONS ON THIS SECTION.

15P, 26A, 26B & 26P TABLES
LOCATION OF FUSTAT MOUNTING