

BELL SYSTEM PRACTICES
Teletypewriter and Data Stations

ADDENDUM P34.307
Issue 1, October, 1963
AT&TCo Standard


28 PERFORATOR-TRANSMITTER-BASE

WIRING DIAGRAM


1. GENERAL

1.001 This addendum supplements Section P34.307, Issue 4.

1.002 This addendum is issued to add the wiring for the 28G-1 and 28K perforator-transmitter-bases. The drawing showing the wiring for the 28D, 28E, 28F and 28K perforator-transmitter-bases was changed to (a) remove the jumper wire on the K-KT-T switch, (b) add a white-purple (W-P) wire from terminal 3 of the K-KT-T switch to terminal 7 of the keyboard terminal block and (c) add a jumper between terminals 1 and 7 of the keyboard terminal block.

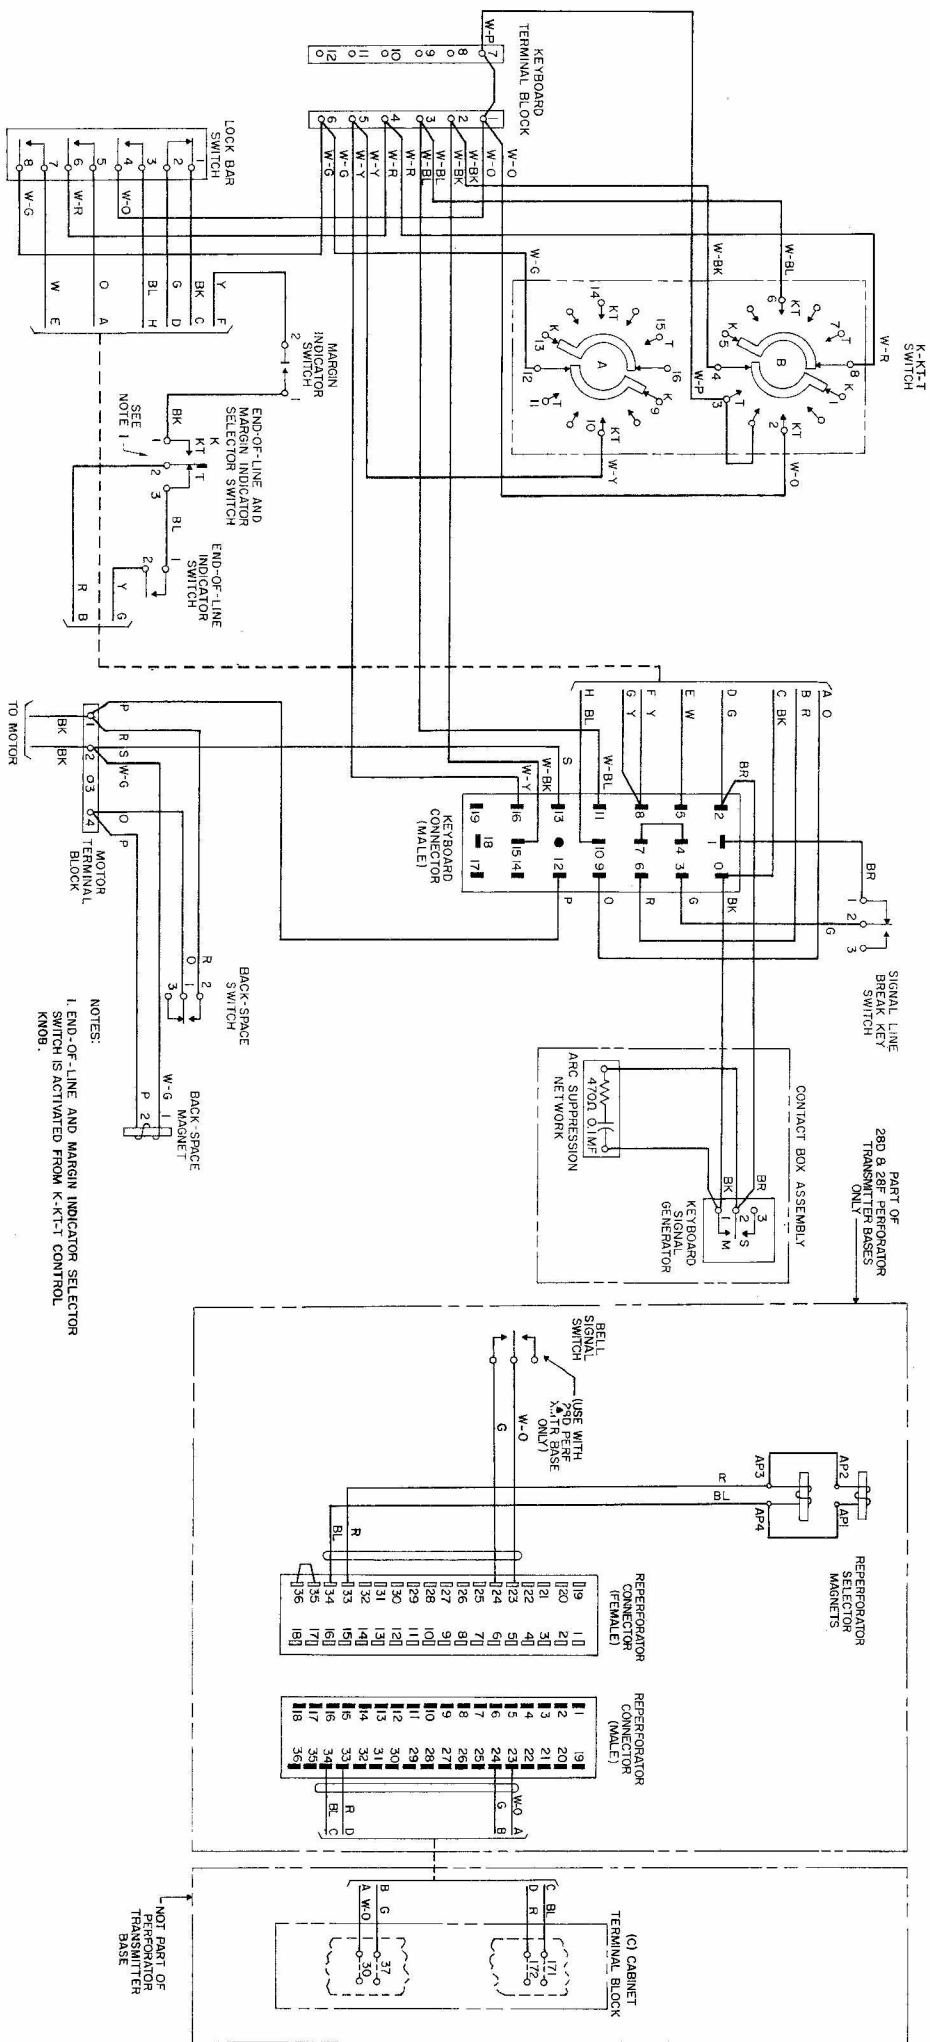


28D, E, F and K Perforator-Transmitter-Bases

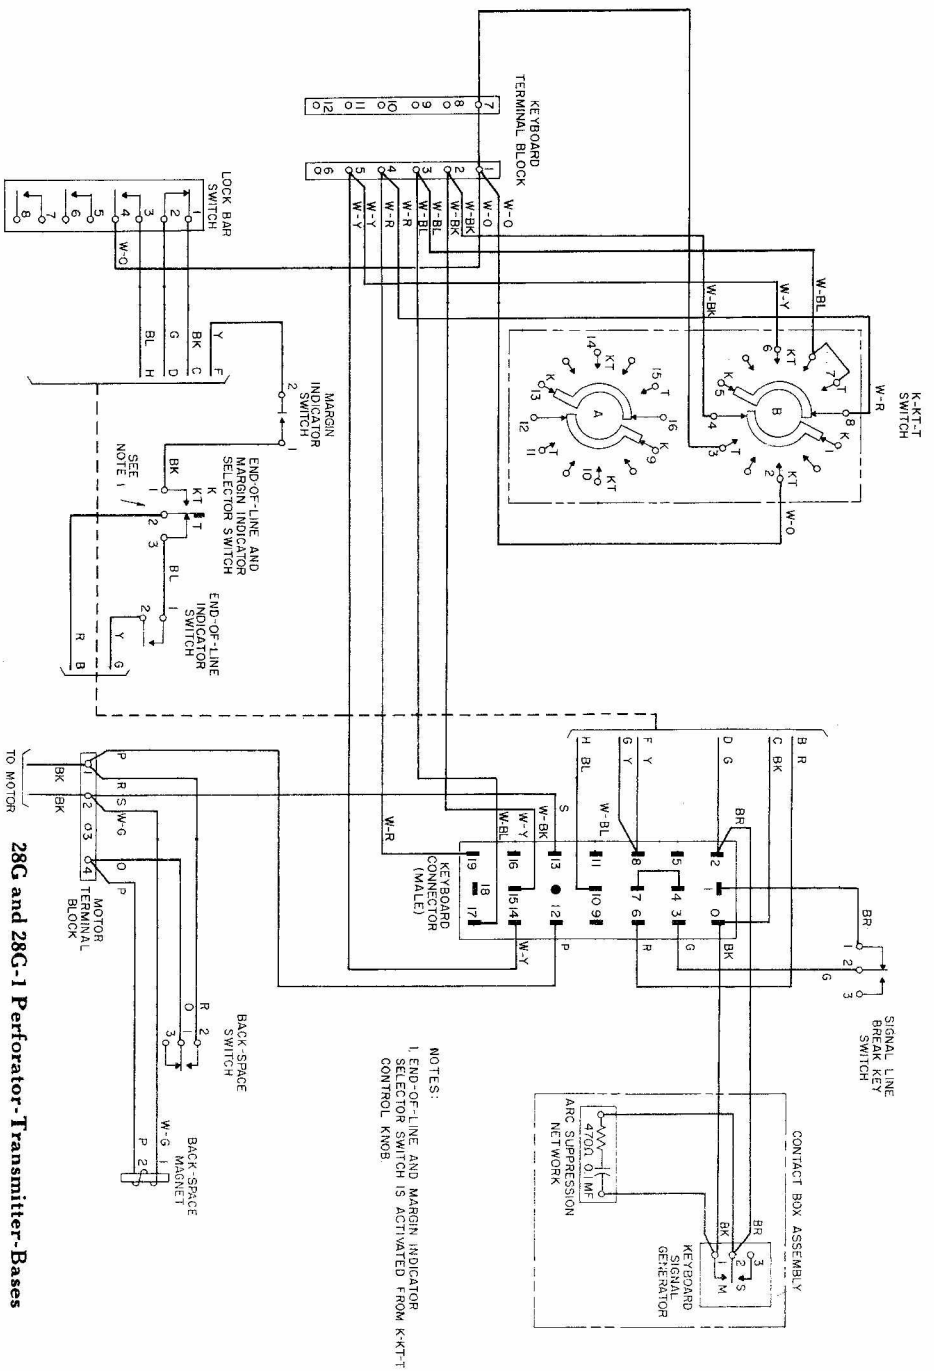

NOTES:
 1. END-OF-LINE AND MARGIN INDICATOR SELECTOR SWITCH IS ACTIVATED FROM K-KT-T CONTROL KNOB.

28G and 28G-1 Perforator-Transmitter-Bases

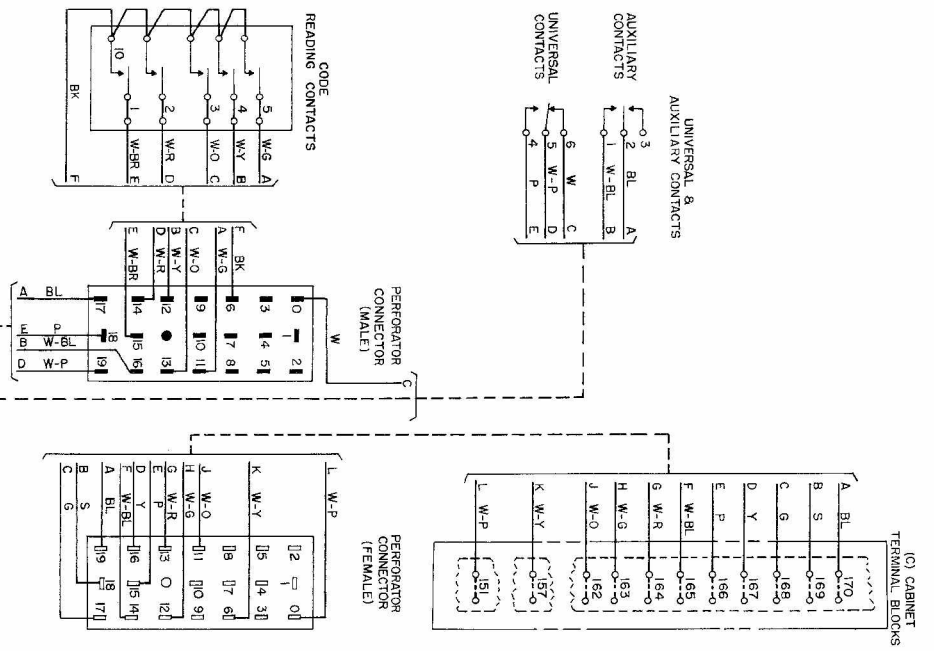

BELL SYSTEM PRACTICES
Teletypewriter Data Stations

SECTION P34.307
Issue 4, December, 1962
AT&TCo Standard

28 PERFORATOR-TRANSMITTER-BASES


WIRING DIAGRAM

1. GENERAL


1.01 This section shows the wiring for the 28A, B, D, E, F, G, H, J, J-1, and LA perforator-transmitter-bases for use with the 28 automatic send-receive set.

1.02 This section is reissued to add the wiring for the 28J and 28J-1 perforator-transmitter-bases for use in dial TWX.

28B Perfator-Transmitter-Base

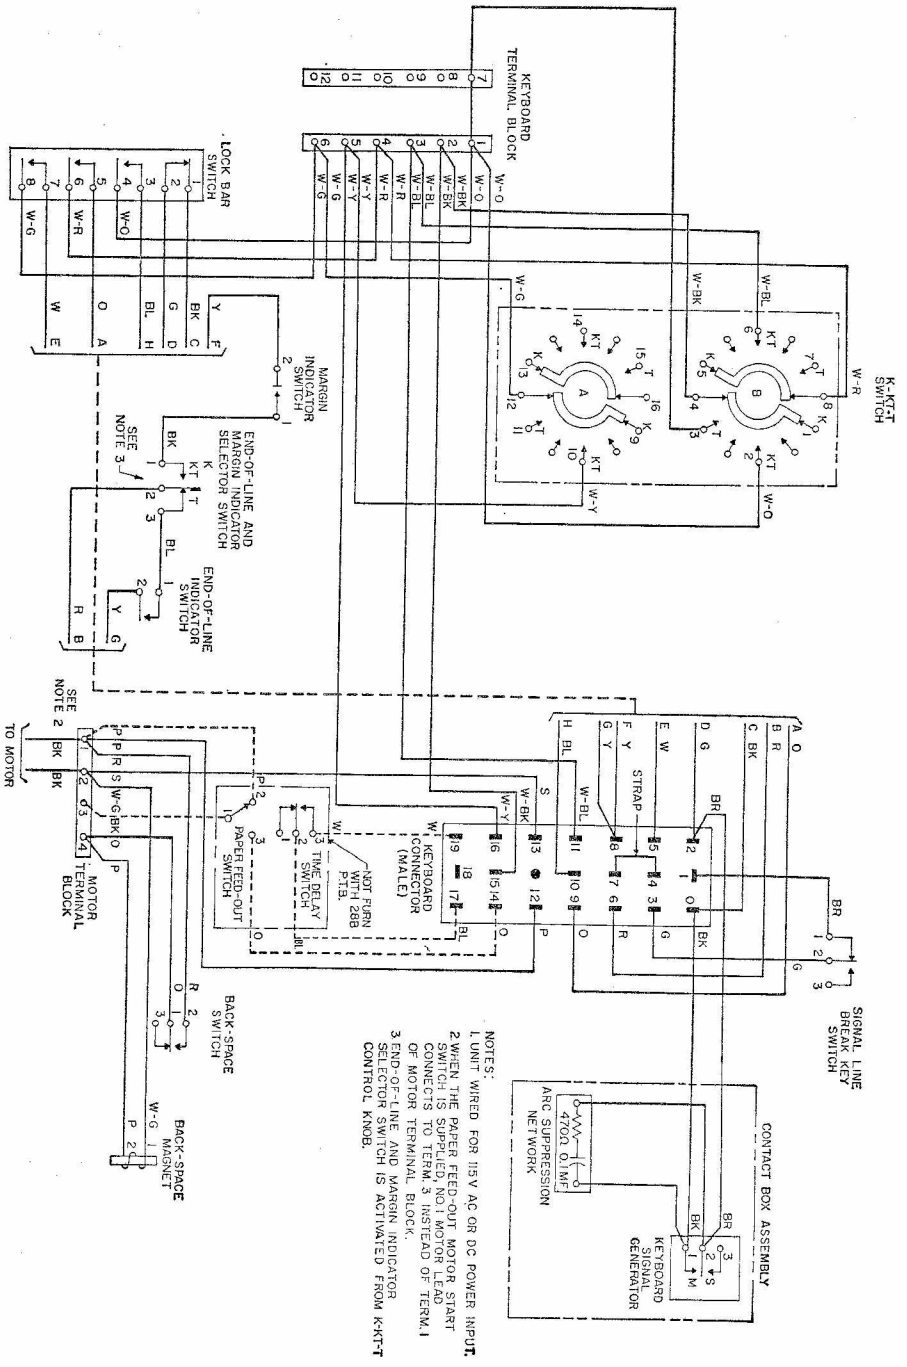

- NOTES:
 1 UNIT WIRED FOR 115 V AC OR DC POWER INPUT.
 2 WHEN THE PAPER FEED-OUT MOTOR START SWITCH IS SUPPLIED, NO.1 MOTOR LEAD CONNECTS TO TERM. 3 INSTEAD OF TERM.1 OF MOTOR TERMINAL BLOCK.
 3 END-OF-LINE AND MARGIN INDICATOR SELECTOR SWITCH IS ACTIVATED FROM K-KT1 CONTROL KNOB.

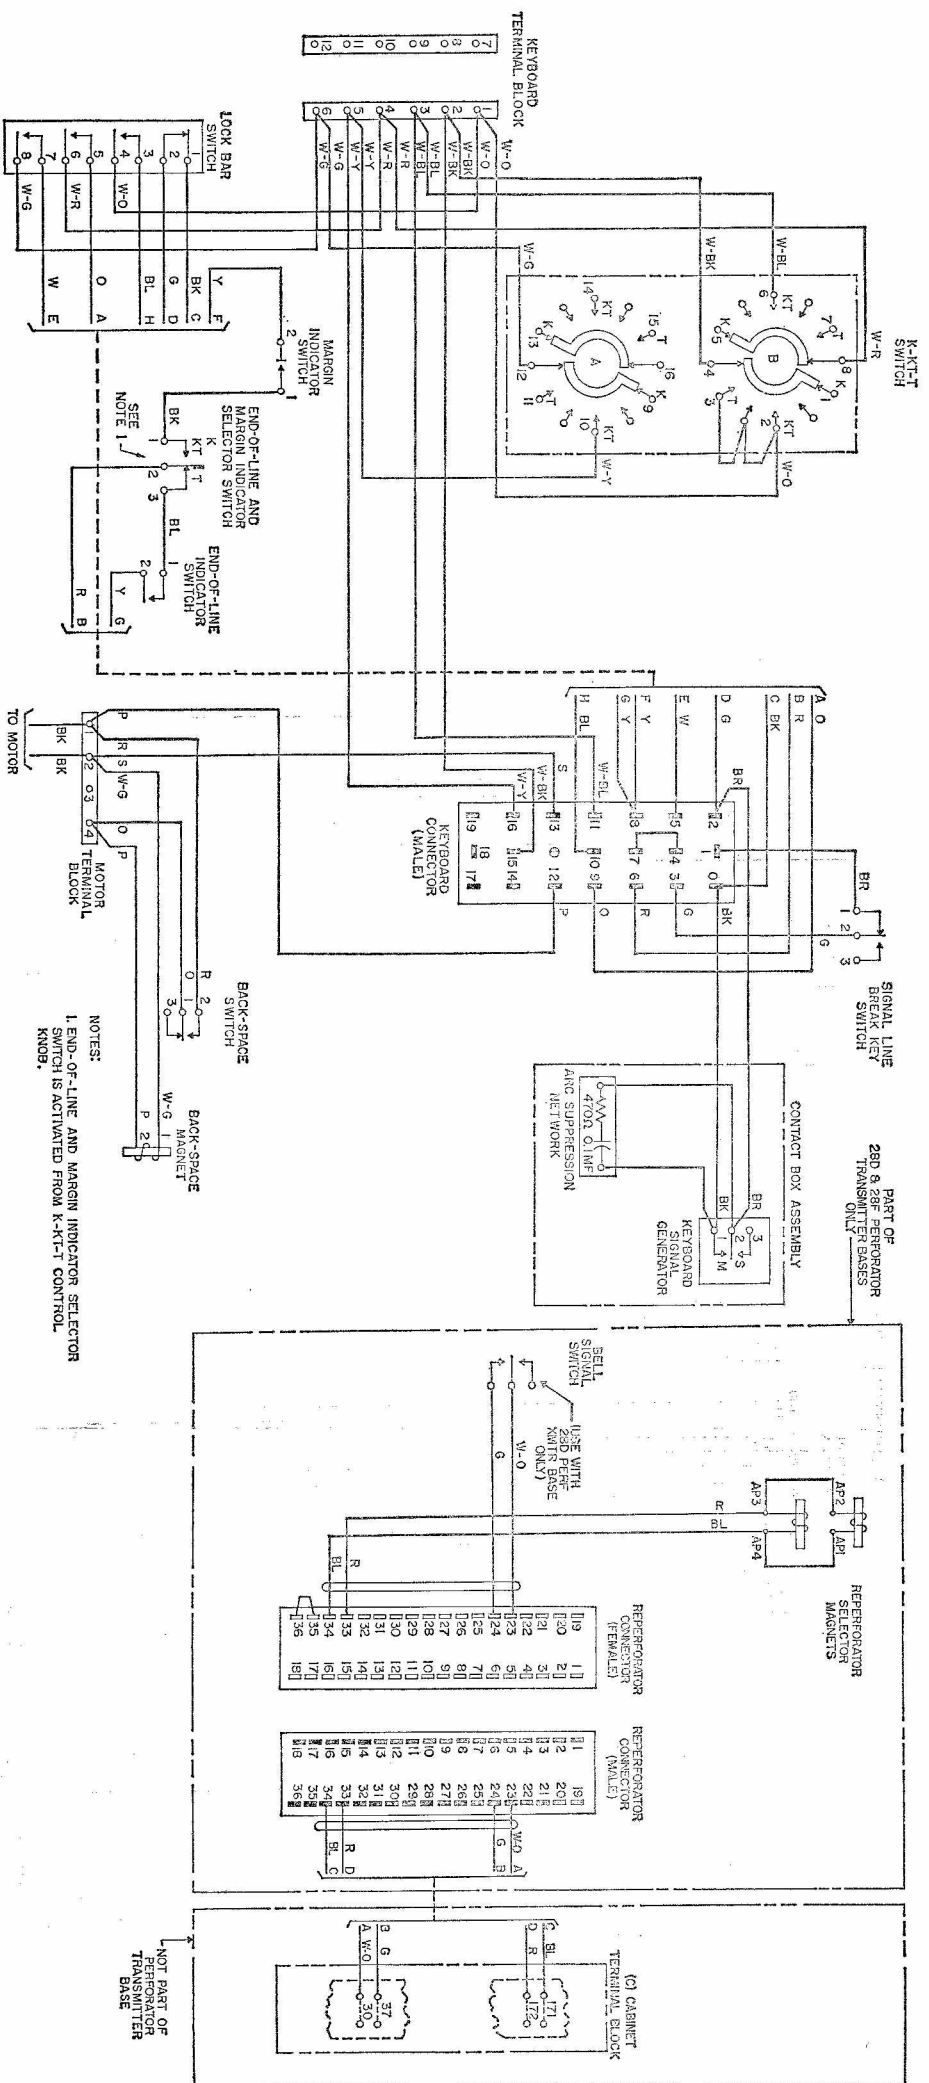


NOTES:
 1. END-OF-LINE AND MARGIN INDICATOR SELECTOR SWITCH IS ACTIVATED FROM K-K-T-T CONTROL KNOB.

28D, E, and F Perforator-Transmitter-Bases

REPERFORATOR CONNECTOR (FEMALE)	REPERFORATOR CONNECTOR (MALE)
119	183
120	182
121	181
122	180
123	179
124	178
125	177
126	176
127	175
128	174
129	173
130	172
131	171
132	170
133	169
134	168
135	167
136	166
187	165
	164
	163
	162
	161
	160
	159
	158
	157
	156
	155
	154
	153
	152
	151
	150
	149
	148
	147
	146
	145
	144
	143
	142
	141
	140
	139
	138
	137
	136
	135
	134
	133
	132
	131
	130
	129
	128
	127
	126
	125
	124
	123
	122
	121
	120
	119
	118
	117
	116
	115
	114
	113
	112
	111
	110
	109
	108
	107
	106
	105
	104
	103
	102
	101
	100
	99
	98
	97
	96
	95
	94
	93
	92
	91
	90
	89
	88
	87
	86
	85
	84
	83
	82
	81
	80
	79
	78
	77
	76
	75
	74
	73
	72
	71
	70
	69
	68
	67
	66
	65
	64
	63
	62
	61
	60
	59
	58
	57
	56
	55
	54
	53
	52
	51
	50
	49
	48
	47
	46
	45
	44
	43
	42
	41
	40
	39
	38
	37
	36
	35
	34
	33
	32
	31
	30
	29
	28
	27
	26
	25
	24
	23
	22
	21
	20
	19
	18
	17
	16
	15
	14
	13
	12
	11
	10
	9
	8
	7
	6
	5
	4
	3
	2
	1

NOT PART OF TRANSMITTER BASE

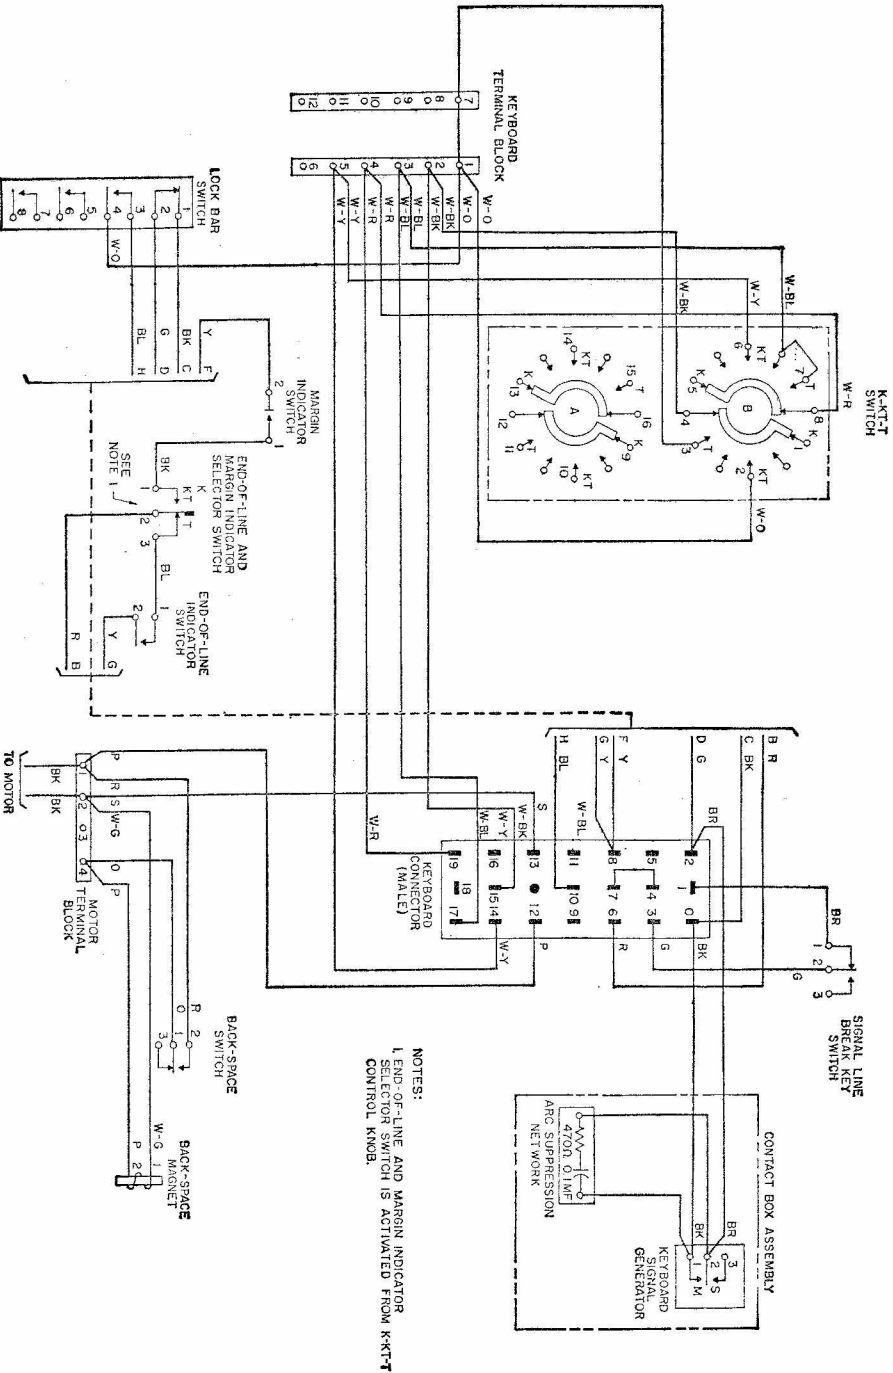















NOTES:
 1. END-OF-LINE AND MARGIN INDICATOR SELECTOR SWITCH IS ACTIVATED FROM K-K-T-T CONTROL KNOB.














28G Perforator-Transmitter-Base

P34.307
 Page 5

   28 PERF.-TRANS.-BASES WIRING DIAGRAM










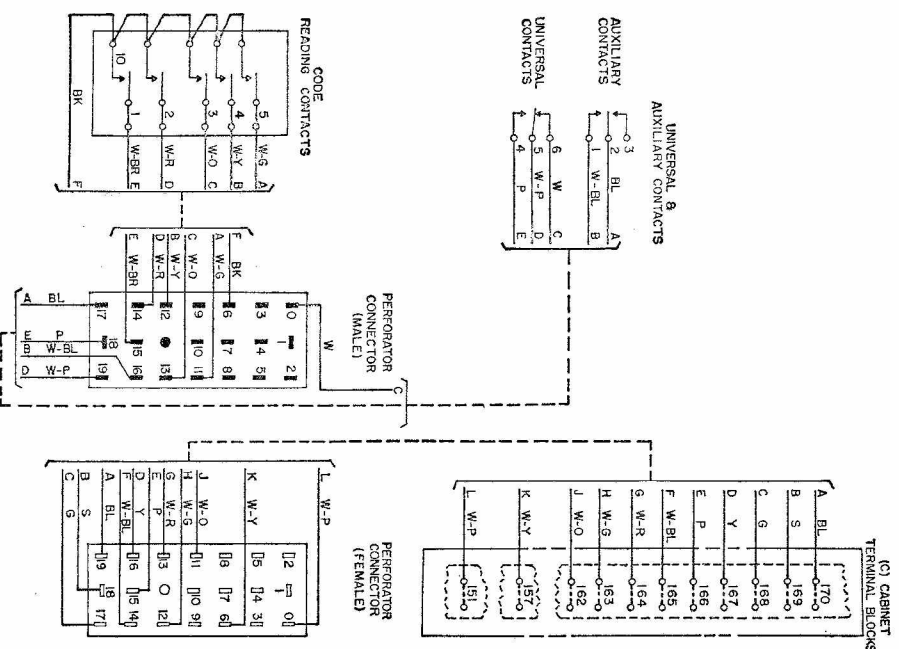


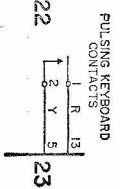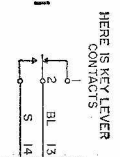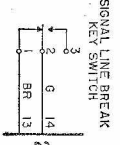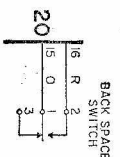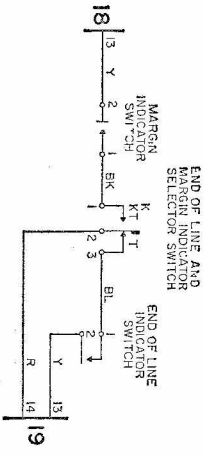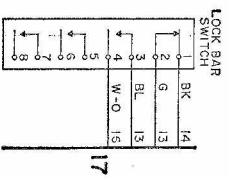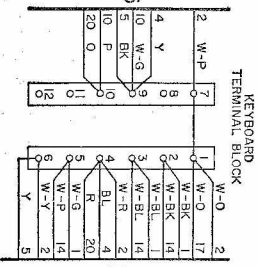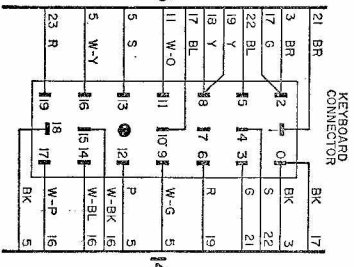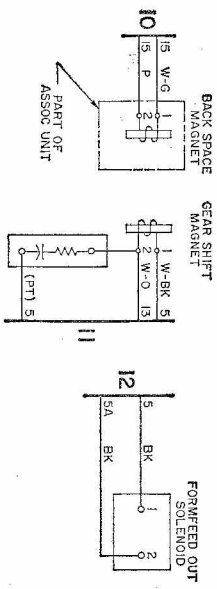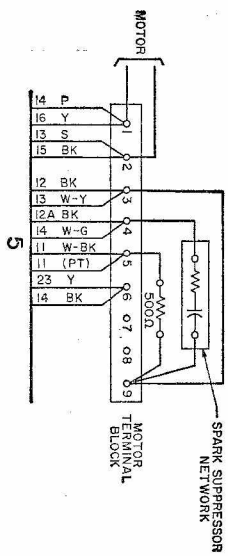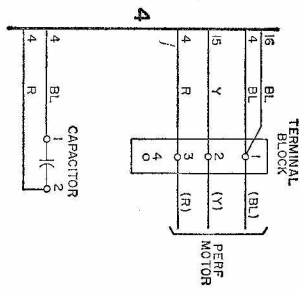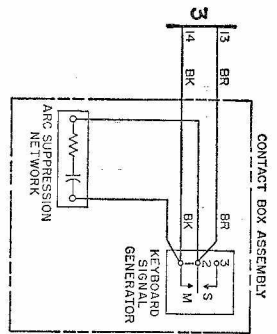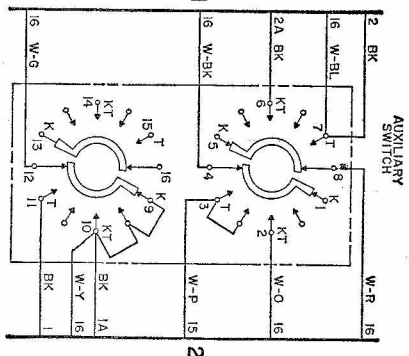

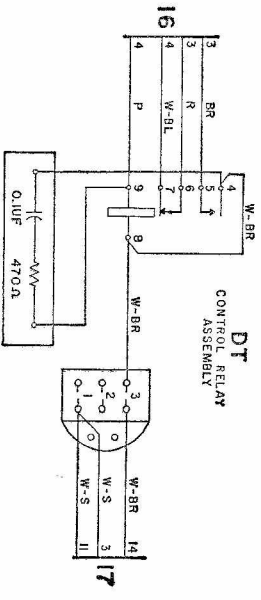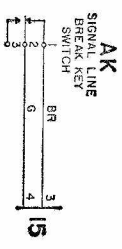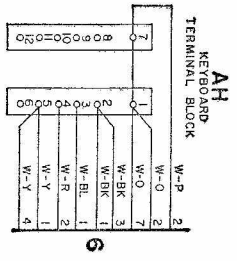
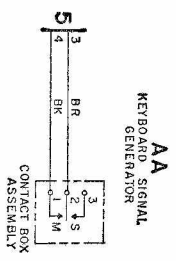
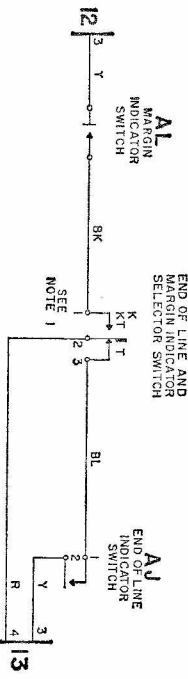
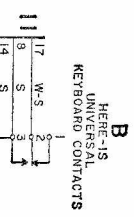


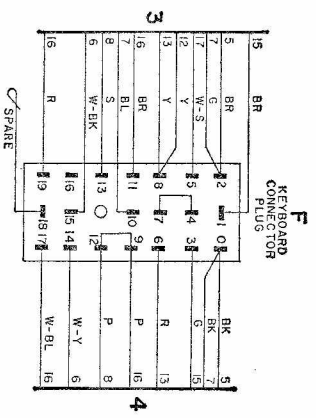
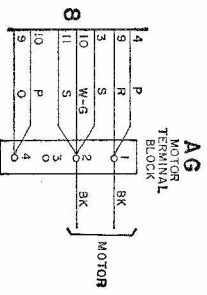
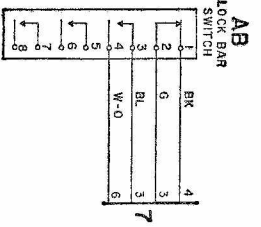
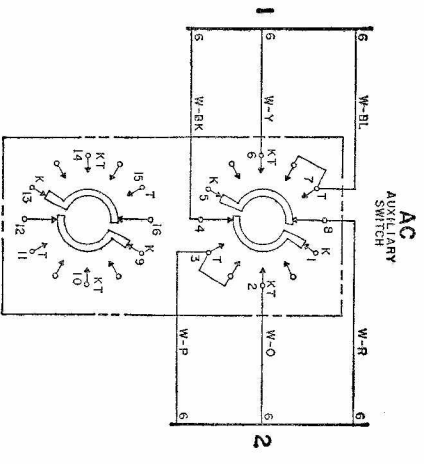


NOTES:
1. END OF LINE AND MARGIN INDICATOR SELECTOR SWITCH IS ACTIVATED FROM THE AUXILIARY SWITCH CONTROL KNOB.

  28J Perforator-Transmitter-Base

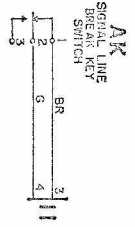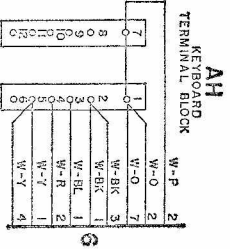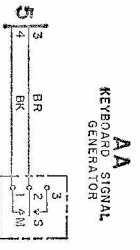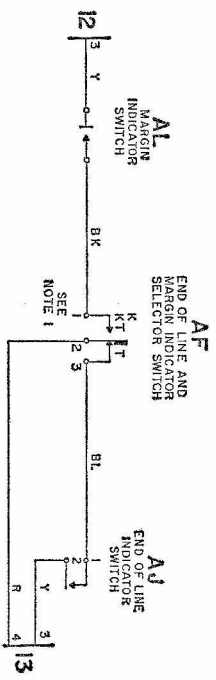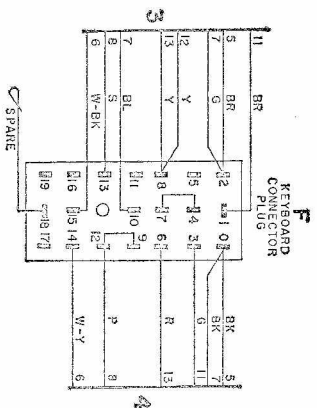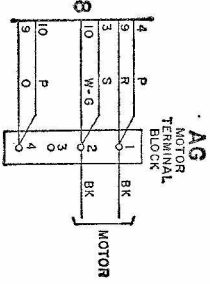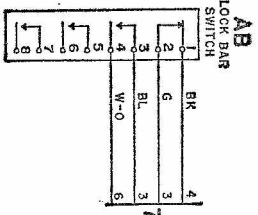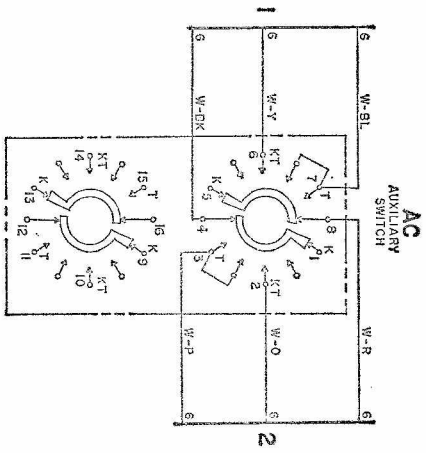

NOTES:
1. END OF LINE AND MARGIN INDICATOR SELECTOR SWITCH IS ACTIVATED FROM THE AUXILIARY SWITCH CONTROL KNOB.

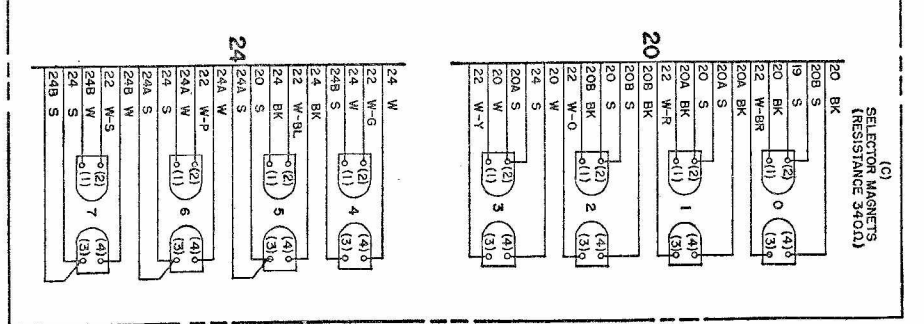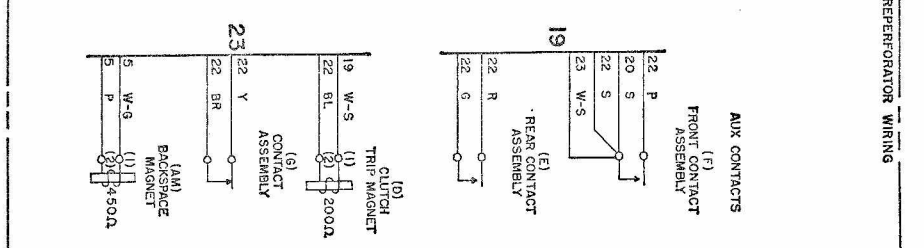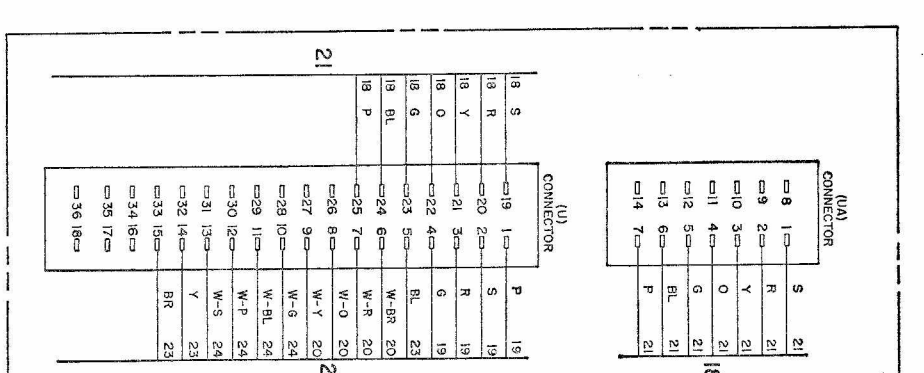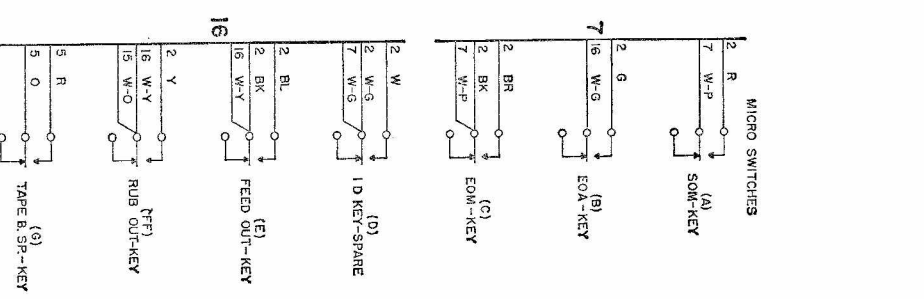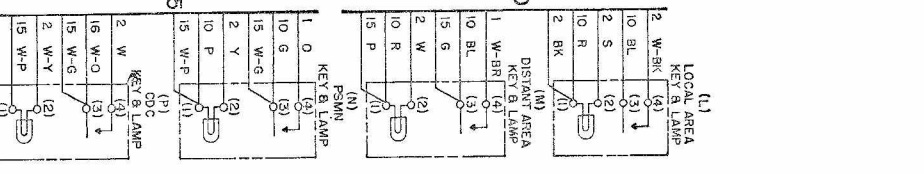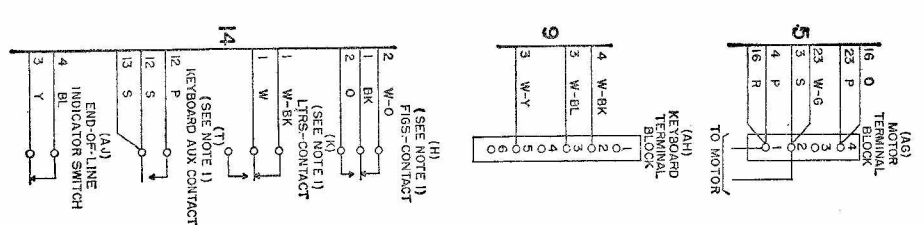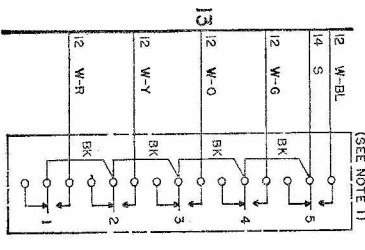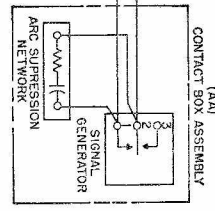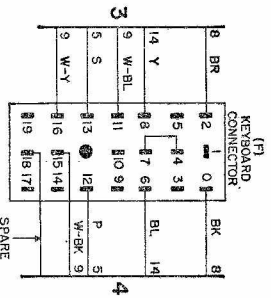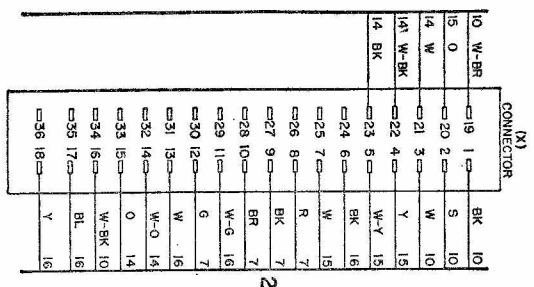

NOTES:
1. CONTACTS SHOWN IN STOP POSITION.

281A Performer Transmitter-Base