

NOTES

FOR ACTUAL WIRING DIAGRAMS SEE 4401W0, 4402W0, 4403W0, 4771W0


IN ORDER TO USE THE WIGLER ADAPTER SEPARATE THIS INTERFACE AND INSURE THE POWER ADAPTER CIRCUIT USE 30A3W0

PROVIDE 181723 PLUS ASSEMBLY STRAP BETWEEN TERMINAL J1-8 AND J2-11 WHEN THE 181723 AUXILIARY POWER SUPPLY IS NOT USED

USE THE FOLLOWING FUSES

MOTOR	NEUTRAL	POLE
181871	5-0-4	5-8
181870	5-0-4	5-24

ON TO MACHINES USE 184422 CABLE ASSEMBLY (MOTOR HOLD) AND 184423 CABLE ASSEMBLY (LOW FORM)

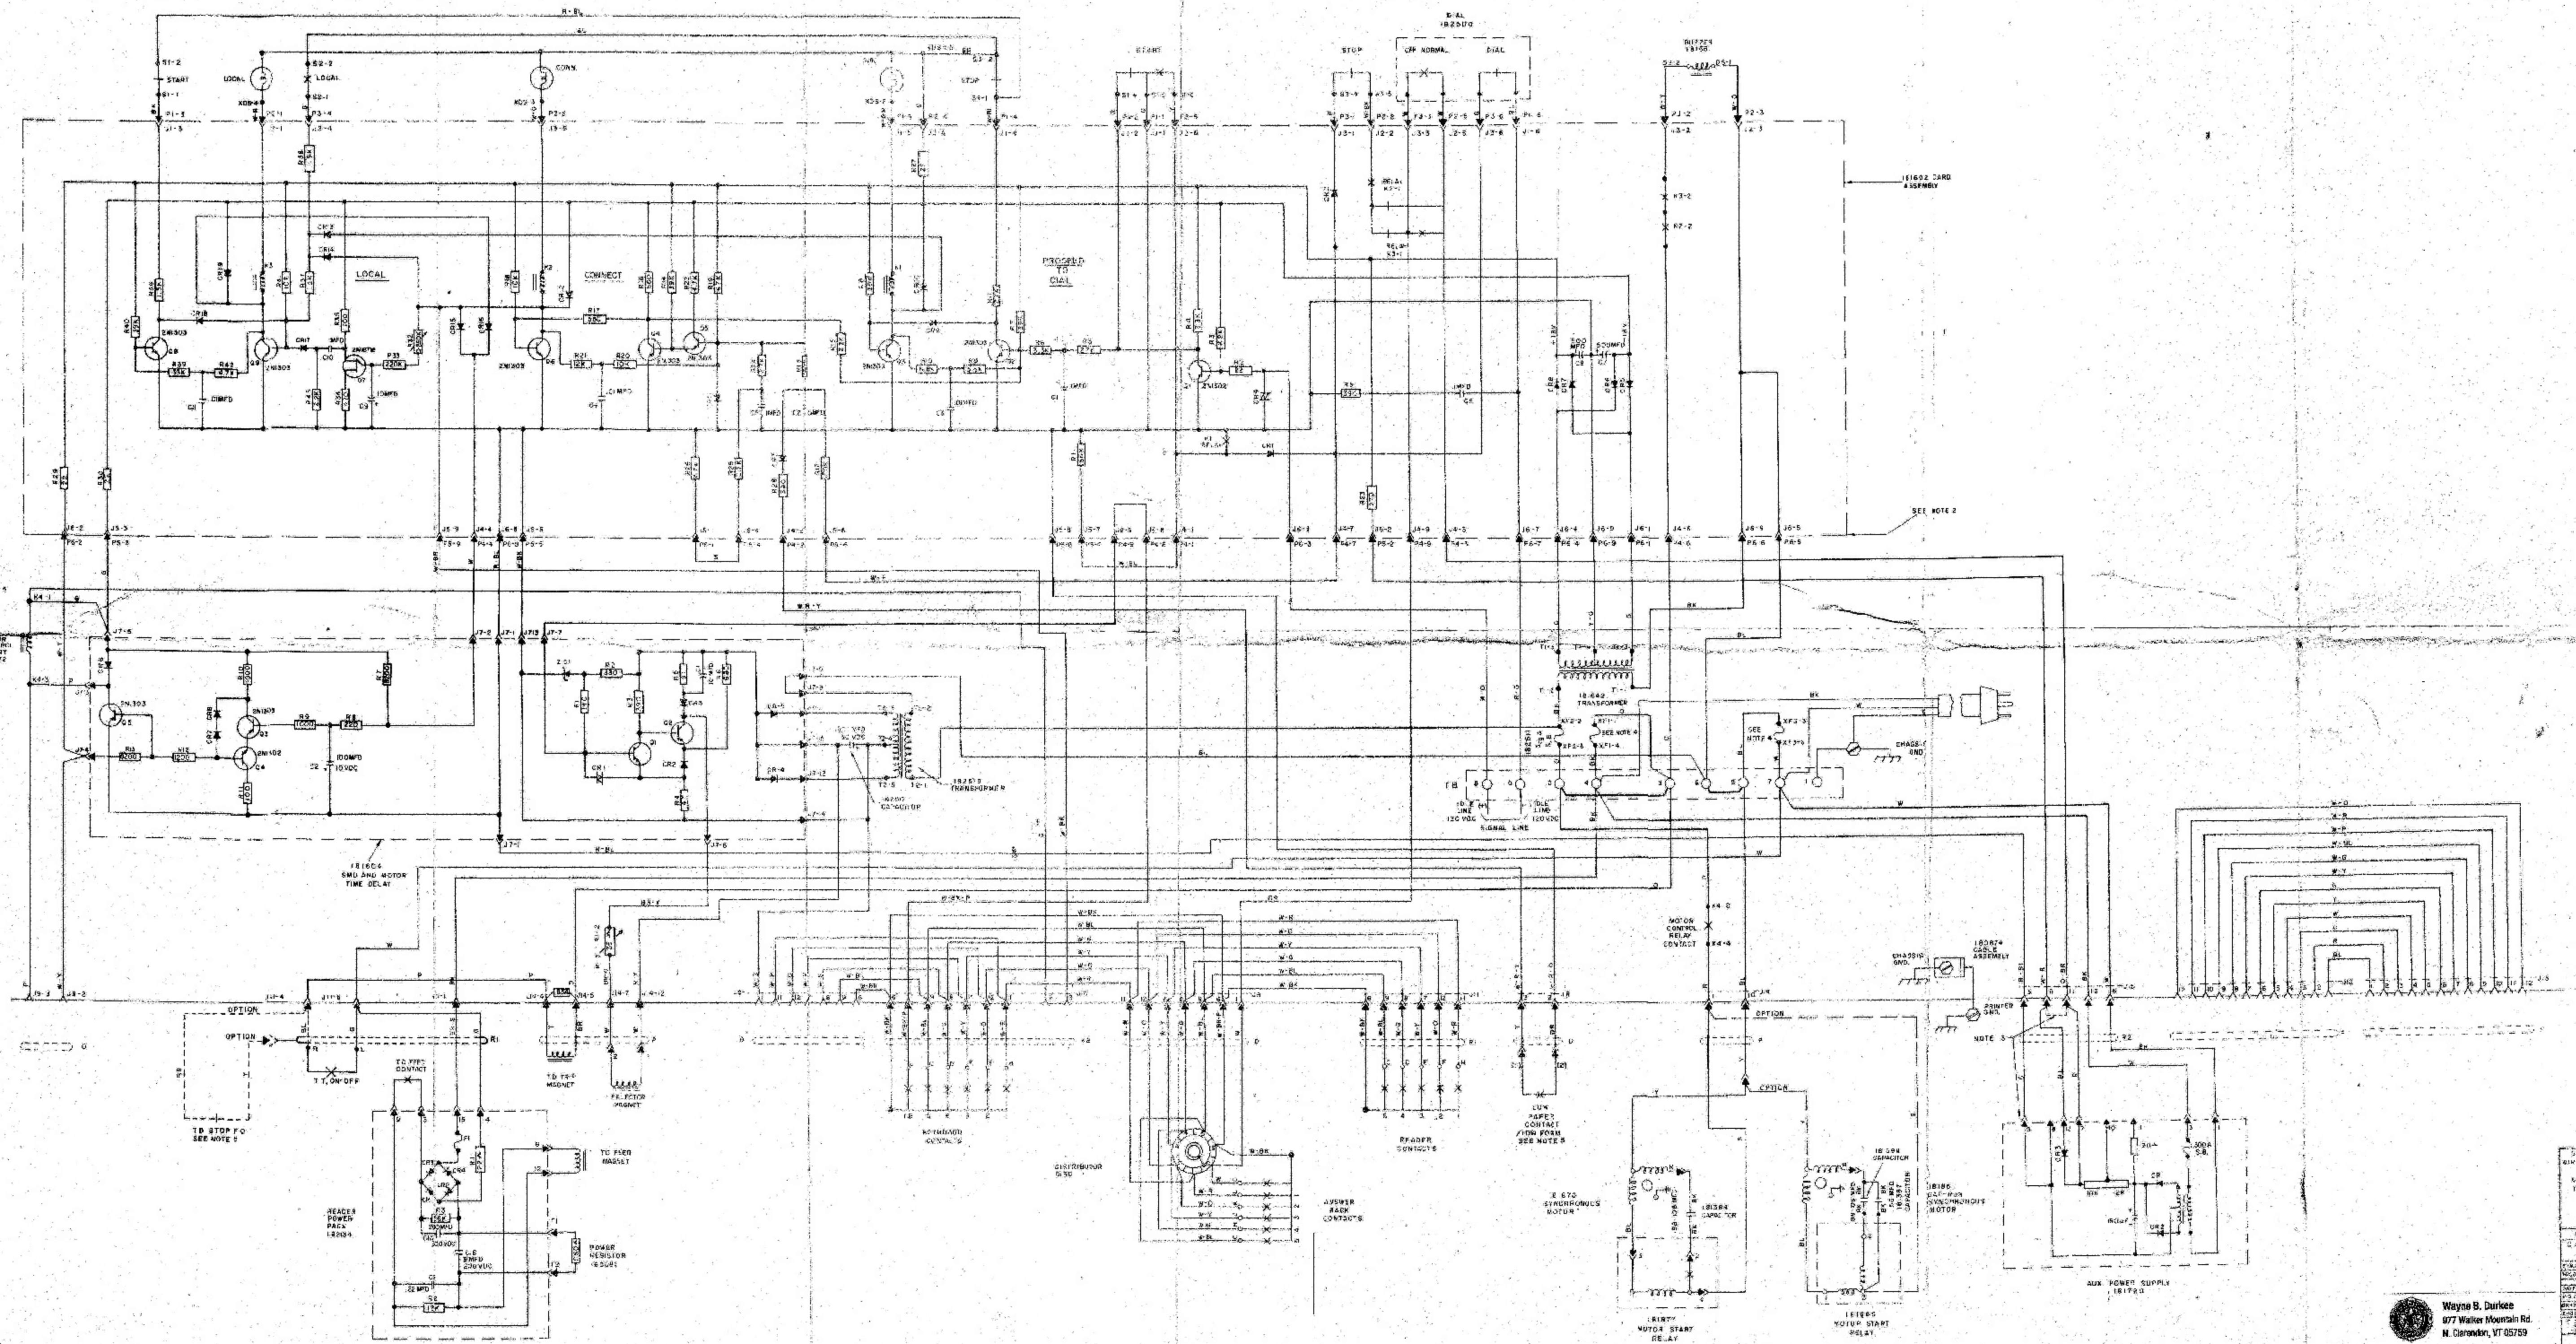

REWORKED BY: [Signature]

DATE: 10/2/78

BY: [Signature]

181871 MOTOR

181870 MOTOR

181823 AUXILIARY POWER SUPPLY

181822 MOTOR CONTROL RELAY

181824 SMD AND MOTOR TIME DELAY

184422 CABLE ASSEMBLY (MOTOR HOLD)

184423 CABLE ASSEMBLY (LOW FORM)

181872 MOTOR CONTROL RELAY

181873 PLUS ASSEMBLY STRAP

181874 PLUS ASSEMBLY STRAP

181875 PLUS ASSEMBLY STRAP

181876 PLUS ASSEMBLY STRAP

181877 PLUS ASSEMBLY STRAP

181878 PLUS ASSEMBLY STRAP

181879 PLUS ASSEMBLY STRAP

181880 PLUS ASSEMBLY STRAP

181881 PLUS ASSEMBLY STRAP

181882 PLUS ASSEMBLY STRAP

181883 PLUS ASSEMBLY STRAP

181884 PLUS ASSEMBLY STRAP

181885 PLUS ASSEMBLY STRAP

181886 PLUS ASSEMBLY STRAP

181887 PLUS ASSEMBLY STRAP

181888 PLUS ASSEMBLY STRAP

181889 PLUS ASSEMBLY STRAP

181890 PLUS ASSEMBLY STRAP

181891 PLUS ASSEMBLY STRAP

181892 PLUS ASSEMBLY STRAP

181893 PLUS ASSEMBLY STRAP

181894 PLUS ASSEMBLY STRAP

181895 PLUS ASSEMBLY STRAP

181896 PLUS ASSEMBLY STRAP

181897 PLUS ASSEMBLY STRAP

181898 PLUS ASSEMBLY STRAP

181899 PLUS ASSEMBLY STRAP

181900 PLUS ASSEMBLY STRAP