

SPECIAL INSTRUCTIONS FOR  
USE OF 120870 FELT WICKS ON  
CAM SLEEVE ASSEMBLIES  
OF MULTIPLE TRANSMITTER DISTRIBUTORS (MXD)

1. The cam sleeve assemblies used on Multiple Transmitter Distributors are equipped with six 120870 felt wicks.
2. Before installation of the cam sleeve assembly in a Multiple Transmitter Distributor equipped with letters-sensing mechanism, the first two wicks and their retaining clips (numbered from the clutch-end of the sleeve) should be removed (Figure 1).
3. After installing the cam sleeve and before the unit is put into service, make certain that the clips that retain the wicks are located safely between the high parts of the adjacent cams. (Clips should not be adjacent to indents of the cams.)

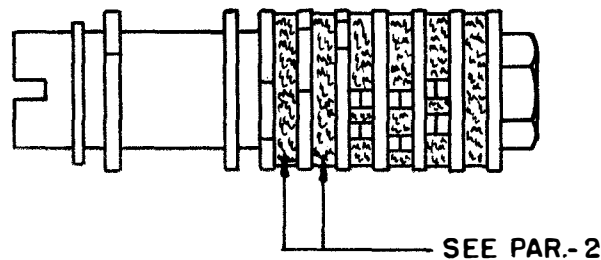


FIGURE 1