

BELL SYSTEM PRACTICES
Teletypewriter Stations

SECTION P32.001
Issue 4, July, 1956
AT&T Co Standard

TELETYPEWRITER SELECTOR MECHANISMS REQUIREMENTS AND PROCEDURES

Table of Contents	Paragraphs
1. GENERAL	1.01-1.03←
2. LUBRICATION	2.01
3. REQUIREMENTS AND PROCEDURES	3.01-3.29←
Holding-Magnet	
Armature	3.05
Armature Lever	3.04
Armature-Lever Spring	3.13
Locking Lever	3.10
Locking-Lever Spring	3.09
Locking Wedge	3.08
Magnet Bracket	3.14
Selector Arm	3.06
Selector-Arm Spring	3.15
Selector-Arm Stop-Detent Spring	3.11
Selector-Lever Spring	3.02 ←
Swords	3.07
Sword Separator-Plate Leaf Springs	3.01 ←
Pulling-Magnet Type	
Armature	3.16
Armature-Detent Mounting Bracket (20-Type)	3.23
Armature-Detent Spring (20-Type)	3.24
Armature-Locking-Lever Spring	3.21
Armature-Locking Wedge	3.20
Armature Spring	3.19 ←
Magnet Bracket	3.22 ←

Table of Contents—Contd.	Paragraphs	
No. 1 Sword Arms	3.18	↑
Selector-Lever Spring	3.02	↑
Swords	3.17	
Sword Separator-Plate Leaf Springs	3.01	↑
Range-Finder Mechanism		
Armature Tripoff Screw	3.29	↑
Range-Finder Positioning Link	3.28	
Stoplever	3.26	
Stoplever Spring	3.27	
Selector-Clutch Torque	3.03	↑
Triplatch Spring	3.25	↑
4. REFERENCE TO BELL SYSTEM PRACTICES		↑
1. GENERAL		
1.01 This section contains the adjusting requirements and procedures for the maintenance of the selector mechanisms used in the 14, 15, 20, and 26 Teletypewriter Apparatus. The requirements and procedures for the 28 Teletypewriter are in Section P34.001.		↑
1.02 This section is reissued to include changes for various adjustments. The changes are indicated by marginal arrows.		↑
1.03		
(a) The requirements and procedures of this section may be applied in full or in part to the following units:		
Typing Unit—14, 15, 20 and 26		
Reperforator—14 and 20		
Reperforator-Transmitter—14 and 114		↑
Typing Reperforator—14		
Sequential Selector (SOTUS)		
(b) Whenever an adjustment refers to a No. 1 sword or selector lever, the parts referred to are those which are associated with the selector cam directly adjacent to the selector-camsleeve stoparm. However, because of differences in the apparatus, those parts are not designated No. 1 on all the units. In the 14, 15, and 26 Teletypewriters, 14 and 114 Reperforator-Transmitters, the cam and associated parts are designated No. 1, in the 20 Teletypewriter, No. 0, and in the 14 and 20 Reperforators, No. 5.		↑

Although an adjustment refers to a No. 1 sword, or selector lever, the foregoing should be considered when the adjustment is to be applied to a unit for which the parts are otherwise designated.

2. LUBRICATION

2.01 Selector mechanisms should be lubricated in accordance with the P Sections covering the units involved.

3. REQUIREMENTS AND PROCEDURES

Note: Remove range-finder assembly.

3.01 **Sword separator-plate leaf springs**, except those of top and bottom plates, should press lightly against their respective swords.

(1) To check, remove the separator plates and check to see that the leaf-spring end is Min .050", Max .060" away from the plane of the plate. Gauge by eye. Use care to avoid distorting the selector-lever springs. Return the swords and selector levers to their original positions.

(2) To adjust, bend the leaf spring at the narrow part.

Fig. 1

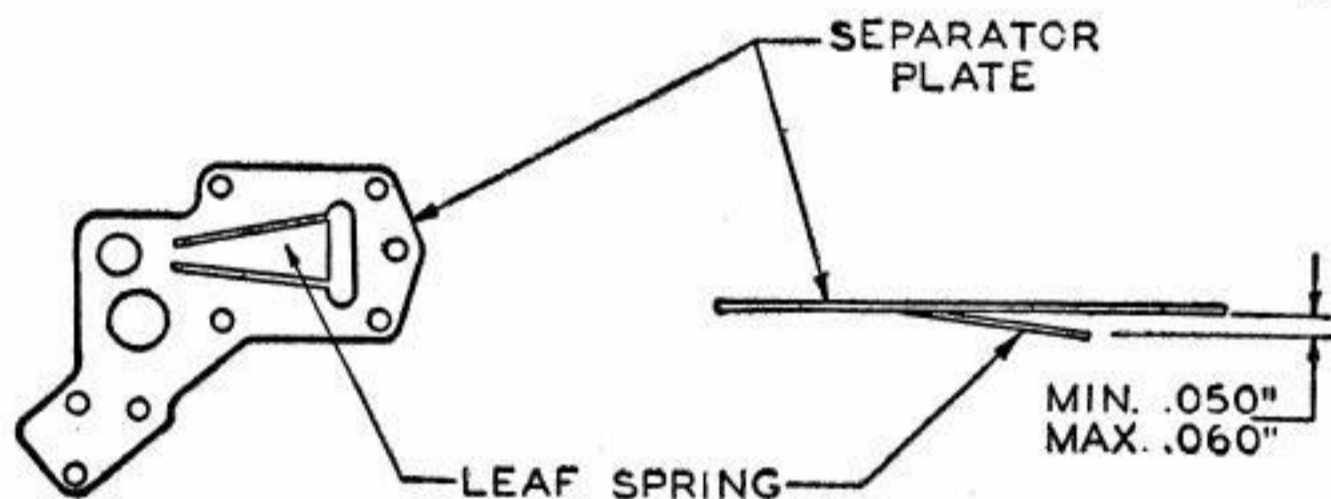


Fig. 1

Note: On six-unit reperforators that drop the fifth marking impulse, it may be necessary to bend the leaf of the separator plate for the No. 5 sword so that it exerts a force of Min 4-1/4 oz, Max 4-3/4 oz when measured as follows:

(a) With the separator plate resting on a flat, horizontal surface, and with the leaf pointing upward, apply a scale to the edge of the leaf and push down vertically. It should require Min 4-1/4 oz, Max 4-3/4 oz to press the leaf down until the end just touches the flat surface.

(b) On units having the leaf of the separator plate bent in accordance with the foregoing, the No. 4 and No. 5 selector-lever spring tension should not exceed 3-1/2 oz and 4-1/2 oz respectively. See Paragraph 3.02 (b).

3.02 Selector-Lever Spring

(a) **14, 15, and 20 Typing Units, 14 and 114 Reperforator-Transmitters, 14 Typing Reperforator, Sequential Selector (SOTUS)**

With the codebars (punch fingers)* in the marking position, the mainbail (locking bail)* in its extreme forward position (main shaft mounted horizontally) or highest position (main shaft mounted vertically) and the swords moved manually to the spacing position, hook a scale over the end of a selector lever at the selector camsleeve and pull radially to the main shaft. It should require Min 6 oz, Max 10 oz, as indicated in Fig. 2 (holding magnet) and Fig. 3 (pulling magnet), to start the lever moving. Check all selector levers in the same manner.

* Parts in parentheses refer to the 114 Reperforator-Transmitter.

(b) **14 and 20 Reperforators**

Rotate the main shaft until the selector camsleeve is in its stopped position. With the transfer levers in the spacing position, hook a scale over the top of the No. 5 transfer lever and pull horizontally to the right. It should require Min 1-1/2 oz, Max 3 oz to move the lever to the spacing position. The lever should start back at not less than 1/2 oz. Check all transfer levers in the same manner. See Paragraph 3.01 (Note).

(c) **26 Typing Unit**

With the selector levers in the spacing position, unhook the selector-lever springs from their spring posts and hook a scale in the spring eye. It should require a pull of Min 20 oz, Max 24 oz to stretch the spring to position length.

(a) To adjust, bend leaf spring at narrow part.

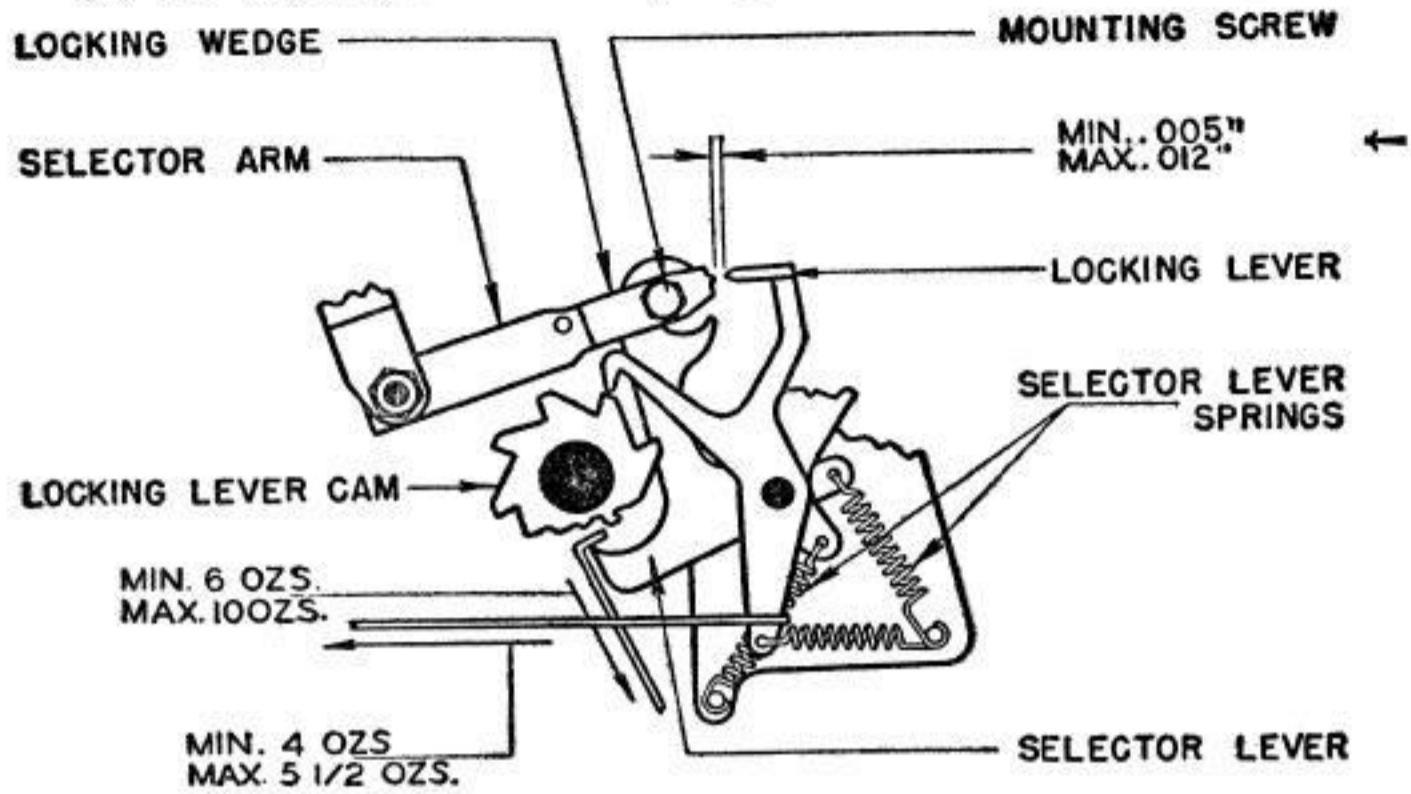


Fig. 2

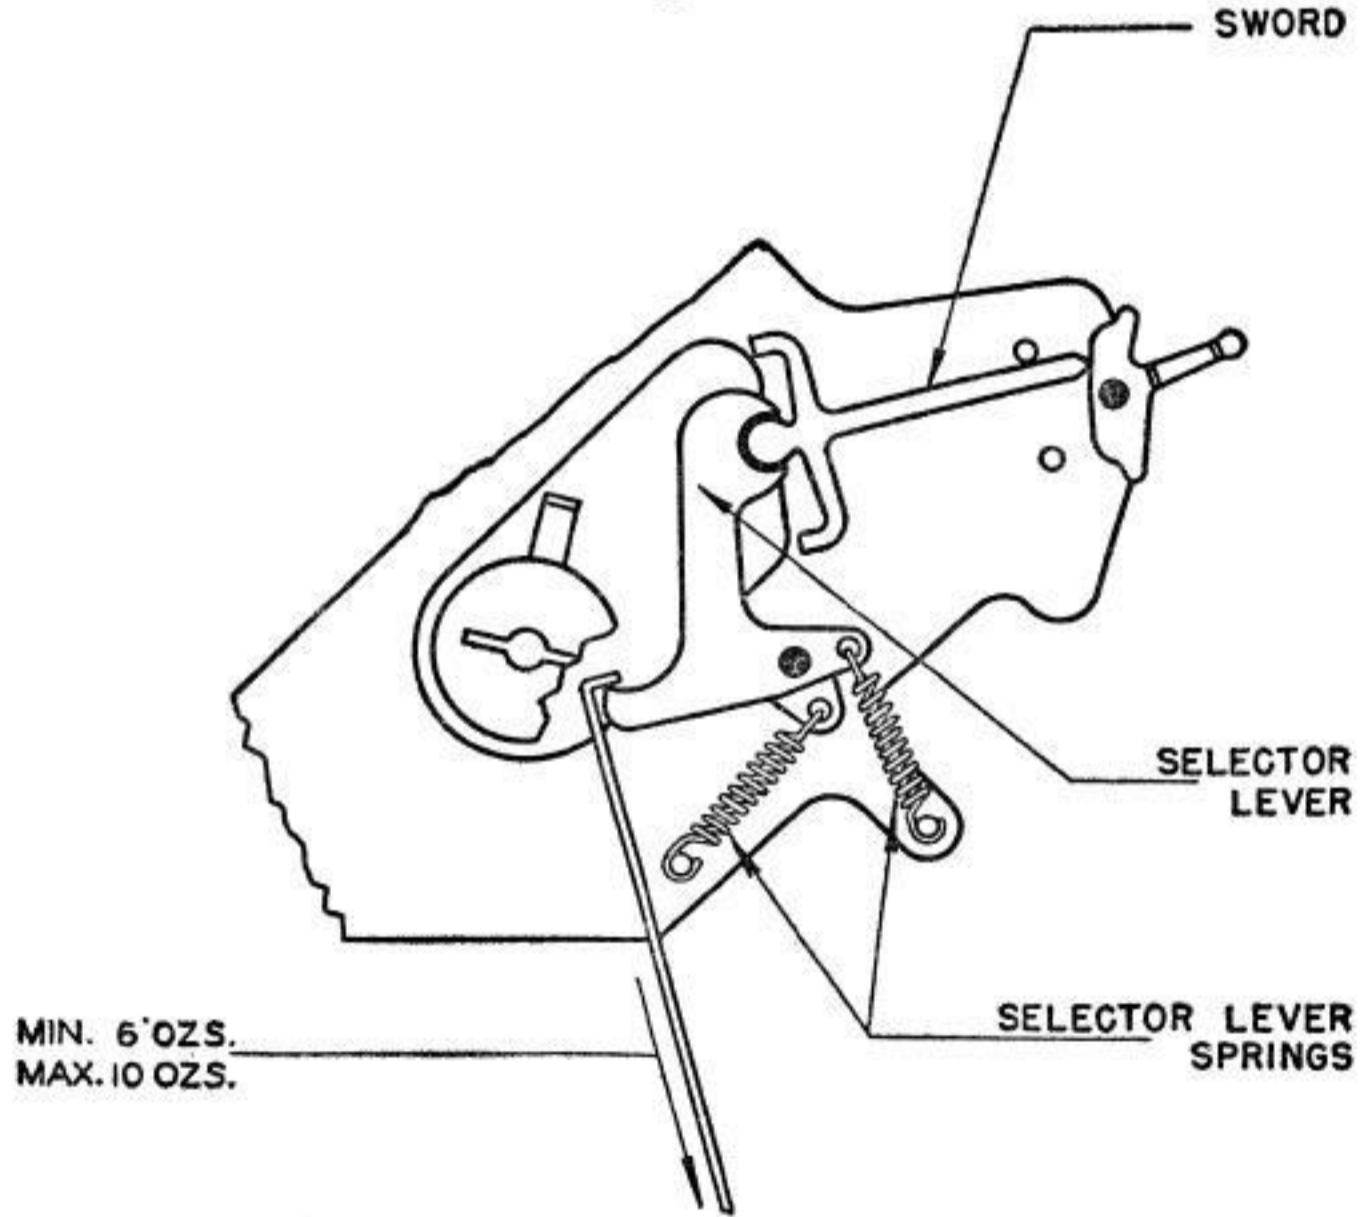


Fig. 3

3.03 **Selector-Clutch Torque:** After the felt friction washers have been freshly lubricated and the main shaft has rotated for at least ten minutes, hook a scale over the end of the selector-camsleeve stoparm. It should require Min 14 oz, Max 18 oz to hold the selector camsleeve stationary when the selector stoparm is held just clear of its stop.

(a) To adjust:

(1) On units equipped with the new-style capstan nut, keyed nut, and spacer, see Fig. 4 for parts, hold the capstan nut stationary and rotate the main shaft clockwise, viewed from the selector end of the shaft, to increase the torque and counterclockwise to decrease the torque.

Fig. 4

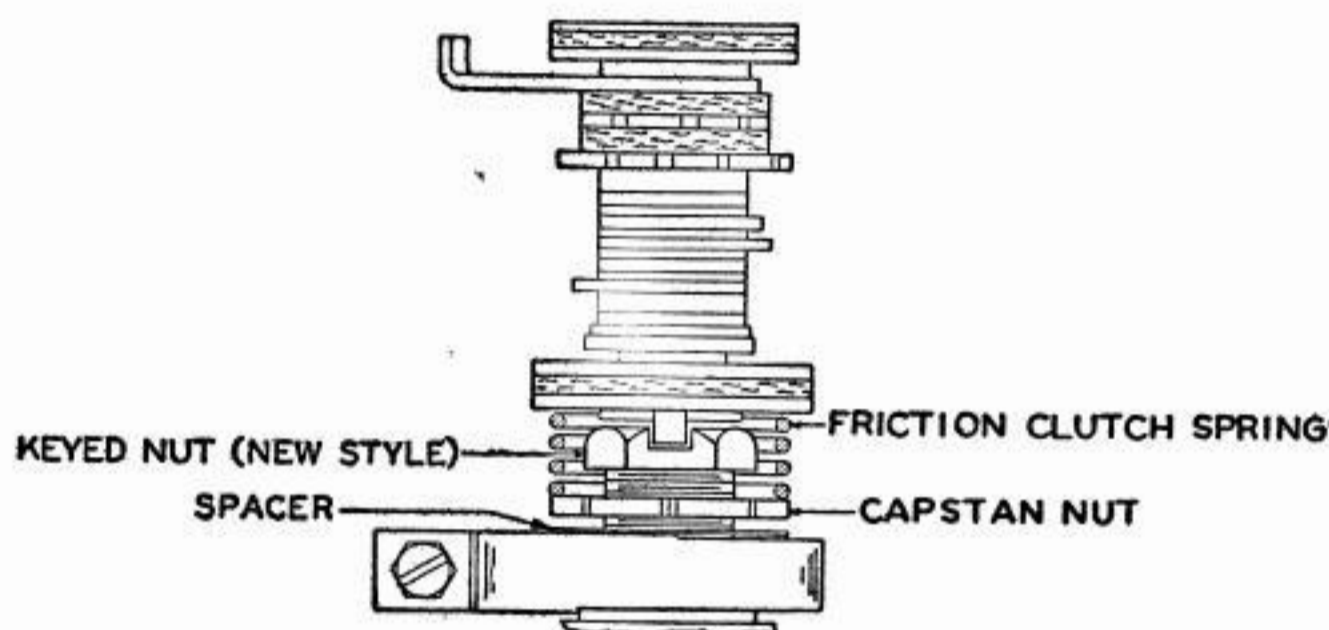


Fig. 4

(2) On units equipped with the old-style nut and keyed nut, see Fig. 5 for parts, add shims between the clutch spring and the nut to increase the torque and remove shims to decrease the torque. The selector-clutch spring must be removed from the shaft to install or remove shims. Shims are available as follows:

Fig. 5

<u>Shim</u>	<u>Thickness</u>
TP96763	.012"
TP96764	.016"
TP96765	.020"

Note: For convenience of future adjustments, consideration should be given to replacing the old-style nut and keyed nut with the new-style capstan nut, keyed nut, and spacer.

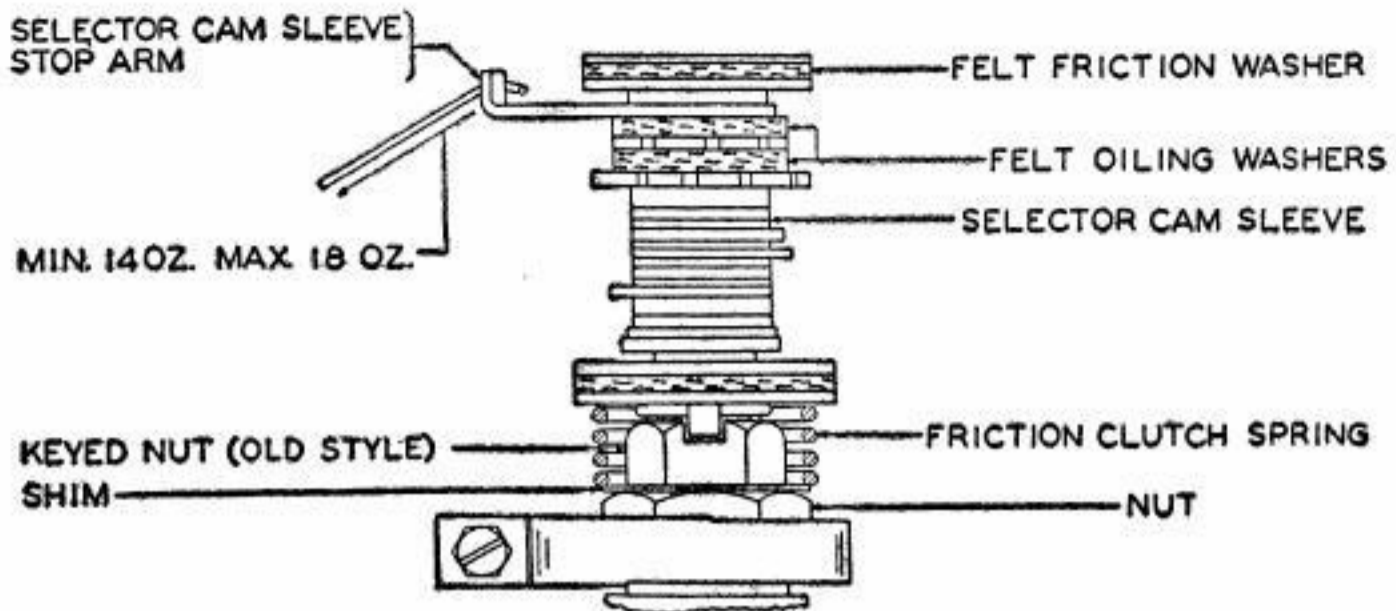


Fig. 5

(3) If the torque cannot be met by the adjustments of (1) or (2), replace the felt friction washers. Replace all TP6861 felt friction washers with TP122741 colloidal-graphite impregnated felt friction washers.

Caution: Avoid getting dirt or metal chips on washers or on bearing surfaces.

(4) To replace felt friction washers: (For SOTUS Unit see Note following Step (6))

(a) Remove the range-finder assembly, detach the locking-lever spring and remove the retaining disc, noting that it has a left-hand thread and unscrews to the right (clockwise).

(b) Remove the outer felt washer, camsleeve disc, camsleeve assembly, camsleeve disc and the inner felt washer. Remove the second camsleeve disc by holding the selector levers away from the shaft and rotating the camsleeve disc until the notch in its edge registers with the points of the selector levers.

(5) If those procedures do not meet the requirements, change the friction-clutch spring.

(6) To add shims or to change the nuts, or the clutch spring: (For SOTUS see Note following (b))

(a) Proceed as in (3).

(b) Remove main selector-clutch driving disc and spring.

Note: For the SOTUS Unit, the following procedures replace the above steps. These procedures cover partial removal of the main shaft

and do not require disturbing the selector-mechanism assembly.

(7) For the SOTUS, the following replaces Steps (4) and (6):

(a) Remove the timer sensing-bail mounting screw and allow the sensing-bail to hang out of the way. **Fig. 6**

(b) Remove the range finder.

(c) Remove the outer friction-washer disc from the main shaft by applying a screwdriver to the slot in the disc and turning in a clockwise direction while holding the main shaft. **Fig. 6**

(d) Remove the selector camsleeve by slipping it off the shaft. **Fig. 6**

(e) Rest the unit on its top, unhook the detent-lever spring and disengage the detent lever from the detent cam.

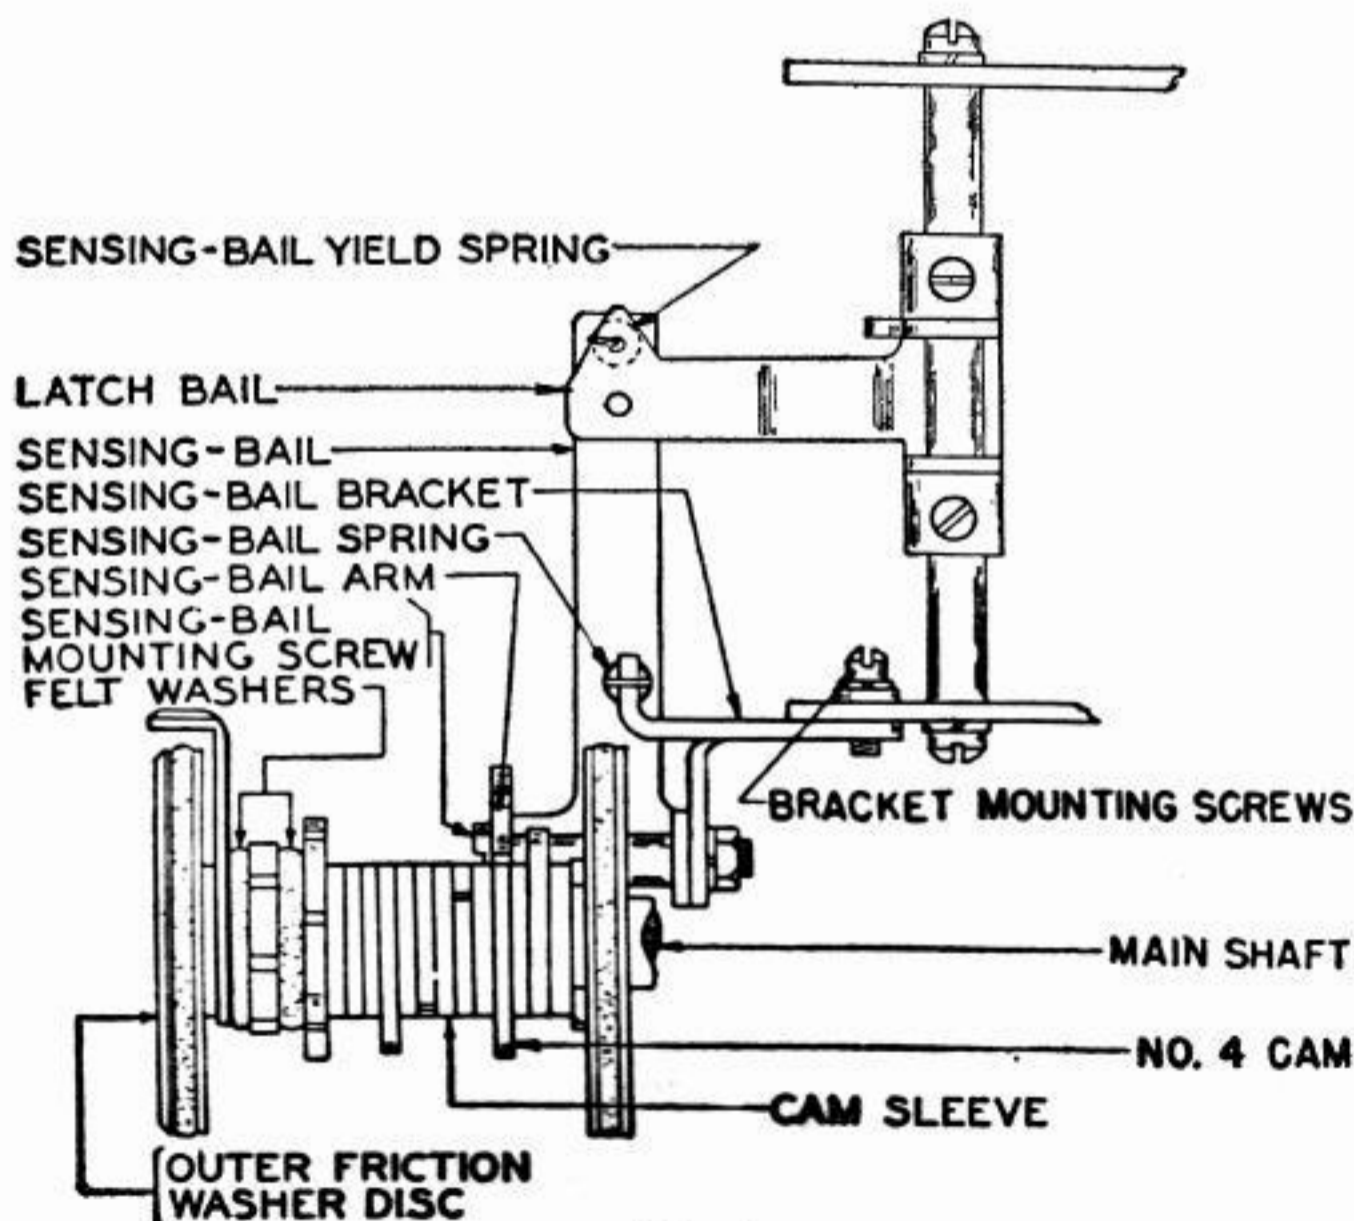


Fig. 6

- (f) Apply a wrench to the nut (TP72517) located behind the selector-clutch spring while holding the main shaft with another wrench at the flattened portion in the middle of the shaft (if provided) and loosen the nut.
- (g) Remove the thumb screw and leather washer from the gear end of the main shaft and remove the gear-hub mounting screw.
- (h) Remove the four mounting screws from the square end plate that holds the main shaft right-hand ball-bearing. Note which position the screws come from so that they may be returned to their original positions. Two of the screws are locating shoulder screws.
- (i) While holding the nut, previously loosened, on the selector end of the main shaft, back off the main shaft until the nut, spring, inner felt washer and discs can be removed from the main shaft. Discard the nut.
- (j) Assemble the capstan nut on its associated keyed nut (this is a tight fit) and proceed to reassemble the spring, washer, and discs in the reverse order on the main shaft.
- (k) Remount the square plate, gear-hub mounting-screw, leather washer and thumb screw, detent lever and spring, selector camsleeve, outer friction washer and discs, range finder and sensing-bail.

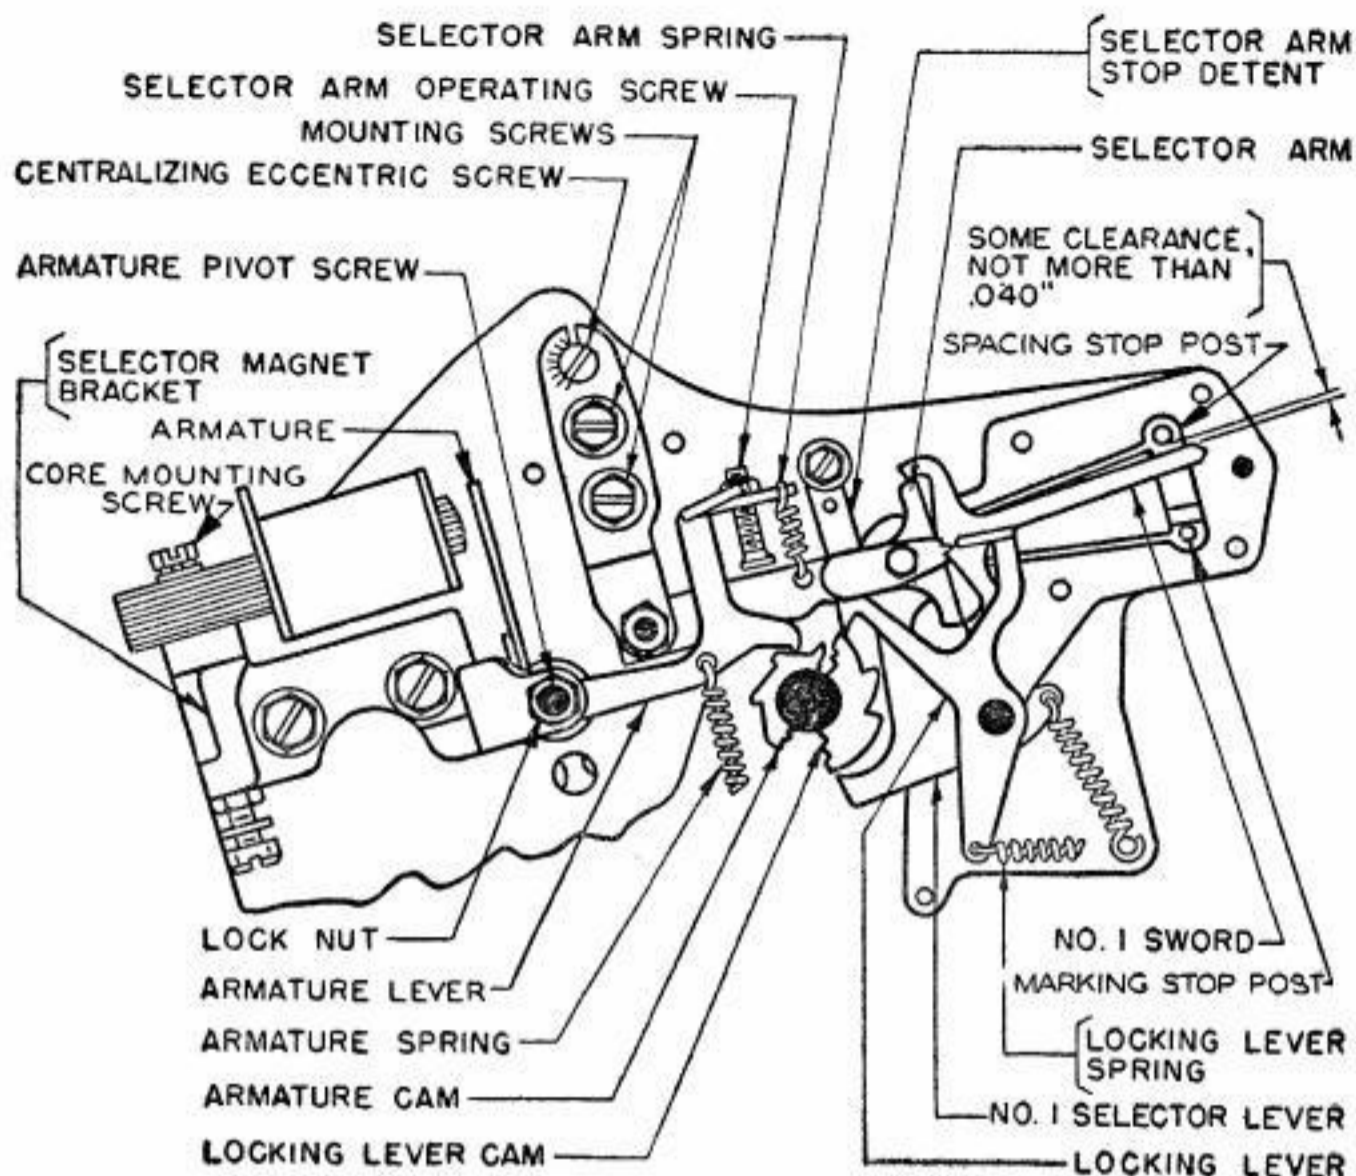


Fig. 7

3.04 **Armature lever (Holding magnet)** should have a minimum amount of endplay without bind, as gauged by eye and feel, when the armature lever and selector-arm springs are unhooked. See Fig. 7 for identification of parts. **Figs. 7, 8**

(a) To adjust, position the outer **armature pivot-screw**, noting that $1/4$ turn of the screw is equivalent to approximately .006" adjustment.

3.05 **Armature (Holding magnet)** when in its operated position should touch both magnet cores at approximately the centers of their pole faces; and the cores should be centrally located with respect to the armature, as gauged by eye when holding a light background behind the magnet and armature assembly.

Caution: Make sure armature and pole faces are free of oil and dirt.

Note: This adjustment can be checked on .020-ampere current without disassembling parts by measuring the magnet pull with the switch in the S position (coils in

series shunted by 5000-ohm resistance). Under those conditions and with the armature adjusted correctly, it should require a pull of at least 3-1/2 lb applied at right angles to the armature edge, midway between the cores, to pull the armature away from the cores.

- (a) To adjust, remove the selector-magnet bracket from typing unit, loosen the core mounting screws and position the **magnet-core assembly** while holding the assembly so the cores are vertical and the armature rests against the pole faces by its own weight.

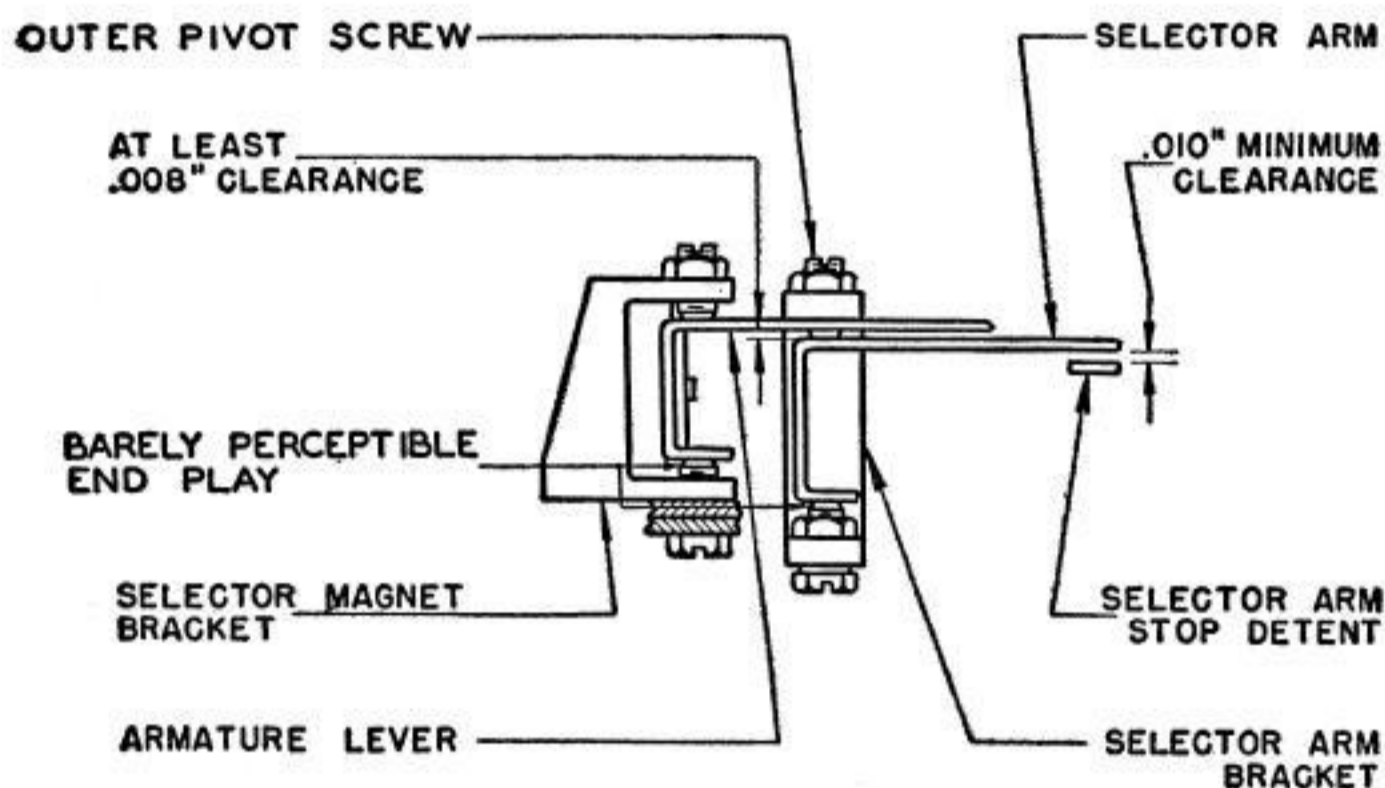


Fig. 8

3.06 **Selector arm (Holding magnet)** should be free in its bearings with barely perceptible endplay, and the locking lever should overtravel the top and bottom edges of the locking wedge, with the armature-lever spring, the selector-arm spring and the selector-arm stop-detent spring unhooked. There should be a clearance of not less than .008" between the selector arm and the armature lever and of not less than .010" between the selector arm and the selector arm stop detent when the play in the detent is taken up in a direction to make this clearance a minimum.

Fig. 8

- (a) To adjust, position the outer **selector-arm pivot screw** for endplay.

Note: If the minimum clearance requirements are not met it will be necessary to remove the selector-magnet bracket and the selector-arm bracket and adjust both pivot screws of the selector arm.

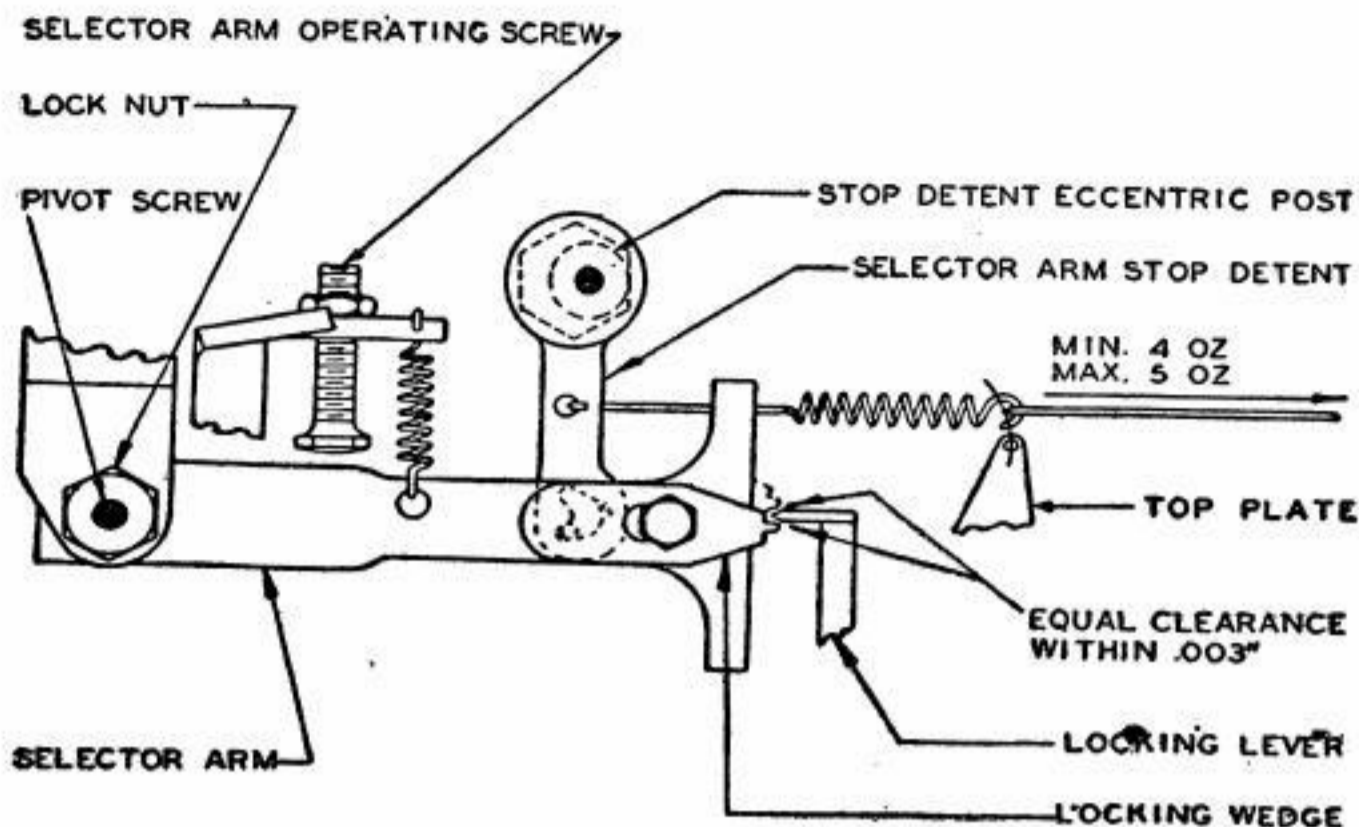


Fig. 9

3.07 **Swords (Holding magnet)** should clear both stop posts by approximately equal amounts judged by eye, but not more than $.040''$ measured as in Fig. 7 after (1) removing springs from the locking lever, armature lever and selector arm, (2) placing associated selector lever on the peak of its cam, (3) placing the sword arm against the selector arm and (4) moving the selector arm slowly from its unoperated or operated position to a point where the selector arm just clears the sword arm.

Fig. 7

Note: Use No. 1 sword in gauging and adjusting, then check remaining swords.

(a) To adjust, loosen the **selector-arm bracket** until held friction tight. Equalize the clearance between the swords and stop posts by turning the centralizing eccentric screw. Make sure that the selector arm stop detent does not interfere and that the eccentric indicating line is adjacent to the scale on bracket. Then move the bracket closer or further away from the swords by inserting the TP90783 wrench in one of the two holes provided and turning the wrench.

3.08 **Locking wedge (Holding magnet)** should clear the locking lever by Min $.005''$, Max $.012''$ when the locking lever is resting on the long high part of its cam and the end of the wedge is held in line with the lever.

Fig. 2

(a) To adjust, position the locking wedge.

3.09 **Locking-lever spring (Holding magnet)** should require Min 4 oz, Max 5-1/2 oz, as indicated in Fig. 2, to start the lever moving away from the high part of its cam. **Fig. 2**

3.10 **Locking lever (Holding magnet)** should clear the sides of the locking wedge by equal amounts within .003", as indicated in Fig. 9, as gauged by eye when the selector arm is in its operated or unoperated position. **Fig. 9**

Note: Make sure that the selector-arm operating-screw does not interfere with the selector arm.

(a) To adjust, position the **selector-arm stop-detent eccentric post**.

3.11 **Selector-arm stop-detent spring (Holding magnet)** should require a pull of Min 4 oz, Max 5 oz, as indicated in Fig. 9, to stretch the spring to position length. **Fig. 9**

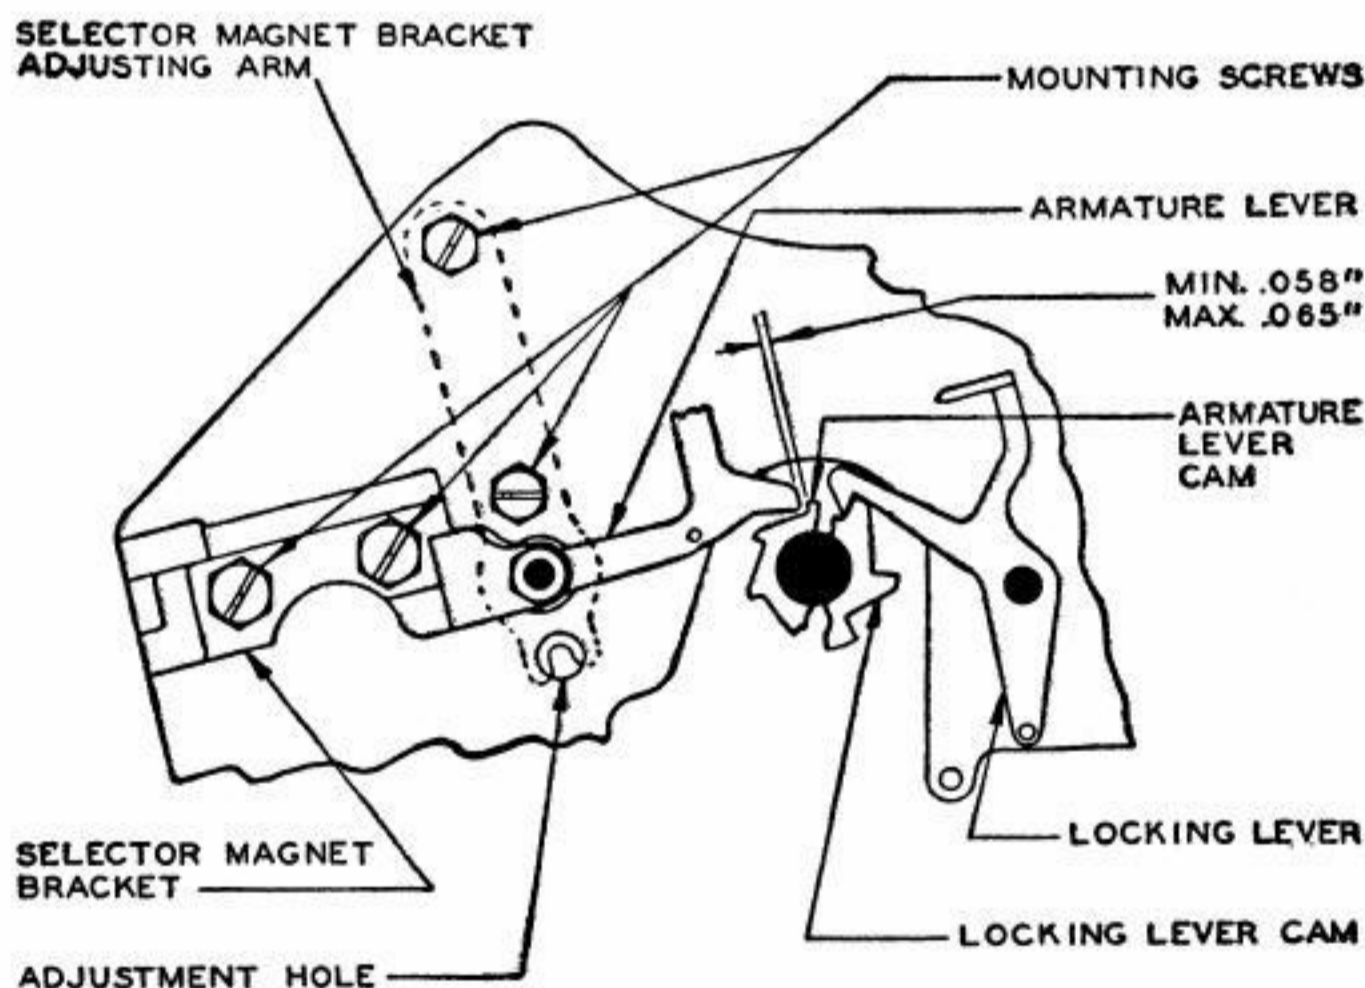


Fig. 10

3.12 The end of the **armature lever (Holding magnet)** should clear the face of a cam tooth by Min .058", Max .065", as indicated in Fig. 10, when the locking lever has just dropped off a long high part of its cam, the cam is held back against the locking lever and the selector arm is held in its operated position by the locking lever. **Fig. 10**

(a) To adjust, loosen the screws holding the **selector-magnet bracket** and the selector-magnet-bracket adjusting arm until they are held friction tight, then reposition the selector-magnet bracket by inserting and turning the TP90783 wrench in the hole above the adjusting arm end. Tighten the screws.

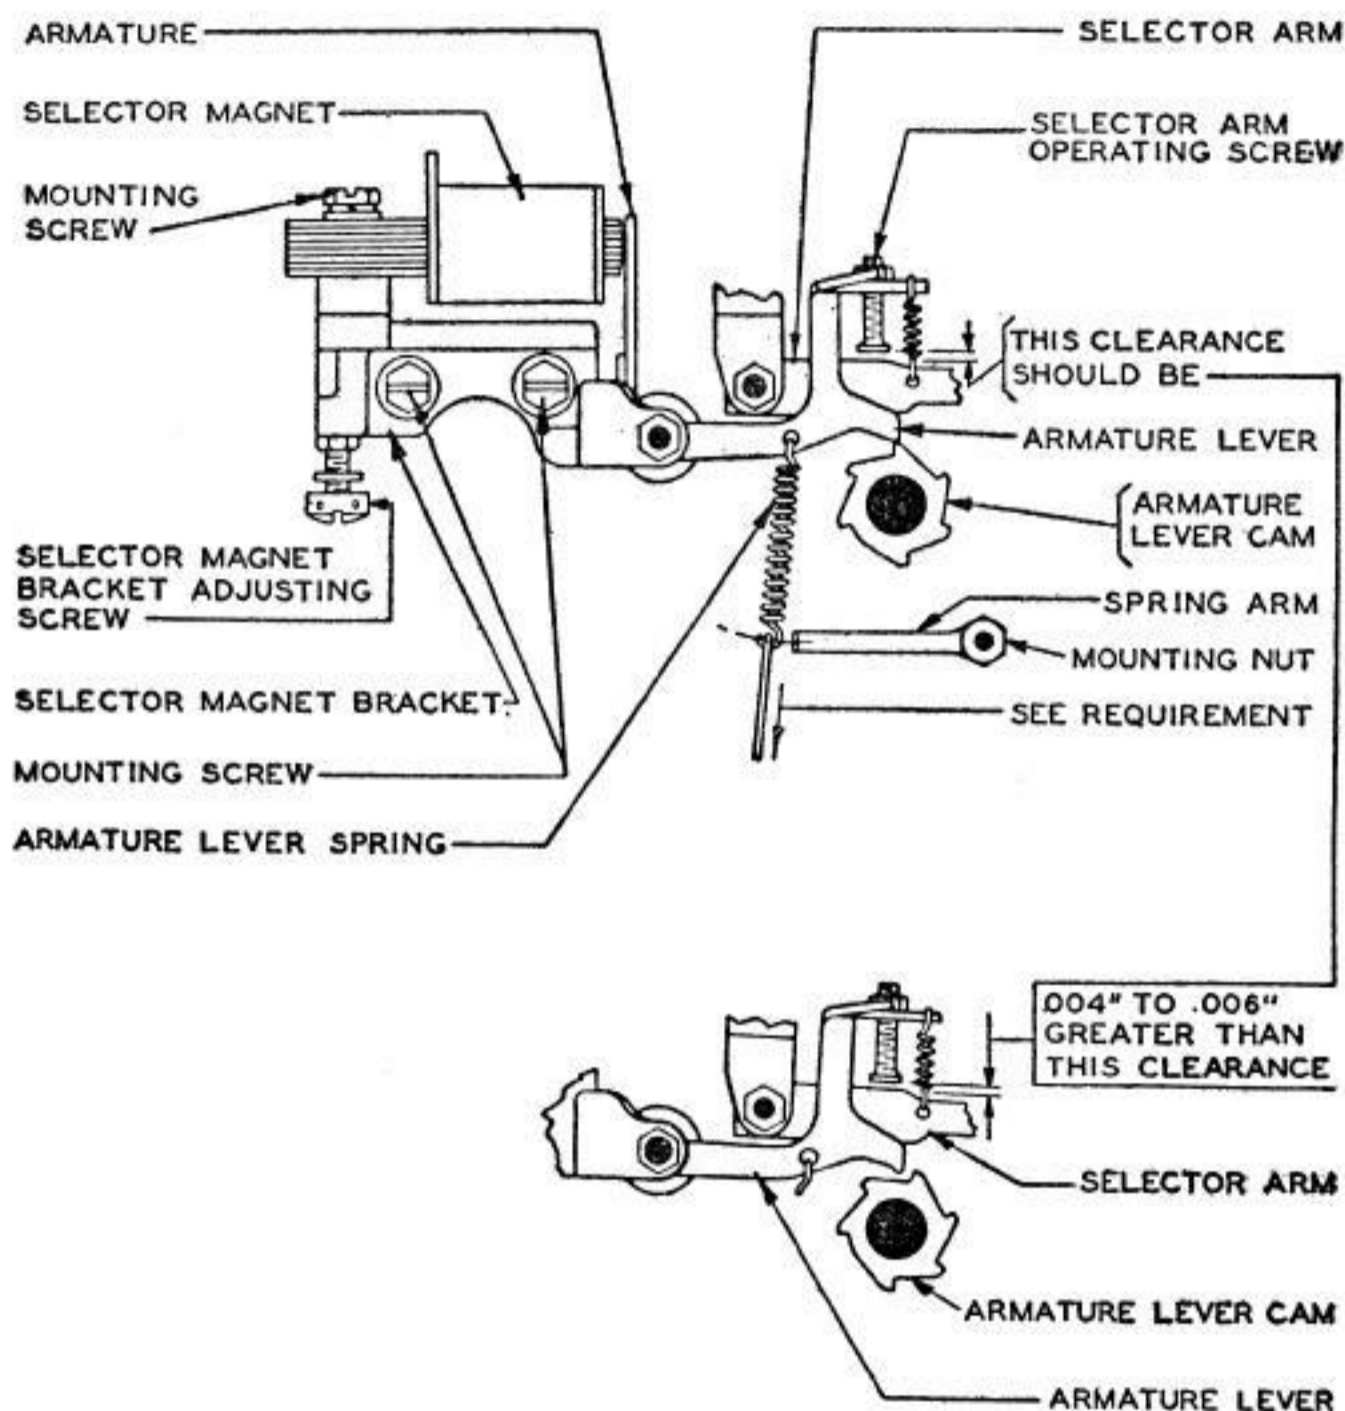


Fig. 11

3.13 Armature-Lever Spring

With the armature-lever spring unhooked, rotate the main shaft until the armature lever is on a high part of its cam. It should require a pull, as follows, to stretch the spring to its position length.

(a) When a signal distorting test set is available, the pull should be some value between 14 oz to 24 oz such that the maximum orientation range is obtained for a given amount and type of distortion.

(b) Without a signal distorting test set, the pull should be Min 14 oz, Max 18 oz.

(1) To adjust (for a and b), loosen the spring arm mounting nut and position the arm. Tighten the nut.

3.14 Magnet Bracket (so-called Jam adjustment for Holding Magnet)

Note: Jam refers to the fact that, in normal operation, the armature-lever assembly yields slightly when the lever rises to the peak of its cam and the armature is jammed against the magnet pole faces.

With the selector magnet energized, the clearance between the selector arm (in its marking position) and its operating screw should be:

(1) When the armature lever is opposite a cam indent Min .003", Max .006" **Fig. 13**

(2) When the armature lever is on a cam peak Min .004", Max .006" greater than the particular value observed in (1) above **Fig. 12**

To adjust, the adjustment required will depend on the nature of the departure from the requirements as indicated by the measurements above. Two possible cases are described separately below:

(a) If the amount of jam is correct (requirement (2) above), but the unjammed clearance (requirement (1) above), is not met, correct the trouble by adjusting the selector-arm operating screw.

(b) If requirement (2) is not met, or if neither requirement is met, or if a complete readjustment is desired, proceed as follows:

(1) Deenergize the magnet.

(2) Loosen the selector-magnet-bracket mounting screws until they are friction tight.

(3) Loosen the locknut on the magnet-bracket adjusting screw and turn the screw in far enough so that, when the armature is held against the pole faces by hand, the armature lever clears the peaks of its cam. This insures starting the adjustment with a gap between the pole faces and the armature.

(4) Turn the main shaft until the armature lever is on a cam peak and then, holding the cam-sleeve from rotation, continue turning the shaft

until the maximum throw of the lever on that cam peak is obtained. (Slight differences may be caused by eccentricity of the shaft.)

(5) With the selector arm in its marking position, adjust the selector-arm operating screw so that it clears the selector arm by .010". Tighten the locknut on the selector-arm operating screw. Check that the .010" clearance is still maintained.

(6) Rotate the camsleeve until the armature lever is over a cam indent.

(7) With the armature held against the pole faces by the energized magnet, back off the magnet-bracket adjusting screw until the selector-arm operating screw clears the selector arm by .005".

(8) Tighten the selector-magnet-bracket mounting screws and the locknut on the selector-magnet-bracket adjusting screw.

(9) Recheck both jam adjustment requirements given at the beginning of this Paragraph (3.14).

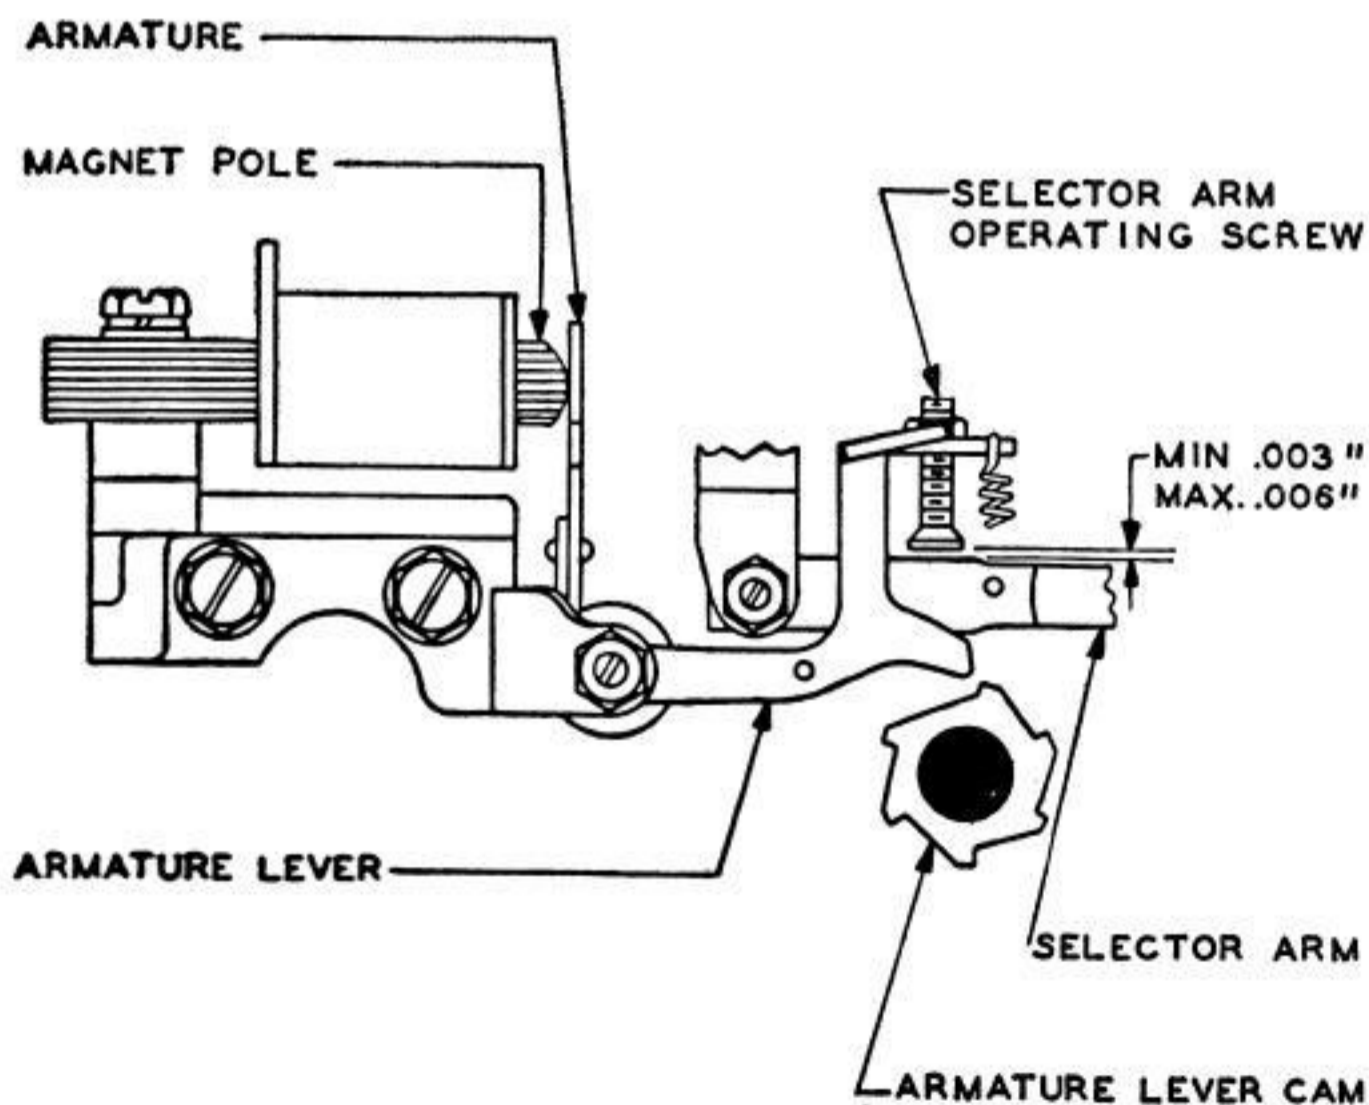


Fig. 12

3.15 **Selector-arm spring (Holding magnet)** should require a pull of Min 1-1/4 oz, Max 1-3/4 oz, as indicated in Fig. 13, to start the selector arm moving when the armature lever is on a high part of its cam and the selector-arm stop-detent spring is unhooked. Fig. 13

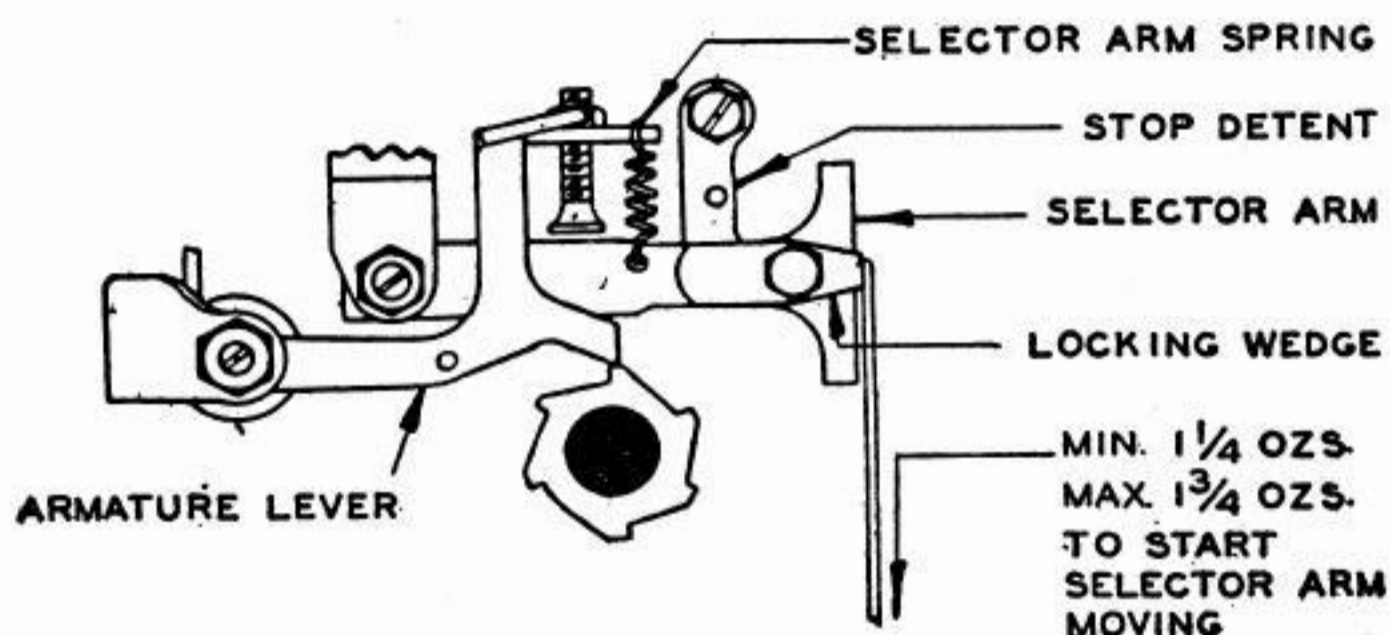


Fig. 13

3.16 **Armature (Pulling magnet)** should have a minimum amount of endplay, without bind in its bearings, gauged by eye and feel, and its locking wedge should clear the No. 1* sword by not more than .008" as indicated in Fig. 14 when the No. 1* selector lever rests on peak of its cam, the No. 1* sword front arm is held against outer separator plate without bending the separator plate and the armature endplay taken up to reduce the clearance to minimum. Fig. 14

(a) To adjust, position the armature-bearing pivot screw, noting that 1/4 turn of the screw is equivalent to approximately .006" adjustment.

Note: In replacing the armature bracket make sure the armature spring clears the bracket and its mounting screw.

* See Paragraph 1.03(b).

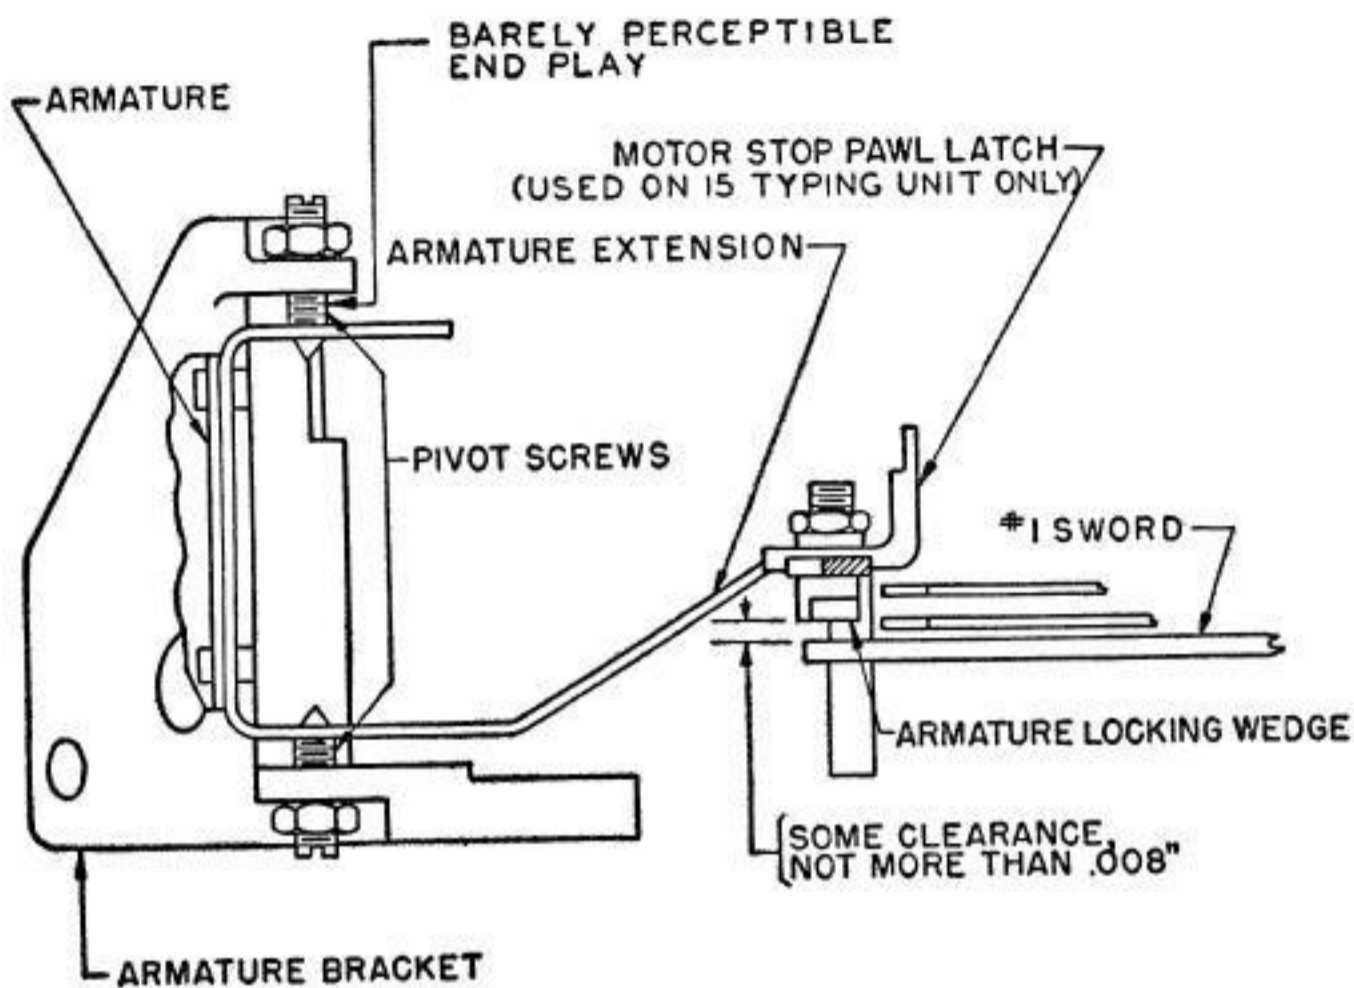


Fig. 14

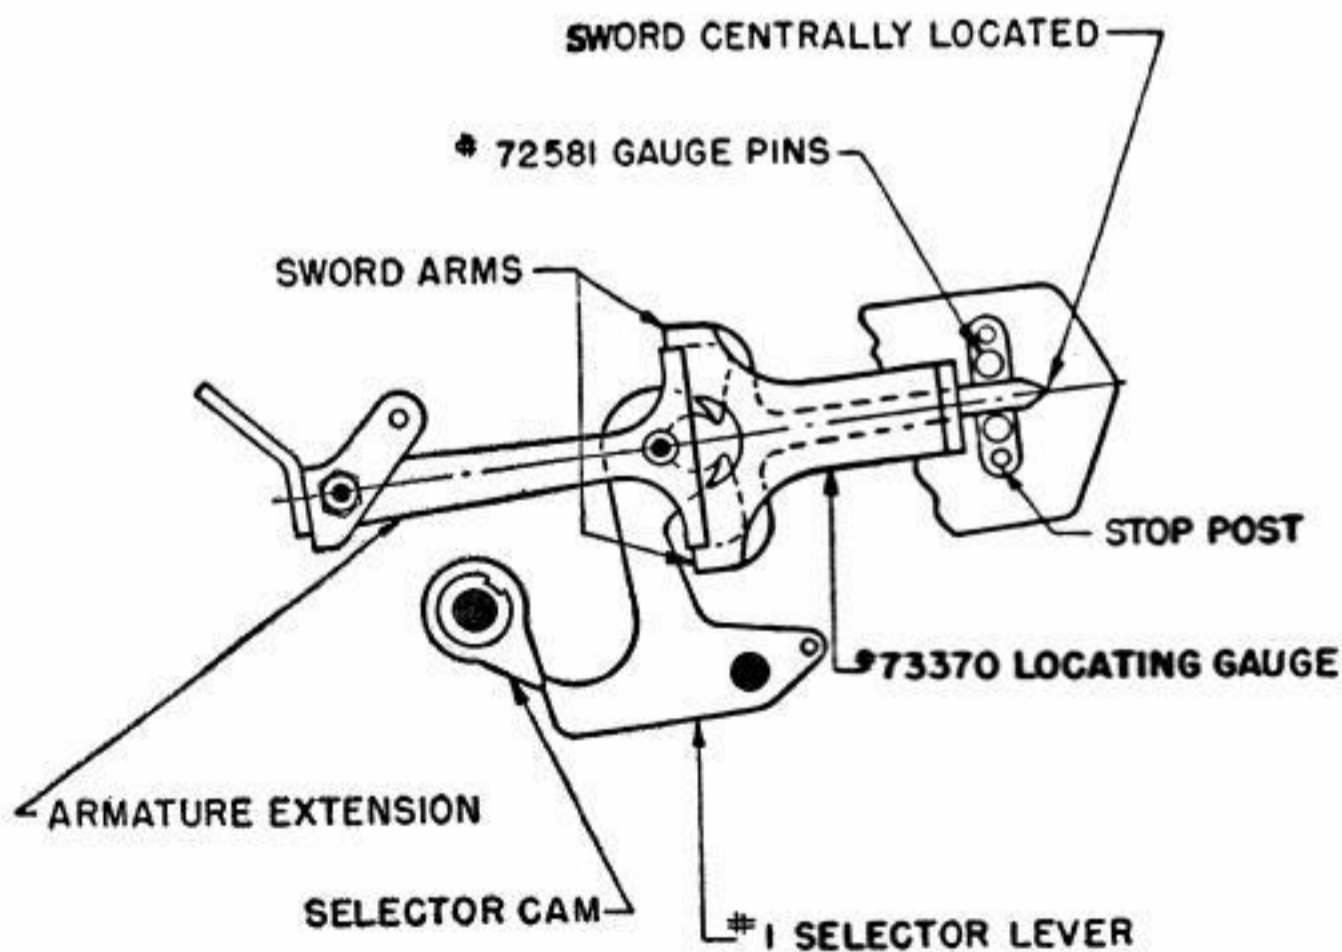


Fig. 15

3.17 Swords (Pulling Magnet)

(a) The centerline of the No. 1* sword should interest the longitudinal axis of the armature pivot screw, as gauged by eye, when the swords are held centrally located between the stop posts with TP72581 gauge pins. **Fig. 16**

(1) To adjust, unhook the locking-lever spring; loosen the **magnet** and armature-bracket mounting screws and bracket-link screw (see Fig. 17); back off the armature stop screw and nut; move the armature-bracket eccentric out of the way; take out the two motor stoplever-bracket mounting screws and lift out the bracket on units so equipped; rotate the camsleeve until the No. 1 selector lever rests on the peak of its cam; place the armature so that its extensions are between the sword arms and insert TP72581 gauge pins between the posts and swords as in Fig. 16; place a TP73370 locating gauge over the end of the No. 1* sword so that the legs of the gauge are against the ends of the sword arms, move the armature bracket to a position which will bring the end of the armature extension flush against the flat surface between the legs of the gauge; then holding the bracket in this position, tighten the link screw and armature-bracket mounting screws. **Figs. 16, 17**

(2) For 20-type machines equipped with the armature detent:

(1) Unhook the armature-detent spring from the armature detent.

(2) Proceed as in (1) above.

(3) Rehook the armature-detent spring.

* See Paragraph 1.03(b).

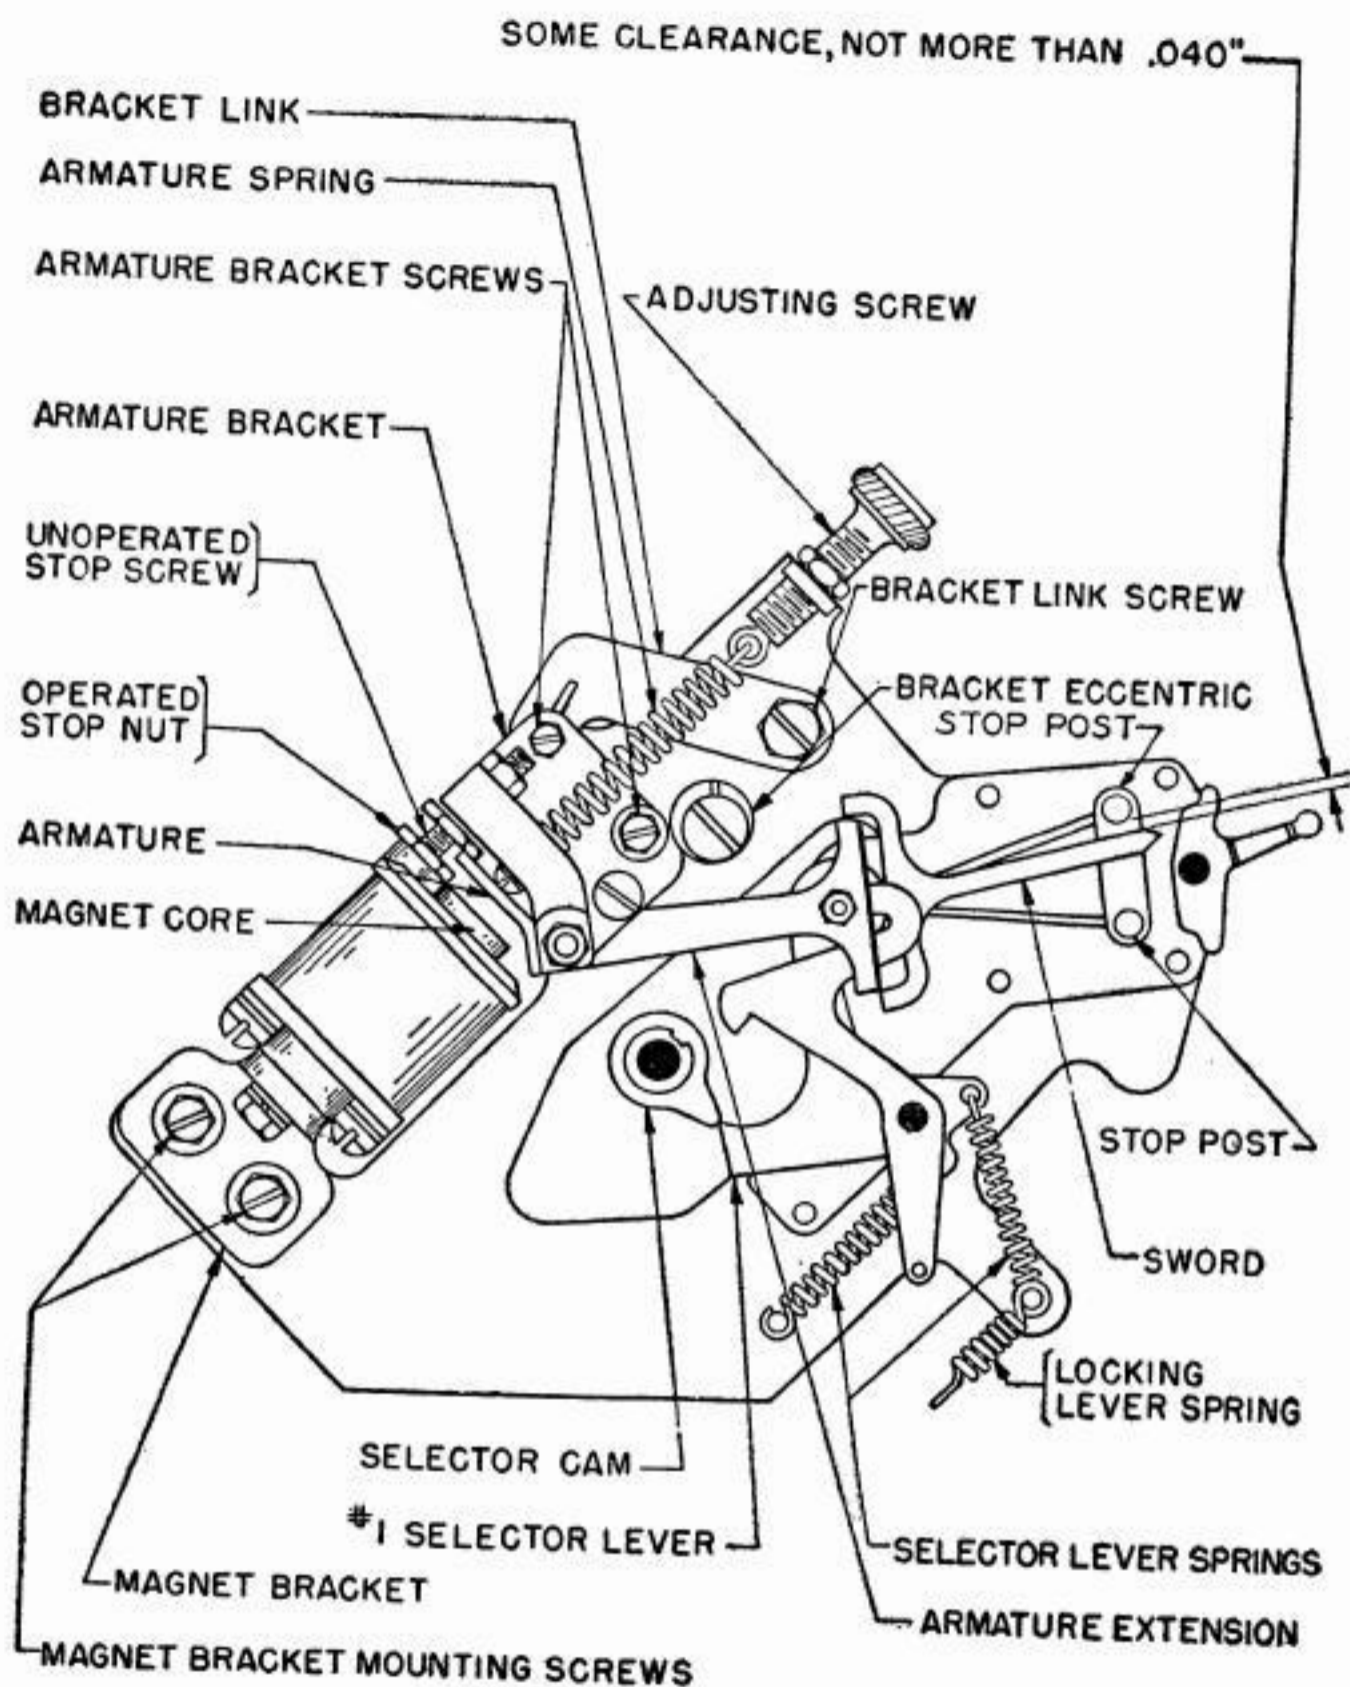


Fig. 16

(b) Rotate the main shaft until the No. 1* selector lever is on the peak of its cam. With the armature in its unoperated position, move the spacing arm of the No. 1* sword against the armature extension. Slowly move the armature from its unoperated position to a place where its extension just clears the sword arm. There should be some clearance,

not more than .040", as indicated in Fig. 16, between the sword arm and the stop post. Repeat the procedure with the marking arm against the armature extension and move the armature from its operated position.

* See Paragraph 1.03(b).

Note: Use the No. 1* sword as a guide in gauging and adjusting, then check the remaining swords.

(1) To adjust, position the **armature bracket** backward to increase the clearance and forward to decrease the clearance. Tighten the mounting screws and then move the eccentric stop against the bracket and tighten its screw.

Note: The eccentric stop is provided so that the armature bracket can be removed and reassembled without changing its adjustment, provided it is held against the stop while the clamping screws are tightened and provided the link screw is not loosened.

Fig. 16

3.18 **No. 1 Sword Arms* (Pulling magnet)** should clear the associated arms of the armature extension by Min .035", Max .037" (five-unit), Min .040", Max .042" (six-unit), as indicated in Fig. 18, when the end of the opposite sword arm is against its armature-extension arm and the No. 1 selector lever is on the high part of its cam.

Note: The upper limit for the five-unit apparatus may be increased up to .042" only if necessary to permit meeting the requirements for clearances given in Paragraph 3.29.

Fig. 18

(a) To adjust the upper or left arm clearance (Note 1), position the **armature stop screw** with the armature unoperated; to adjust the lower or right arm clearance (Note 1), reposition the **armature stop nut** with the armature operated. If either clearance is changed, recheck clearance of the other arm.

Fig. 16

Caution: Be sure the stop nut is tight on its screw. Pinch the split hub if the nut is loose.

Note 1: The arms are designated upper and lower on apparatus which has the main shaft mounted horizontally; left and right on apparatus which has the main shaft mounted vertically.

* See Paragraph 1.03(b).

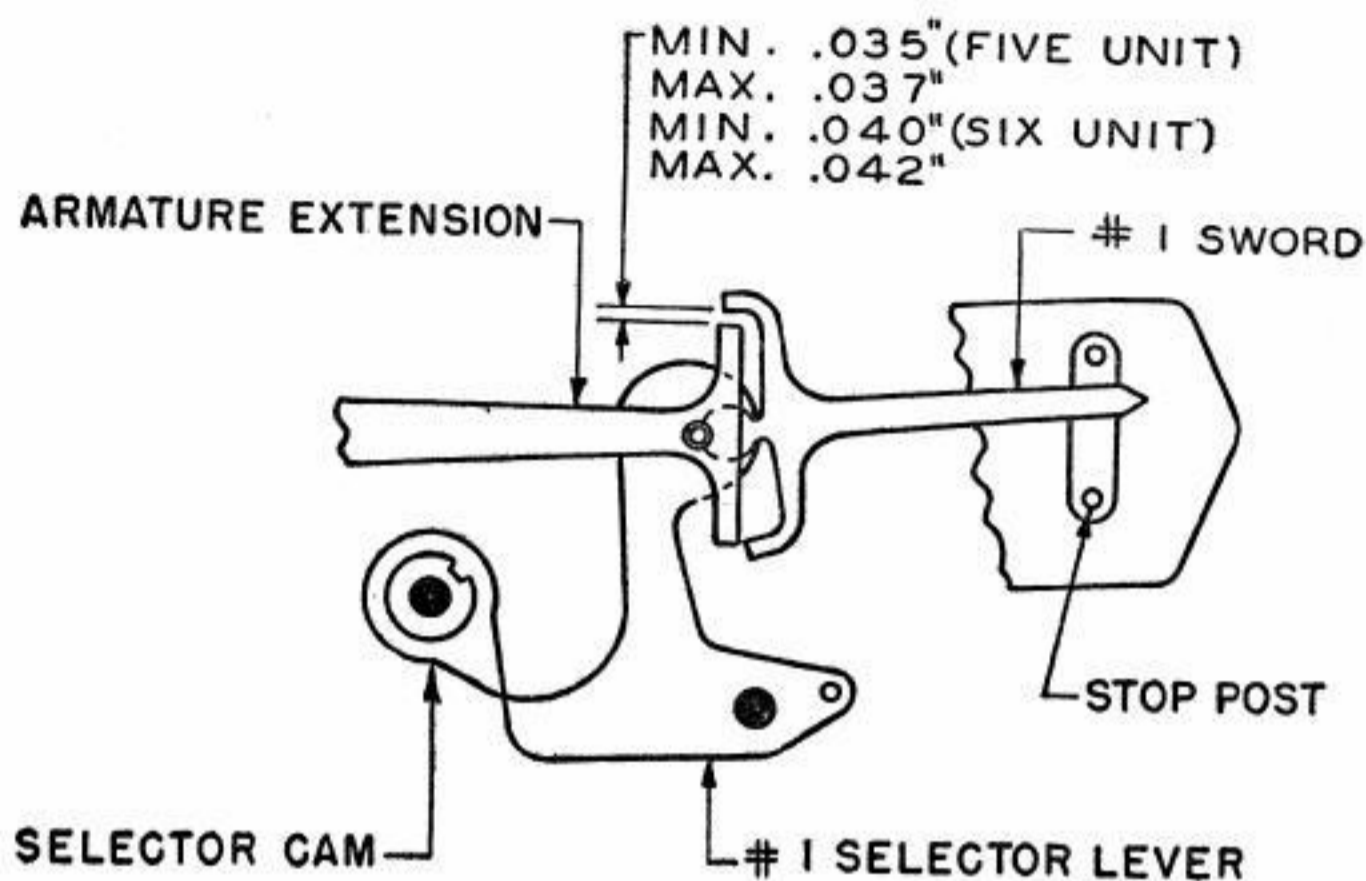


Fig. 17

3.19 **The armature spring (Pulling magnet)** should have a tension of Min 6 oz, Max 6-3/8 oz when the armature is released and the spring is stretched to position length.

To adjust, position the selector-armature spring adjusting screw.

Fig. 16

3.20 **Armature-locking wedge (Pulling magnet)** should clear the locking lever by Min .006", Max .012" when locking lever is resting on long high part of cam.

Fig. 18

(a) To adjust, position locking wedge in its slot in the armature extension.

Note: When making this adjustment on typing units equipped with a mechanical motor-stop mechanism, set the motor stop-pawl latch so that the shoulder of the latch is against the front face of the armature extension.

Fig. 14

3.21 **Armature-locking-lever spring (Pulling magnet)** should require a pull of Min 10 oz, Max 14 oz, as indicated in Fig. 18, to start the locking lever moving when the locking lever is on the long high part of its cam.

Fig. 18

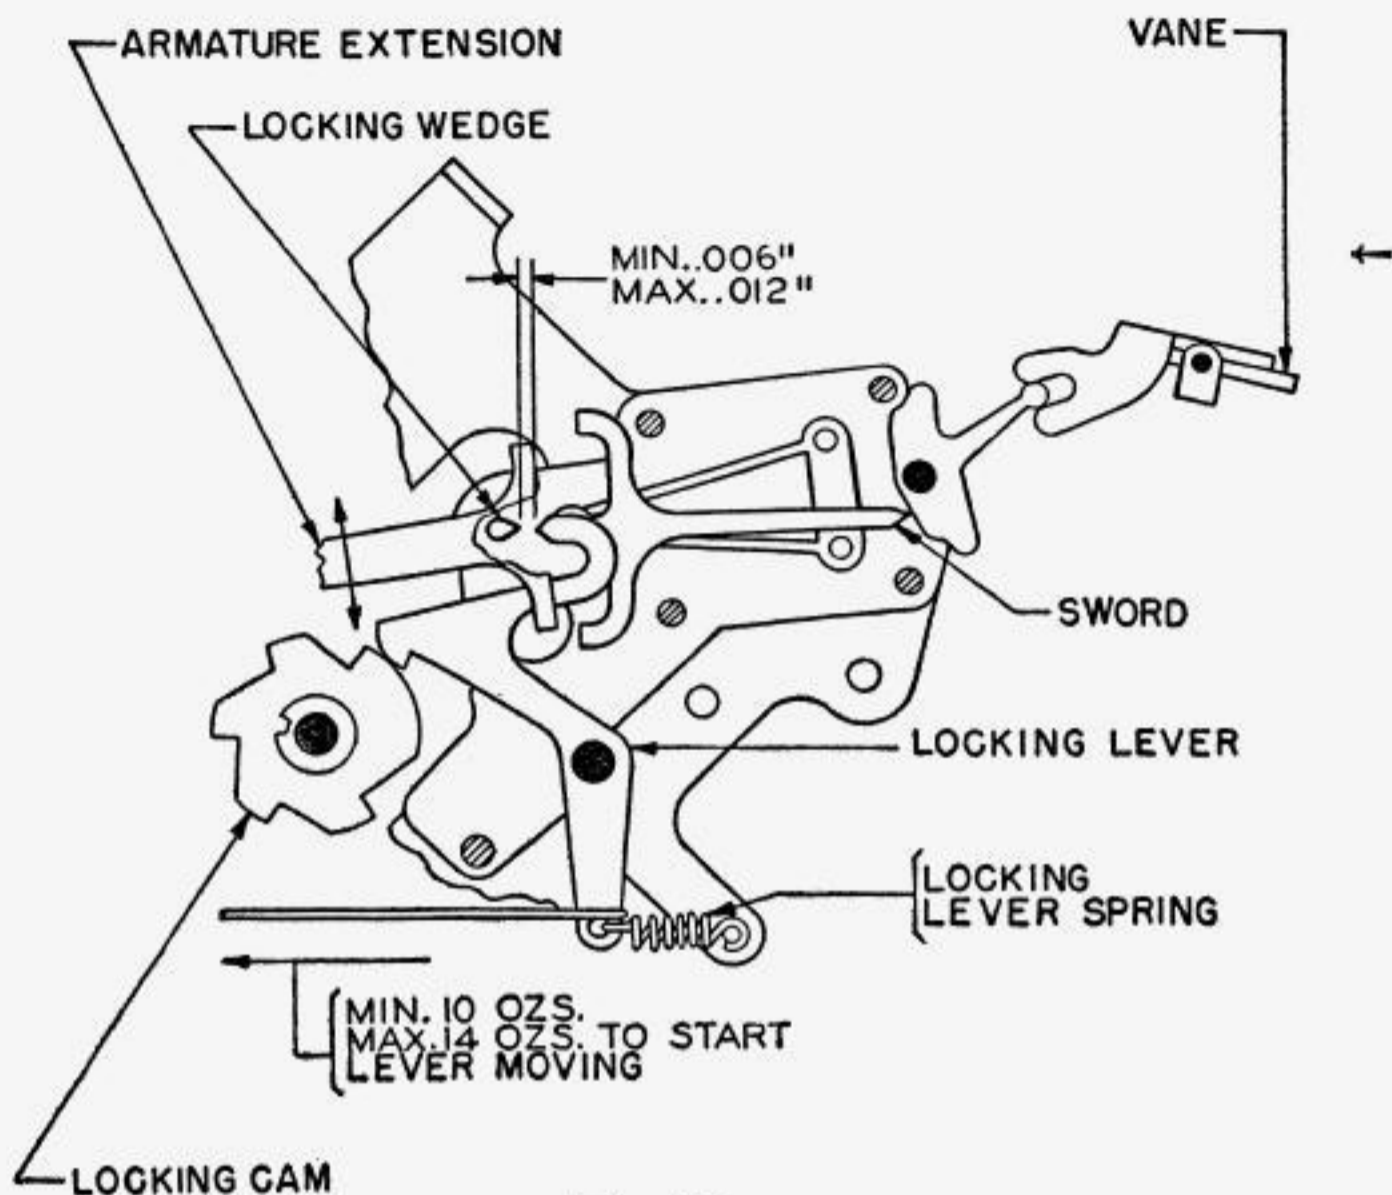


Fig. 18

3.22 **Magnet Bracket (Pulling magnet):** Magnet-core ends should be approximately parallel to the armature, as gauged by eye, and should have a clearance between the core ends and the armature, when the armature is held in the operated position, as follows: (See Fig. 16 for identification of parts.) Fig. 16

Old-style armature with non-magnetic antifreeze strip	Min .002", Max .007"	
New-style chromium-plated armature	Min .003", Max .010"	
20-type apparatus	Some to .004"	↑

Note: The 20-type apparatus uses exclusively the new-style armature and laminated core. ↑

(a) To adjust, reposition the magnet bracket, making sure that the mounting-screw washers are the heavy type, approximately 3/32" thick.

3.23 **Armature-detent mounting bracket (Pulling magnet)** (for 20-type machines equipped with the armature detent) (Fig. 19): The armature detent should be central with respect to the detent pin on the selector-armature extension (when the armature extension is at its mid-position). This may be checked as follows: **Fig. 19**

- (1) With the armature-detent spring in place, unhook the armature spring from its adjusting screw.
- (2) Lubricate the detent.
- (3) Check the pressure required to push the armature extension over the detent in going to both the marking and the spacing positions. An equal pressure should be required in both directions. (This pressure may be measured with a gauge pressed against the armature tripoff eccentric screw in the direction of its travel.)
 - (a) To adjust, loosen the armature-detent mounting-bracket mounting screws and reposition the bracket.
 - (b) Recheck the requirement after tightening the screws.
 - (c) Rehook the armature spring.

3.24 **Armature-detent spring (Pulling magnet)** (for 20-type machines equipped with the armature detent) (Fig. 19): With the pull end of the scale hooked in the spring eye, it should require Min 3-1/2 oz, Max 4-1/2 oz, as indicated in Fig. 19, to pull the detent spring to position length. **Fig. 19**

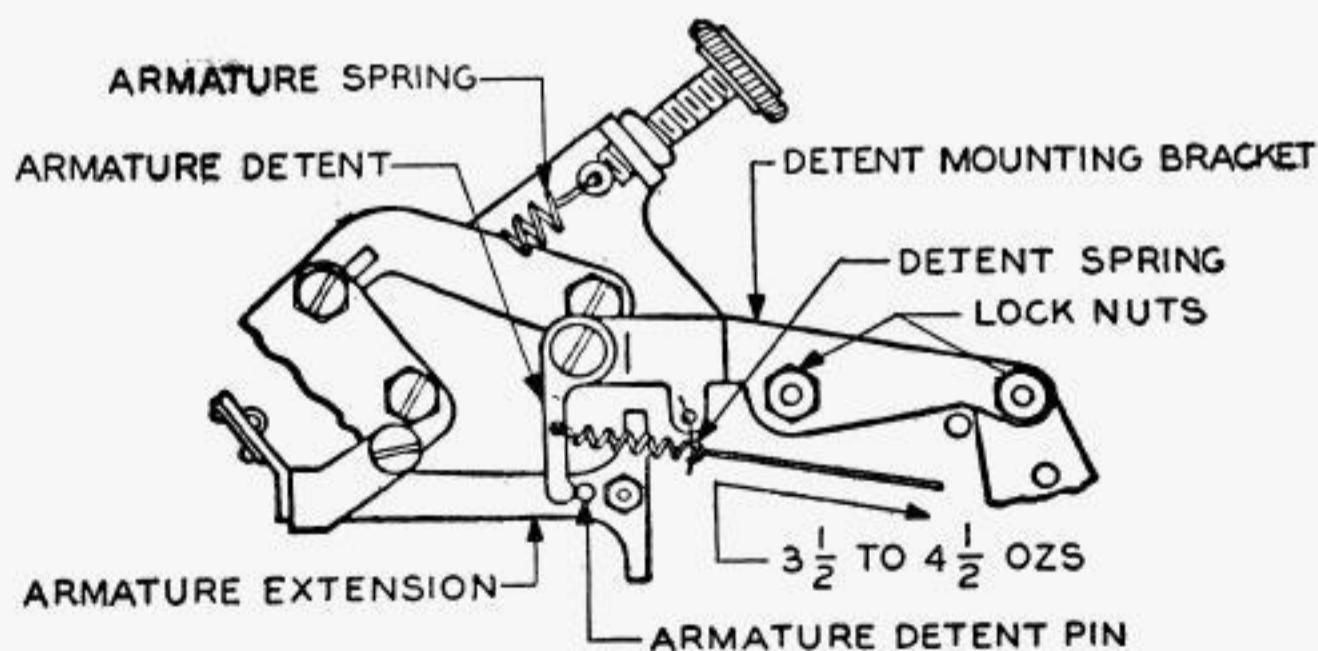


Fig. 19

Range-Finder Mechanism 3.25—3.29

Caution: Check for sluggish action and binds. If necessary, disassemble and clean.

3.25 The triplatch spring compression, measured when the range finder is horizontal should be:

Sequential Selectors (SOTUS) and 100-Speed Teletypewriter Apparatus

<u>Old-Style Triplatch</u>	<u>Min</u> (OZ)	<u>Max</u> (OZ)
Sequential Selectors (SOTUS)	1	1-1/2
100-Speed Teletypewriter Apparatus	3	3-1/2

<u>New-Style Triplatch*</u>		
Sequential Selectors (SOTUS)	2-3/4	3-1/4
100-Speed Teletypewriter Apparatus	2-3/4	3-1/4
60- or 75-Speed Teletypewriter Apparatus	1	1-1/2

* New-style triplatches TP6830, TP90088, TP110871 are identified by a 60° bevel at the end of the engaging surface with the stop pawl. Fig. 22

3.26 **Stoplever** should have some clearance, not more than .006", as indicated in Fig. 22, from the latching surface of the triplatch when the stoplever is resting against the **stop-lever eccentric screw**. Fig. 22

(a) To adjust, position the stoplever eccentric screw.

3.27 **Stoplever Spring:** It should require a pull of Min 3/4 oz, Max 1-1/4 oz, as indicated in Fig. 20, to start the stop-lever moving. Fig. 20

Note: Check Paragraph 3.26 before measuring this tension.


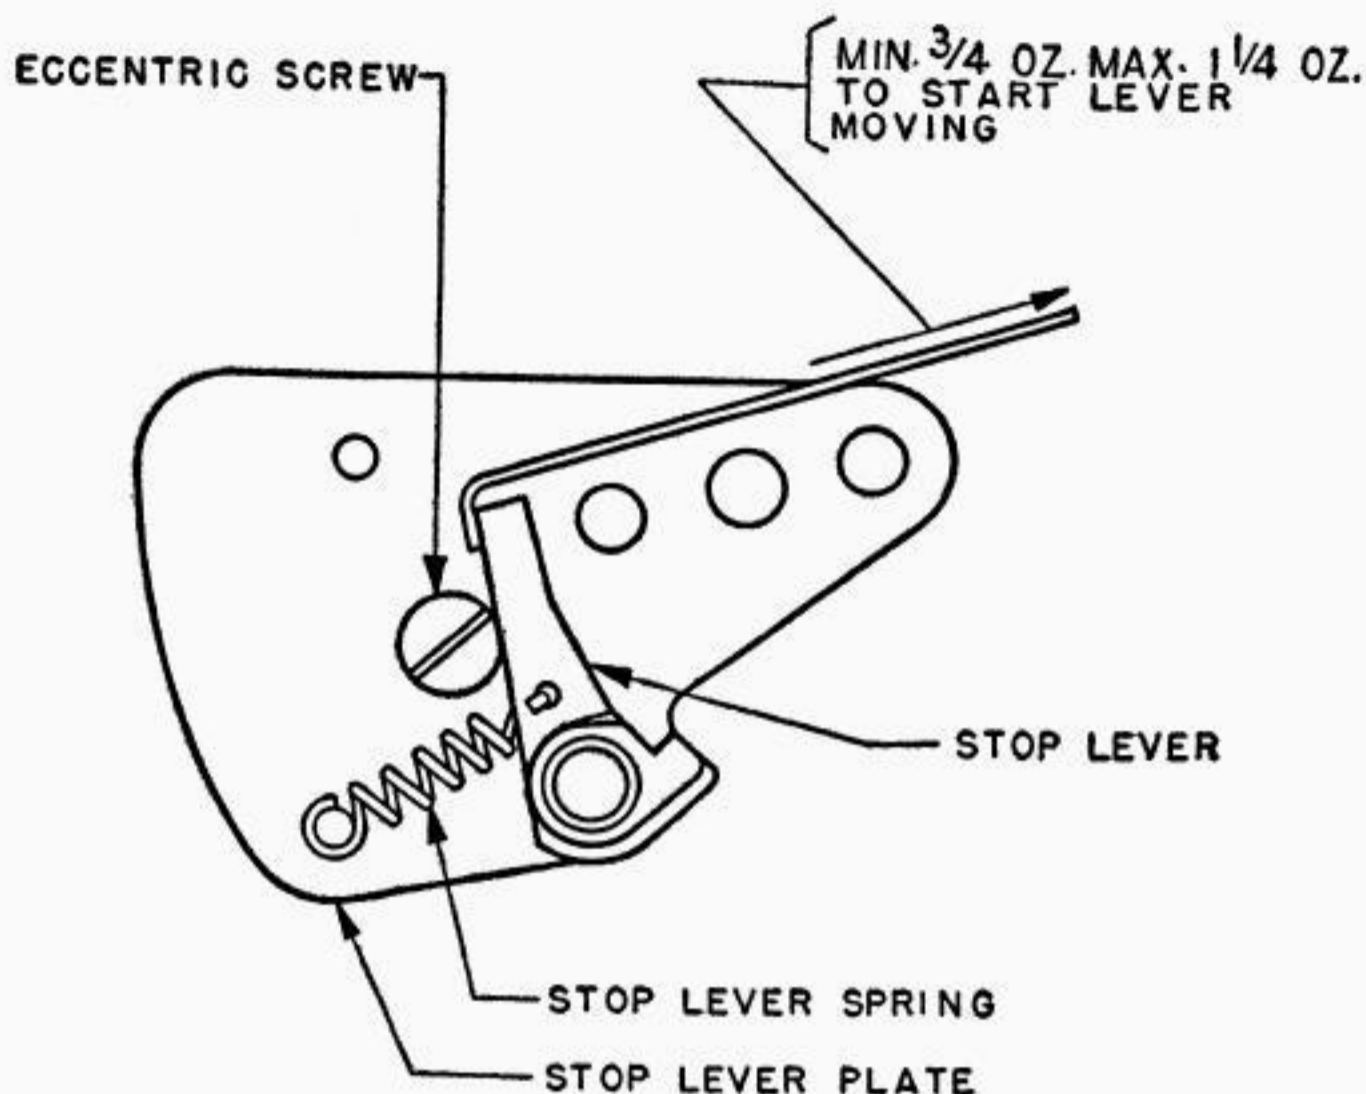


Fig. 20


Note: Reassemble range finder assembly on unit taking care not to jam the triplatch plunger on tripoff screw (eccentric screw on units having pulling magnets). Tighten the mounting screws while holding the plate tight against the screws and toward the magnet-armature tripoff screw.

3.28 **Range-Finder Positioning Link: Stoplever** (For machines having the range scale equipped with the TP119629 positioning link, not shown in Fig. 22) should over-travel the latching surface of the triplatch at least half but not more than the width of the stoplever, with the selector-magnet armature in the spacing position and the selector camsleeve rotated until the stoparm moves the stoplever to its maximum travel beyond the step of the triplatch. This should be checked with the range indicator set in turn at 0, 60 and 120 on the range scale. In checking at 120 it probably will be necessary to operate the triplatch manually in order to release the camsleeve assembly. See Fig. 22 for identification of parts.

(a) To adjust, loosen the range-scale-assembly mounting screws and the positioning-link mounting screw just enough to make them friction tight. Position the range-scale assembly and positioning link so that the overtravel of the stoplever is within the specified limits. Tighten the mounting screws and the positioning-link screw.

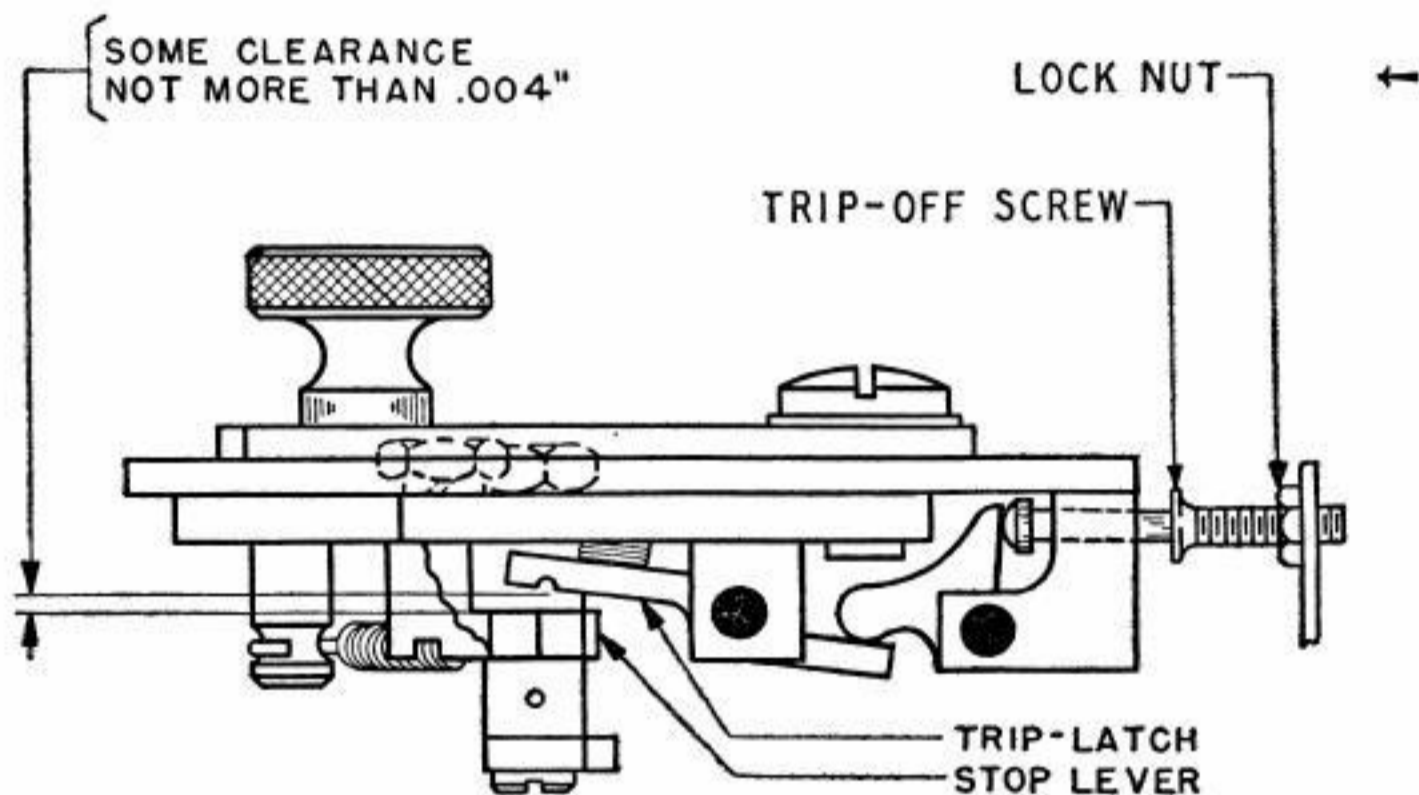

A

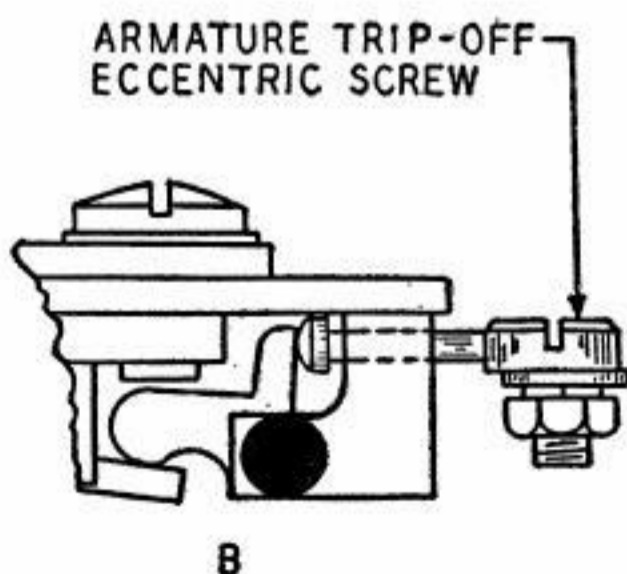

B

Fig. 21


3.29 Armature Tripoff Screw (Eccentric Screw)*

(a) There should be some clearance, not more than .004", as indicated in Fig. 21, between the stoplever and the triplatch when the armature is in the unoperated position and the selector camsleeve is rotated until the stopping edge of the stoplever is directly below the latching surface of the triplatch. While checking the above clearance, take up the play in the stoplever by applying an axial thrust with a screwdriver in the direction of the triplatch, adjacent to the spring hole, and as close to the bearing as possible. This clearance should be held to a minimum to favor the endplay of the triplatch plunger. In addition, the triplatch plunger should have at least .002" endplay when the armature is held in the attracted position and when the stoplever is resting against its eccentric stop post. **Figs. 21, 22**


(1) To adjust, loosen the tripoff screw (tripoff eccentric screw) locknut and position the screw (eccentric) to meet the first requirement. The latter requirement serves as a check on the tripoff screw (tripoff eccentric) adjustment and also on the adjustment of the selector-magnet bracket (armature stops). **Figs. 21 A, B**

* The parts in parentheses pertain to pulling-magnet selectors.

Note: If the throw of the eccentric screw of the pulling magnet selector is not sufficient to provide the required clearance, check Paragraph 3.18.

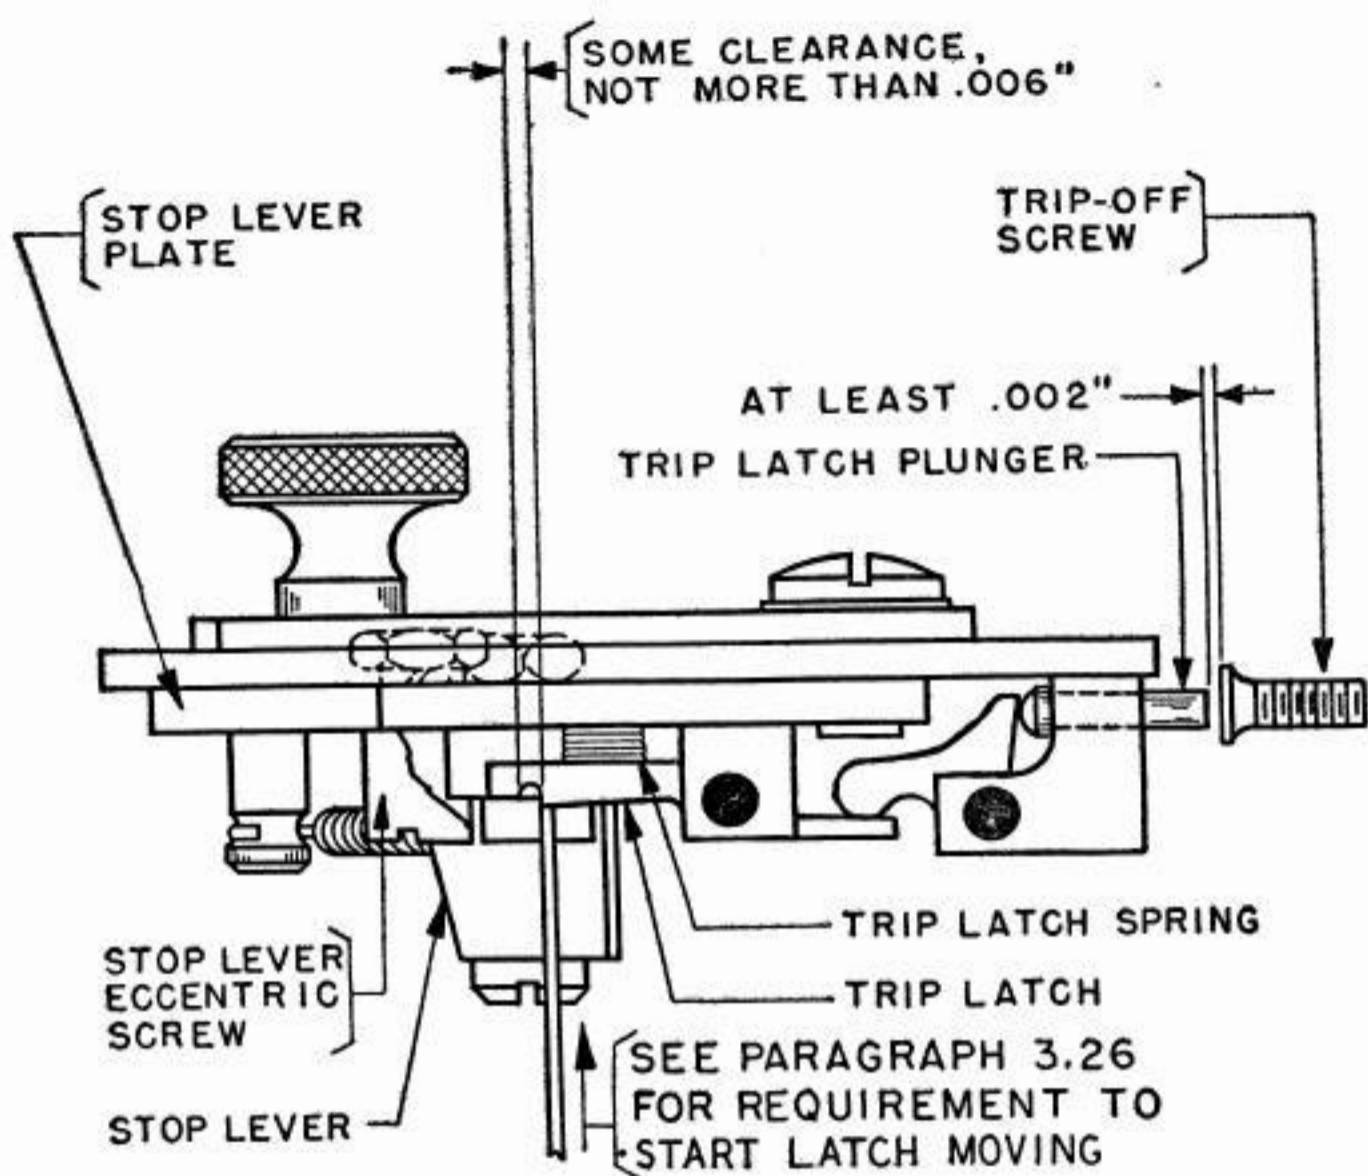

A

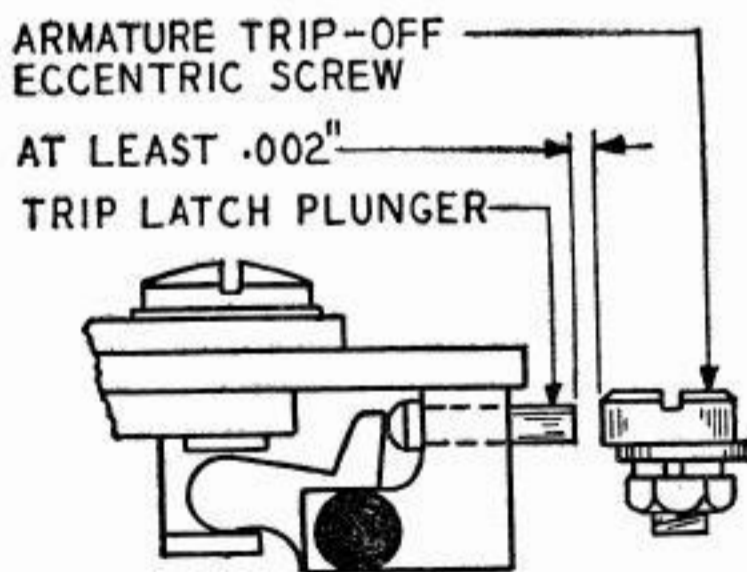

B

Fig. 22

4. REFERENCE TO BELL SYSTEM PRACTICES

↖

4.01

BSP

Section

Teletypewriter Apparatus—General Requirements

P30.012

28 Teletypewriter—Selector Mechanism—Requirements and Procedures

P34.001 ↘