

TABLE 4-1. TEST EQUIPMENT AND SPECIAL TOOLS

NAME	DESIGNATION	ALTERNATE	REQUIRED USE
Oscilloscope	AN/USM-105	Oscilloscope AN/USM-50	Observe waveforms.
Multimeter	AN/PSM-4	Electronic Multimeter TS-505/U	Perform resistance, current, and voltage measurements.
Teletypewriter Tool Kit TK-122/U*			Perform minor adjustments.

*This tool kit contains all special tools and gages required to maintain the teletypewriter sets.

TABLE 4-2. PRELIMINARY CHECKS FOR EQUIPMENT ALREADY IN USE

STEP NO.	ACTION	PROCEDURE OR REFERENCE
1.	Check for presence of primary power.	Remove service cable from primary power source; using Multimeter AN/PSM-4, check power source for correct primary power.
2.	Check for presence of correct fuses; using Multimeter AN/PSM-4, check for continuity.	Refer to figure 2-1; replace defective fuses.
3.	Check that option patch cords are secure; check option patching arrangement for operating mode in use.	Refer to paragraph 2-9.
4.	Check motor and selector cable connectors for security in their receptacles; check all service cable junction box connections for security.	Tighten or repair loose or damaged connections.
5.	Check keyboard and electrical chassis slip contacts for continuity and correct operation. Check service cable for signs of deterioration; connect service cable to primary power source. Check cable connector for security with electrical chassis receptacle.	Tighten loose connections.
6.	Check signal line current.	Using Multimeter AN/PSM-4, check incoming signal line current: High Range - 20 to 80 ma Low Range - 1 to 5 ma
7.	Check signal line distortion.	Check for maximum of 35-percent distortion on incoming signal. Refer to paragraph 4-11 for a description of the types of distortion which may be encountered.
8.	Proceed to table 4-4 (Appendix) for troubleshooting procedures.	

TABLE 4-3. PRELIMINARY CHECKS FOR EQUIPMENT OF UNKNOWN CONDITION

STEP NO.	ACTION	PROCEDURE OR REFERENCE
1.	Perform thorough visual inspection; check for missing or damaged components and security of all connectors and patch cords. Check belt and cables for wear and proper threading.	Refer to Section 1 for general overall illustrations of the complete equipment. Refer to Section 5 for belt and cable threading instructions.
2.	Determine the type of primary power required and connect the teletypewriter set to the applicable primary power source.	Refer to paragraph 2-5.
3.	Perform all checks of table 4-2 (Appendix).	

TABLE 4-4. SYSTEM TROUBLE-SHOOTING CHART

SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
	NOTE	
	Prior to using this chart, perform the test setup of paragraph 4-5b.	
1. Both motor and copy lights inoperative.	Defective main fuse 1A1F1. Defective MOTOR switch Open or shorted wire.	Replace fuse. Replace switch. Perform continuity check using figure 4-6 (Appendix) and Multimeter AN/PSM-4. Replace or solder broken or shorted wire.
2. Motor inoperative (copy lights operative).	Broken or bent connector pin. Defective motor fuse 1A1F2. Faulty motor.	Replace connector assembly. Replace fuse. Perform continuity check between power leads and chassis. See figure 4-6 (Appendix). Replace or solder broken or shorted wire.
Motor inoperative; slight movement of gears when MOTOR switch is turned on.	Faulty starting capacitor 1A1C1 (one side open or shorted). Motor stop relay 1A1K1 continuously energized due to defective or mis-adjusted relay, line sensor, or switch 1A2A1S1.	Test for shorted or open condition. Replace if defective. Repair or replace defective parts; refer to table 4-6 (Appendix) for line sensor troubleshooting procedures.
3. Copy lights inoperative.	Defective motor stop circuit in line sensor. Faulty LAMP switch 1A1S2. Faulty bulbs. Open wire or connection. Transformer 1A3T1 defective.	Refer to table 4-6 (Appendix). Replace switch. Replace bulbs. Perform continuity checks. Replace transformer.

TABLE 4-4. SYSTEM TROUBLE-SHOOTING CHART (Cont.)

SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
4. Motor will not stop with figures H function (AN/TGC-14(V)). Motor stop relay 1A1K1 will not energize.	Figures H linkage improperly adjusted.	Perform figures H motor stop linkage adjustment (paragraph 5-4e(23)(b)).
	Defective figures H motor stop switch 1A2A1S1.	Replace switch (figure 5-55, Appendix).
	Motor stop relay 1A1K1 coil open.	Replace relay (figure 4-37, Appendix).
	Open wire or connection.	Perform continuity checks in motor stop circuit.
	Defective line sensor.	Refer to table 4-6 (Appendix).
	Code bar binding; code bar not closing figures H motor stop switch.	Correct the cause of binding; repair or replace code bar spring.
Motor will not stop after 60 to 90 seconds inactivity (no mark-to-space) transition (AN/TGC-14A(V)).	Time delay motor stop mechanism improperly adjusted.	Adjust according to paragraph 5-4e(23)(a).
	Defective time delay switch 1A2A1S1.	Replace switch (figure 5-54, Appendix).
	Defective motor stop relay 1A1K1.	Replace relay (figure 4-37, Appendix).
	Defective line sensor.	Refer to table 4-6 (Appendix).
	Open wire or connection.	Perform continuity checks in motor stop circuit.
5. Motor speed fluctuates.	Input power (voltage or frequency) variations.	Check primary power.
	Binding component in printer.	Check clutches, gears, cams, and linkages for free movement; if necessary, lubricate parts according to table 5-9 (Appendix).
	Erratic operation of motor stop switch 1A2A1S1 (AN/TGC-14(V)).	Adjust figures H motor stop linkage (paragraph 5-4e(23)(b)).
6. Heater inoperative.	Thermostat 1A1S3 inoperative.	Replace thermostat.
	Defective heating element.	Perform continuity check of heating element: 66.5 ohms \pm 10%.
	Defective fuse 1A1F1 (AN/TGC-14(V)) or 1A1F1 or 1A1F4 (AN/TGC-14A(V)).	Replace fuse.
7. Printer runs open; meter shows signal line current.	Defective line sensor.	Refer to table 4-6 (Appendix).
	Faulty start clutch or clutch release finger adjustment.	Adjust according to paragraph 5-4e(5).
Printer runs open.	No mark signal being transmitted.	Check signal line and/or remote operator.
	Signal line fuse 1A1F4 (AN/TGC-14(V)) or 1A1F5 (AN/TGC-14A(V)).	Replace fuse.
	Signal loop open.	Patching not proper for operating mode. Patch correctly as instructed in paragraph 2-9.

TABLE 4-4. SYSTEM TROUBLE-SHOOTING CHART (Cont.)

SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
Printer runs open (Cont.)	Faulty contact on contact block 1A1S4 (AN/TGC-14(V)) or 1A1E8 (AN/TGC-14A(V)). Signal line power supply inoperative. Defective line sensor. Open wire. Open signal line in service cable.	Replace contact block. Refer to table 4-9 (Appendix). Refer to table 4-6 (Appendix). Perform continuity check on signal line. Perform continuity checks on service cable.
8. Printer runs closed but does not print.	Printer improperly patched. Poor solder connections on patch cords. Defective line sensor. Start clutch not releasing. Selector improperly adjusted or faulty.	Refer to patching instructions in paragraph 2-9. Resolder patch cords. Refer to table 4-6 (Appendix). Adjust start clutch as instructed in paragraph 5-4e(5). Adjust selector as instructed in paragraph 5-4e(16) or replace selector.
9. Teletypewriter set prints garbled message.	Range dial out of adjustment. Incorrect speed gear installed. Line current at improper value or distorted. Selector improperly adjusted. Defective line sensor. Start clutch improperly adjusted. Signal line power supply output high or low. Loose selector bar (12, figure 5-75, Appendix). Figures H motor stop linkage out of adjustment (AN/TGC-14(V)). Defective clutch.	Adjust as instructed in paragraph 2-8e(1). Check for broken setscrew (AN/TGC-14(V) only) on range dial; replace if broken. Install correct speed gear as instructed in paragraph 2-10. Readjust; trace source of distortion. Adjust selector as instructed in paragraph 5-4e(16). Refer to table 4-6 (Appendix). Adjust as instructed in paragraph 5-4e(5). Refer to table 4-9 (Appendix). Tighten selector bar screws. Adjust as instructed in paragraph 5-4e(23)(b). Check all clutches for operation by sending RYRY (all clutches should release). Replace defective clutch.

TABLE 4-4. SYSTEM TROUBLE-SHOOTING CHART (Cont.)

SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
<p>Teletypewriter set prints garbled message (Cont.)</p> <p>10. Depressing any key does not produce output signal.</p>	<p>Timing marks on timing cam shaft gear and start clutch gear (figure 5-99, Appendix) not aligned.</p> <p>Dirty print cylinder shaft.</p> <p>Function slides out of adjustment and random functions are selected.</p> <p>Rotary spring broken.</p> <p>SEND•REC-REC switch in REC position.</p> <p>Printer not seated correctly on electrical chassis.</p> <p>Master pulsing contacts out of adjustment.</p> <p>Keyboard slip connector contact 1A9E1 defective.</p> <p>Keyboard not in correct operating position.</p> <p>Incorrect patching.</p> <p>Keyboard clutch release finger (figure 4-7, Appendix) does not clear tab.</p> <p>Keyboard drive gear stripped (figure 4-7, Appendix).</p> <p>Defective keyboard.</p>	<p>Align three dots on start clutch gear with two dots on timing cam shaft gear (∴).</p> <p>Clean print cylinder shaft.</p> <p>Perform function slide and stroke adjustments (paragraphs 5-4e(3)(b) and 5-4e(4)(b)).</p> <p>Replace spring (figure 5-100, Appendix).</p> <p>Place switch in SEND•REC position.</p> <p>Position printer correctly.</p> <p>Readjust on local mode (paragraph 5-4e(25)(i) or 5-4e(27)(b)).</p> <p>Repair or replace contact.</p> <p>Pull keyboard out to correct position.</p> <p>Patch correctly (paragraph 2-9).</p> <p>Adjust according to paragraph 5-4e(25)(a).</p> <p>Replace gear.</p>
	<p>SEND•REC-REC switch 1A9S3 defective or in REC position.</p> <p>Keyboard filter 1A9FL1 open or shorted.</p> <p>Incorrect patching.</p> <p>Open wire or connection.</p> <p>Contact block 1A1S4 (AN/TGC-14(V) or 1A1E8 (AN/TGC-14A(V)) defective.</p> <p>Keyboard clutch not engaged.</p> <p>Master pulsing contacts out of adjustment.</p>	<p>Refer to table 4-5 (Appendix).</p> <p>Replace switch or set to SEND•REC position.</p> <p>Replace filter.</p> <p>Patch correctly (paragraph 2-9).</p> <p>Perform continuity checks.</p> <p>Replace contact block.</p> <p>Engage clutch.</p> <p>Readjust contacts (paragraphs 5-4e(25)(i) and 5-4e(27)(b)).</p>
<p>12. No printing; selection taking place.</p>	<p>Print and function clutch (figure 4-24, Appendix) not operating correctly.</p> <p>Print prevent adjustment incorrect.</p>	<p>Check clutch for correct operation; repair or replace if necessary.</p> <p>Adjust according to paragraph 5-4e(18).</p>

TABLE 4-4. SYSTEM TROUBLE-SHOOTING CHART (Cont.)

SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
No printing; selection taking place (Cont.)	Print hammer actuating adjustment incorrect.	Adjust according to paragraphs 5-4e(14) and 5-4e(15).
	Defective print hammer actuator link helical spring (39, figure 5-82, Appendix).	Replace spring.
	Defective print helical spring (18, figure 5-79, Appendix).	Replace spring.
13. No function selection; printing taking place.	Defective print cam follower (37, figure 5-84, Appendix).	Adjust, repair, or replace.
	Broken function lever lifter arm screw or function cam follower screw (59 and 90, figure 5-85, Appendix).	Drill out broken portion and replace with stainless-steel screws.
14. Printing on functions.	Function bar is not set high enough to clear sensing finger levers on high side of function cam.	Adjust function lever lifter arm or entire function section (paragraph 5-4e(6)(b)).
	Print prevent adjustment screws (44, figure 5-86, Appendix) improperly adjusted.	Adjust according to paragraph 5-4e(18).
	Print prevent rod lever (48, figure 5-86, Appendix) worn.	Replace with stellite-tipped part.
15. Printing on space.	Print prevent arm (36, figure 5-84, Appendix) worn or out of adjustment.	Adjust arm (paragraph 5-4e(18)) or replace if defective.
	Defective print prevent rod actuator arm bias spring (38, figure 5-86, Appendix).	Replace spring.
	Incorrect stroke adjustment	Adjust according to paragraph 5-4e(17).
	Function slides (figures 5-19 and 5-20, Appendix) out of adjustment.	Adjust according to paragraphs 5-4e(3)(b) and 5-4e(4)(b).
16. Functions during printing.	Function bar (87, figure 5-85, Appendix) out of adjustment.	Adjust according to paragraph 5-4e(6)(b).
	Broken function backstop clutch release arm return helical spring (figure 4-25, Appendix).	Replace spring.
	Space print prevent adjustment screw (47, figure 5-95, Appendix) incorrectly adjusted.	Adjust according to paragraph 5-4e(18).
	Function bar adjustment incorrect.	Adjust according to paragraph 5-4e(6)(b).
17. Occasional misprint.	Function slides (figures 5-17 and 5-20, Appendix) out of adjustment.	Adjust according to paragraphs 5-4e(3)(b) and 5-4e(4)(b).
	Range dial out of adjustment	Adjust according to paragraph 2-8e(1) or (2).
	Signal line distortion.	Check for maximum of 35-percent distortion.

TABLE 4-4. SYSTEM TROUBLE-SHOOTING CHART (Cont.)

SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
Occasional misprint (Cont.)	Defective rotary detent pawl (22, figure 5-101, Appendix).	Repair or replace pawl.
	One or more type positioning clutches (figure 4-19, Appendix) not functioning correctly.	Check for correct operation.
	Start clutch release adjustment incorrect.	Adjust according to paragraph 5-4e(5).
	Selector adjustment incorrect.	Adjust according to paragraph 5-4e(16).
	Selector armatures (figure 5-102, Appendix) binding on pole pieces.	Check and remove cause of binding.
	Incorrect signal line current.	Using Multimeter AN/PSM-4, check for 60 ma on high range or 5 ma on low range.
	Defective line sensor.	Refer to table 4-6 (Appendix).
	Dirty print cylinder shaft (figure 4-19, Appendix).	Clean shaft.
18. Printing too lightly.	Defective clutch release finger (figure 4-22, Appendix, typical).	Repair or replace finger.
	Defective or twisted ribbon.	If defective, replace ribbon according to paragraph 3-3c(2). If twisting or folding, correct by raising retaining rings (6, figure 5-81, Appendix) to allow the ribbon guide rollers to follow the ribbon action. If condition persists, loosen ribbon vibrator arm screw (print hammer in non-print position) and adjust ribbon vibrator arms so that the ribbon is just under the last line printed.
	Print hammer shaft stop (52, figure 5-82, Appendix) not adjusted properly.	Adjust according to paragraph 5-4e(13).
19. Uneven spacing between characters.	Print hammer face pad damaged.	Replace pad.
	Dirty print cylinder shaft (figure 4-19, Appendix).	Clean shaft.
	Incorrect stroke adjustment.	Adjust according to paragraph 5-4e(17).
20. Print hammer hitting only half of character. (Refer to figure 4-19, Appendix.)	Loose frame clamp (14, figure 5-79, Appendix).	Tighten all loose frame clamps.
	Function slides out of adjustment.	Adjust according to paragraphs 5-4e(3)(b) and 5-4e(4)(b).
	Print hammer and print cylinder out of alignment.	Adjust according to paragraph 5-4e(12).
	Cables and belt not running on their pulleys.	Check that cables and belt are installed as shown in figure 4-19, Appendix.

TABLE 4-4. SYSTEM TROUBLE-SHOOTING CHART (Cont.)

SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
21. Printing only top or bottom of characters. (Refer to figure 4-19, Appendix)	Rotary function slide out of adjustment. Rotary adjustment incorrect. Clearance between rotary detent pawl pin and index wheel (24, figure 5-101, Appendix) incorrect. Broken rotary detent pawl spring on detent arm (46, figure 5-85, Appendix). Print cylinder shaft binding. Defective print hammer face pad.	Adjust according to paragraph 5-4e(3)(b). Perform all rotary adjustments in paragraph 5-4e(17)(a). Adjust according to paragraph 5-4e(7). Replace spring. Check and remove cause of binding. Replace pad.
22. No carriage advance.	Character advance pawl and check pawl eccentric bushings (3 and 19, figure 5-101, Appendix) out of adjustment. Carriage return lock lever (figures 5-31 and 5-32, Appendix) not dropping out of carriage return cam follower. First character adjustment screw (figure 5-52, Appendix) loose. Random advance prevention function selected. Broken or damaged character advance pawl or check pawl springs (36 and 62, figure 5-85, Appendix). Character advance pawl, check pawl, or advance ratchet worn (figure 5-29, Appendix).	Adjust according to paragraph 5-4e(8). Adjust according to paragraph 5-4e(9)(a). Tighten and adjust according to paragraph 5-4e(21). Adjust function slides according to paragraphs 5-4e(3)(b) and 5-4e(4)(b). Check springs and replace defective units. Check for wear and replace if necessary.
23. No line feed.	Refer to first three entries of Symptom 15. Line feed actuator cam follower arm (figure 4-28A, Appendix) out of adjustment. Pressure release lever in RELEASE position. Paper supply roll not rotating freely on electrical chassis. Function lever lifter arm out of adjustment. Pressure roll (16, figure 5-83, Appendix) not clamping paper.	Refer to Symptom 15. Readjust according to paragraph 5-4e(11). Move lever to LOCK position. Check installation of paper supply roll and tension on dancer roll tube. Adjust according to paragraph 5-4e(6)(c). Check for damaged pressure roll springs or binding pressure roll shaft.

TABLE 4-4. SYSTEM TROUBLE-SHOOTING CHART (Cont.)

SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
No line feed (Cont.)	Paper feed binding (Tactical Case CY-2976/PG).	Check that pressure release lever is set correctly. Check that the front of the case is not sagging. If case has not been modified, install Modification Kit Part No. 30561 (table 1-3).
	Dirty paper feed rubber roll.	Clean roll.
	Line feed clutch (figure 5-33, Appendix) not operating.	Check for defect and repair or replace.
24. No carriage return.	Refer to first three entries of Symptom 15.	Refer to Symptom 15.
	Check pawl (figure 5-29, Appendix) does not clear advance ratchet.	Adjust according to paragraph 5-4e(9)(a).
	Carriage return spiral spring (9, figure 5-84, Appendix) broken or disengaged.	Replace or engage spring.
25. No blank function.	Refer to Symptom 15, except check blank print prevent adjustment screw (46, figure 5-95, Appendix).	Refer to Symptom 15.
26. No space function.	Same as no carriage advance (Symptom 22).	Refer to Symptom 22.
	Refer to first three entries of Symptom 15.	Refer to Symptom 15.
27. No letters function.	Letters sensing finger lever (figure 4-28, Appendix) stuck in function slide.	Release lever.
	Letters figures clutch (figure 4-28, Appendix) not operating.	Check clutch for proper operation.
	Incorrect stroke adjustment.	Adjust according to paragraph 5-4e(17).
	Rotary spring (figure 5-100, Appendix) broken.	Replace spring.
28. No figures function.	Same as no letters function (Symptom 27).	Refer to Symptom 27.
29. No bell function.	Refer to first three entries of Symptom 15 and Symptom 27.	Refer to Symptom 15 and Symptom 27.
	Bell function linkage (figure 5-35, Appendix) does not fully return.	Inspect for fault and correct.
30. No lateral movement. (Refer to figure 4-19, Appendix.)	Jammed function slides.	Release function slides.
	Defective lateral tension helical spring.	Replace spring.
	Cables or belt not functioning.	Inspect for fault and correct.

TABLE 4-4. SYSTEM TROUBLE-SHOOTING CHART (Cont.)

SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
31. No rotary movement.	Defective rotary spring (figure 5-100, Appendix).	Replace rotary spring.
	Defective rotary cable (figure 4-19, Appendix).	Replace rotary cable.
	Rotary detent pawl (22, figure 5-4, Appendix) adjustment incorrect.	Adjust according to paragraph 5-4e(7).
	Defective clutch.	Check clutches for correct operation.
32. No automatic carriage return and line feed.	Incorrect adjustment.	Adjust according to paragraph 5-4e(9)(b).
33. Automatic carriage return but no line feed.	Incorrect alignment of automatic carriage return and line feed sensing finger levers (figure 4-31A, Appendix).	Adjust automatic carriage return actuator eccentric and actuator arm according to paragraph 5-4e(9)(b).
34. Carriage return after 4 or 5 characters from left side margin.	Incorrect automatic carriage return adjustment.	Adjust according to paragraph 5-4e(9)(b).
	Bounce prevent lever (21, figure 5-85, Appendix) not seating in teeth of V lever assembly (35, figure 5-77, Appendix).	Adjust bounce prevent lever (paragraph 5-4e(20) or first character adjustment screw (paragraph 5-4e(21))).
35. Slow carriage return. (Refer to figure 4-19, Appendix.)	Dirty print cylinder shaft.	Clean shaft.
	Print hammer binding.	Check and remove cause of binding.
	Cables may be tight or damaged.	Loosen or replace cables.
	Number of turns on takeup drum insufficient; carriage return spiral spring eyelet (9, figure 5-84, Appendix) not engaging tab on carriage return spring mounting cup (11).	Detach cables and lateral control belt; turn takeup drum counterclockwise two turns; install cables and belt; bend end of spiral spring to insure that eyelet engages tab of cup.
36. Advancing on advance prevent functions. (Refer to figure 4-31, Appendix.)	Incorrect stroke adjustment.	Adjust according to paragraph 5-4e(17).
	Function advance prevent adjustment screws on advance prevent bail carriage return bar out of adjustment.	Adjust according to paragraph 5-4e(19).
37. Double line feed every time.	Shift linkage on line feed (figure 4-28A, Appendix) not functioning.	Locate and correct malfunction.
	Carriage return too slow.	Check for dirt on shafts.
	Line feed adjustment incorrect.	Adjust according to paragraph 5-4e(11); make certain that the reference tooth (not the first tooth) on the line feed pawl (figure 4-28A, Appendix) is used when making this adjustment.
	Cable adjustments incorrect.	Adjust according to paragraph 5-4e(3)(c).
	Incorrect number of turns on carriage return spiral spring.	Refer to paragraph 5-4e(9).

TABLE 4-4. SYSTEM TROUBLE-SHOOTING CHART (Cont.)

SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
38. No ribbon reversal.	No eyelets in ribbon.	Replace ribbon.
	Ribbon improperly threaded.	Install ribbon according to paragraph 3-3c(2).
	Ribbon feed clutch does not release.	Locate and correct malfunction.
39. Unusual noise.	Clutch backstops out of adjustment.	Adjust backstops according to paragraph 5-4e(1).
	Interference between motor fan and outlet duct assembly (figure 5-72, Appendix).	Reposition motor to eliminate interference.
	Binding component.	Locate and correct.
	Incorrect idler gear adjustment.	Refer to paragraph 2-10.
	Defective clutch backstop spring.	Replace spring.
	Gears require lubrication.	Refer to table 5-9 (Appendix).
	Defective gear.	Check all gears for damage; replace defective gears.
40. Teletypewriter Set is polarity sensitive.	Defective bearings on gears.	Check and replace defective bearings.
	Defective bridge diode in line sensor.	Refer to Table 4-6, for line sensor trouble shooting, symptom 5.

TABLE 4-5. KEYBOARD 1A9, TROUBLE-SHOOTING CHART

TEST POINT	SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
<p>Ⓐ</p> <p>Ⓐ₁</p> <p>Ⓐ₂</p> <p>Ⓐ₃</p> <p>Figure 4-9 (Appendix)</p>	1. Teletypewriter set runs open with keyboard in operating position.	<p>Keyboard slip connector contact or contact block not making correct contact.</p> <p>Defective filter FL1; defective code pulsing contacts; defective master pulsing contacts; or defective BREAK switch.</p>	<p>Check for defective contacts; repair or replace defective contacts.</p> <p>Remove keyboard; connect multimeter across ●A; if reading is not 5 ohms, connect multimeter across ●A₁ and then across ●A₂. If either reading is not 2.5 ohms, replace filter FL1. If readings at ●A₁ and ●A₂ are both 2.5 ohms, connect multimeter across ●A₃. If no continuity, replace BREAK switch. If continuity is obtained across ●A₃, adjust or repair code pulsing or master pulsing contacts for reading of 5 ohms across ●A.</p>

TABLE 4-5. KEYBOARD 1A9, TROUBLE-SHOOTING CHART (Cont.)

TEST POINT	SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
	2. Teletypewriter set runs closed with keyboard in operating position.	SEND●REC-REC switch in wrong position or defective. Master pulsing contacts or code pulsing contacts defective or out of adjustment (figure 4-7, Appendix). Defective pulsing finger (figure 4-7, Appendix). Defective filter FL1.	Set switch in correct position or replace switch. Adjust according to paragraph 5-5ba or replace contacts. Replace pulsing finger. Refer to Symptom 1 for procedure.
	3. Incorrectly transmitted character.	Incorrect range adjustment. Master pulsing contacts defective or out of adjustment.	Adjust according to paragraph 2-8e(1). Adjust according to paragraphs 5-4e(25)(i) and 5-4e(27)(b) or replace contacts.
	4. Depressing BREAK switch does not open signal line.	Defective BREAK switch.	Refer to Symptom 1 for procedure.

TABLE 4-6. LINE SENSOR 1A3, TROUBLE-SHOOTING CHART

TEST POINT	SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
<p>★2 Figure 4-13 (Appendix)</p> <p>★3 D E F Figure 4-13 (Appendix)</p>	1. Printer runs open.	No signal input at ★2. Incorrect power supply output.	Connect multimeter (d-c volts) across ★2 (equipment energized; polarity of voltage determined by input signal line polarity) and check for 9 vdc with 60-ma signal and steady mark. If reading is correct, check resistor A2R1, diodes A2CR1 through A2CR5, or output of power supply as described below. Connect multimeter (a-c volts) across ★3 and check for 115 vac. If reading is incorrect, refer to table 4-10 (Appendix). Connect multimeter across ●D. If 33 vac is not obtained, check for defective transformer T1 or diodes A1CR1 through A1CR4. Connect multimeter (d-c volts) across ●E (negative) and ●F (positive). If 26 vdc is not obtained, check for defective diodes A1CR1 through A1CR4, capacitors A1C1 and A1C2, or resistors A1R1 and A1R2.

TABLE 4-6. LINE SENSOR 1A3, TROUBLE-SHOOTING CHART (Cont.)

TEST POINT	SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
(G) (H) Figure 4-13 (Appendix)	1. Printer runs open (Cont.).	Defective transistor circuit.	Connect multimeter (d-c volts) between ●F (positive) and ●G (negative). Check for -0.94 vdc during mark and -6.20 vdc during space (with BREAK switch depressed); then connect multimeter between ●F (positive) and ●H (negative) and check for -6.70 vdc during mark and -0.94 vdc during space. If readings are incorrect, check selector coils, transistors A2Q1 through A2Q3, and associated circuits. Refer to table 4-11 (Appendix) for complete voltage and current readings.
	2. Printer runs closed but does not print.	Same as Symptom 1.	Same as Symptom 1.
	3. Equipment prints garbled message or occasional misprint.	Same as Symptom 1.	Same as Symptom 1.
	4. Motor stop relay 1A1K1 continuously energized or will not energize.	Same as Symptom 1.	Same as Symptom 1.
	5. Reversing signal line leads makes equipment run open. Replacing leads in original position permits normal operation.	Defective or shorted bridge diodes CR1, CR2, CR3, or CR4.	Make individual continuity checks of diodes CR1 through CR4 and replace defective diode or repair short. Refer to figure 5-110.

TABLE 4-7. FUNCTION AND PULSE DATA

FUNCTION	MARKING PULSES					RESULTS
	1	2	3	4	5	
Blank						Suppresses printing and character advance.
Space			X			Suppresses printing only.
Line Feed		X				Suppresses printing and character advance. Releases line feed clutch on function main shaft.
Figures	X	X		X	X	Suppresses printing and character advance. Rotates letters figures clutch on function main shaft to figures position if it was previously held in letters position.
Bell	X		X			Suppresses printing and character advance. Moves bell clapper. Operates only during figures shift.
Letters	X	X	X	X	X	Suppresses printing and character advance. Rotates letters figures clutch on function main shaft to letters position if it was previously held in figures position.
Carriage Return				X		Suppresses printing and character advance. Releases carriage return clutch on function main shaft.

TABLE 4-8. PRINTER 1A2, TROUBLE-SHOOTING CHART

TEST POINT	SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
<p>★1 Figure 4-34 (Appendix)</p>	1. Motor does not operate.	Absence of input power.	Turn equipment off. Gain access to motor. Remove connector from jack 1A1J11 (test point ★1) and turn equipment on. Connect a-c multimeter between 1AJ11-A and 1AJ11-B and read 115 vac. If reading is incorrect, refer to table 4-10 (Appendix). If readings are correct, continue with Symptom 2.
<p>ⓑ Figure 4-34 (Appendix)</p>	2. Motor does not operate; input power present.	Defective motor or faulty connections.	Turn equipment off. For the 60-cps motor, connect multimeter (ohms) between A2P1-B and A2P1-A (47 ohms) and between A2P1-B and A2P1-D (140 ohms). For the 400-cps motor, check for 8.5 ohms between A2P1-A and A2P1-B and 19 ohms between A2P1-A and A2P1-D. If readings are incorrect, check for faulty connections or replace defective motor.
<p>ⓒ Figure 4-34 (Appendix)</p>	3. Printer runs open.	Magnetic selector not plugged in or defective.	Make certain that magnetic selector connector is secure in jack 1A3J1. If trouble persists, turn equipment off, remove connector, and connect multimeter (ohms) between A1P1-B and A1P1-D; meter should read 65 ohms ±10%. Check between A1P1-C and A1P1-D for same reading. If either reading is incorrect, check for broken connection or replace magnetic selector.
<p>ⓒ Figure 4-34 (Appendix)</p>	4. Printer runs closed.	Same as Symptom 3.	Same as Symptom 3.
<p>ⓒ Figure 4-34 (Appendix)</p>	5. Motor will not stop with figures H or time delay motor stop function.	Defective stop switch 1A2S1.	Turn off equipment. Connect multimeter (ohms) between 1A2P1-F and 1A2P1-H; actuate stop switch and check for continuity reading. If no continuity, replace stop switch.
	6. Refer to table 4-4 (Appendix) for other symptoms of trouble in printer.	Refer to table 4-4 (Appendix).	Refer to table 4-4 (Appendix).

TABLE 4-9. SIGNAL LINE POWER SUPPLY 1A4, TROUBLE-SHOOTING CHART

TEST POINT	SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
<p>★3 ⓓ ⓔ ⓕ Figure 4-36 (Appendix)</p>	1. Printer runs open.	Incorrect signal line power supply output.	Refer to Symptom 1 of table 4-6 (Appendix).
	2. Equipment prints garbled message.	Incorrect or fluctuating output of signal line power supply.	Perform checks of Symptom 1 above; carefully check all components for signs of intermittent operation. Replace any suspect part with a good unit.

TABLE 4-10. ELECTRICAL CHASSIS 1A1, TROUBLE-SHOOTING CHART

TEST POINT	SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
<p>★4 through ★7 Figure 4-37 (Appendix)</p>	<p>1. Printer motor, line sensor, or signal line power supply inoperative due to loss of input primary power.</p>	<p>Defective parts in primary power circuit.</p>	<p>Connect multimeter across ★4 (pins J9-1 and J9-2) and then across ★5 (pins J10-1 and J10-2); check for 115 vac at both test points. Check fuses F1, F2 and F3 and MOTOR switch S1 if readings are incorrect. If components are not defective, check power inputs at ★6, ★7, and service cable connections.</p>
<p>Ⓢ Figure 4-37 (Appendix)</p>	<p>2. Motor will not stop with figures H function, or time delay motor stop function.</p>	<p>Defective coil on motor stop relay K1.</p>	<p>With power off, connect multimeter (ohms) across Ⓢ; if meter reads very high resistance (1 megohm or above), replace relay.</p>
<p>Ⓝ Ⓚ Ⓛ Figure 4-37 (Appendix)</p>	<p>3. Printer motor inoperative.</p>	<p>Defective capacitor C1.</p>	<p>With power off, connect multimeter between Ⓝ and Ⓚ and then between Ⓚ and Ⓛ; meter should read very high (1 megohm or above) or infinite resistance. If not, replace C1. To check for an open capacitor C1, replace with a known good capacitor. Check F2, and replace if defective.</p>
<p>Ⓜ Figure 4-37 (Appendix)</p>	<p>4. Heating element inoperative.</p>	<p>Defective fuse F2. Defective fuse F1 (AN/TGC-14(V) or fuse F1 or F4 (AN/TGC-14A(V)). Defective element or thermostat.</p>	<p>Replace fuse. Replace fuse. With power off, connect multimeter (ohms) across Ⓜ (E1 to E2). Meter should read 66.5 ohms ±10%. Check that thermostat S3 opens at approximately +16°C (+60°F) and closes at approximately +5°C (+40°F). Replace defective heater or thermostat.</p>
<p>★8 Figure 4-37 (Appendix)</p>	<p>5. No output on send line.</p>	<p>Defective fuse F5 (AN/TGC-14A(V)) or F4 (AN/TGC-14(V)), defective keyboard, or incorrect option patching.</p>	<p>With power off, check fuse with multimeter (ohms); replace defective fuse. Refer to table 4-5 (Appendix) for keyboard troubleshooting. Check for correct option patching (paragraph 2-9).</p>
<p>★9 Figure 4-37 (Appendix)</p>	<p>6. Line sensor inoperative.</p>	<p>Loss of input signal.</p>	<p>Check for presence of input signal at ★9. If signal is missing, check service cable and junction box for defect or check for correct option patching (paragraph 2-9).</p>
	<p>7. No Signal Line Current when teletypewriter set is patched for Half-Duplex, Battery supplied internally.</p>	<p>Fuse F5 blown. AN/TGC-14A(V) F4 AN/TGC-14(V), Signal Line Current Potentiometer (R2) Faulty. Faulty Signal Line Power Supply.</p>	<p>Replace Check continuity across line potentiometer (R2). Replace if there is no continuity. Check Signal Line Power Supply Table 4-9.</p>

TABLE 4-10A. TRANSMITTER CONTROL CIRCUITRY TROUBLE-SHOOTING

SYMPTOM	PROBABLE CAUSE	CORRECTIVE ACTION
<p>1. Remote Transmitter not being keyed when Send. Rec-Rec switch of keyboard set in the Send. Rec. position and Key-board in the operating position.</p>	<p>1. Malfunction or faulty wiring between XMTR Control terminals of junction box and remote transmitter.</p>	<p>Remove external wire and short them together.</p> <p style="text-align: center;">CAUTION 115 VAC present.</p> <p>If transmitter does not key, trouble is either loose connection or no source of battery to key relay. If the transmitter keys, go to step #2.</p>
	<p>2. Malfunction or faulty wiring between XMTR terminals of the junction box and Send. Rec switch of Teletype-writer Set.</p>	<p>Place Send. Rec switch in Send. Rec position and check for continuity across XMTR terminals. If continuity reading is not obtained, proceed to step #3.</p>
	<p>3. Loose wiring between cable connector pins and XMTR terminals. (Refer to figure 5-113, Appendix, alternate Service Cable 1A10.)</p>	<p>Remove connector from chassis. Check for continuity between L and E8 and M and E9. If continuity is obtained, proceed to step #4.</p>
	<p>4. Faulty chassis connector receptacle (refer to figure 5-113, Appendix).</p>	<p>Set Send. Rec-Rec switch in Send. REC position and check for continuity across pins L and M of chassis receptacle (J8). If no reading is obtained, check for loose wiring. If wiring and receptacle check out, proceed to step #5.</p>
	<p>5. Loose wire between contacts 2 and 5 of connector block of chassis and L and M of receptacle (J8).</p>	<p>Remove keyboard from chassis. Check for continuity between L of J8 and #2 contact of contact block and M of J8 and #5 contact of contact block. If continuity is not obtained in either reading check for loose connection or cold solder joint. If continuity is obtained proceed to step #6.</p>
	<p>6. Faulty contacts in Send. Rec-Rec switch (S3) or loose wire between switch and slip contacts of the keyboard.</p>	<p>Check for continuity across transient contacts #3 and #4 of keyboard with switch in Send. Rec position. If continuity is not obtained, check across terminals of switch. If reading is not obtained, replace the switch. If reading is obtained, check for loose wiring between switch and slip contacts.</p>
	<p>7. Faulty contact block, contacts.</p>	<p>Replace keyboard and set Send. Rec-Rec switch in Send. Rec position. Connect service cable to chassis and check for continuity across XMTR Control binding posts. If no reading is obtained check contact block 1A1E8 and keyboard slip connector contacts 1A9E1. Bend keyboard slip connector contacts 3 and 4 slightly upward and recheck for continuity across XMTR control binding posts. Replace contact block (1A1E8) if necessary.</p>
<p>2. Inadvertant keying of Local Transmitter.</p>	<p>Faulty RF filter in Service Cable "J" box.</p>	<p>Check capacitors.</p>

TABLE 4-11. VOLTAGE AND CURRENT MEASUREMENTS

TEST CONDITIONS (Connect negative lead of meter to electrical chassis, unless otherwise indicated.)	TRAN- SISTOR	BASE		EMITTER		COLLECTOR	
		D-C VOLTS	D-C MA	D-C VOLTS	D-C MA	D-C VOLTS	D-C MA
LINE SENSOR 1A3							
1. Connect strap (figure 4-13, Appendix) across A2E2 and A2E3; apply primary power at 115 vac, 60 cps; use Multimeter AN/PSM-4, or equivalent; apply mark signal at 60 ma; check for -5.5 vdc at A2E14.	A2Q1	-1.70	1.90	-1.42	11.0	-1.46	8.80
	A2Q2	-1.40	6.90	-0.84	94.0	-0.94	87.0
	A2Q3	-0.47	0	-0.84	0	-6.70	0
2. Same as condition 1 except mark signal at 20 ma and -1.85 vdc at A2E14. Check for 29.1 vdc between A2E6 and A2E13 and 33 vac rms between TI-3 and TI-4.	A2Q1	-1.55	0.15	-1.35	8.60	-1.47	8.40
	A2Q2	-1.35	4.80	-0.83	88.0	-0.93	86.0
	A2Q3	-0.48	0	-0.84	0	-6.80	0
3. Same as condition 2 except apply space signal at 0 ma.	A2Q1	0	0	-0.41	0	-16.50	0
	A2Q2	-0.41	0	-0.82	0	6.20	0
	A2Q3	-0.49	0	-0.88	93.0	-0.94	89.0
4. Connect strap (figure 4-13, Appendix) across A2E1 and A2E2; apply primary power at 115 vac, 60 cps; use Multimeter AN/PSM-4, or equivalent; apply mark signal at 5 ma; check for -11.3 vdc at A2E14.	A2Q1	-1.75	4.80	-1.55	13.60	-1.90	8.80
	A2Q2	-1.55	9.70	-0.88	97.0	-0.97	88.0
	A2Q3	-0.49	0	-0.88	0	-7.0	0
5. Same as condition 4 except apply mark signal at 1 ma.	A2Q1	-1.65	0.98	-1.40	10.0	-1.44	9.0
	A2Q2	-1.40	6.40	-0.86	95.0	-0.95	89.0
	A2Q3	-0.47	0	-0.86	0	-7.0	0
6. Same as condition 4 except apply space signal at 0 ma; also check for -5.95 vdc at A2E10 and 0.45 vdc across resistor A2R9.	A2Q1	-0.59		-0.52		-16.80	
	A2Q2	-0.52		-0.86		-6.60	
	A2Q3	-1.20		-0.85		-0.96	

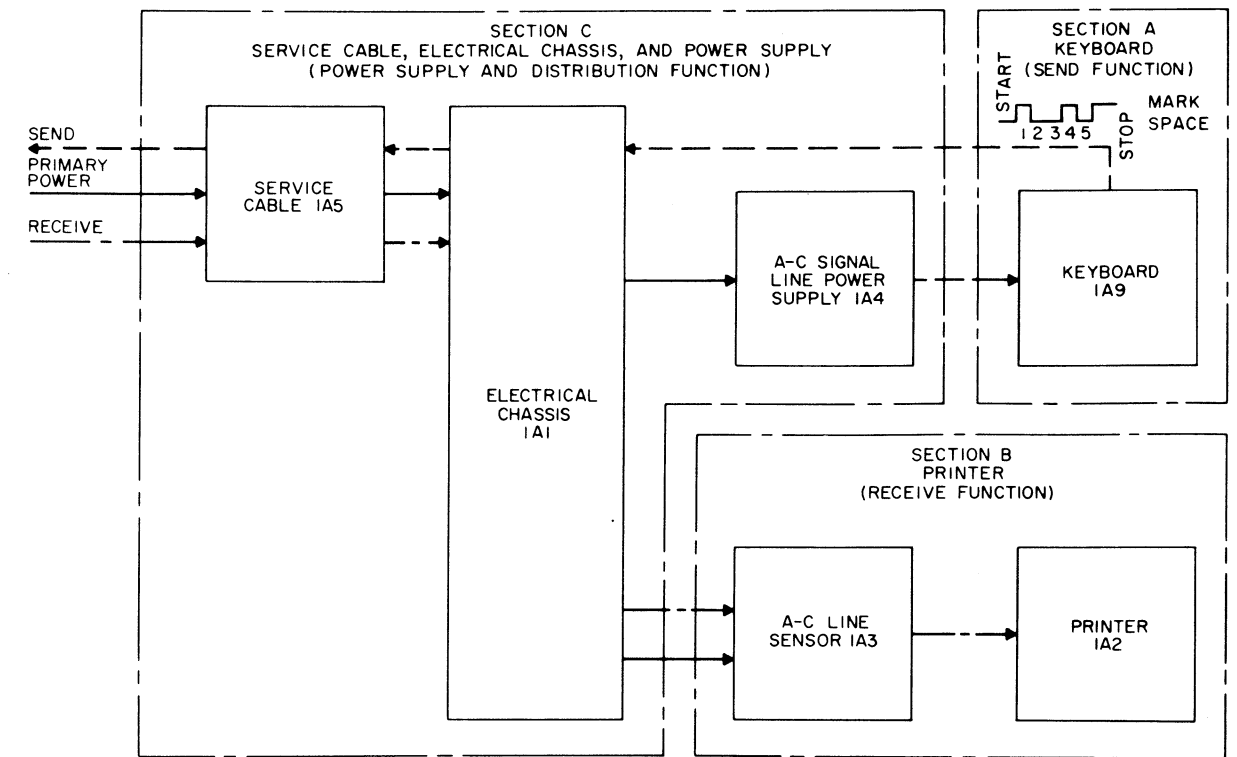


Figure 4-1. Functional Sections

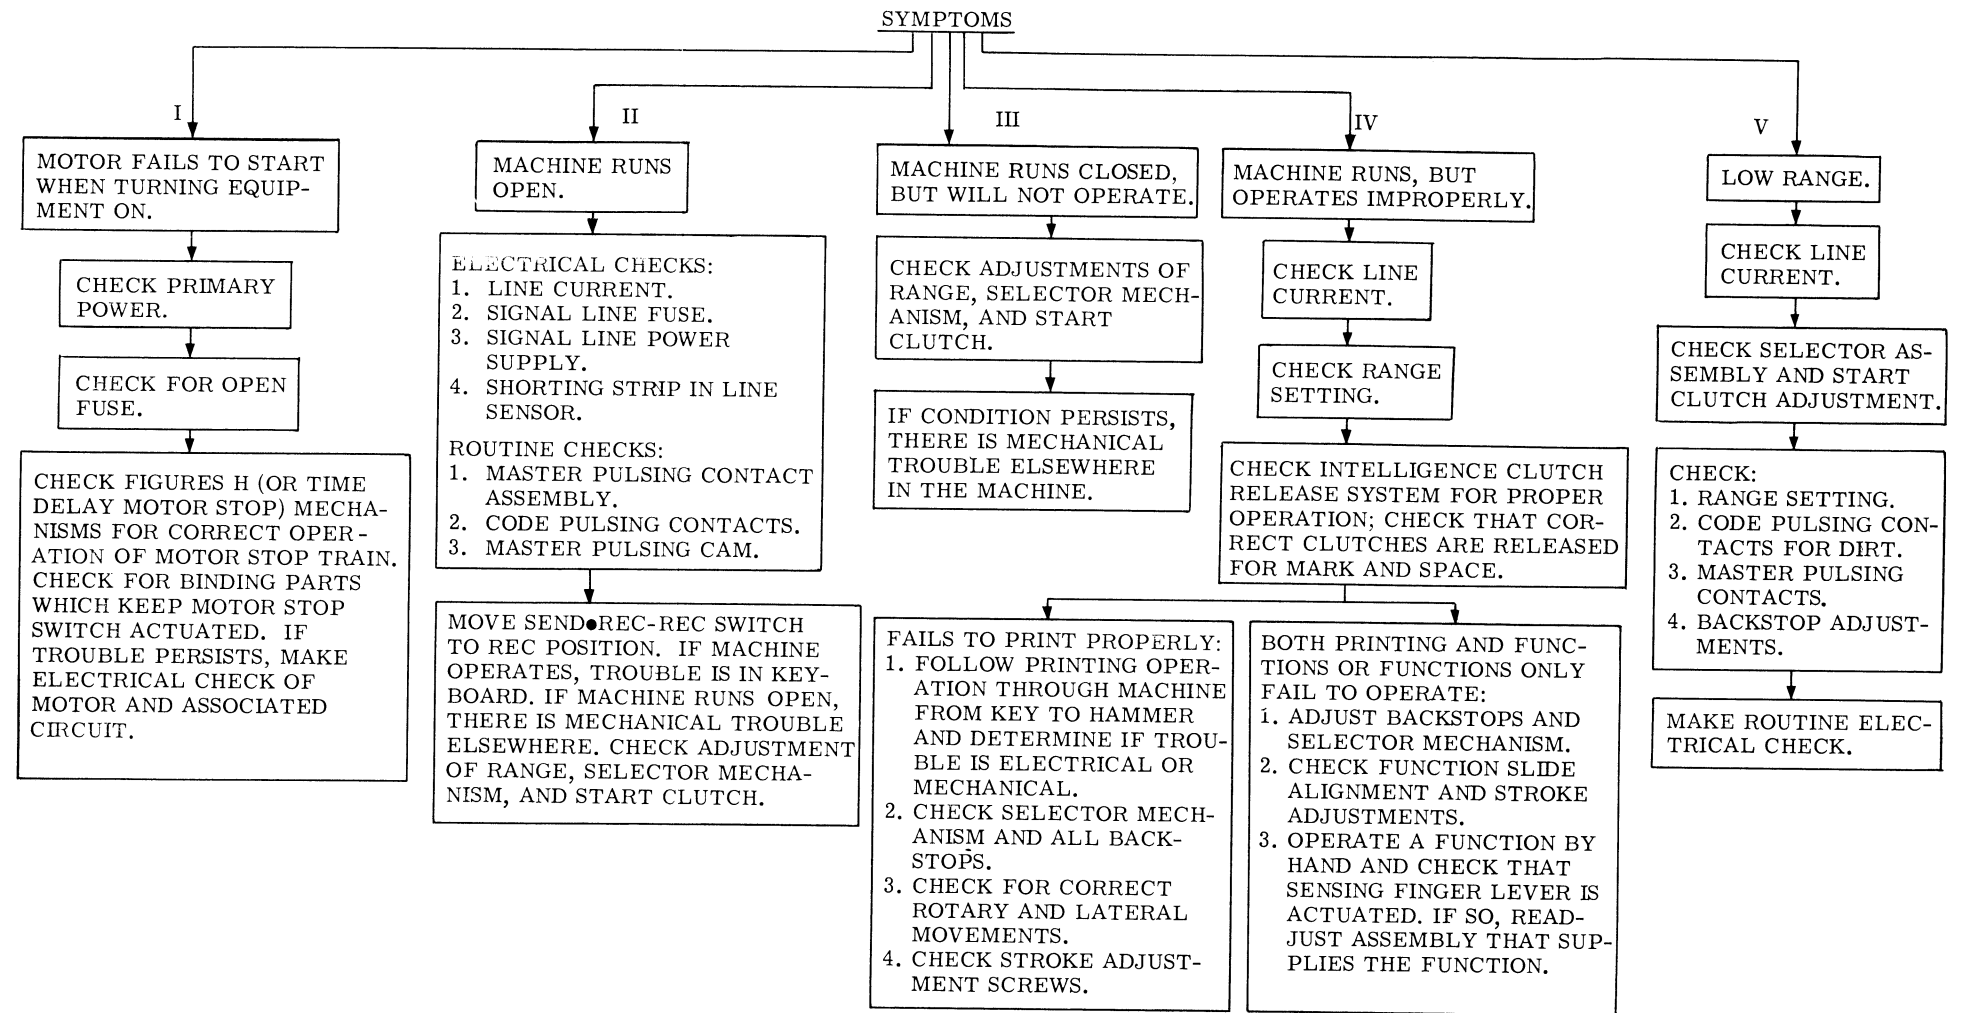


Figure 4-5. Trouble-Shooting Flow Chart

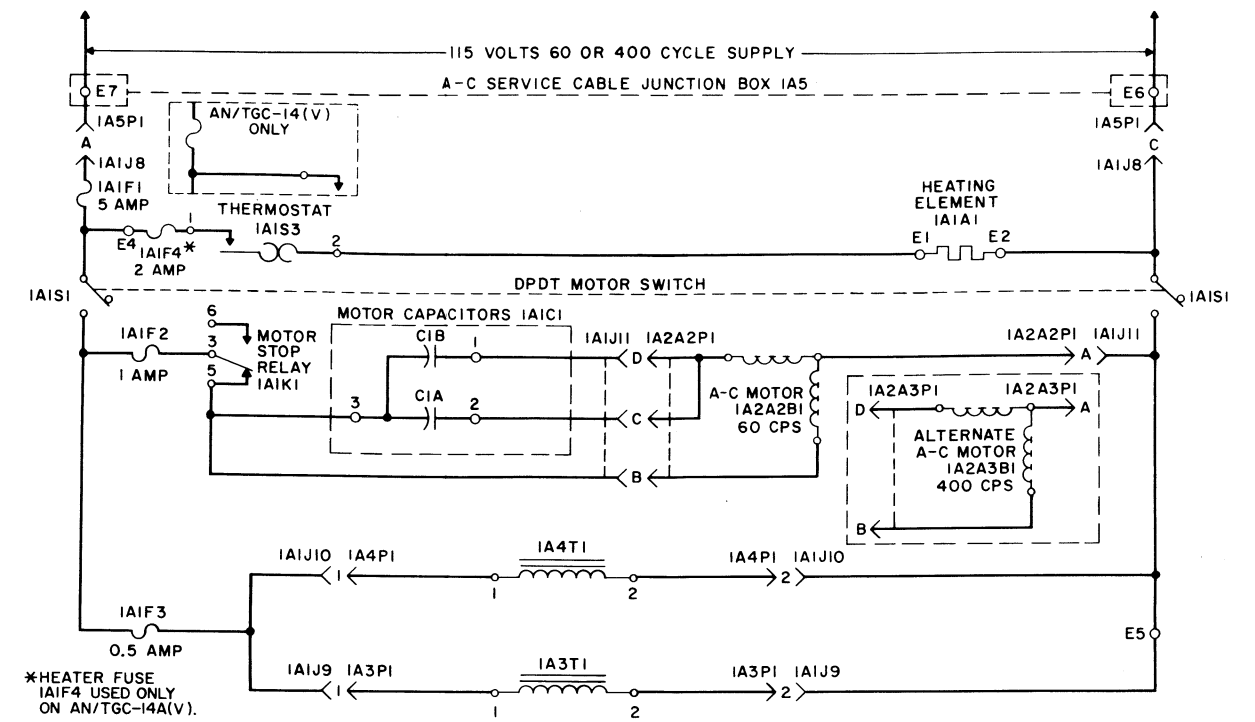


Figure 4-6. Alternating Current Primary Power Distribution, Simplified Schematic Diagram

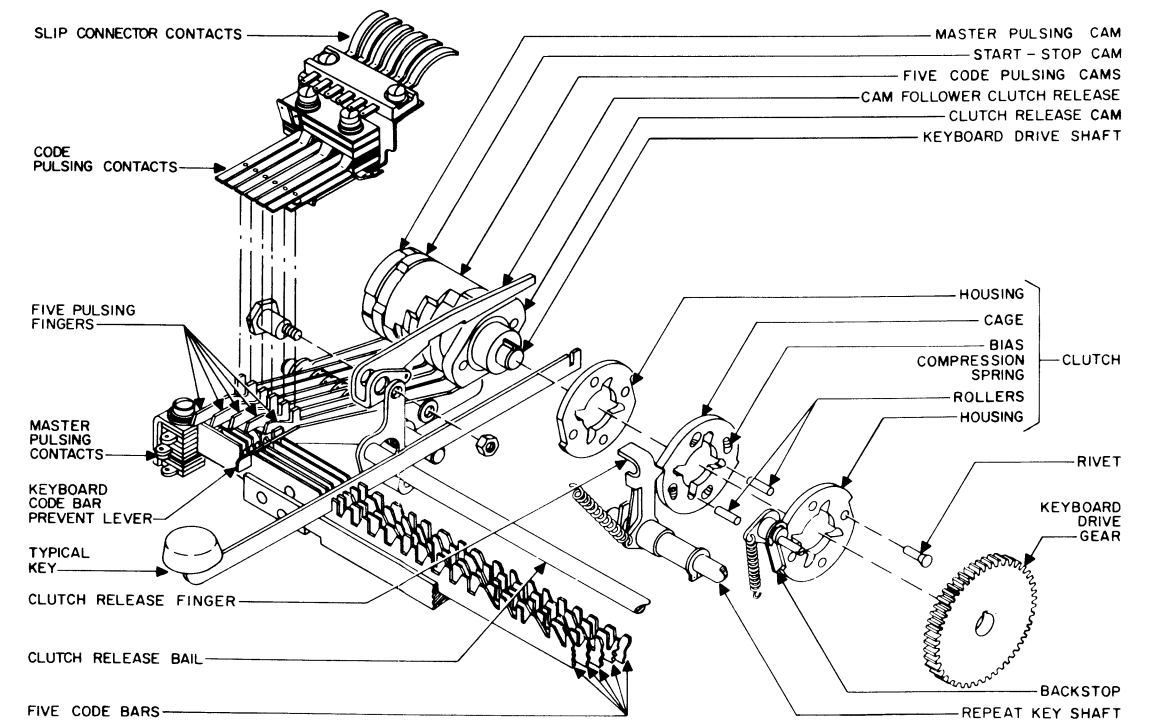


Figure 4-7. Keyboard 1A9, Mechanical Diagram

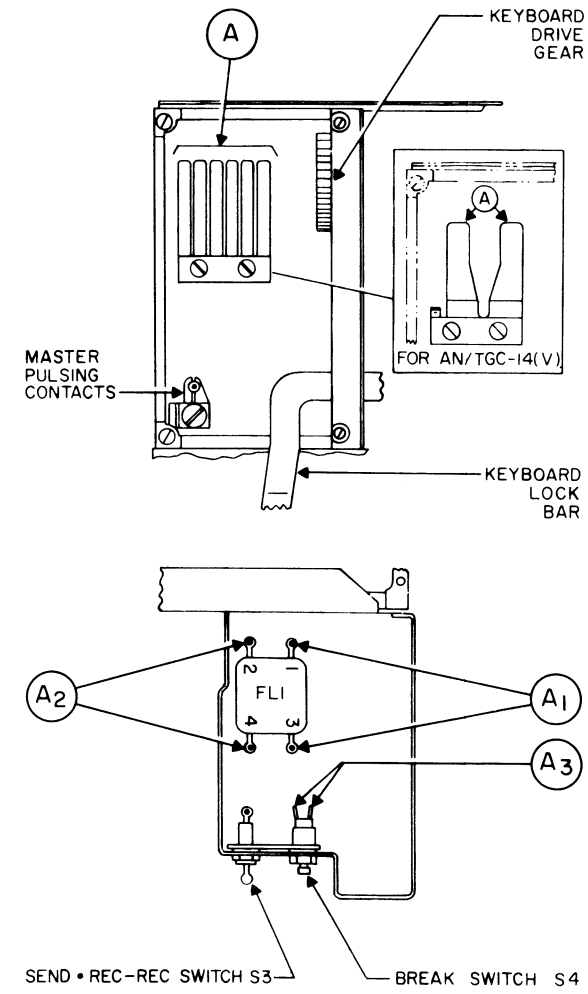


Figure 4-9. Keyboard 1A9, Location of Test Points

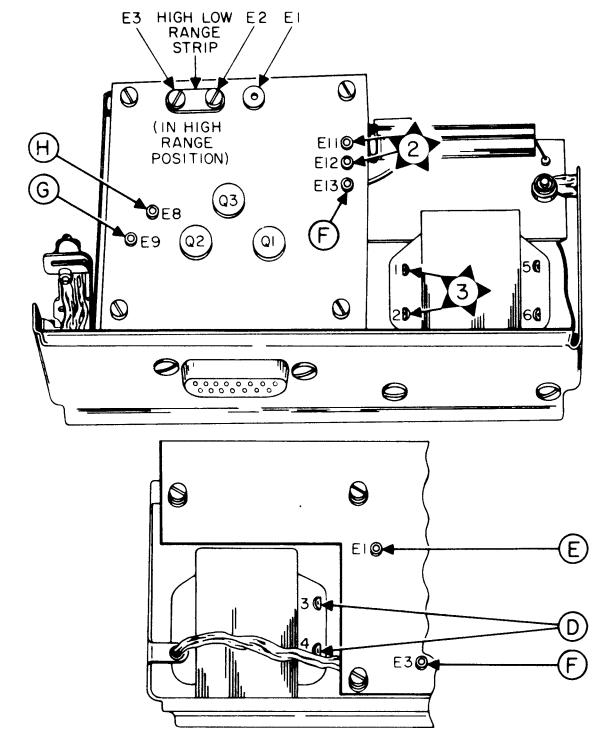


Figure 4-13. Line Sensor 1A3,
Location of Test Points

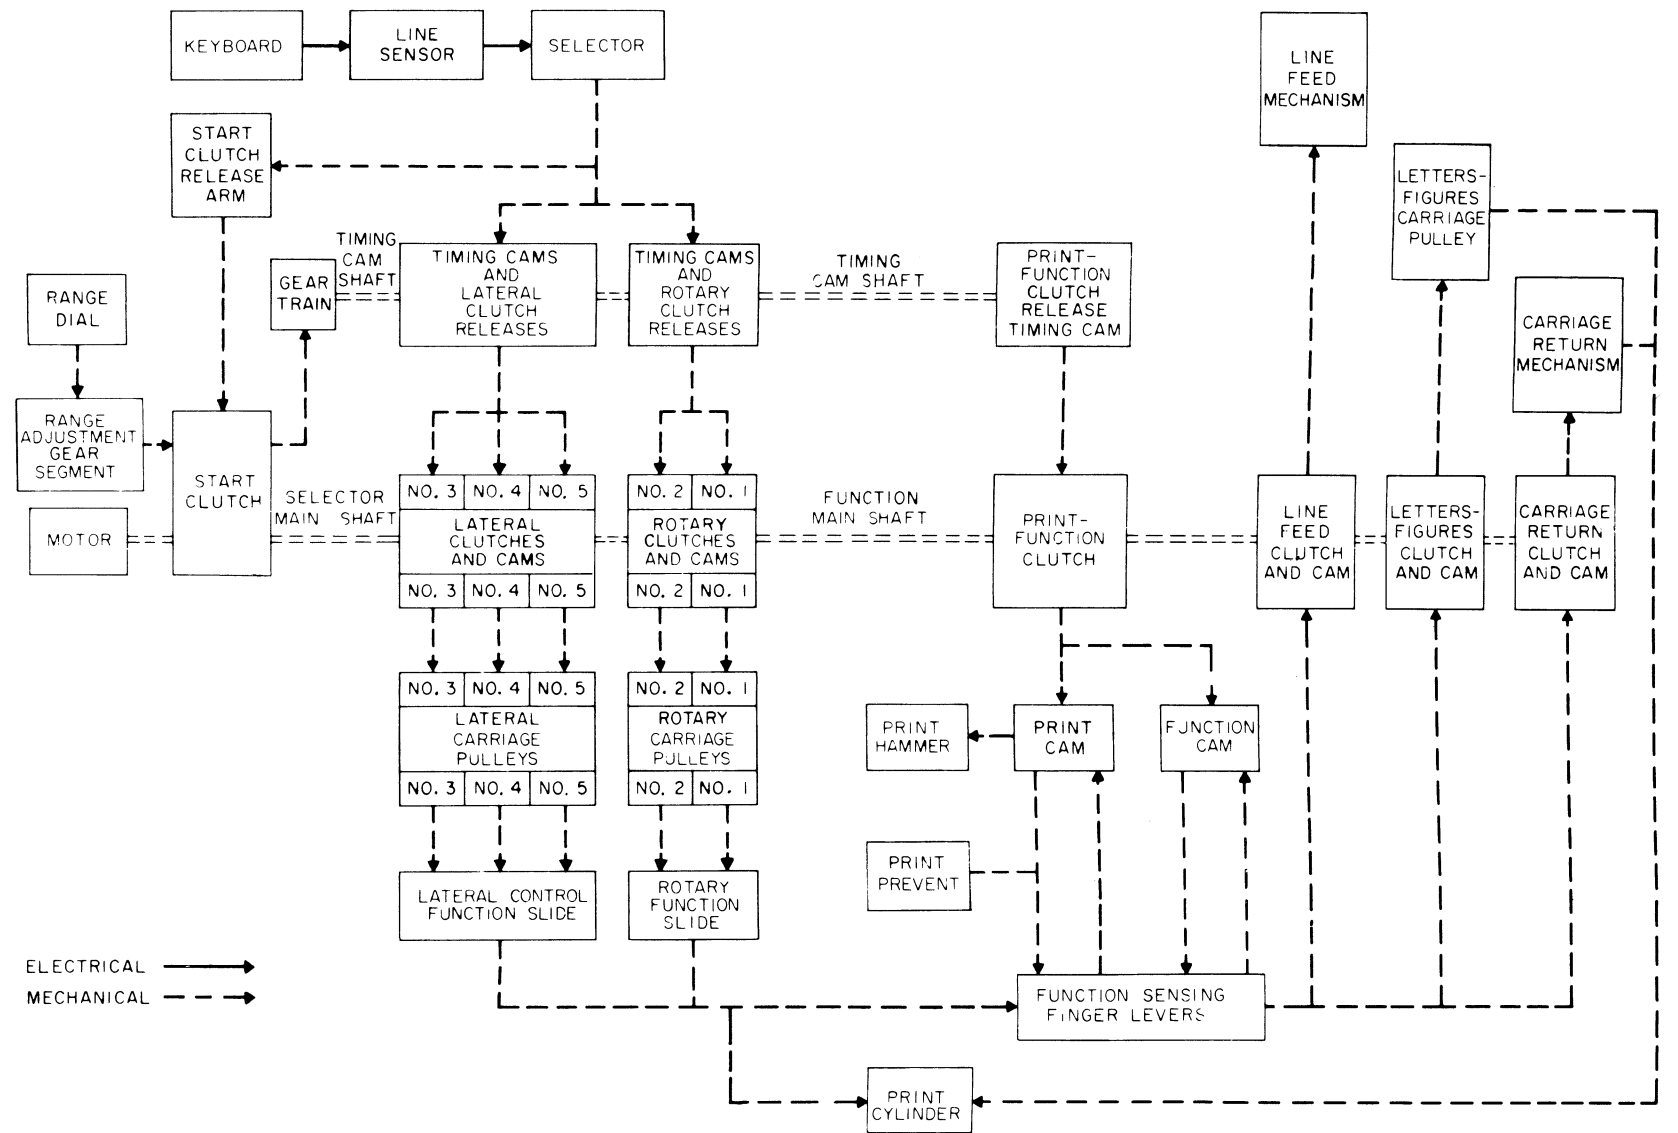


Figure 4-14. Printer 1A2, Functional Block Diagram

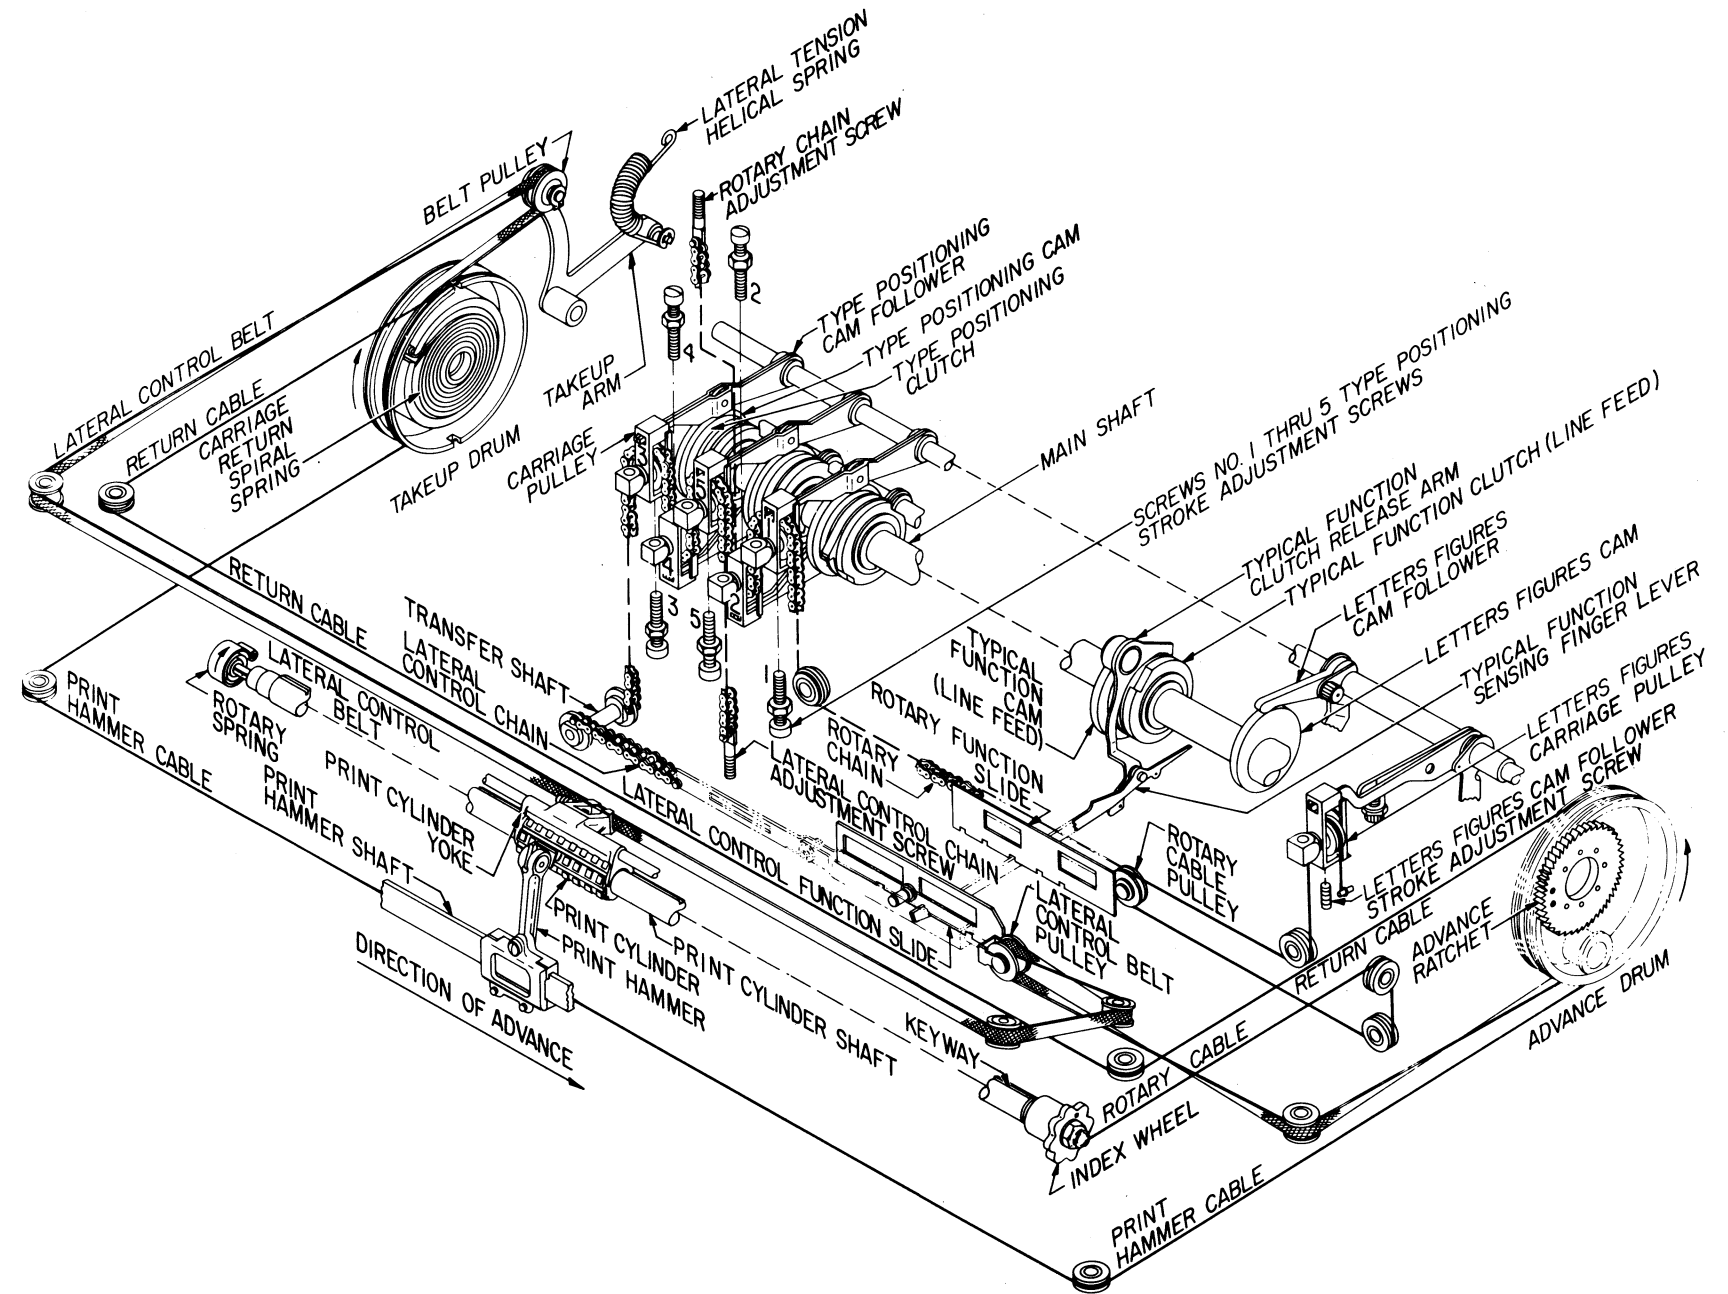


Figure 4-19. Print Cylinder and Print Hammer Positioning System

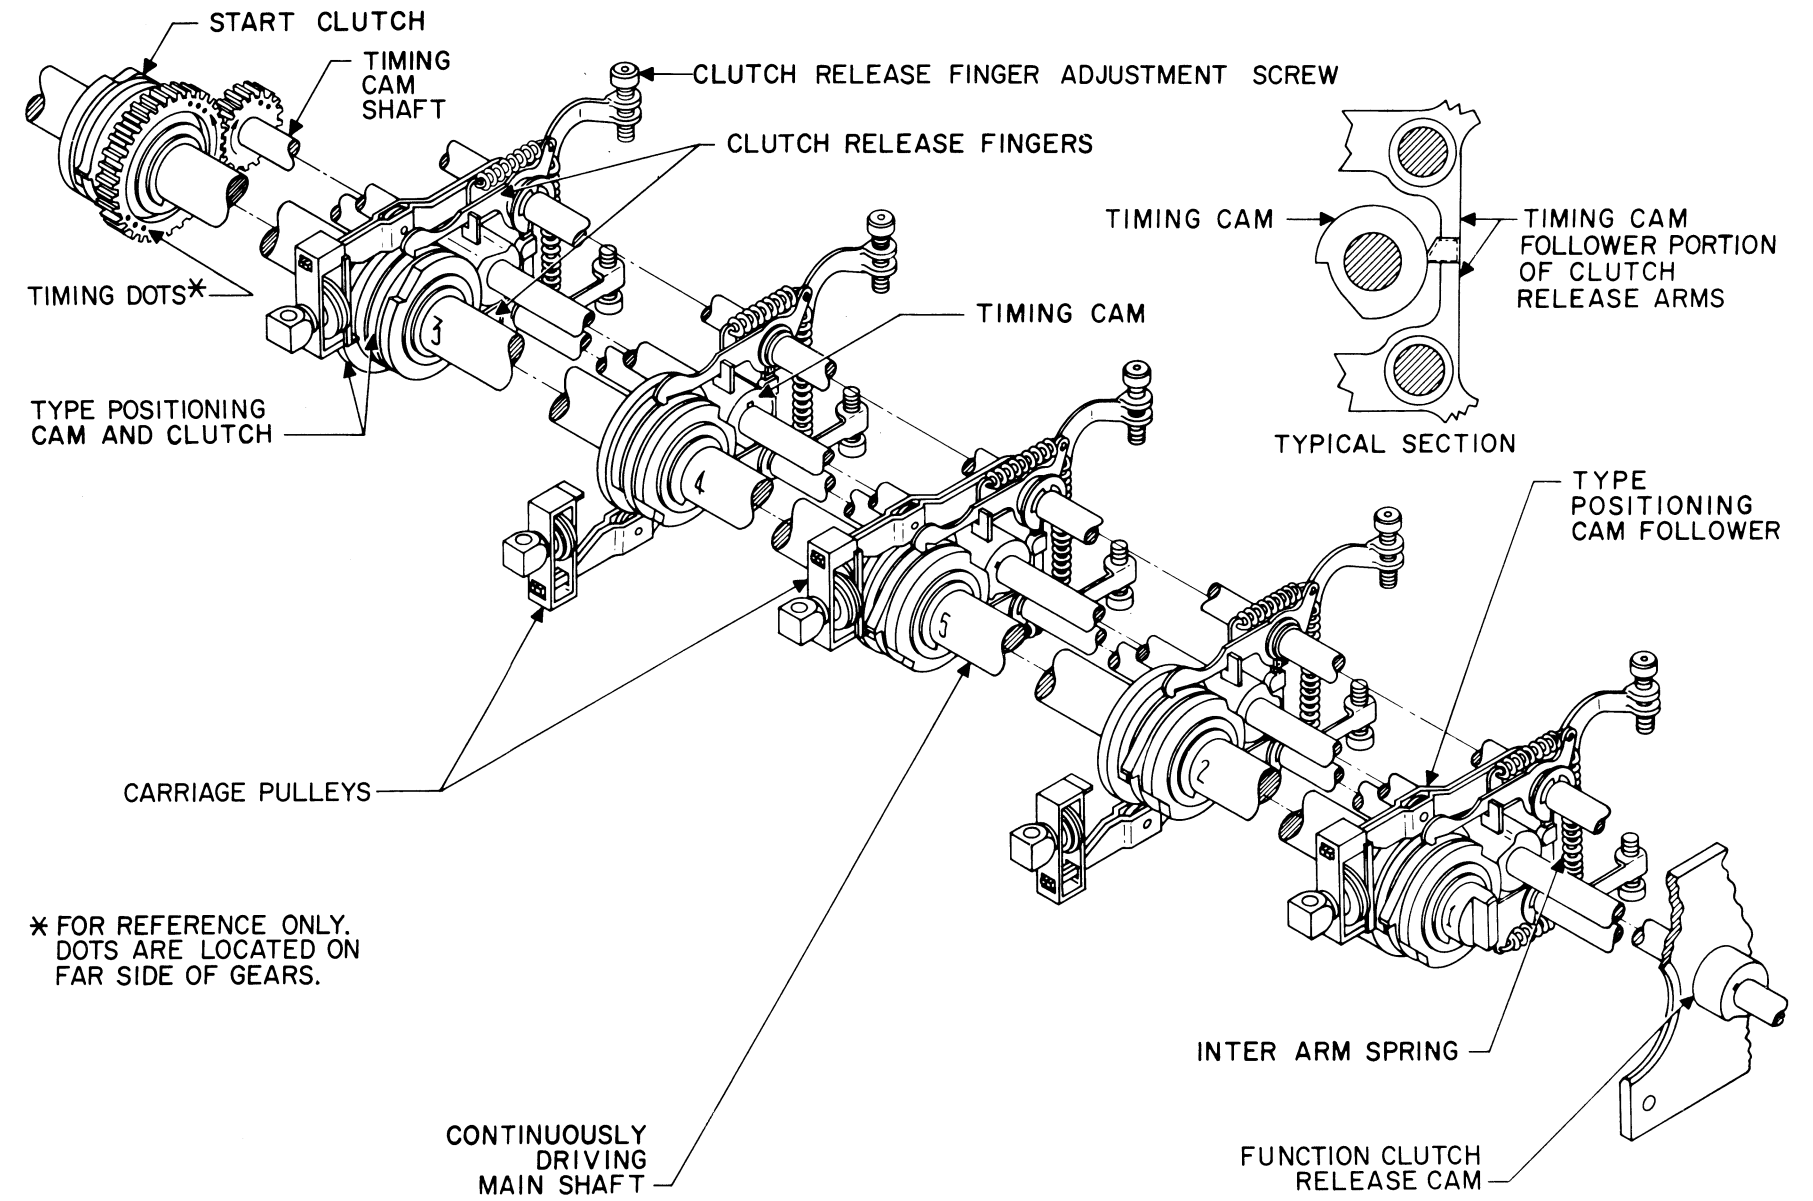


Figure 4-22. Print Cylinder Positioning Clutch Release System

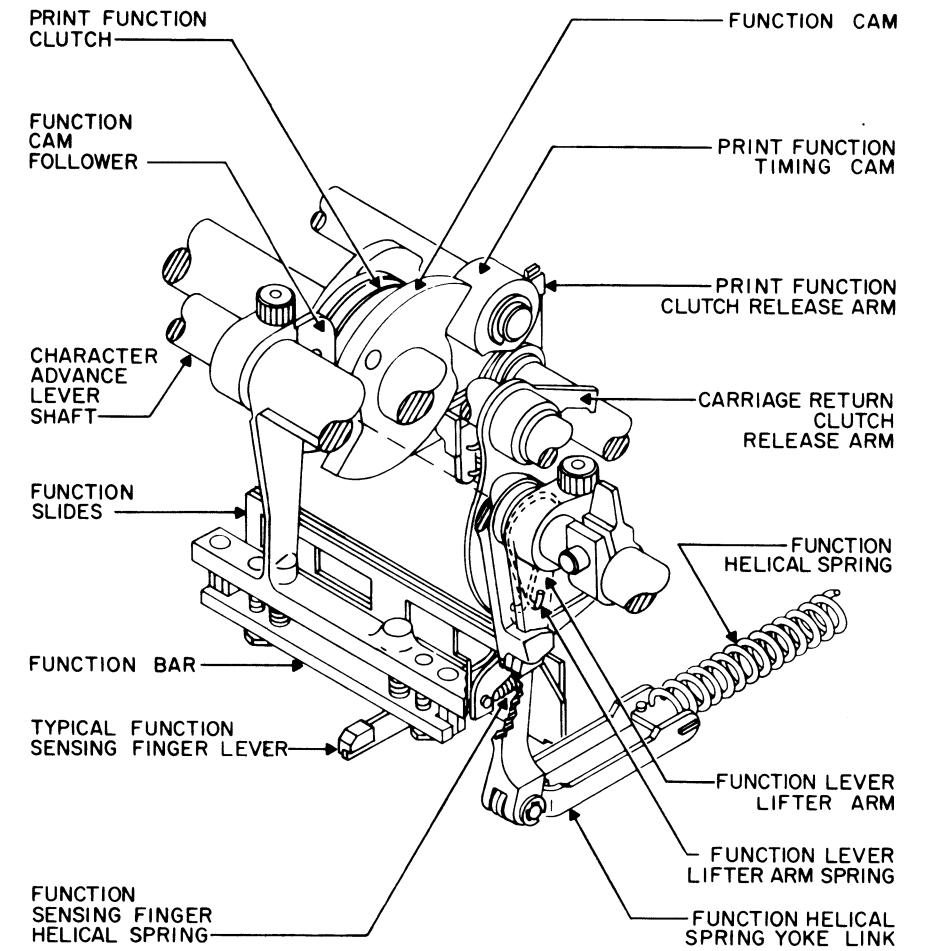


Figure 4-24. Function Selector, Start of Function Cycle

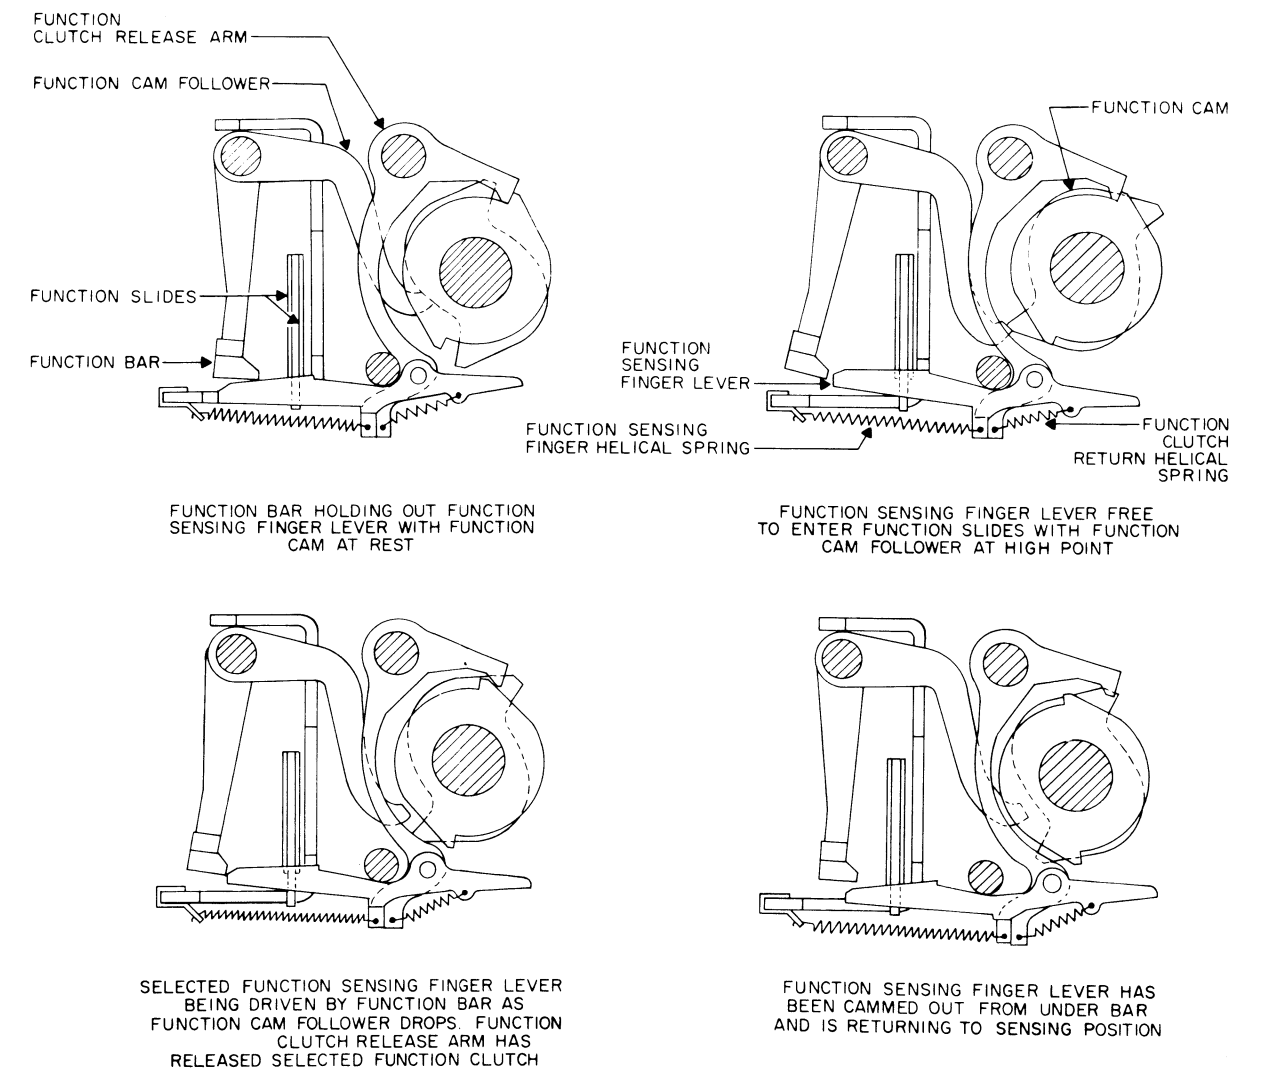


Figure 4-25. Function Selector, Operating Cycle

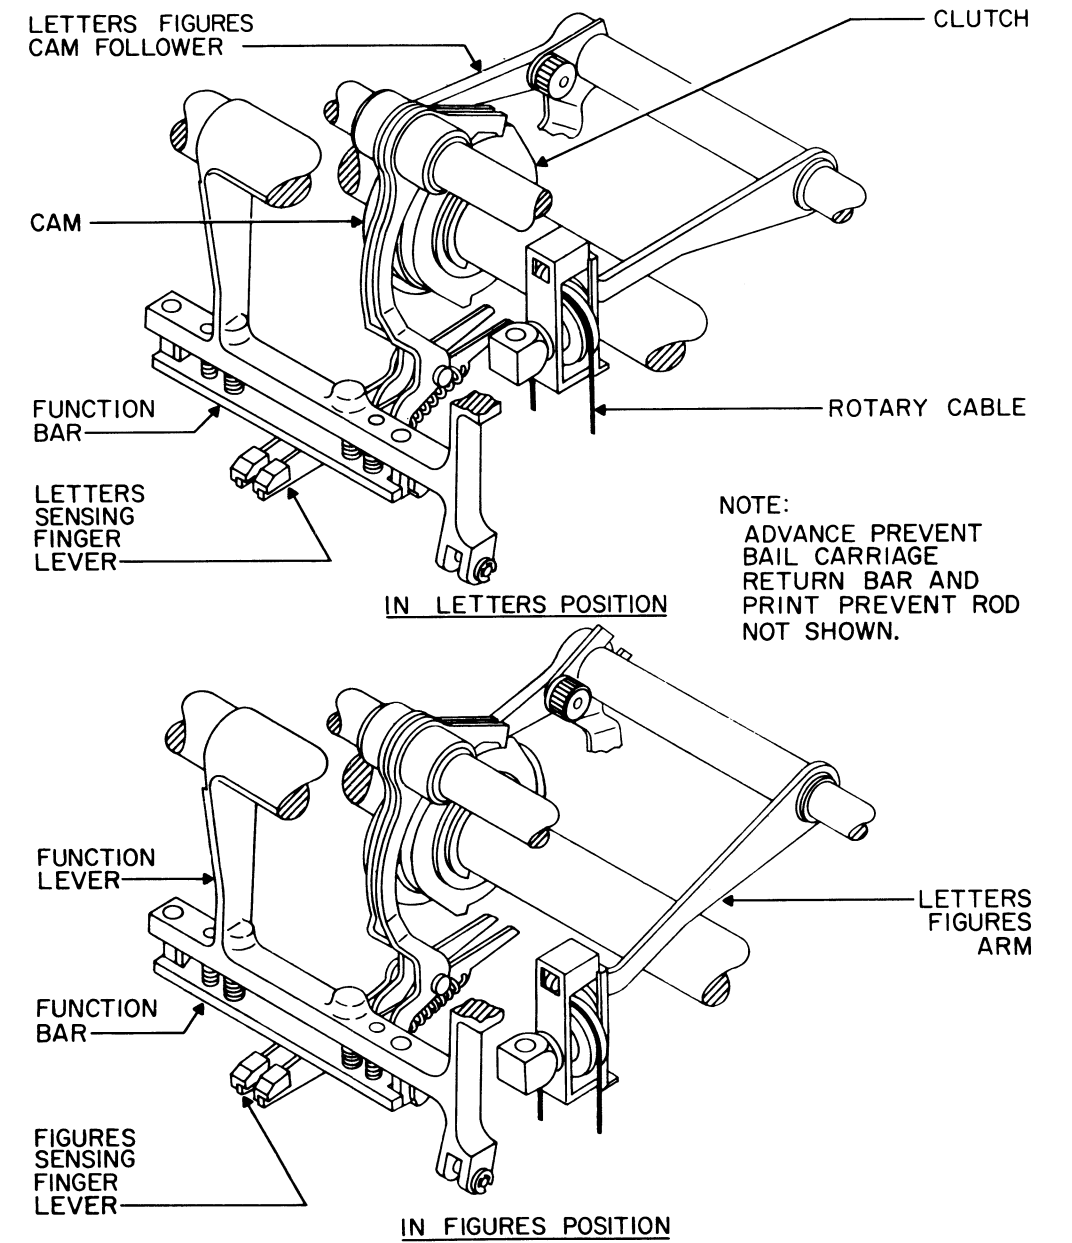


Figure 4-28. Function Selector, Letters Figures Linkage

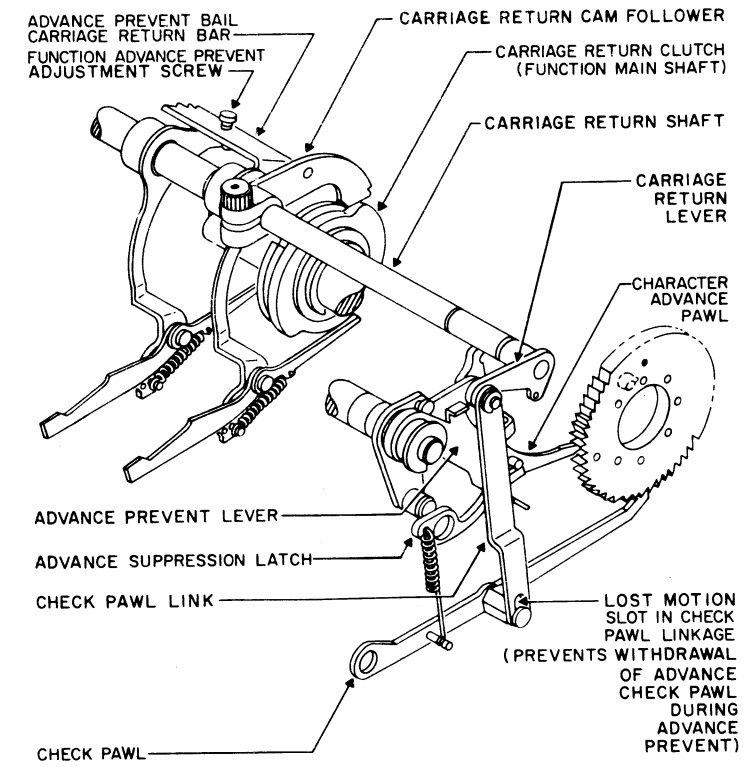


Figure 4-31. Function Selector, Character Advance Prevent Linkage

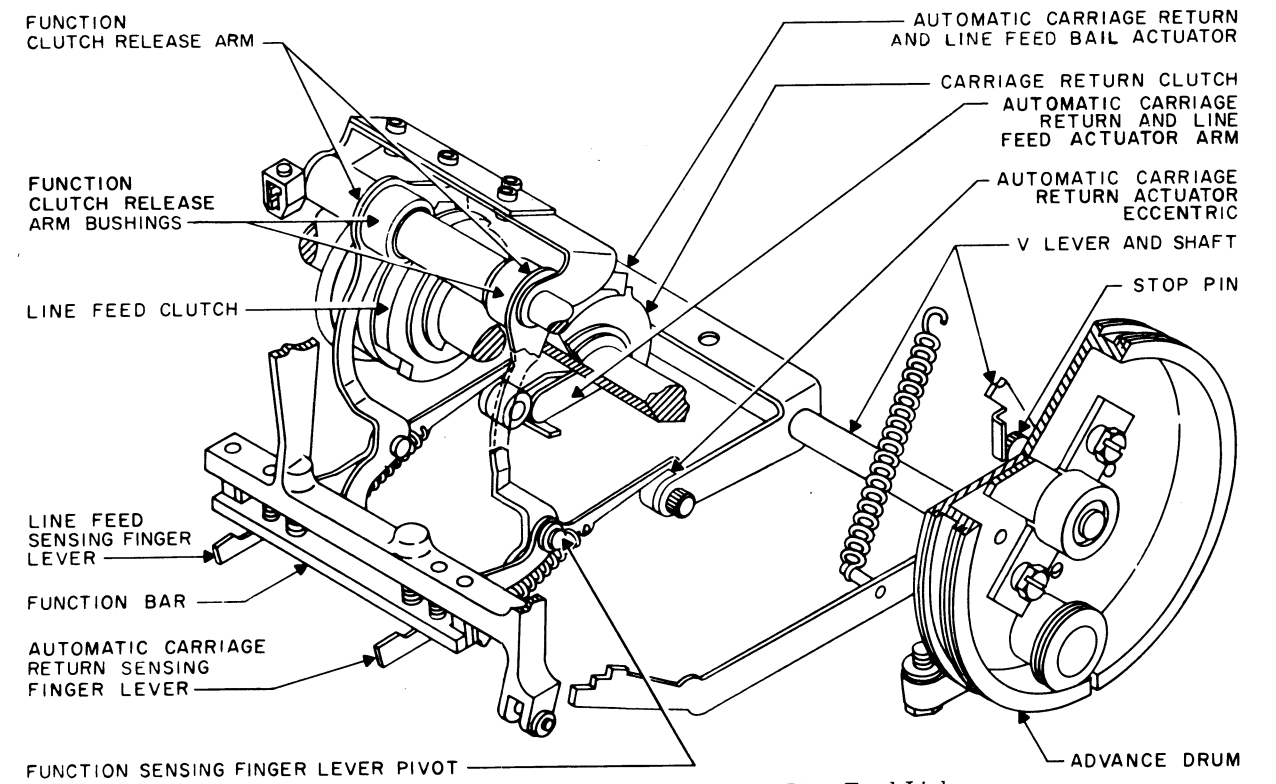


Figure 4-31A. Automatic Carriage Return and Line Feed Linkage

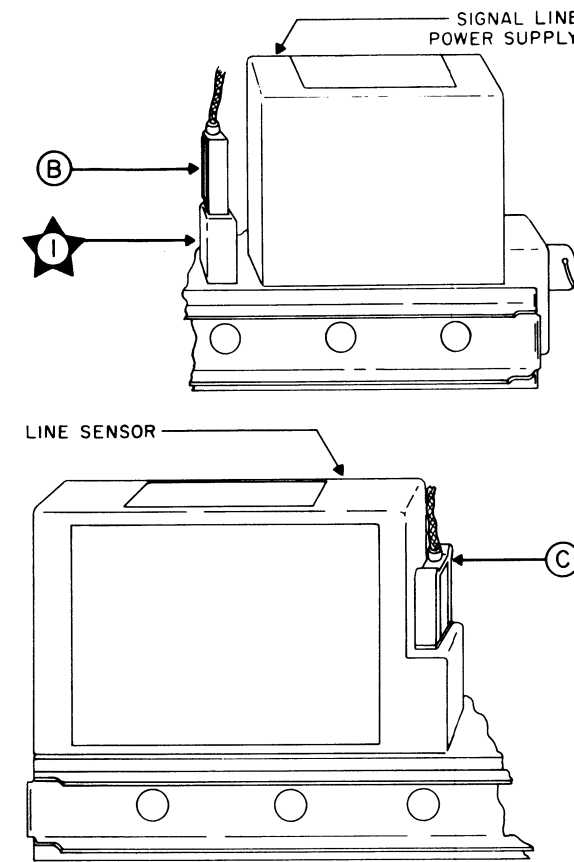


Figure 4-34. Printer 1A2,
Location of Test Points

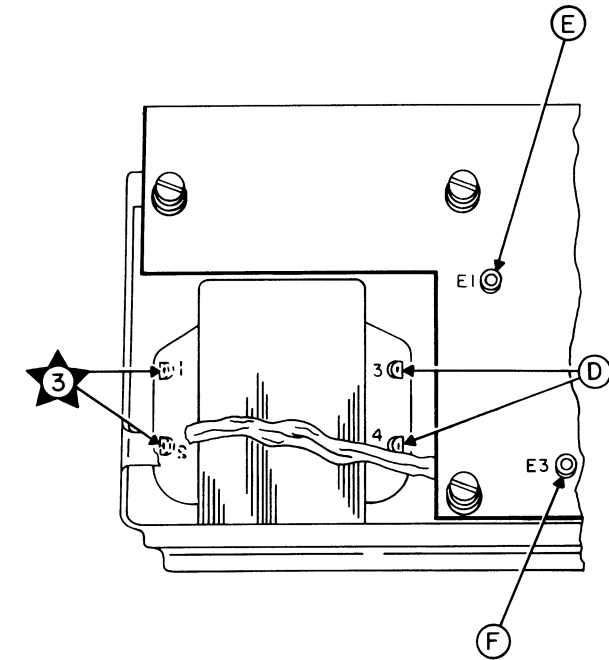


Figure 4-36. Signal Line Power Supply 1A4,
Location of Test Points

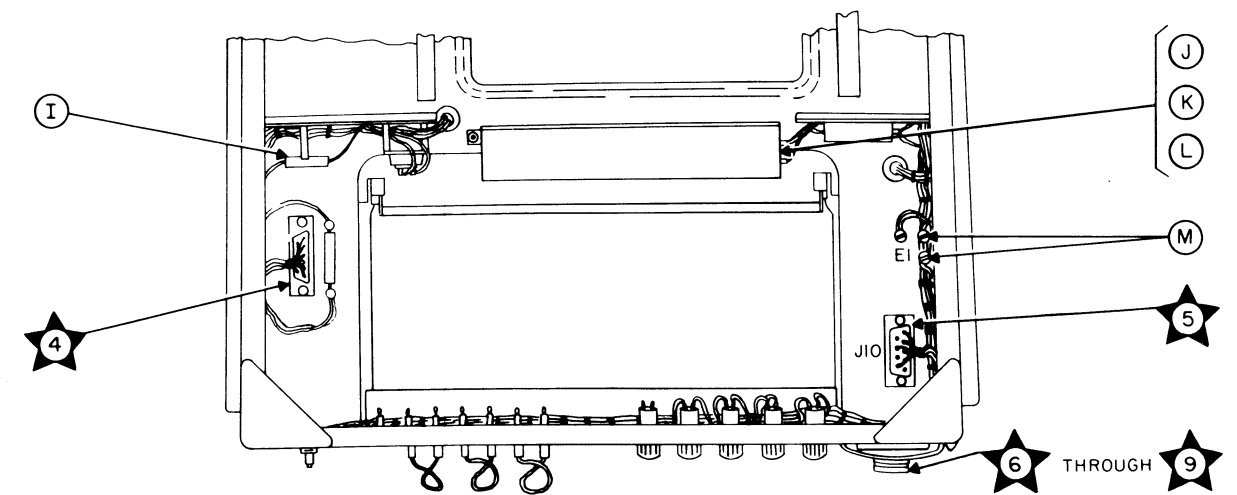


Figure 4-37. Electrical Chassis 1A1, Location of Test Points

TABLE 5-1. TEST EQUIPMENT AND TOOLS REQUIRED

TEST EQUIPMENT AND TOOLS	PREVENTIVE MAINTENANCE	MAINTENANCE STANDARDS	REPAIR
Multimeter AN/PSM-4	X	X	
Electronic Multimeter TS-505/U			X
Oscilloscope AN/USM-24 or AN/USM-105			X
*Teletypewriter Tool Kit TK-122/U			X
Materials			
Oil, Non-fluid			
MITE Part No. 34303			
1-pint plastic bottle			
FSN 5815-869-9148			
Grease			
MITE Part No. 05041-0001			
8 ounce tube			
FSN 9150-261-8297			

*This tool kit contains all required special tools and gages.

TABLE 5-2. OPERATOR'S DAILY CHECKOFF LIST

STEP NO.	ACTION REQUIRED	PROCEDURE
1	<p>Operating conditions and control settings: MOTOR and LAMP switches: ON SEND•REC-REC switch: SEND-REC Equipment patched for off-line local mode (paragraph 2-9). Refer to Section 3 for operating instructions.</p> <p>Test overall operation of teletypewriter set with Keyboard in operating position.</p>	<p>A. Depress LTRS key and type out test message. Observe that machine prints clearly with no garbles.</p> <p>B. On AN/TGC-14(V), depress FIGS key and then depress STOP key; observe that motor stops. On AN/TGC-14A(V), observe that motor stops after 60 to 90 seconds (75 baud and 45.45 baud respectively) of inactivity with time delay MOTOR STOP switch in ENABLE position.</p> <p>C. Depress BREAK button. Observe that motor starts.</p> <p>D. Type out a complete row of characters and observe that automatic carriage return and line feed take place after 72 or 76 characters have been printed.</p> <p>E. Test all off line function buttons on the printer front cover for proper operation.</p> <p>F. Operate all other controls and check for binding or improper operation.</p> <p>G. Set SEND•REC-REC switch to REC position. Arrange to have test sentence sent from a remote station. Operate local keyboard and observe that received message is clear and correct. This indicates that the SEND•REC-REC switch is operating correctly.</p>

TABLE 5-3. OPERATOR'S WEEKLY CHECKOFF LIST

STEP NO.	ACTION REQUIRED	PROCEDURE
1	Operating conditions and control settings: Primary power removed. Teletypewriter set removed from case. Inspect components.	Inspect cables and lateral control belt for wear. Inspect ribbon for dryness.
2	Clean mechanical parts.	Using a rag or brush, clean print hammer shaft and print cylinder and yoke shafts.
3	Clean and oil air filter.	Take out case air filter and dip in cleaning fluid (Federal Specification P-S-661). Blow dry using clean dry air or allow to air dry. Immerse in S.A.E. 30 oil and blow excess oil off while rotating filter.
4	Inspect all mechanical parts for security.	Remove paper guide; inspect ribbon feed mechanism and all other mechanical parts for binding or damage.
5	Inspect electrical cables.	Inspect service cable wiring and binding posts for damage.
6	Inspect electrical chassis rear panel.	Inspect option patch connections for security. Inspect fuse posts for security and damage.

TABLE 5-4. TECHNICIAN'S DAILY CHECKOFF

STEP NO.	ACTION REQUIRED	MAINTENANCE STANDARD REFERENCE NUMBER(Refer to Table 5-8, Appendix)
1	Operating conditions and control settings: Primary power removed. Teletypewriter Set removed from case. Clean the teletypewriter set as required.	A9
2	Inspect teletypewriter set.	A10
3	Check paper supply.	A11
4	Lubricate (if necessary)	A12

TABLE 5-5. TECHNICIAN'S WEEKLY CHECKOFF

STEP NO.	ACTION REQUIRED	MAINTENANCE STANDARD REFERENCE NUMBER (Refer to Table 5-8, Appendix)
Operating conditions and control settings: Primary power removed (Steps 1 & 2) Primary power connected (Steps 3 through 8) Teletypewriter set removed from case (5-4b(3)). Equipment patched for Mode 1 (paragraph 2-9).		
1	Lubricate unit	A12
2	Slide alignment and takeup arm adjustment.	A1 - A2
3	Check selection of functions.	A17
4	Check range.	A8
5	Detent pin.	A3
6	Hammer alignment.	A4
7	Measure internal signal line current.	A20
8	Measure primary power source.	A24
9	Check cables and lateral control belt for wear.	A10

TABLE 5-6. TECHNICIAN'S MONTHLY CHECKOFF

STEP NO.	ACTION REQUIRED	MAINTENANCE STANDARD REFERENCE NUMBER (Refer to Table 5-8, Appendix)
Operating conditions and control settings: Primary power moved (Steps 2, 4, 5, and 6). Primary power connected (Steps 1, 3, and 7). Equipment patched for Mode 1 (paragraph 2-9). Teletypewriter set removed from case 5-4b (3).		
1	Motor Stop Check Time Delay Figures H	A7a A7b
2	Disassemble and inspect	A13
3	Check stroke	A5 - A6
4	Clean filter	A22
5	Clean and lubricate unit	A9 - A19
6	Inspect and check chassis	A18 - A20
7	Master pulsing contacts	A18

TABLE 5-7. TECHNICIAN'S QUARTERLY CHECKOFF

STEP NO.	ACTION REQUIRED	MAINTENANCE STANDARD REFERENCE NUMBER (Refer to Table 5-8, Appendix)
Operating conditions and control settings: Primary power removed (Steps 1, 2, 4, and 5). Primary power connected (Step 3). Equipment patched for Mode 1 (paragraph 2-9). Teletypewriter set removed from case (5-4b (3)).		
1	Clean selector assembly.	A14
2	Clean motor assembly.	A15
3	Adjustment checks.	A16
4	Shock mounts.	A23

TABLE 5-8. MAINTENANCE STANDARDS

REFERENCE NO.	MAINTENANCE STANDARDS	ADJUSTMENT PARAGRAPH NO.
NOTE The following maintenance standards are keyed to the Technician's Checkoff Lists, tables 5-4 through 5-7 and to the related adjustment procedures. CAUTION Do not perform any adjustment sequence without first checking the adjustment to insure that the suspect adjustment is incorrect.		
A1	SLIDE ADJUSTMENT Position the printer in letter A with the function clutch in the stop position. Check for proper alignment of rotary and lateral slide index mark on the function selector frame.	5-4e(3)(b) 5-4e(4)(b)
A2	TAKEUP ARM PULLEY AND TAKEUP DRUM Check for approximately 1/16 inch clearance between the O.D.'s of the takeup arm pulley and the takeup drum (in letters A).	5-4e(4)(a)
A3	ROTARY DETENT PAWL PIN CLEARANCE Check that the detent pin clears the points of the index wheel by at least 0.010 inch when print function clutch is in stopped position.	5-4e(7)

TABLE 5-8. MAINTENANCE STANDARDS (Cont.)

REFERENCE NO.	MAINTENANCE STANDARDS	ADJUSTMENT PARAGRAPH NO.
A4	<p>HAMMER ALIGNMENT WITH "A"</p> <p>Position printer in letter "A". Check alignment of hammer with "A" halfway across line.</p>	5-4e(12)
A5	<p>ROTARY STROKE</p> <p>Check for rotary motion of print cylinder to the type strips containing the letters A, E, L, and T.</p>	5-4e(17)(a)
A6	<p>LATERAL STROKE</p> <p>Check for lateral alignment of print cylinder behind the hammer for the letters A, W, J, and U.</p>	5-4e(17)(b)
A7	MOTOR STOP	
A7a	<p>On AN/TGC-14A(V) check for motor shut down in approximately:</p> <p>60 sec. at 75 baud (No signal received) 90 sec. at 45.45 baud (No signal received)</p>	5-4e(23)(a)
A7b	<p>On AN/TGC-14(V), depress FIGS key and then depress STOP key; observe the motor stops.</p>	5-4e(23)(b)
A8	<p>RANGE OF PRINTER:</p> <p>Check for minimum of 70 points of range at 100 wpm. (AN/TGC-14(V) or 75 baud (AN/TGC-14A(V)))</p> <p>Hi - Low = points of range</p> <p>To find the points of range subtract the lowest point on the range dial where the signal can be accepted without errors from the highest point on the range dial where the signal can be accepted without errors. (Minimum points of range at 100 wpm should be 70 points).</p>	5-4e(2)(b)
A9	CLEAN PRINTER UNIT	
<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">Insure that springs and adjustable parts are not disturbed.</p> <p style="text-align: center;">Use a soft lint-free cloth and clean the cylinder, yoke, and hammer shafts. If exceptionally dirty apply a few drops of oil to the shafts while running and then wipe completely dry. Wipe off all dust, lint, and paper shavings. Special attention should be paid to the keyway in the print cylinder shaft.</p>		
A10	INSPECT PRINTER UNIT	
<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">Never increase tension on print hammer for darker copy. Replace ribbon if darker copy is desired.</p> <p style="text-align: center;">Inspect ribbon for wear and frayed edges. Inspect cables for fraying, wear, or cuts.</p>		

TABLE 5-8. MAINTENANCE STANDARDS (Cont.)

REFERENCE NO.	MAINTENANCE STANDARDS	ADJUSTMENT PARAGRAPH NO.
NOTE		
Check print hammer disconnect adjustment if ribbon replacement does not provide darker copy.		5-e(14)
A11	<p style="text-align: center;">CHECK PAPER SUPPLY</p> <p>Insure that sufficient paper is on roll and that it is properly installed.</p>	
A12	<p style="text-align: center;">LUBRICATION</p>	
<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">Never lubricate the cylinder, hammer or yoke shafts. (Refer to lubrication schedule).</p>		
A13	<p style="text-align: center;">DISASSEMBLE AND INSPECT PRINTER UNIT</p>	
<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">Use only low pressure air to clean unit. Insure that springs are not disengaged or lost.</p>		
	<p>Disassemble printer unit into four major assemblies. Inspect for loose, broken, or worn parts. Clean off all excessive oil and grease. (Make a small diagram of timing mark alignment, before removing mainshaft from frame) Refer to figure 5-99, for location of timing marks only.</p>	5-4(g)
A13a	<p style="text-align: center;">INSPECT MAINSHAFT</p> <p>Clean off all excessive grease and oil from clutches and the area between the clutches. Check to insure that all cages move freely and relubricate with oil.</p>	
A13b	<p style="text-align: center;">REASSEMBLE PRINTER UNIT</p> <p>Replace all worn, broken, or missing parts as required. Check for proper alignment of timing marks on mainshaft and timing shaft when reassembling front and rear halves of printer. (Refer to timing mark diagram prepared during disassembly)</p>	
A14	<p style="text-align: center;">SELECTOR MECHANISM</p> <p>Remove the selector and clean in residue free solvent. Relubricate bearings and felts with oil, place one drop of oil on all carbide surfaces. Replace selector in printer.</p>	
A15	<p style="text-align: center;">MOTOR ASSEMBLY</p> <p>Remove motor and inspect first reduction gear and pinion gear for wear or damage. Lubricate gears with grease prior to reassembly.</p>	
<p style="text-align: center;">CAUTION</p> <p style="text-align: center;">Never remove gear head from 400 cycle motors.</p>		

TABLE 5-8. MAINTENANCE STANDARDS (Cont.)

REFERENCE NO.	MAINTENANCE STANDARDS	ADJUSTMENT PARAGRAPH NO.
A16	<p>CHECK ADJUSTMENTS</p> <p>The following adjustments should be checked and readjusted if necessary.</p> <ul style="list-style-type: none"> a. Start Clutch Release b. Selector c. Rotary and Lateral Stroke d. First Character e. Character Advance f. Automatic CR & LF 	<p>5-4e(5) 5-4e(16) 5-4e(17) 5-4e(21) 5-4e(8) 5-4e(9)b</p>
A17	<p>CHECK FOR PROPER OPERATION OF FUNCTIONS</p>	
NOTE		
	<p>Check slide and stroke adjustment prior to checking individual function clutches and linkages, if functions do not operate.</p>	<p>5-4e(3)(b) 5-4e(4)(b) 5-4e(17)</p>
A18	<p>Blank Bell Space Letters Line Feed Carriage Return Figures</p> <p>MASTER PULSING CONTACTS</p> <p>Continuously transmit the letter "R" using the repeat key. This checks the upper contact screw adjustment. Continuously transmit the letter "Y" using the repeat key. This checks the lower contact screw adjustment.</p>	<p>5-4e(25)(i) or 5-4e(27)(b)</p>
A19	<p>KEYBOARD INSPECTION</p> <p>Inspect the keyboard for worn, broken or loose parts. Check for accumulation of dirt and grease. Clean keyboard with a lint-free cloth and relubricate using oil on all linkages and grease on gears.</p>	
A20	<p>INTERNAL LINE CURRENT</p> <p>Check internal line current for 20 to 80 ma settings (60 ma is average) in the high range and 2.5 ma in the low range.</p>	<p>5-4e(29)</p>
A21	<p>INSPECT CHASSIS</p> <p>Inspect the chassis for loose components and frayed or damaged wiring. Check for proper fuses and proper patching for mode of operation required. Wipe off all excess oil and grease on the chassis.</p>	
A22	<p>AIR FILTER</p> <p>Clean air filter as per printed instructions on the filter.</p>	
A23	<p>SHOCK MOUNT</p> <p>Inspect shock mount for security. Check to insure that no foreign matter is interfering with operation of the shock mount.</p>	
A24	<p>MEASURE PRIMARY POWER SOURCE</p> <p>Set Multimeter AN/PSM-4 to measure a-c voltage of 0 to 250 volts; connect leads across primary power source and check for correct primary power.</p>	

TABLE 5-9. LUBRICATION INSTRUCTIONS

FIGURE AND INDEX NO. (APPENDIX)	LUBRICATION OR CHECK POINT	SPECIAL INTERVAL	PERIODIC INTERVALS		
		ANY REASSEMBLY	EVERY 250 HOURS	EVERY 1000 HOURS	EVERY 3000 HOURS
PRINTER ASSEMBLY					
5-14	Clutch backstop lever surfaces where they meet clutches.	0	0		
5-21(8)	Stop tab on all clutches.	0	0		
5-29 (6)(5)	Tab on carriage return lock lever where it meets pin in lock lever actuator arm.	0		0	
5-29(13, view B)	Carriage return lock lever and carriage return cam follower at meeting point.	0	0		
5-43(8)	Print prevent arm where print prevent rod lever engages.	0	0		W
5-70(5)	Range adjustment gear segment (on start clutch assembly).	0			0
5-70(21)	Clutch and cam rollers.	0	0		
5-78(22, 45, 10, 36, 34, 20, 16, and 12)	All bushings (felts), letters figures cam follower assembly and line feed actuator assembly mounted on mark and space clutch release selector shafts running length of printer on which are mounted the mark and space clutch release assemblies and type positioning cam followers.	0		0	
5-80(6)	Print hammer actuator link guide bracket.	0			0
5-82(60)	Print hammer actuator link lever pivot.	0	0		
5-82 (35 and 35)	Right-hand and left-hand bearings.	0	0		
5-83 (13 and 14)	Paper feed detent roller and pivot on paper feed detent arm.	0	0		W
5-83(15)	Pressure roll shaft.	0	0		

TABLE 5-9. LUBRICATION INSTRUCTIONS (Cont.)

FIGURE AND INDEX NO. (APPENDIX)	LUBRICATION OR CHECK POINT	SPECIAL INTERVAL	PERIODIC INTERVALS		
		ANY REASSEMBLY	EVERY 250 HOURS	EVERY 1000 HOURS	EVERY 3000 HOURS
5-84(9)	Carriage return spiral spring.	0		0	
5-84(37)	Print cam follower tip.	0			W
5-85(89)	Function cam follower tip.	0			W
5-85(91) and 5-95(42)	Check pawl guide bracket holding check pawl against advance drum.	0		0	
5-86(75) and 73)	Lateral control and rotary function slides.	0		0	
5-86(76)	Lateral control belt pulley assembly.	0		0	
5-86(91) and 54)	Lateral control and rotary chains	0	0		W
5-95	Rotary and lateral type posi- tioning cam follower stroke adjustment screw ends (1 through 5).	0			0
5-95(1)	Carriage return cam surface.	0	0		
5-95(3)	Automatic carriage return and line feed bail actuator eccentric.	0		0	
5-95(4)	Carriage return lock lever eccentric bushing.	0		0	
5-95(6)	Letters-figures clutch cam surface.	0	0		
5-95(8)	Line feed clutch cam surface.	0	0		
5-95(9)	Bushings at both ends of V lever shaft.	0		0	
5-95(32)	Function sensing finger lever stop strip.	0			0
5-95(33)	Off line function slide levers.	0			0
5-95(34)	Function sensing finger levers where they meet function bar.	0	0		W
5-95(34)	Function sensing finger lever pivots.	0	0		W
5-95(35) and 27)	Function and print spring yoke pivot studs and links.	0	0		W
5-95(38)	Paper feed detent and ratchet.	0	0		W

TABLE 5-9. LUBRICATION INSTRUCTIONS (Cont.)

FIGURE AND INDEX NO. (APPENDIX)	LUBRICATION OR CHECK POINT	SPECIAL INTERVAL	PERIODIC INTERVALS		
		ANY REASSEMBLY	EVERY 250 HOURS	EVERY 1000 HOURS	EVERY 3000 HOURS
5-95(40)	Line feed pawl at pivot point.	0	0		
5-95(40)	Line feed pawl guide bracket.	0			0
5-95(44)	First character adjustment screw (contact point).	0	0		
5-95(45)	Advance ratchet (tip).	0	0		W
5-95(46 thru 52)	Print prevent adjustment screw heads.	0		0	
5-96(21)	Rotary motion spring retainer.	0	0		
5-97(7)	Clutch release finger cam follower surfaces.	0			W
5-97(15)	Type positioning cam followers where they meet the carriage pulley surfaces and type positioning cams.	0	0		
5-97(23)	Start clutch backstop lever eccentric bushing.	0	0		W
5-97(24)	Start clutch release latch pin where it meets the fork in start clutch release arm.	0	0		W
5-97(30 thru 34, 36, 37)	Armature paddle latches where clutch release finger adjustment screws are engaged.	0		0	W
5-97(46)	V lever tab which meets pin in advance drum.	0		0	
5-97(50)	Carriage return shaft bushing between lever and carriage return cam follower on opposite end.	0		0	
5-97(51)	Character advance lever shaft bushings.	0	0		
5-97(52)	Advance prevent stop spring where it engages bail.	0		0	
5-101(1 and 20)	Bushings and pivots on link between rotary detent pawl and print shaft terminal lever.	0	0		W
5-101(3)	Character advance pawl eccentric bushing.	0	0		W
5-101(4 and 5)	Carriage return lever and advance prevent lever tab meeting point.	0			

TABLE 5-9. LUBRICATION INSTRUCTIONS (Cont.)

FIGURE AND INDEX NO. (APPENDIX)	LUBRICATION OR CHECK POINT	SPECIAL INTERVAL	PERIODIC INTERVALS		
		ANY REASSEMBLY	EVERY 250 HOURS	EVERY 1000 HOURS	EVERY 3000 HOURS
5-101(5 and 12)	Advance prevent lever tab where character advance pawl contacts.	0	0		
5-101(13 and 12)	Advance suppression latch where character advance pawl contacts.	0	0	0	
5-101(14)	Check pawl link at check pawl eccentric stud and opposite end.	0	0		
5-101(16)	Advance suppression latch eccentric bushing.	0	0		
5-101(18)	Rotary detent pawl eccentric bushing.	0	0		W
5-101(19)	Check pawl eccentric bushing.	0	0		W
5-101(21)	Rotary detent pawl adjustment screw tip.	0	0		
5-101(23)	Rotary detent pawl pin.			W	
5-101(24)	Index wheel.	0	0		
5-102	Shaft bearings (12 each).	0	0		
5-103	Takeup arm bushing.	0	0		
	All gears in equipment.	G	G		
	All spring loops in equipment.	0	0		0
5-103	Print hammer release bushing.	0	0		
5-103	Print shaft terminal lever where it meets print hammer actuator link and print hammer release.	0	0		W
TIME DELAY MOTOR STOP MECHANISM (AN/TGC-14A(V) only)					
5-69(1)	Advance ratchet.	0	0		W
5-69(2)	Return spial spring. (Do not disassemble ratchets; apply drop of oil between ratchets.)	0		0	
5-69(3)	Reduction ratchet.	0		0	W
5-69(8)	Time delay switch actuator.	0		0	
5-69(12)	Time delay secondary check pawl.	0		0	W
5-69(23)	Timing cam shaft extension.	0	0		W
5-69(26)	Time delay feed and check pawl guide.	0		0	

TABLE 5-9. LUBRICATION INSTRUCTIONS (Cont.)

FIGURE AND INDEX NO. (APPENDIX)	LUBRICATION OR CHECK POINT	SPECIAL INTERVAL	PERIODIC INTERVALS		
		ANY REASSEMBLY	EVERY 250 HOURS	EVERY 1000 HOURS	EVERY 3000 HOURS
5-69(31)	Time delay feed pawl assembly.	0		0	W
5-69(33)	Time delay check pawl as- sembly.	0		0	W
5-69(35)	Felt Washer	0	0		
5-69(39)	Sleeve	0	0		
	All spring hooks (both ends).	0	0		0
5-69(46)	Roller	0		0	
5-69(47)	Detent spring.	0		0	
KEYBOARD					
5-104	Keyboard cam wick.	0	0		W
5-104	Entire Clutch.	0	0		
5-104	Clutch release cam follower eccentric (felt).	0	0		
5-104	Clutch backstop bushing.	0	0		
5-105	Keyboard code bar prevent lever cam	0	0		
5-105	Pulsing finger bushings (felts)	0	0		
5-105	Key lever leaf springs where they contact key levers.	0	0		
5-105	Clutch release bail bearings.	0	0		
5-105	Repeat key shaft ends.	0		0	
RIBBON FEED MECHANISM					
5-96	Ribbon feed slip clutch gear shaft bearings.	0		0	
5-96	Ribbon spool drive gears.	G	G		
5-96	Reversing cam followers (point of contact)	0			
5-96	Ribbon spool drive gear bearings.	0		0	
5-96	All spring loops.	0			0
5-96(2)	Ribbon feed clutch stop (stop tab contact point).	0			

TABLE 5-9. LUBRICATION INSTRUCTIONS (Cont.)

FIGURE AND INDEX NO. (APPENDIX)	LUBRICATION OR CHECK POINT	SPECIAL INTERVAL	PERIODIC INTERVALS		
		ANY REASSEMBLY	EVERY 250 HOURS	EVERY 1000 HOURS	EVERY 3000 HOURS
5-96(3)	Riboon rollers.	0		0	
5-96(4, 27)	Left-hand and right-hand tension control brake arms (pivot points).	0		0	
5-96(5)	Ribbon reversing sliding plate assembly (slots).	0		0	
5-96(17)	Clutch shaft worm gear assembly.	G	G	G	
5-96 (24 and 23)	Ribbon feed friction felt washer and bearing felt washers.	0	0		
5-96 (26 and 6)	Left-hand and right-hand ribbon reversing sensing arm pivot points.	0		0	
5-96(29)	Ribbon feed backstop (where it rides clutch).	0	0		
ELECTRICAL CHASSIS					
5-90(6)	Paper brake link pivots.	0	0		0
5-90(11)	Dancer roll tube bearings (paper brake release arm).	0	0		0

TABLE 5-10. TENSION VALUES

FIGURE AND INDEX (APPENDIX)	ITEM	LOAD LENGTH (INCHES)	LOAD (OUNCES)
5-69 (30)	Time Delay Feed Pawl Helical Spring	1.000 ±0.0312	2.5
5-69 (2)	Return Spiral Spring		1.5 ±0.15 in.-oz at 1/2 turn; 2.6 ±0.26 in.-oz at 1-1/2 turns.
5-69 (47)	Detent Spring		5 oz (To move from detent.)
5-69 (14)	Time Delay Secondary Check Pawl Spring	0.6250 ±0.0312	1.5
5-70 (4)	Backstop Lever Spring	0.8750	32-36
5-75 (9); 5-76 (10)	Selector Shaft Bias Spring	1.1406 ±0.0156	5.6432
5-77 (43)	Lock Lever Actuator Arm Helical Spring	1.0625	3
5-77 (44)	Automatic Carriage Return and Line Feed Bail Actuator Helical Spring	1.3125	7.5
5-78 (9)	Clutch Backstop Spring	1.125	28
5-78 (35)	Inter-arm Spring	1.312	32-34
5-78 (26)	Line Feed Pawl Spring	1.375	3
5-78 (18)	Safety Spring	0.6875	60±5
5-78 (51)	Print and Function Clutch Release Arm Spring	1.0625- 1.125	16-18
5-78 (60)	Timing Cam Shaft Spring (Compression)	0.250	16-25
5-79 (26)	Detent Helical Spring (Compression)	0.375	6
5-79 (10)	Function Helical Spring	2.375 2.750	32±3.2 42±4.2
5-79 (18)	Print Helical Spring	2.375 2.750	16±1.6 20±2.0
5-80 (Insert)	Actuator Spring (AN/TGC-14 (V) only)	90 degrees	0.28216-0.52905
5-80 (Insert)	Code Bar Spring (AN/TGC-14(V) only)	0.9375 1.1094	9±1 12±1
5-80 (Insert)	Compression Spring (AN/TGC-14(V) only)	0.2812	4±0.5
5-82 (13)	Rotary Motion Spring		2.7 in.-oz at 4 turns.
5-82 (54)	Print Hammer Return Spring	1.1875	9-11
5-82 (50 and 43)	Vibrator Arm (Ribbon)		2.5 (to open)
	Pad Spring	84 degrees	6-8
5-83 (29)	Paper Pressure Release Lever Spring	1.000	2 (min.)
5-83 (18)	Pressue Roll Spring	0.480	32-36
5-83 (5)	Paper Feed Detent Spring	0.8437 0.9062	24 32
5-84 (9)	Carriage Return Spiral Spring		16 in.-oz at 1 turn; 19-22 in.-oz at 4 turns
5-84 (23)	Lateral Tension Helical Spring	0.640 (max. deflection)	30±1
5-84 (29)	Range Finder Lock Helical Spring (Compression)	0.500	15
5-85 (27)	Advance Prevent Lever Spring	1.125	5

TABLE 5-10. TENSION VALUES (Cont)

FIGURE AND INDEX (APPENDIX)	ITEM	LOAD LENGTH (INCHES)	LOAD (OUNCES)
5-85 (25)	Bounce Prevent Lever Spring	1.6250	30
		1.750	40
5-85 (36)	Character Advance Pawl Spring	0.5937	9
		0.5312	7
5-85 (60); Figure 5-34	Lifter Arm Spring	0.049	18
5-85 (88); Figure 5-23	Function Lever Compression Spring	0.375	32
5-85 (52)	Rotary Detent Pawl Spring	1.125	29
		1.1875	36
5-85 (62); Figure 5-30	Check Pawl Spring	0.875	4
5-86 (Insert)	Return Stop Spring	180 degrees	2-3
5-86 (25)	Function Backstop Spring	1.000	23
		1.0625	25
5-86 (22)	Function Clutch Release Arm Return Helical Spring	1.250	5
		1.5625	8
5-86 (12)	Function Sensing Finger Lever Helical Spring	0.625±0.0312	8
5-86 (23)	Off Line Letters Sensing Finger Lever Spring	0.500±0.0312	4
5-86 (38)	Print Prevent Rod Actuator Arm Bias Spring	1.9375	1.5
5-86 (82)	Slack Takeup Spring (Compression)	1.000	3
		0.437	8-10
5-86 (96 and 49)	Lateral Control Belt Strip and Rotary Cable Strip Safety Spring	1.125	4
5-86 (104)	Off Line Function Return Helical Spring	0.875	6
		1.093	9
5-87 (Insert)	Compression Spring (AN/TGC-14(V) only)	0.234±0.010	2±0.5
5-87 (47)	Spring	0.4687	2±0.5
5-87 (37)	Spring	1.125	8±0.5
5-87 (24)	Secondary No. 3 Cam Follower Spring	1.750	28±3
		1.9375	40±4
5-88 (19)	Ribbon Feed Backstop Helical Spring	1.2187±0.0312	28-32
5-88 (6)	Clutch Stop Helical Spring	1.0937	8
		1.1562	10
5-88 (22)	Reversing Cam Follower Spring	1.500	20±1
5-88 (26)	Tension Control Brake Arm Spring	1.250	10±1
5-89 (58) (Sheet 1)	Keyboard Lock Bar Helical Spring	1.312	10±1
5-89 (14) (Sheet 1)	Helical Spring	1.0312	15±2
5-89 (16) (Sheet 1)	Helical Spring	1.000	24±2
5-89 (11) (Sheet 2)	Clutch Release Helical Spring	1.0625	3
5-89 (8) (Sheet 3)	Backstop Spring	0.750	22±2
5-89 (21) (Sheet 2)	Repeat Key Lever Helical Spring	1.000	35±2
5-89 (40)	Spring	0.4062	6
		0.6562	12
5-90 (13)	Paper Brake Link Spring	1.000	2.5
		1.1875	3

TABLE 5-10. TENSION VALUES (Cont)

FIGURE AND INDEX (APPENDIX)	ITEM	LOAD LENGTH (INCHES)	LOAD (OUNCES)
5-90 (38**)	Contact Block (Breaker)		1.5 (to open)
4-7	Clutch Bias Compression Spring	0.156	3
4-32	Off Line Function Button Spring	0.6562 0.8594	5±2 14±2
3-1 (4*)	Helical Compression Spring	0.2187	6-8

*Part of copy window release mechanism.

**Part of contact block.

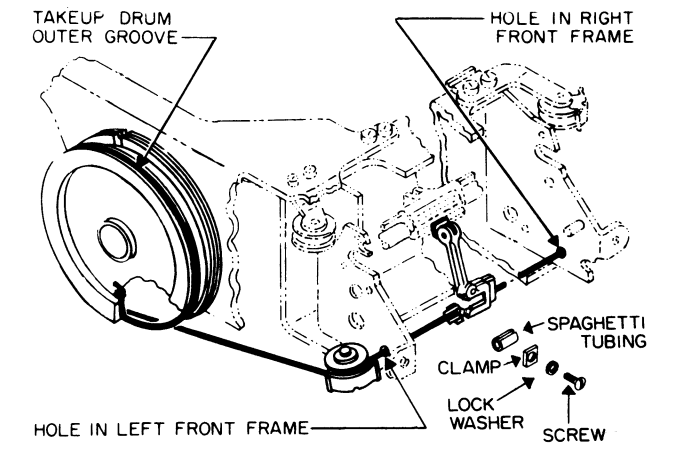


Figure 5-1. Hammer Clamp Location

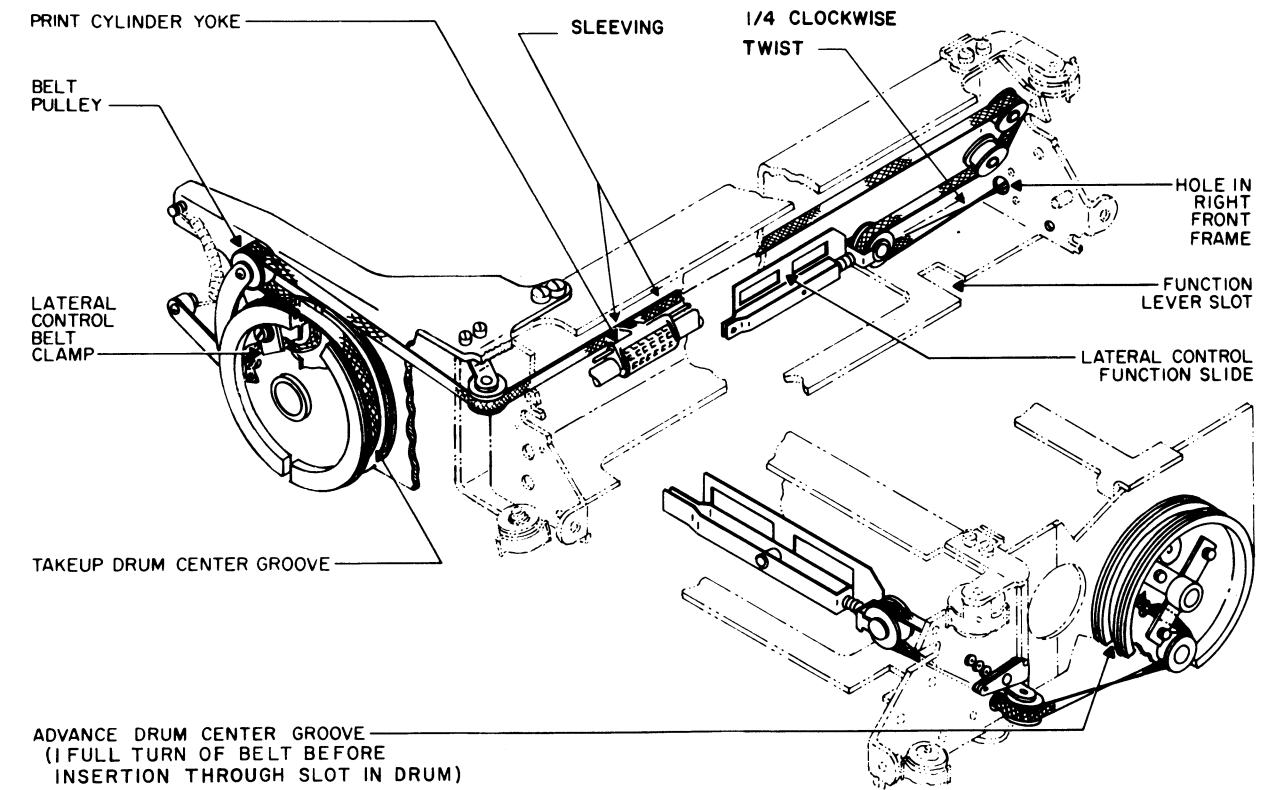


Figure 5-1A. Fiberglass Lateral Control Belt Installation, Belt Threading Diagram

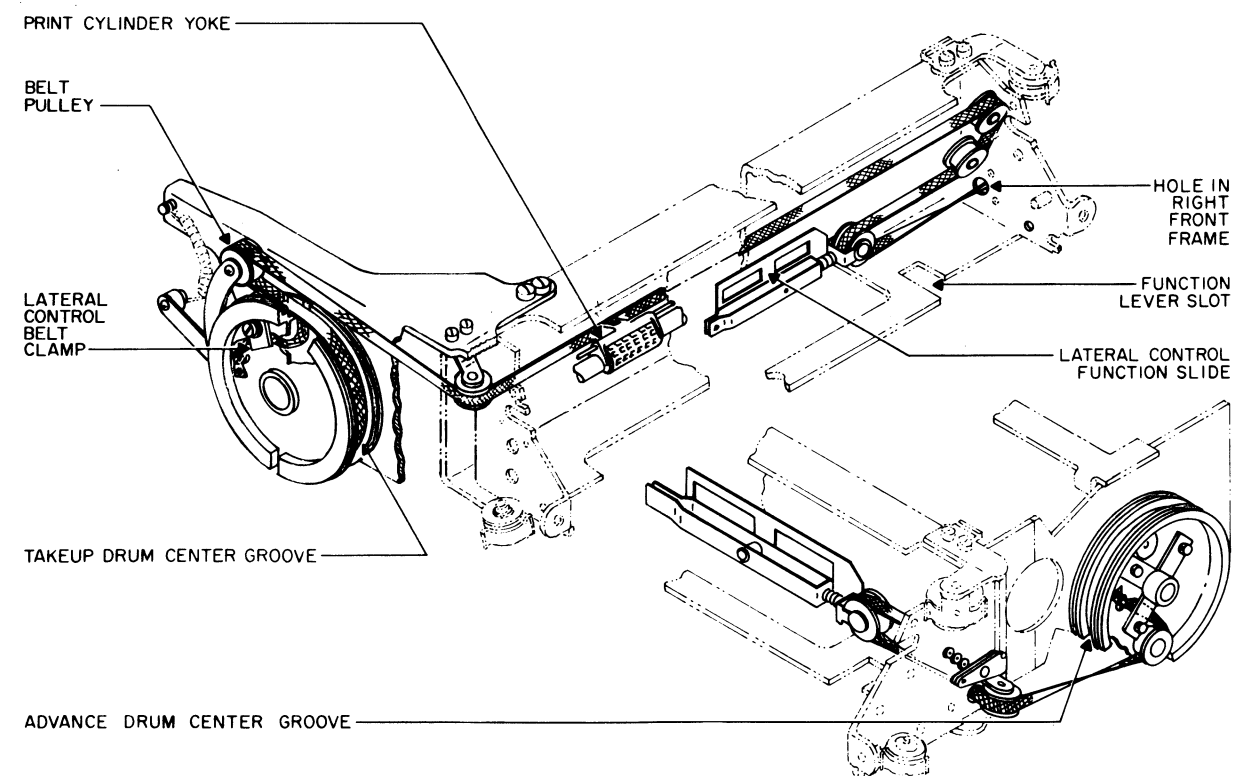


Figure 5-2. Nylon Lateral Control Belt Installation, Belt Threading Diagram

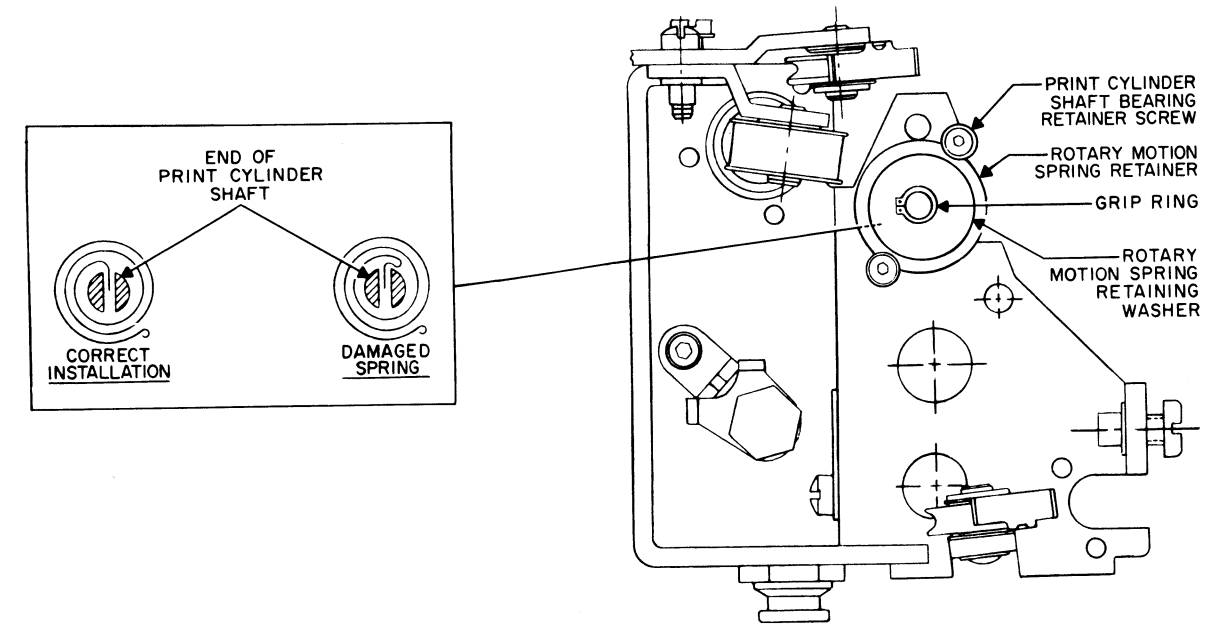


Figure 5-3. Rotary Cable Installation, Left-Side View

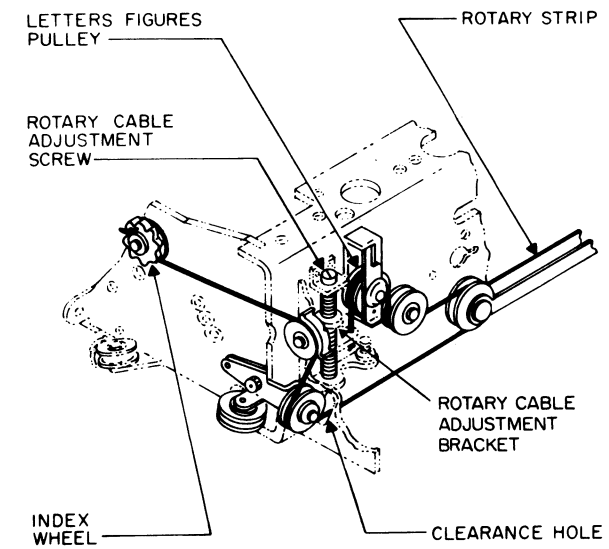


Figure 5-4. Rotary Cable Installation, Cable Threading Diagram

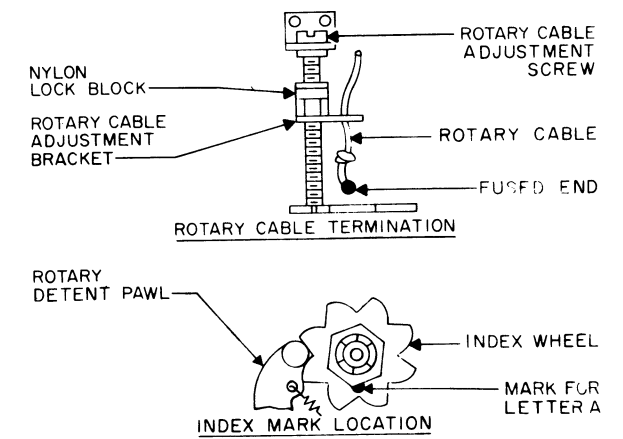


Figure 5-5. Rotary Cable Installation, Detail Views

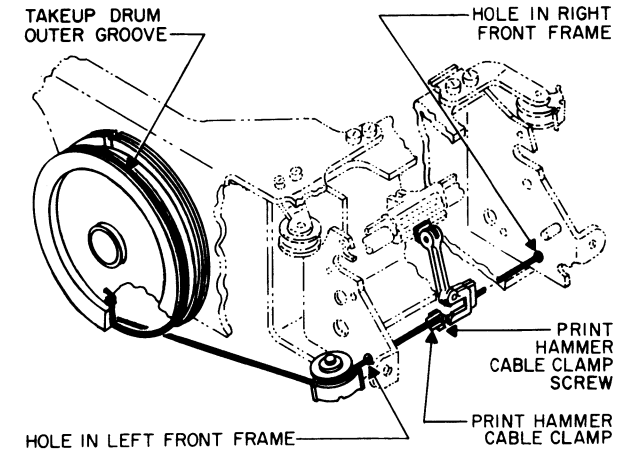


Figure 5-6. Print Hammer Cable Installation,
Cable Threading Diagram

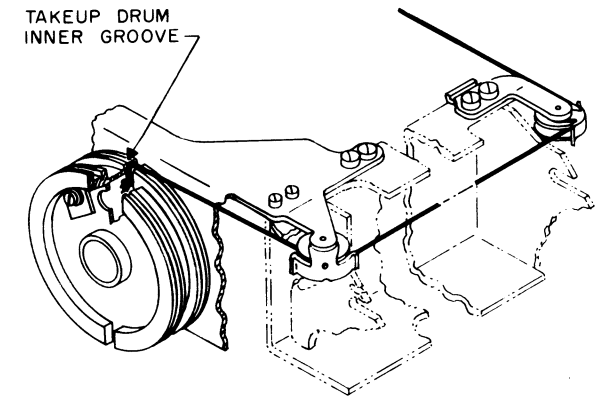


Figure 5-8. Return Cable Installation,
Cable Threading Diagram

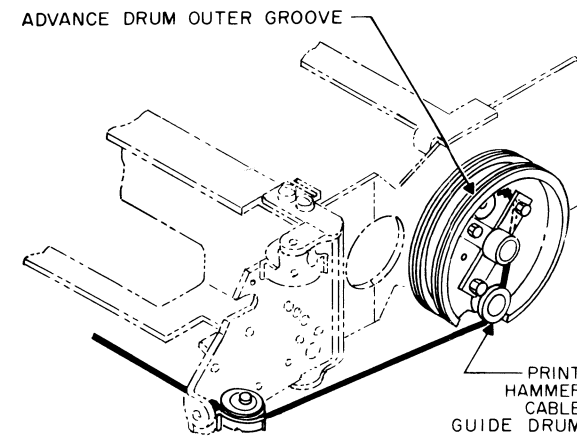


Figure 5-7. Print Hammer Cable Installation,
Securing Cable to Advance Drum



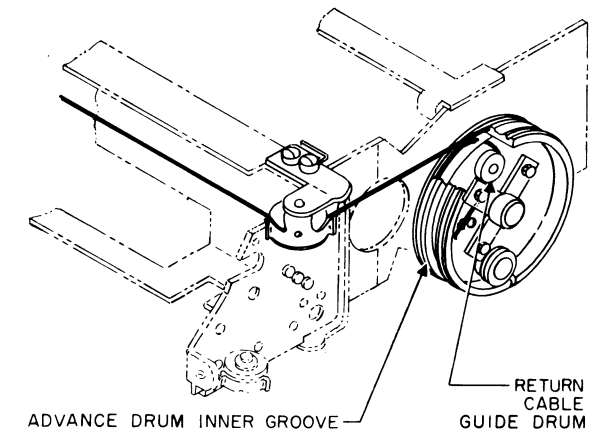


Figure 5-9. Return Cable Installation,
Securing Cable to Advance Drum

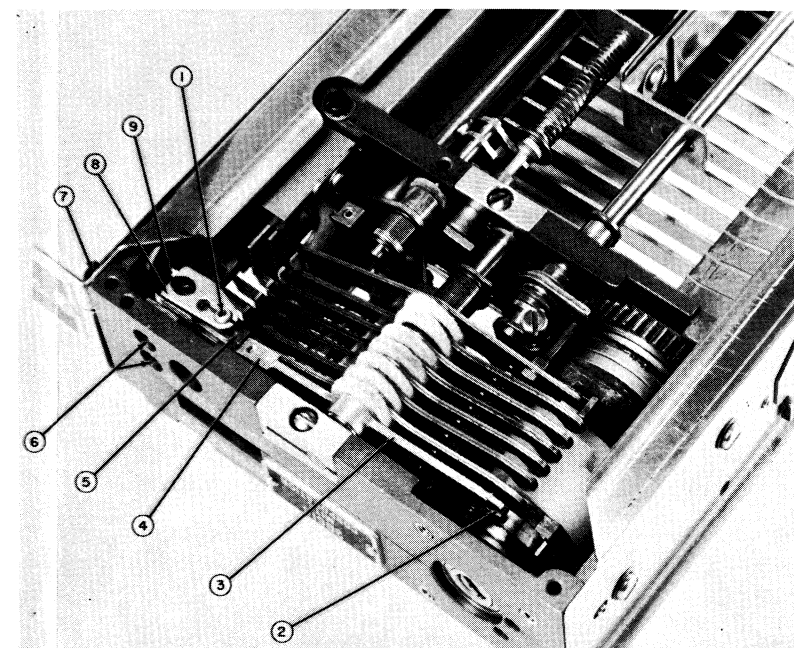

- 1 Adjustment Setscrew
- 2 Cam Follower Tip
- 3 Master Pulsing Cam Follower
- 4 Master Pulsing Cam Follower Screw
- 5 Contact Actuator
- 6 Attaching Screws
- 7 Keyboard Cover
- 8 Master Pulsing Contact Assembly
- 9 Contact Lead Wires

Figure 5-10. Master Pulsing Contact Assembly Replacement

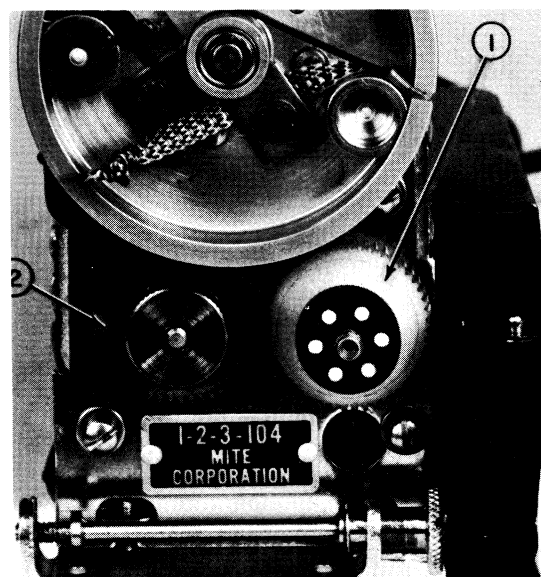

- 1 Speed Change Gear
- 2 Idler Gear

Figure 5-11. Turning the Mainshaft by Hand

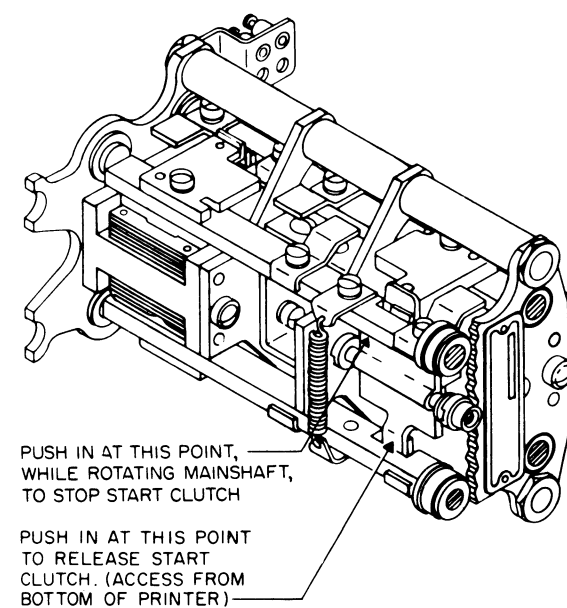


Figure 5-12. Release of Start Clutch



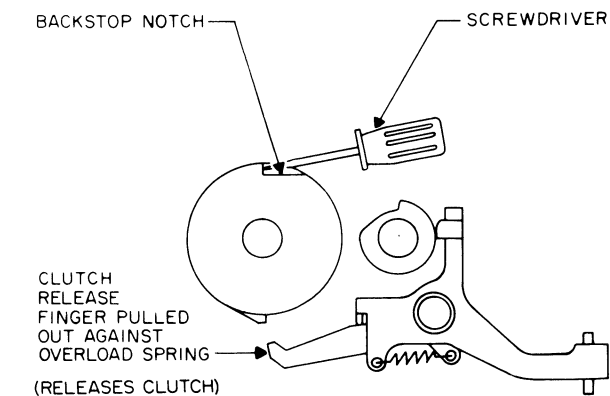



Figure 5-13. Pushing Clutches into Position

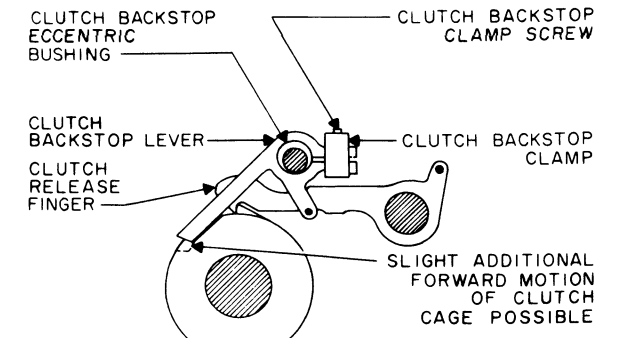

CLUTCH BACKSTOP CORRECTLY ADJUSTED

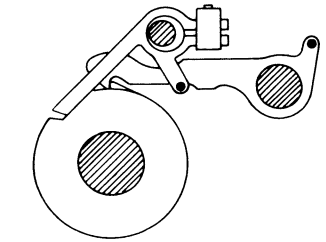


CLUTCH BACKSTOP EFFECTIVELY TOO SHORT

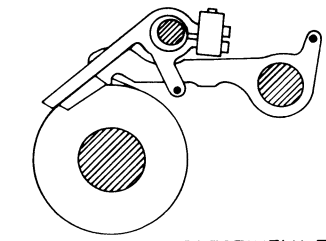

CLUTCH BACKSTOP EFFECTIVELY TOO LONG

Figure 5-14. Clutch Back-Stop Adjustment

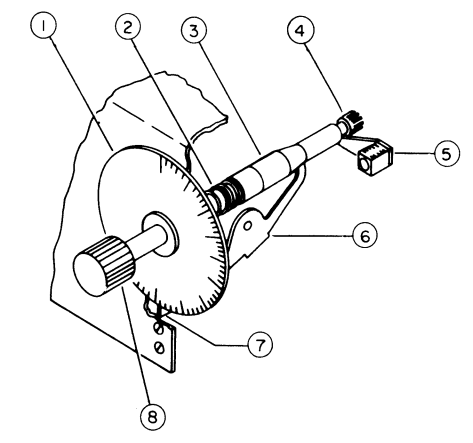

- 1 Range Dial
- 2 Range Finder Lock Helical Spring
- 3 Conical Range Finder Slide Lock
- 4 Range Pinion
- 5 Retaining Lever
- 6 Range Finder Lock Lever
- 7 Range Dial Pointer
- 8 Range Finder Lock Knob

Figure 5-15. Range Dial Mechanism

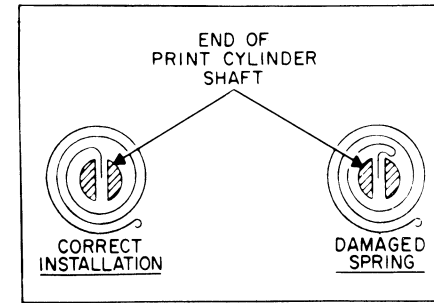


Figure 5-16. Rotary Spring Adjustment

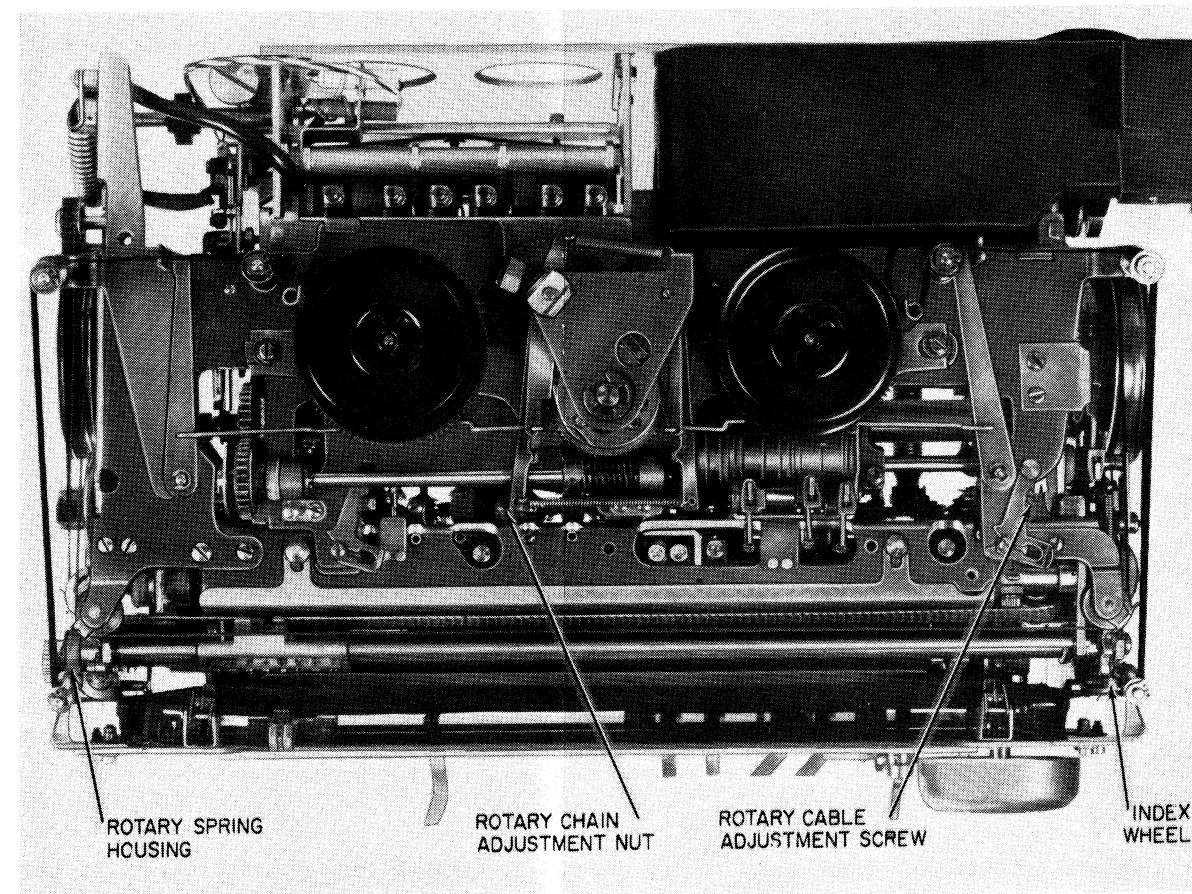


Figure 5-18. Rotary Cable Adjustment

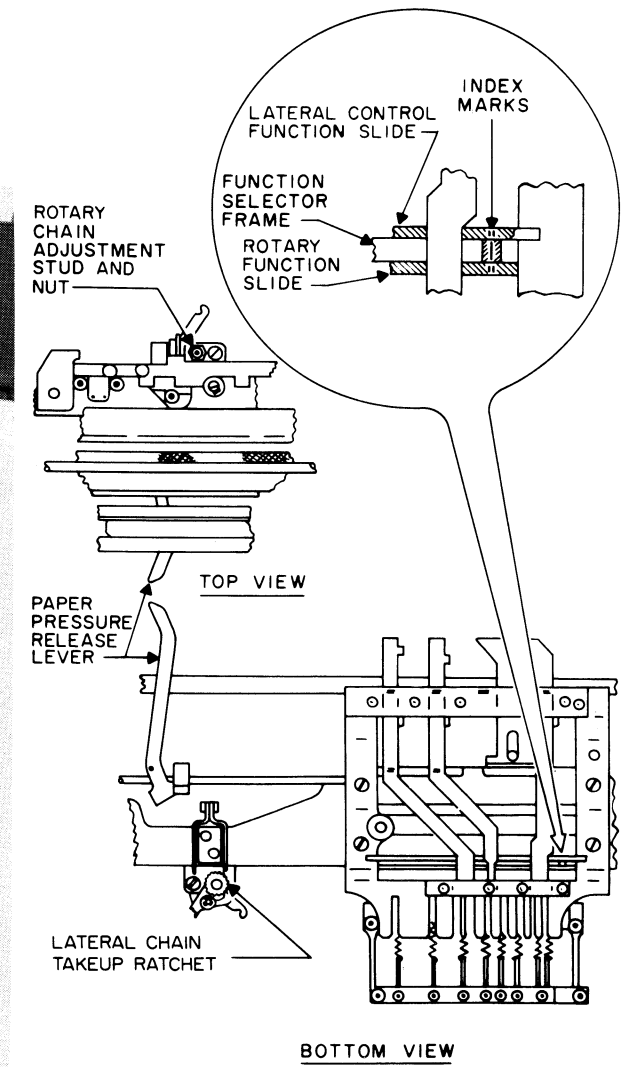


Figure 5-17. Rotary Function Slide Adjustment

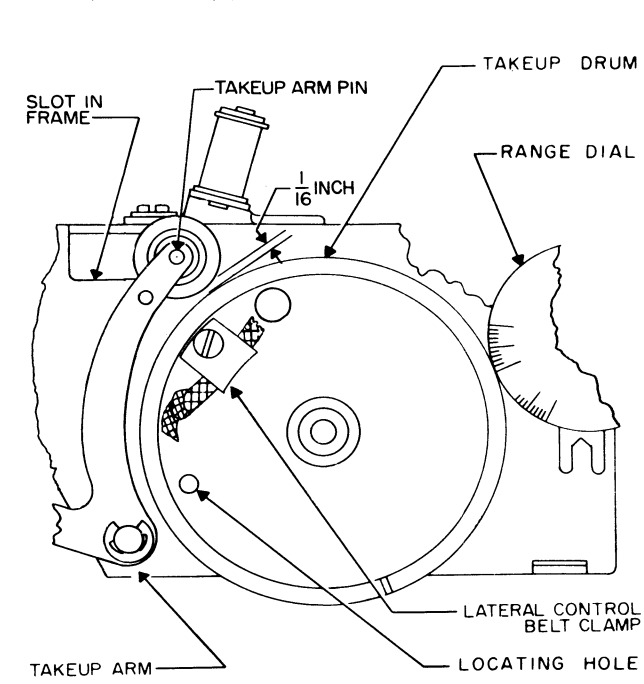


Figure 5-19. Lateral Belt Adjustment, Clearance Requirements



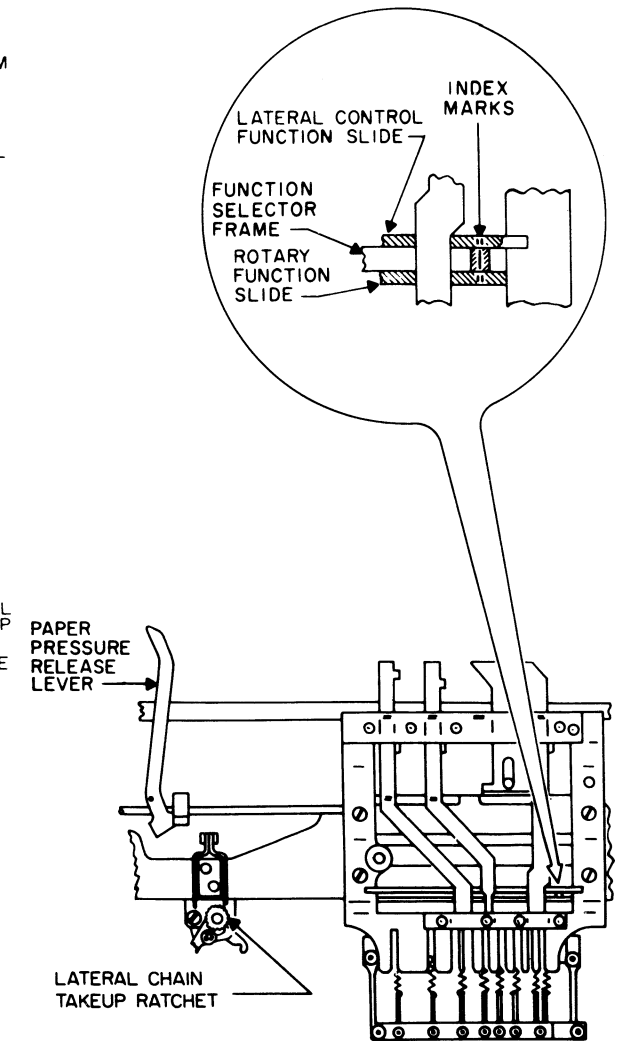


Figure 5-20. Lateral Function Slide Alignment

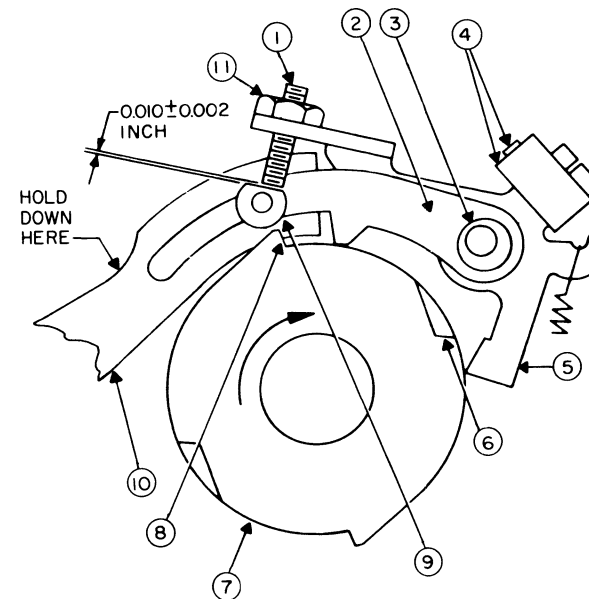

- 1 Start Clutch Adjustment Screw
- 2 Release Latch
- 3 Eccentric Bushing
- 4 Backstop Clamp - Backstop Clamp Screw
- 5 Backstop
- 6 Restoring Cam Notch
- 7 Cage
- 8 Stop Tab
- 9 Release Latch Pin
- 10 Release Arm
- 11 Locking Nut

Figure 5-21. Start Clutch Adjustment

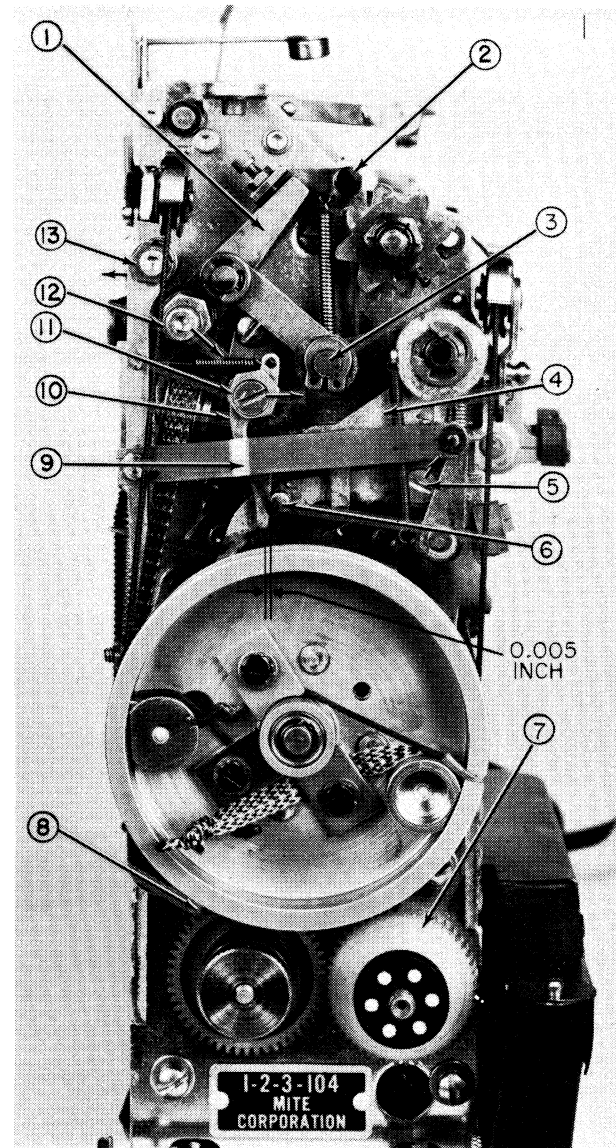

- 1 Rotary Detent Lifter Arm
- 2 Rotary Detent Pawl Pin
- 3 Function Shaft Terminal Lever
- 4 Advance Prevention Lever
- 5 Feed Pawl Eccentric
- 6 Advance Feed Pawl Pin
- 7 Speed Change Gear
- 8 Idler Gear
- 9 Contact Point (Advance Prevention Lever and Catch)
- 10 Advance Prevention Catch
- 11 Advance Prevention Eccentric
- 12 Detent Arm Eccentric
- 13 Advance Check Pawl Eccentric

Figure 5-22. Right Side - Printer

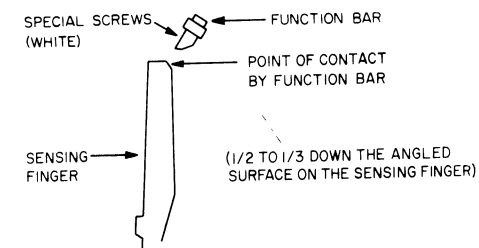


Figure 5-23. Function Bar Adjustment

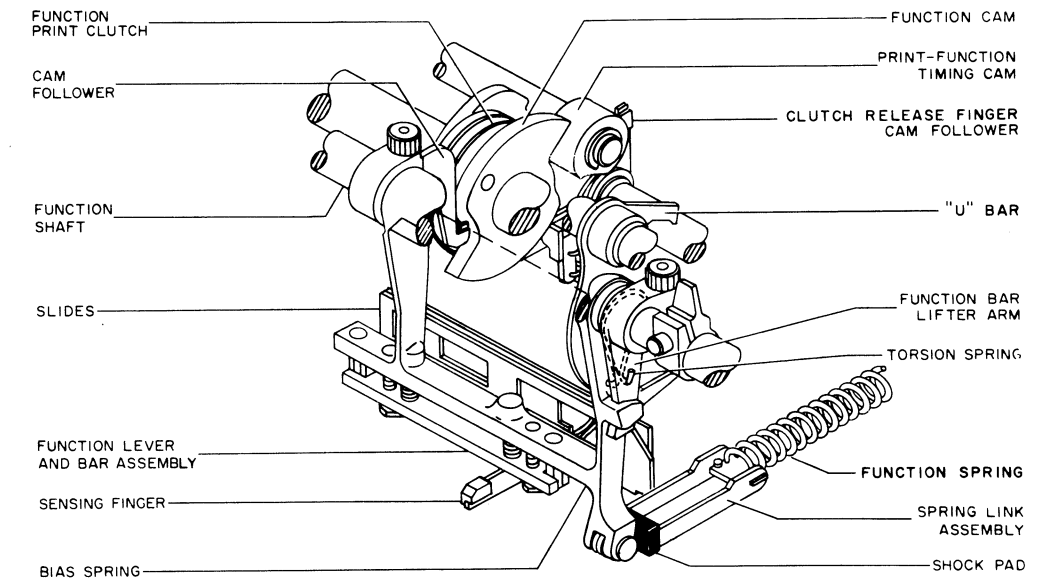


Figure 5-24. Function Shaft Adjustment



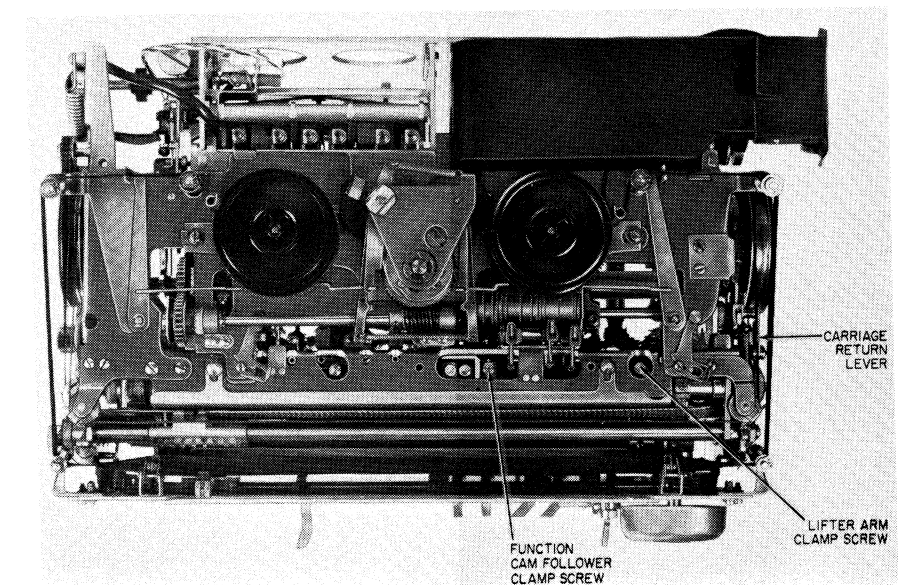


Figure 5-25. Function Selector, Start of Function Cycle

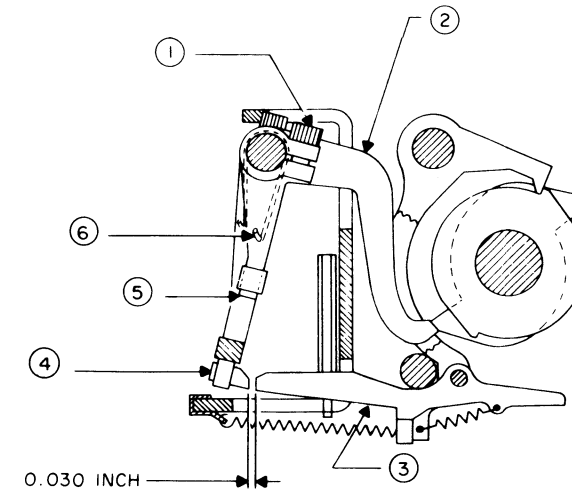


- 1 Lifter Arm Clamp Screw
- 2 Function Cam Follower at High Point of Cam
- 3 Sensing Finger
- 4 Function Bar
- 5 Lifter Arm
- 6 Torsion Spring

Figure 5-26. Function Shaft Adjustment

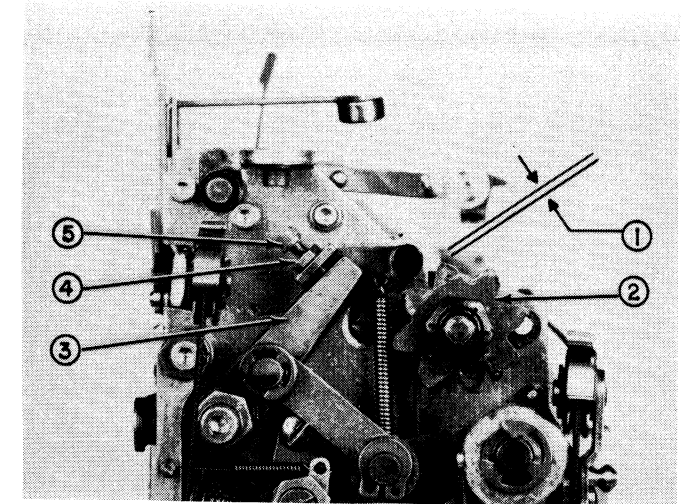


- 1 0.010
- 2 Index Wheel
- 3 Actuator
- 4 Locknut
- 5 Adjustment Screw

Figure 5-27. Rotary Detent Mechanism

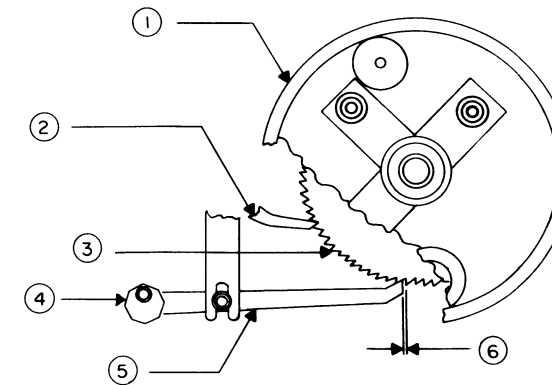

View A


- 1 Advance Drum
- 2 Advance Feed Pawl
- 3 Advance Ratchet
- 4 Advance Check Pawl Eccentric
- 5 Advance Check Pawl
- 6 1/4 tooth clearance

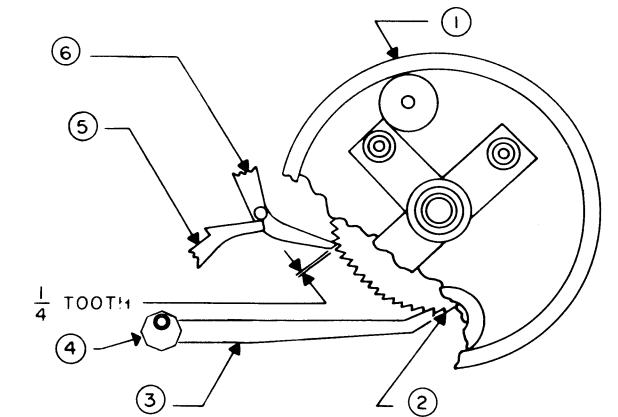

View B

- 1 Advance Drum
- 2 Advance Ratchet
- 3 Advance Check Pawl
- 4 Advance Check Pawl Eccentric
- 5 Advance Prevention Catch
- 6 Advance Feed Pawl

Figure 5-28. Character Advance Mechanism

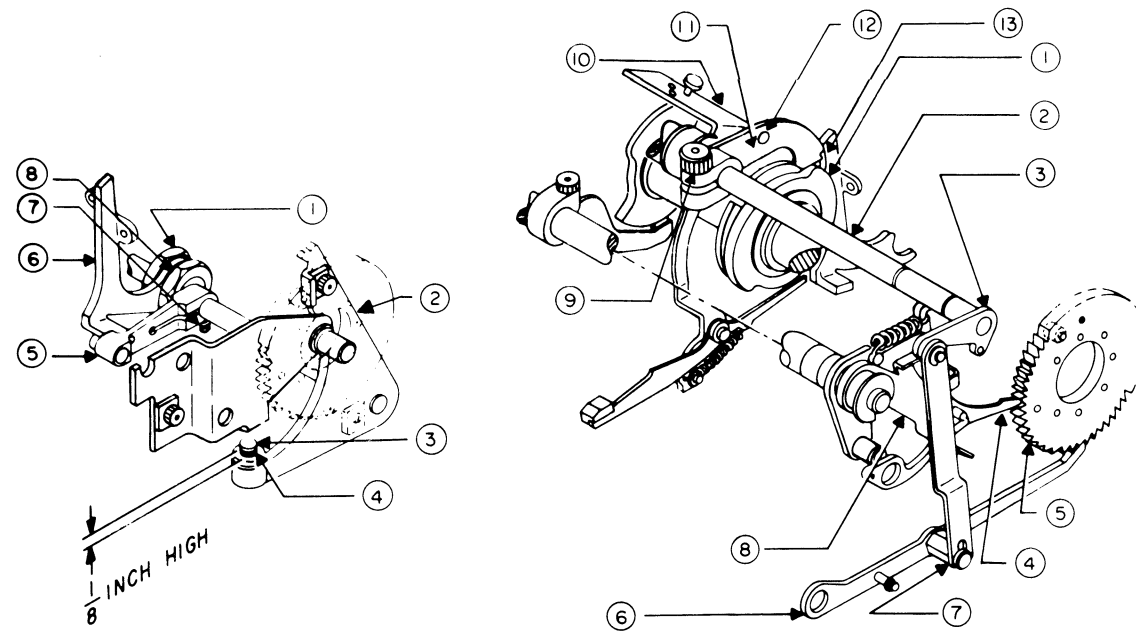


View A

- 1 Carriage Return Lock Lever Eccentric
- 2 V Lever
- 3 Point 3
- 4 First Character Adjustment Screw
- 5 Lock Lever Disconnect Arm
- 6 Carriage Return Lock Lever
- 7 Lock Lever Disconnect Arm Screw
- 8 Lock Lever Locknut

View B


- 1 Carriage Return Cam
- 2 Carriage Return Shaft
- 3 Carriage Return Lever
- 4 Advance Feed Pawl
- 5 Advance Ratchet
- 6 Advance Check Pawl
- 7 Check Pawl Link
- 8 Advance Prevention Lever
- 9 Cam Follower Clamp Screw
- 10 Advance Prevent Bail
- 11 Carriage Return Cam Follower
- 12 Pin on Carriage Return Cam Follower
- 13 Carriage Return Lock Lever

Figure 5-29. Carriage Return Linkage

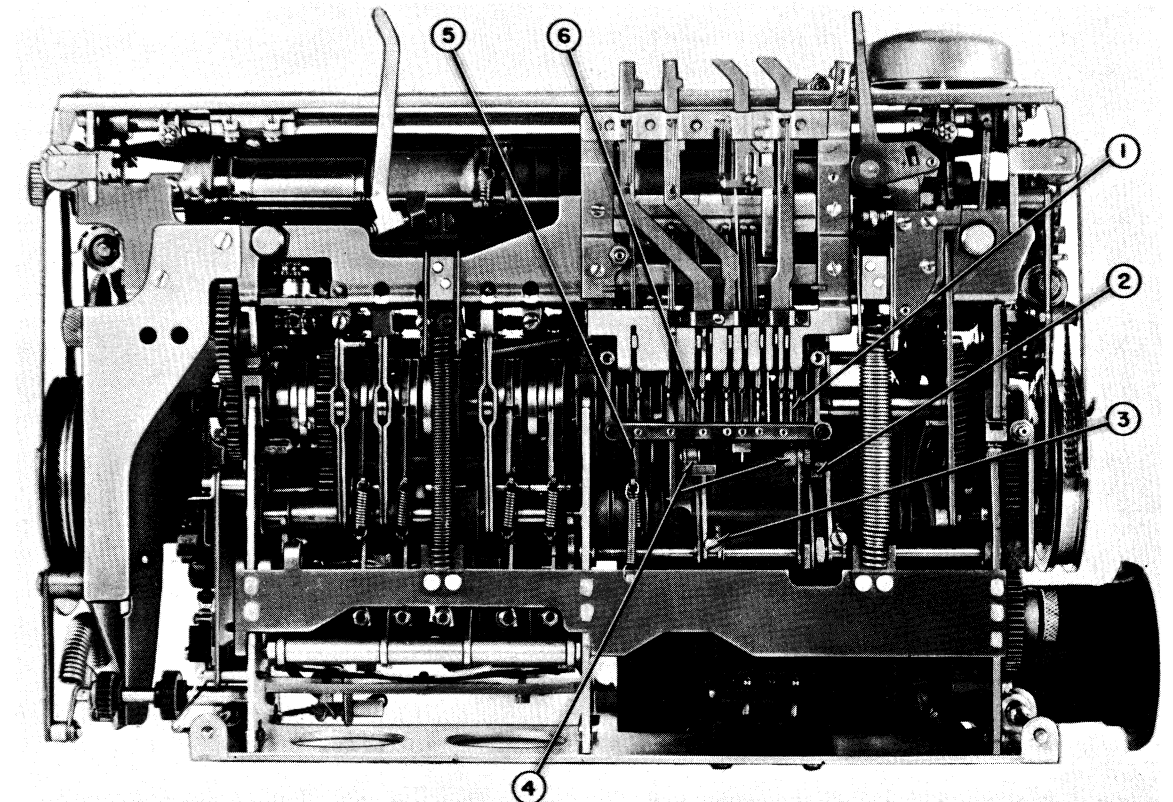


- 1 Automatic Carriage Return Sensing Finger
- 2 Automatic Carriage Return Eccentric
- 3 Actuator Arm Screw
- 4 Carriage Return/Line Feed Actuators
- 5 Function Clutch Release Finger
- 6 Line Feed Sensing Finger

Figure 5-33. Automatic Carriage Return and Line Feed Adjustment

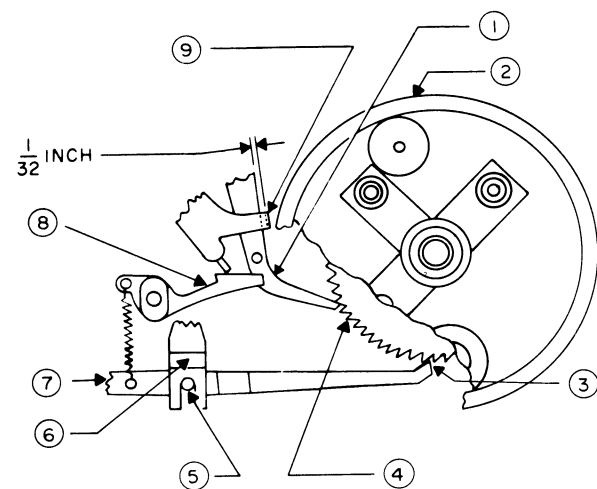

- 1 Advance Feed Pawl
- 2 Advance Drum
- 3 Point
- 4 Advance Ratchet
- 5 Check Pawl Link Eccentric
- 6 Check Pawl Link
- 7 Advance Check Pawl
- 8 Latch
- 9 Advance Prevention Lever

Figure 5-30. Carriage Return Lever Adjustment

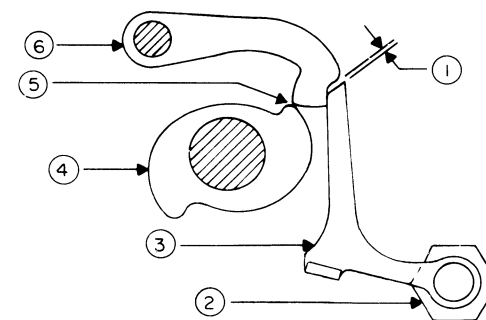

- 1 0.010 inch Clearance
- 2 Carriage Return Lock Lever Eccentric
- 3 Carriage Return Lock Lever
- 4 Carriage Return Cam
- 5 Cam Follower on High of Cam
- 6 Carriage Return Cam Follower

Figure 5-31. Carriage Return Lock Lever Adjustment


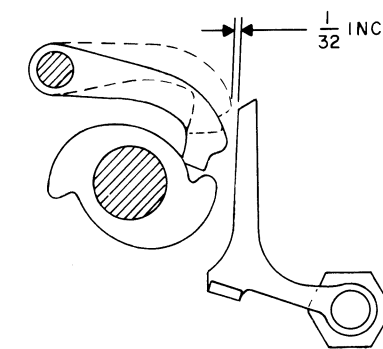


Figure 5-32. Carriage Return Lock Lever Adjustment

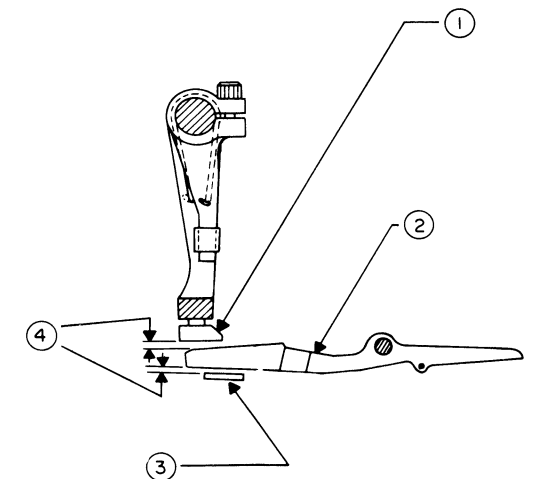

- 1 Function Bar
- 2 Sensing Finger
- 3 Stop Strip
- 4 1/32 inch Clearances

Figure 5-34. Function Bar and Sensing Finger Clearance Adjustment

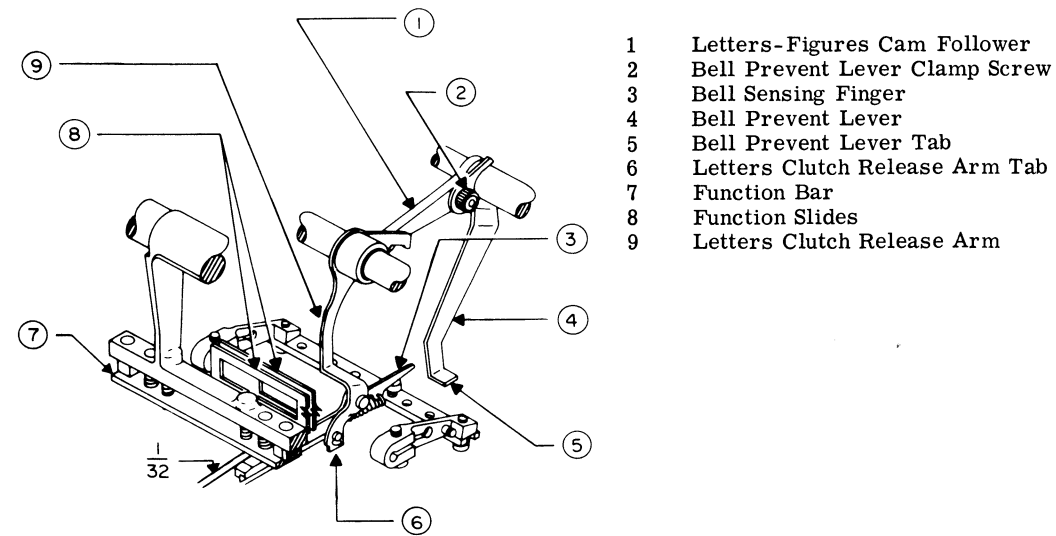


Figure 5-35. Bell Sensing Finger Adjustment


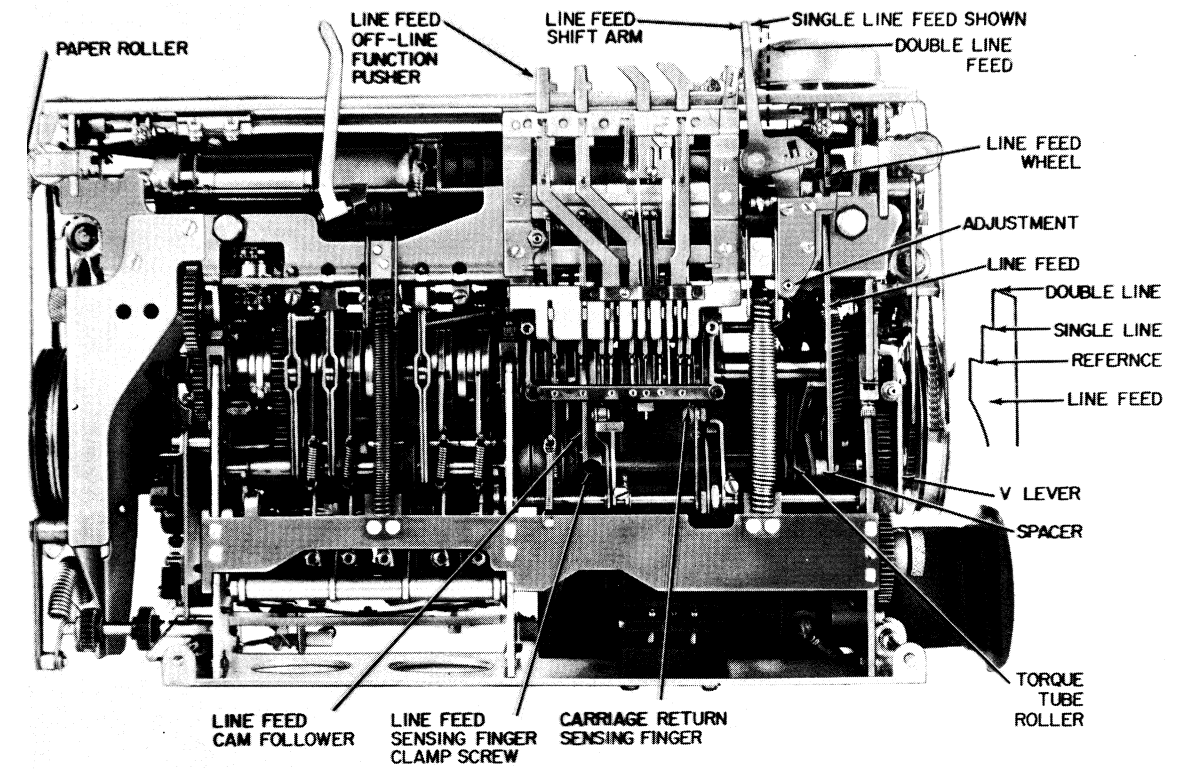


Figure 5-36. Line Feed Adjustment

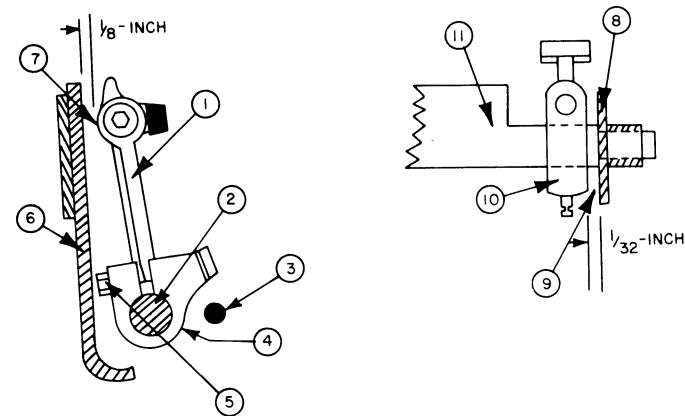

- | | | | |
|---|-----------------------|----|---------------------|
| 1 | Hammer Assembly | 7 | 1/8 inch Clearance |
| 2 | Hammer Shaft | 8 | Bearing |
| 3 | Pin Stud | 9 | 1/32 inch Clearance |
| 4 | Hammer Backstop Clamp | 10 | Hammer Backstop |
| 5 | Backstop Screw | 11 | Hammer Shaft |
| 6 | Front Plate | | |

Figure 5-37. Hammer Backstop Adjustment



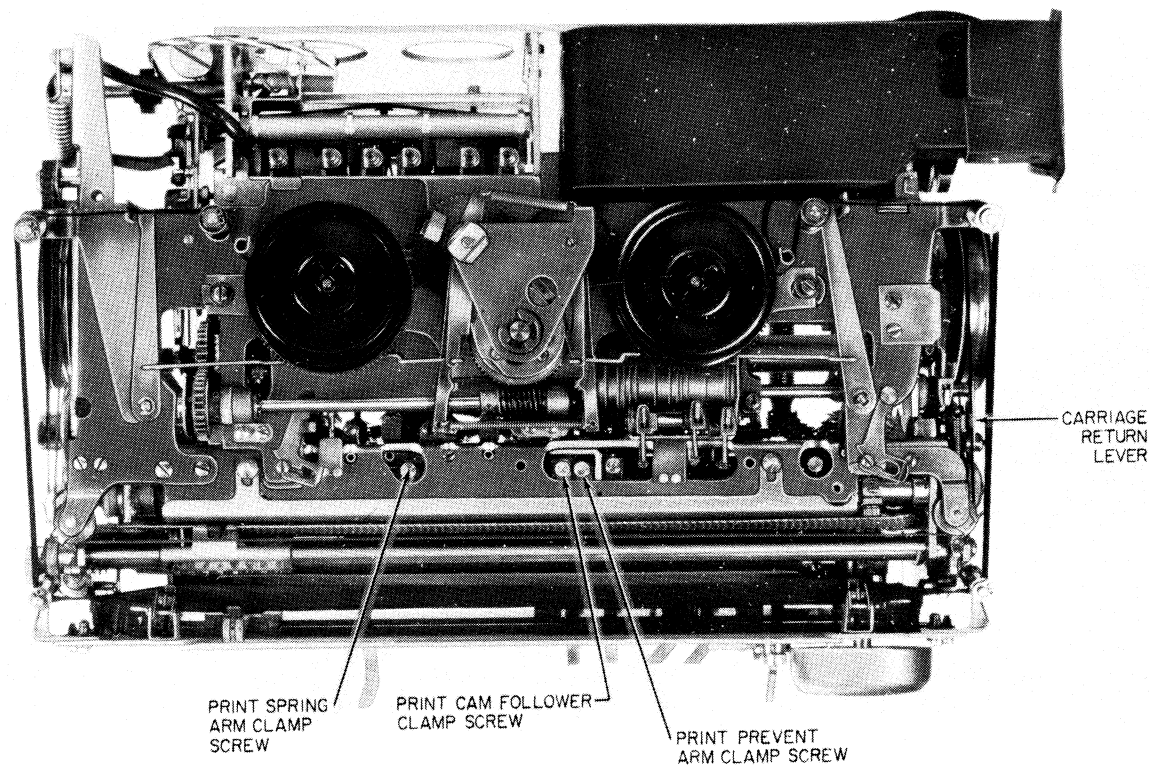


Figure 5-38. Print Disconnect and Print Shaft Adjustments

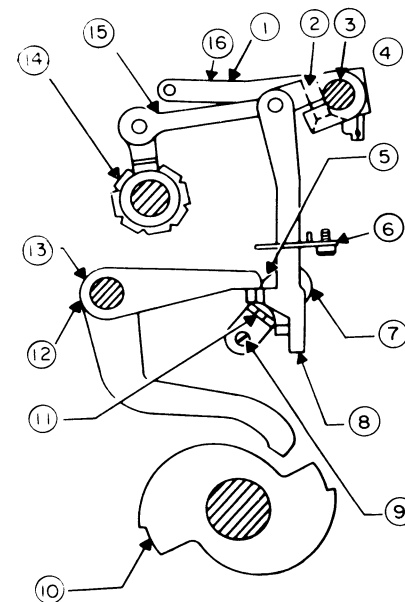


- 1 Ribbon Vibrator
- 2 Hammer Link Clamp Screw
- 3 Ribbon Vibrator Arm Clamp Screw
- 4 Minimum Perceptible Clearance
- 5 Hammer Shaft Arm Guide Bracket
- 6 Hammer Disconnect Link
- 7 Hammer Shaft Arm
- 8 Hammer Shaft Arm
- 9 Stop Screw
- 10 Cam
- 11 Stop
- 12 Print Shaft Terminal Lever
- 13 Rotate Terminal Lever by Raising and Lowering Print Spring Arm
- 14 Type Cylinder
- 15 Hammer
- 16 Press down here to hold hammer against cylinder

Figure 5-39. Print Disconnect Adjustment

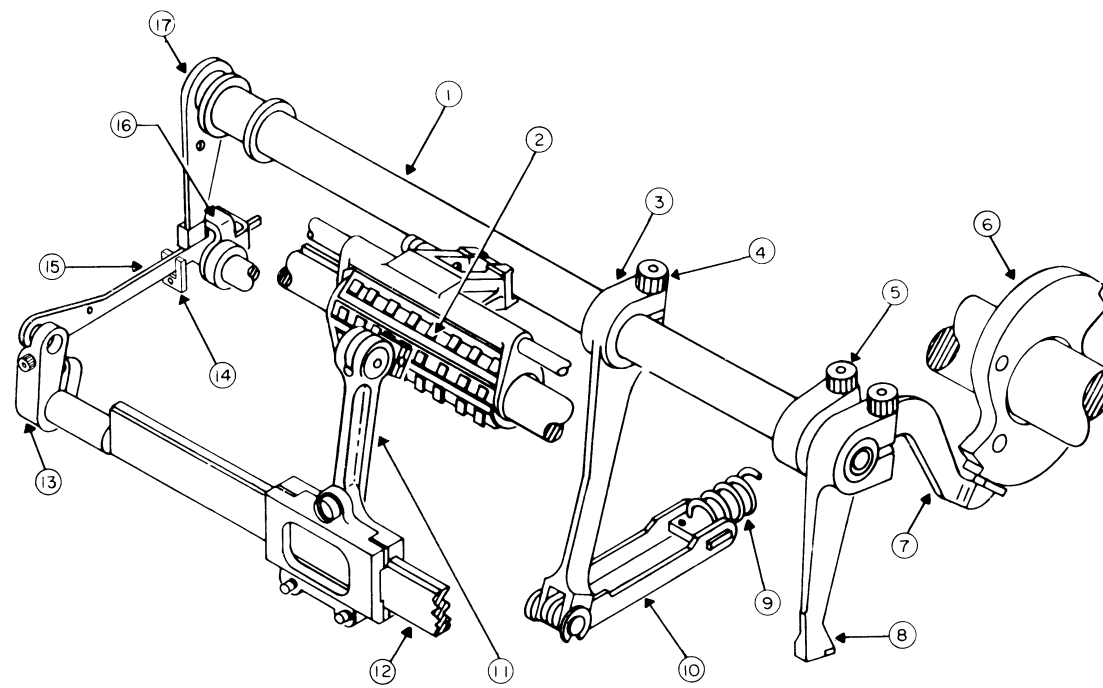


- 1 Print Shaft
- 2 Type Cylinder
- 3 Print Spring Arm
- 4 Print Spring Arm Clamp Screw
- 5 Print Cam Follower Clamp Screw
- 6 Print Cam
- 7 Print Cam Follower
- 8 Print Prevent Arm
- 9 Print Prevent Arm Clamp Screw
- 10 Print Spring Yoke
- 11 Hammer
- 12 Hammer Shaft
- 13 Hammer Link Clamp
- 14 Hammer Shaft Link Guide Plate
- 15 Hammer Shaft Link Arm
- 16 Hammer Disconnect Link
- 17 Terminal Lever

Figure 5-40. Printing Action Linkage

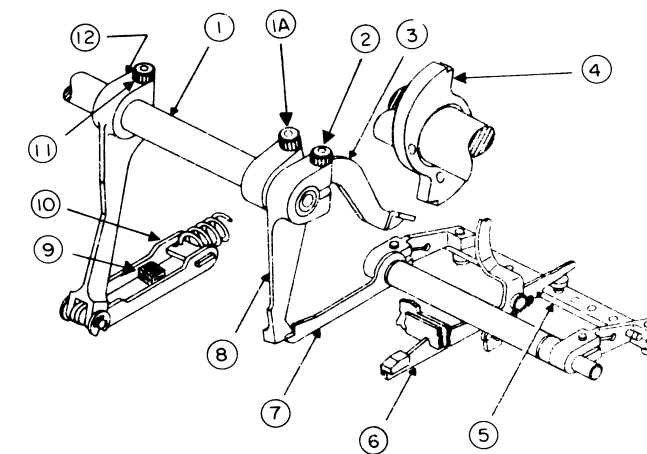


- 1 Print Shaft
- 1a Print Cam Follower Clamp Screw
- 2 Print Prevent Arm Clamp Screw
- 3 Print Cam Follower
- 4 Print Cam
- 5 Print Prevent Bail
- 6 Sensing Finger in Slides Pushes Bail Out
- 7 Print Prevent Bail Lever
- 8 Print Prevent Arm
- 9 Shock Pad
- 10 Print Spring Yoke
- 11 Print Spring Arm Clamp Screw
- 12 Print Spring Arm

Figure 5-41. Print Shaft Adjustment
(Print Prevention)

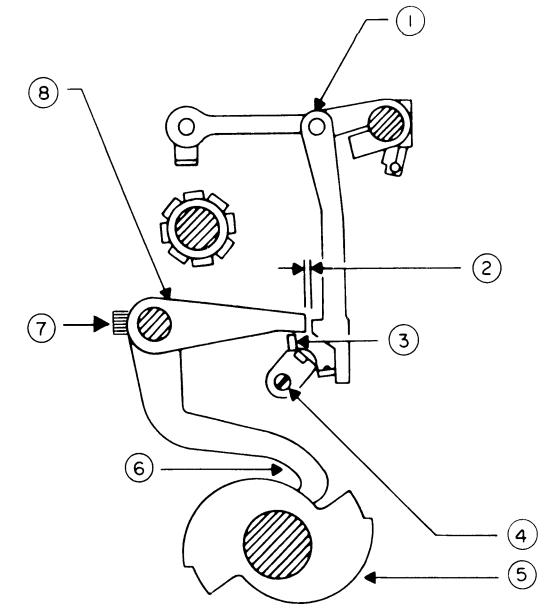

- 1 Hammer Shaft Arm
- 2 1/32 inch Clearance
- 3 Hammer Disconnect Link
- 4 Stop Screw
- 5 Print Cam
- 6 Print Cam Follower at Low Point of Cam
- 7 Print Cam Follower Clamp Screw
- 8 Print Shaft Terminal Lever

Figure 5-42. Print Linkage Adjustment

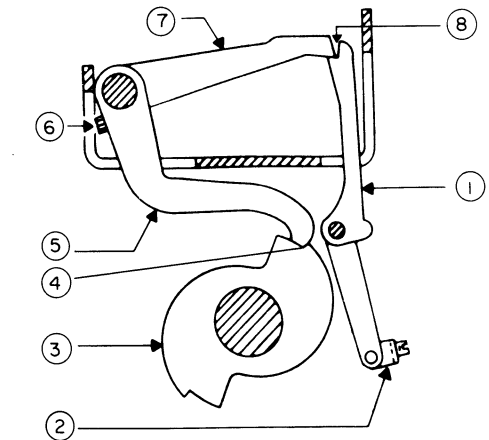

- 1 Print Prevent (Rod) Bail Lever
- 2 Print Prevent Bail Arm
- 3 Print Cam
- 4 Print Cam
- 5 Print Cam Follower
- 6 Print Prevent Arm Clamp Screw
- 7 Print Prevent Arm
- 8 Notch

Figure 5-43. Print Prevent Arm Engaged
with Print Prevent Bail Lever

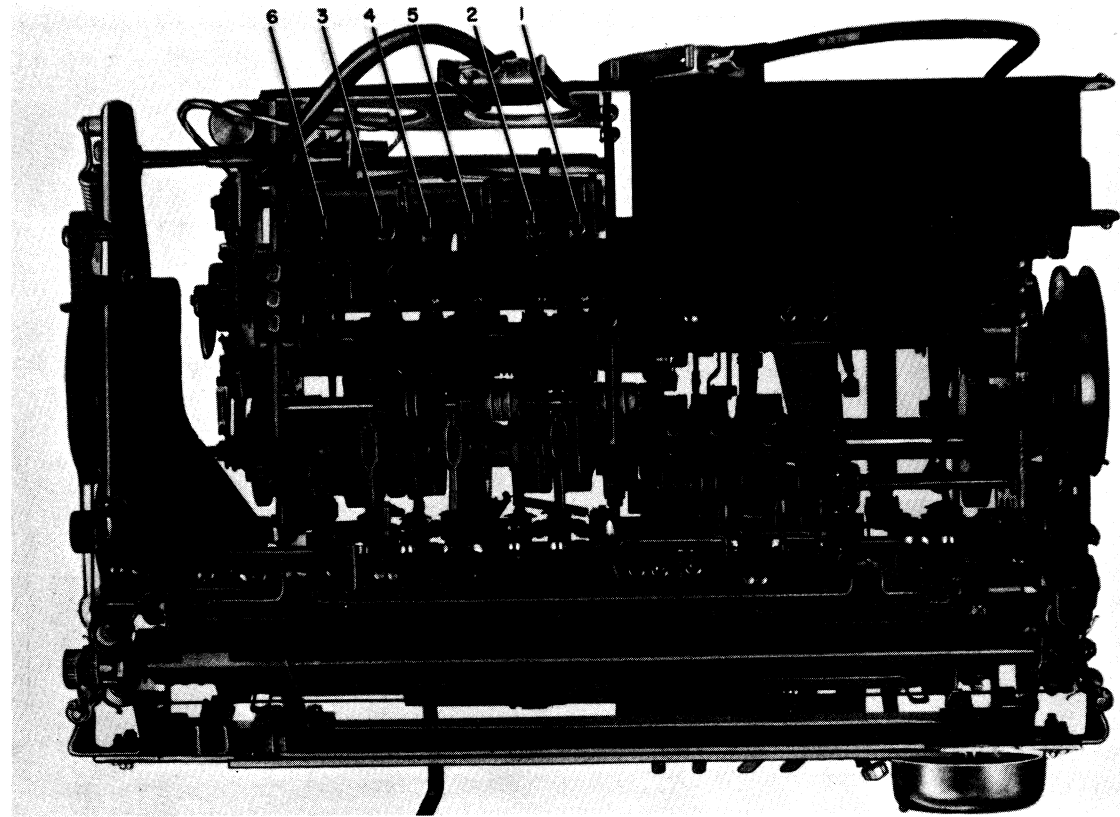


Figure 5-44. Magnetic Selector Adjustment

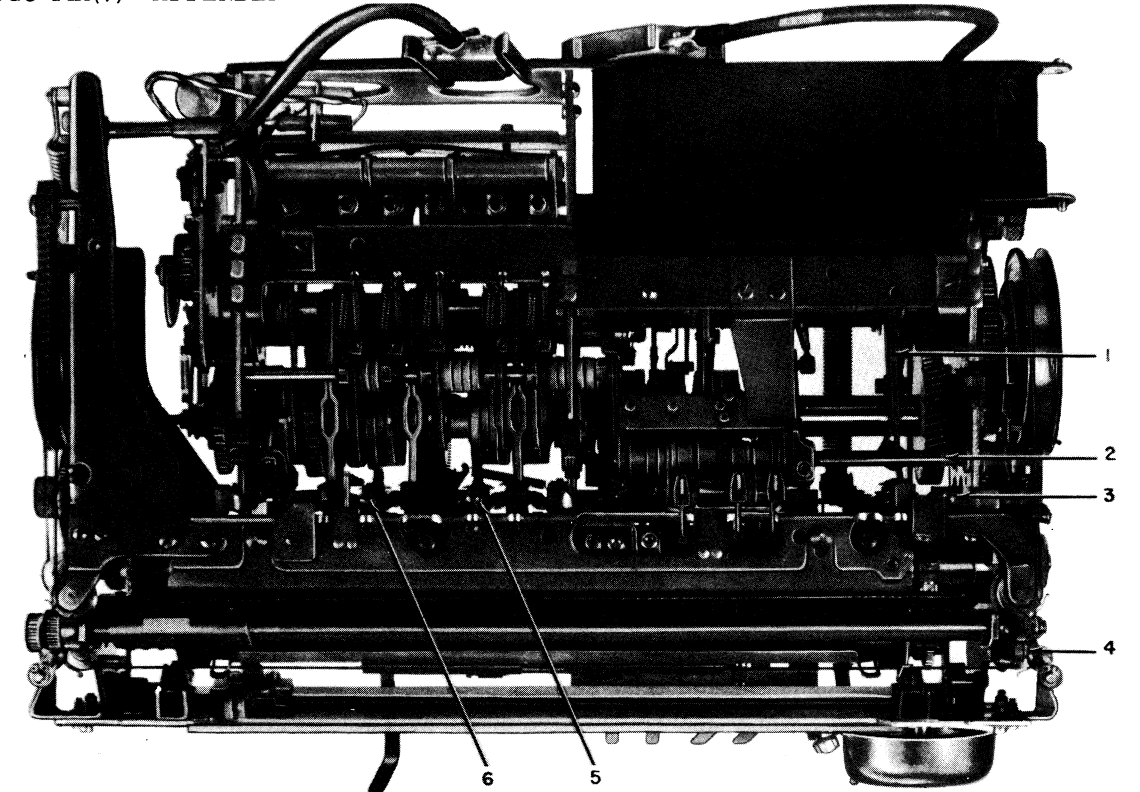


Figure 5-47. Top View of Printer, Ribbon Feed Mechanism Removed

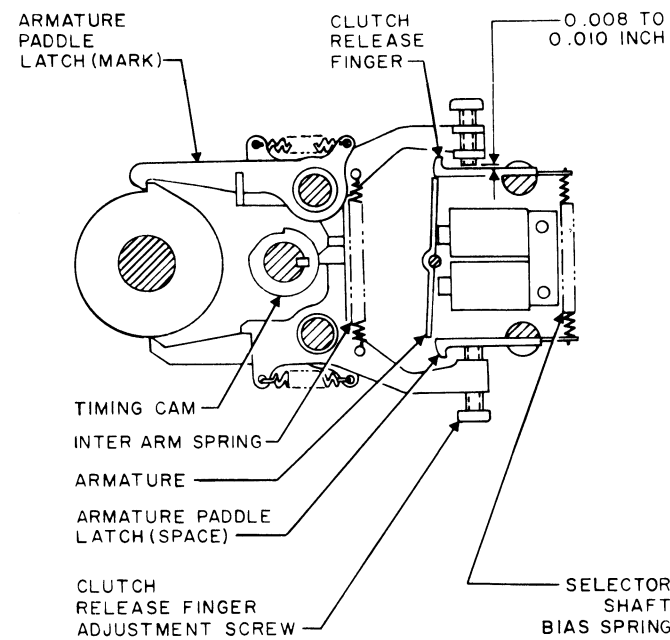


Figure 5-45. Selector Clutch Release Mechanism

LTRS-FIGS. CAM ON HIGH SIDE	1	2	A	W	J	^	U	Q	K	V	360°
	1		E	Z	D	B	S	Y	F	X	
	2		≡	L	R	G	I	P	C	V	180°
			∥	T	<	O	■	H	N	M	
LTRS-FIGS. CAM ON LOW SIDE	1	2	-	2	'	^	7	I	(v	
	1		3	"	\$?	⊕	6	!	/	
	2		≡)	4	8	8	∅	:	;	
			∥	5	<	9	■	#	,	.	
CAMS ON HIGH SIDE	3	3	3	3							
	4	4			4	4					
	5		5		5	5					

Figure 5-46. Plan View of Print Cylinder

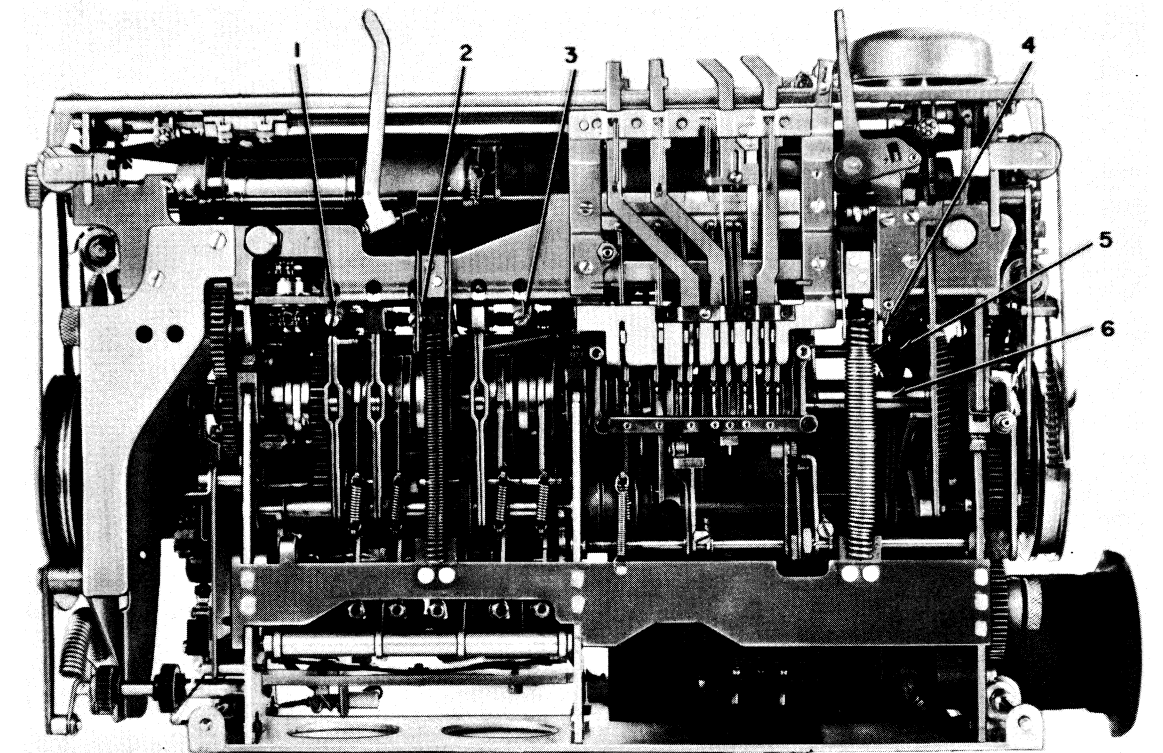


Figure 5-48. Bottom View of Printer

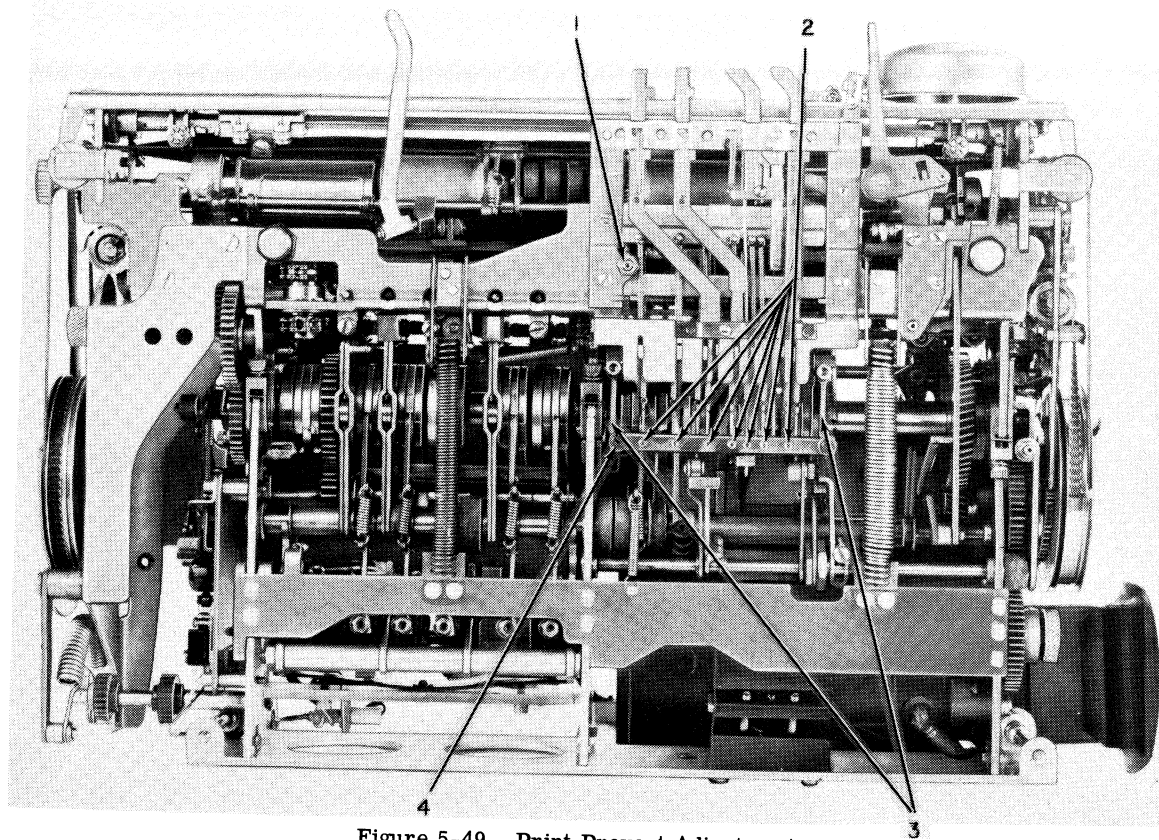


Figure 5-49. Print Prevent Adjustment

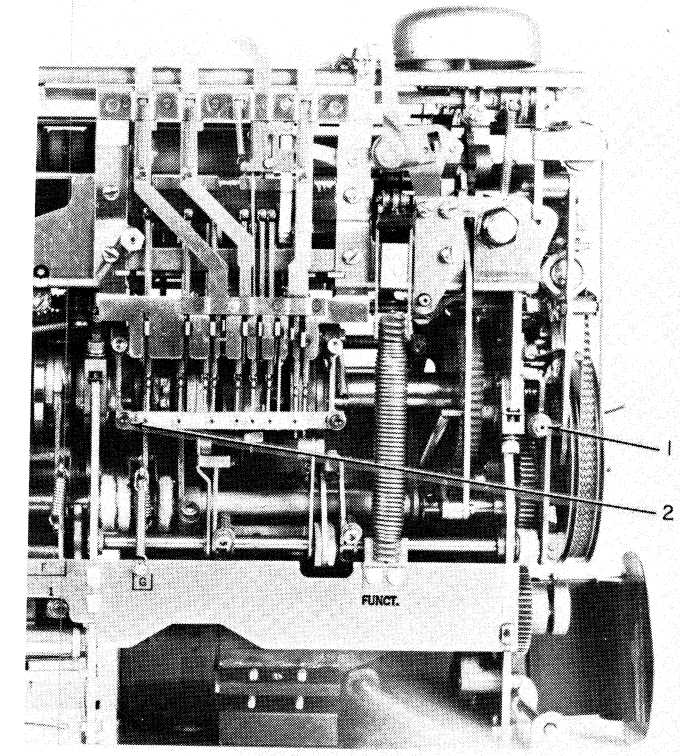


Figure 5-52. Spacing of the First Character

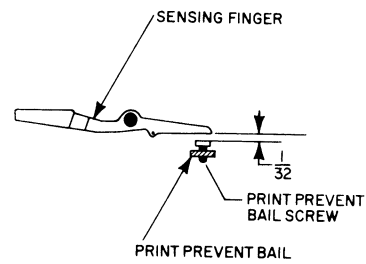


Figure 5-50. Print Prevent Adjustment

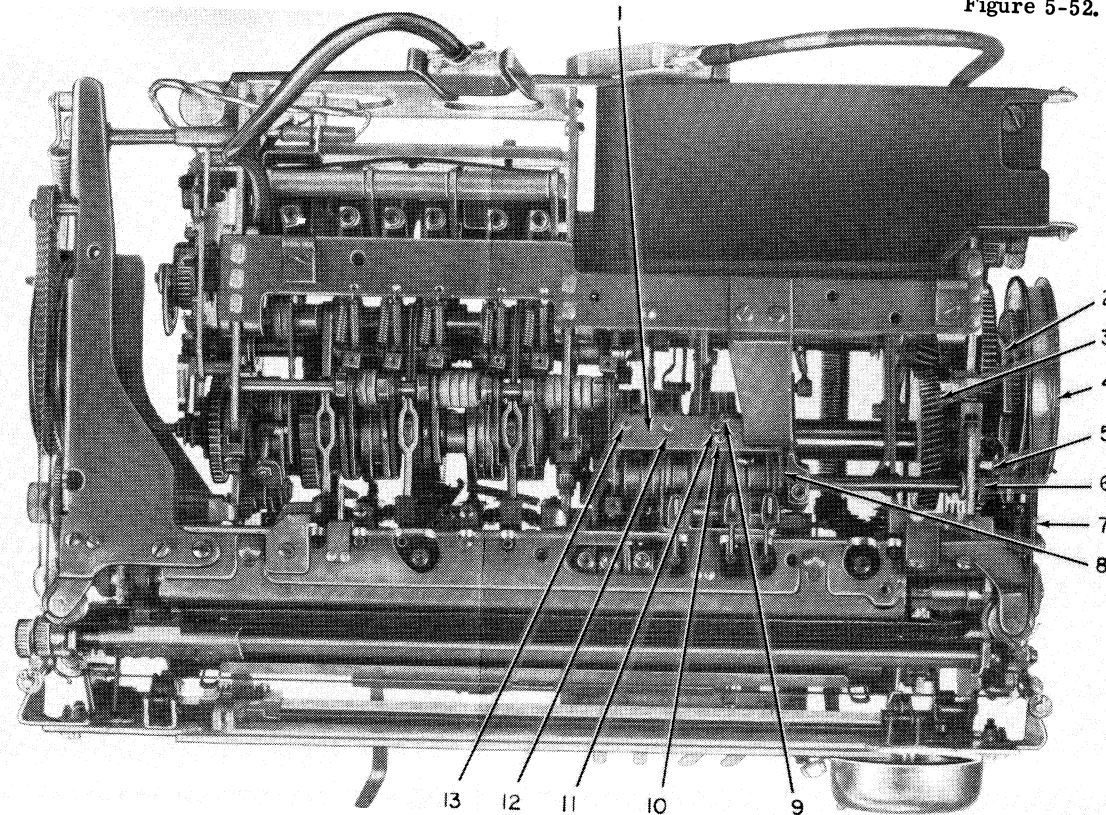


Figure 5-51. Advance Prevent and Bounce Prevent Adjustment

ORIGINAL

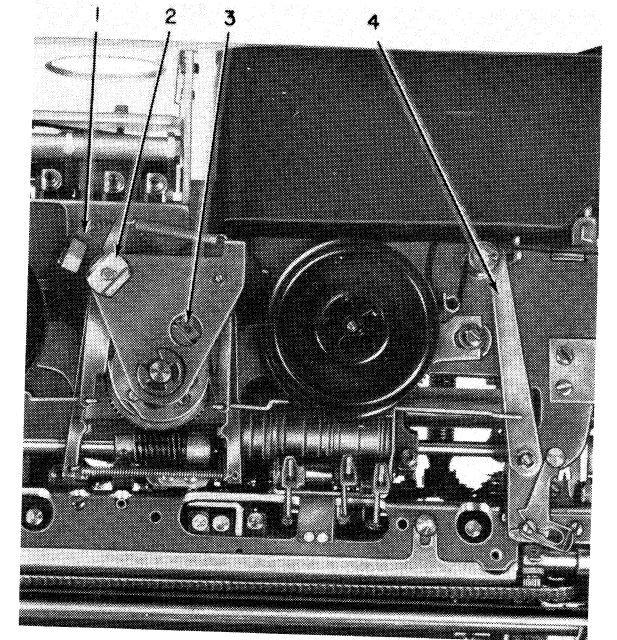


Figure 5-53. Ribbon Feed Adjustment

- 1 Time Delay Secondary Check Pawl Eccentric
- 2 Time Delay Secondary Check Pawl Stop Spring
- 3 Time Delay Secondary Check Pawl
- 4 Post
- 5 Advance Ratchet
- 6 Reduction Ratchet
- 7 Detent Spring Roller
- 8 Detent Spring
- 9 Timing Cam Shaft Extension
- 10 Time Delay Feed Pawl
- 11 Time Delay Feed Pawl Helical Spring
- 12 Time Delay Check Pawl Helical Spring
- 13 Time Delay Check Pawl
- 14 Time Delay Feed and Check Pawl Guide
- 15 Time Delay Latch
- 16 Time Delay Ratchet Support Shaft
- 17 Button
- 18 Time Delay Yoke
- 19 Time Delay Switch Actuator Roller
- 20 Time Delay Switch Actuator
- 21 Time Delay Switch
- 22 Screws

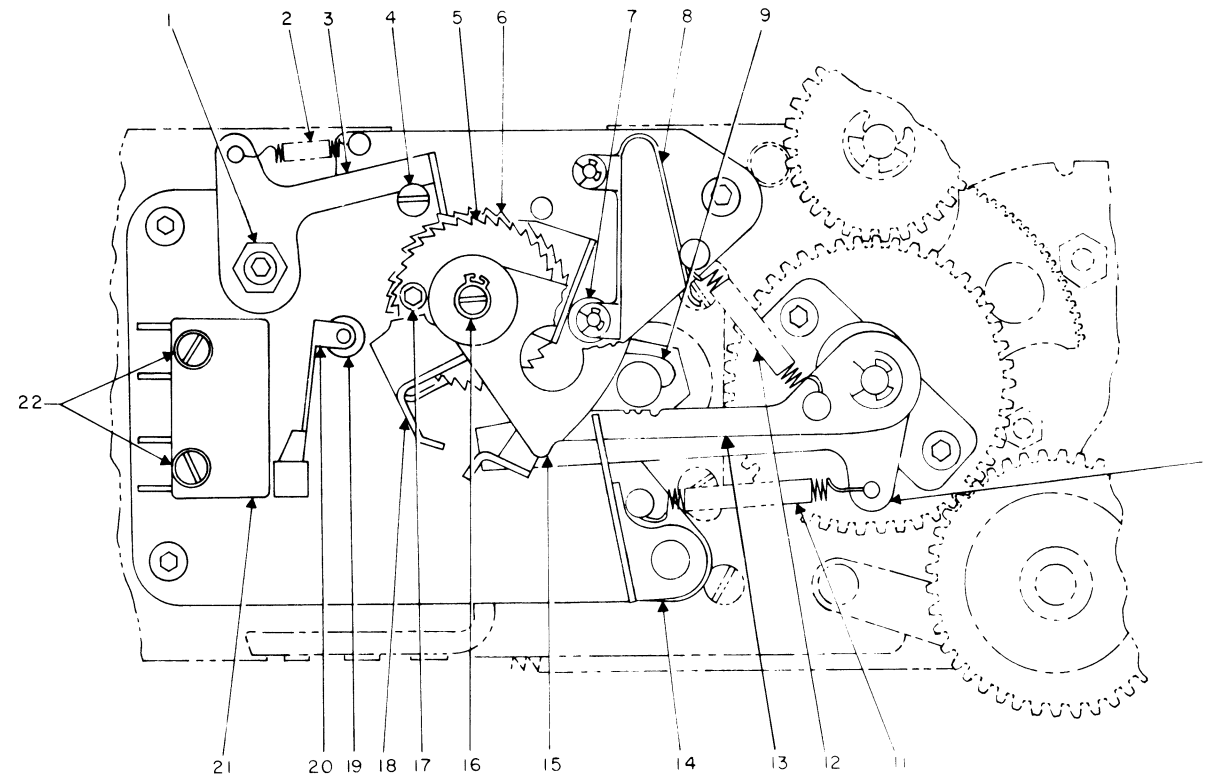


Figure 5-54. Time Delay Motor Stop Mechanism

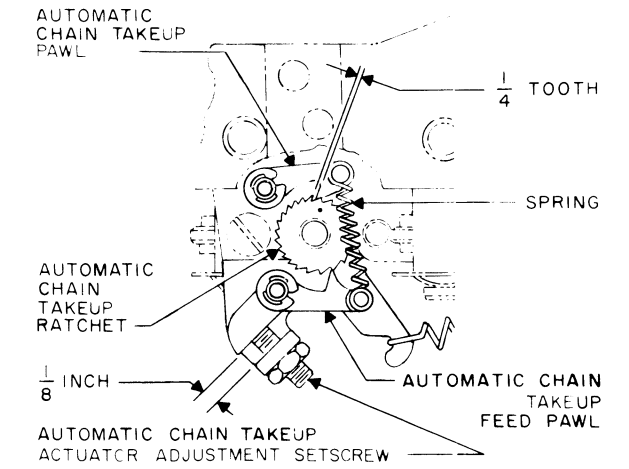


Figure 5-56. Automatic Lateral Chain Takeup Adjustment


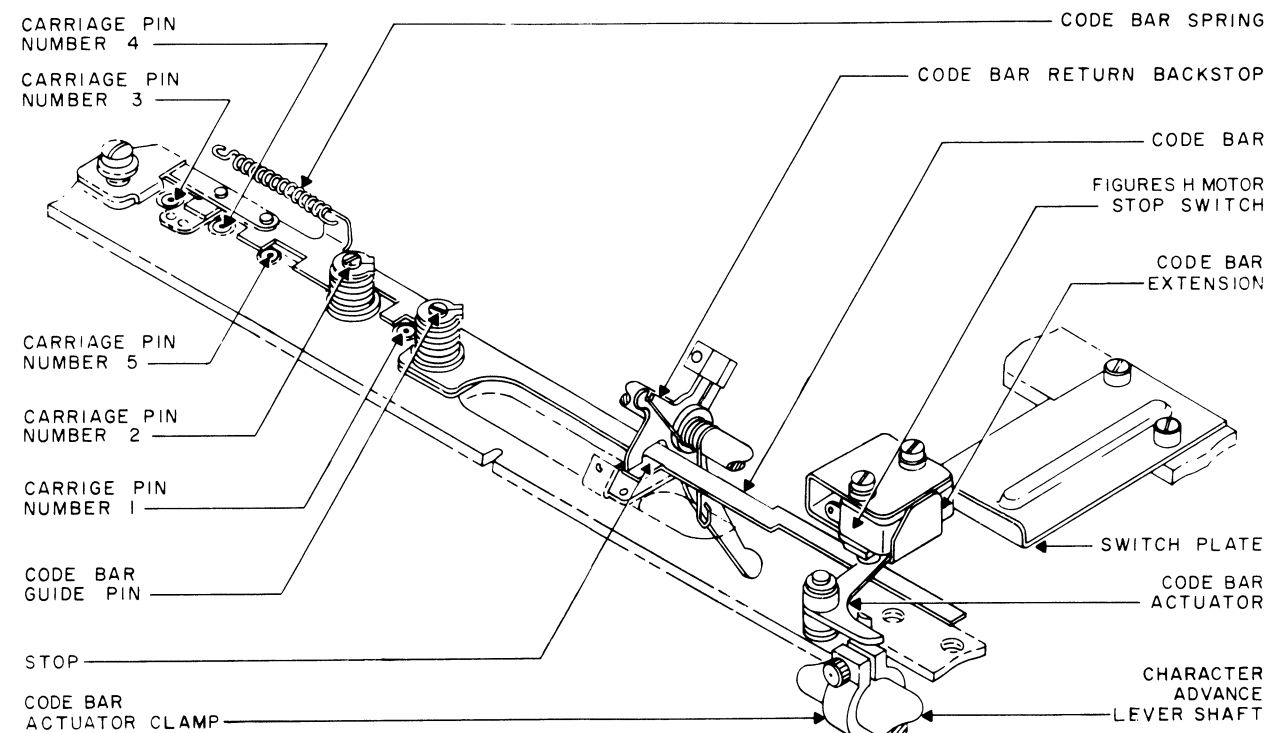


Figure 5-55. Figures H Motor Stop Adjustment

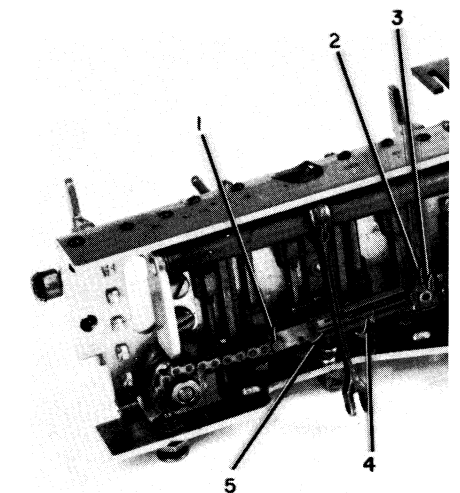

- 1 Adjustable Slide Link
- 2 Eccentric
- 3 Eccentric Lock Screw
- 4 Y Lever
- 5 Lever

Figure 5-57. Automatic Lateral Chain Takeup Adjustment

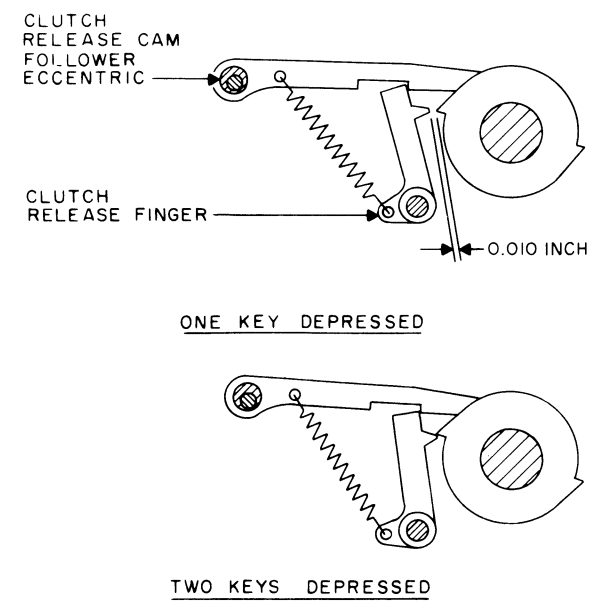


Figure 5-58. Clutch Release Lever Eccentric Adjustment

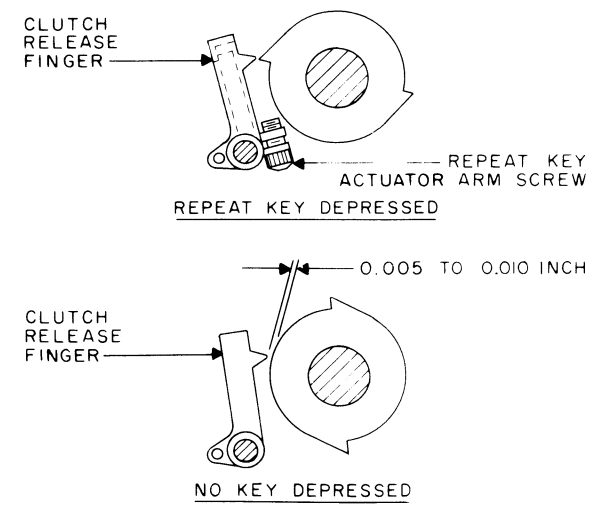


Figure 5-59. Repeat Key Clamp Arm Adjustment

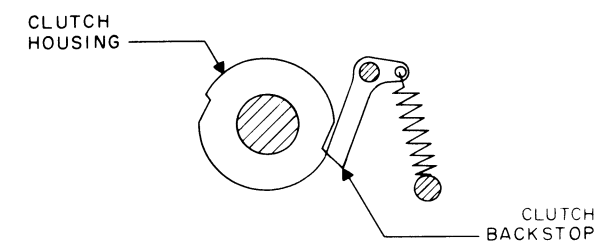


Figure 5-60. Backstop Eccentric Adjustment

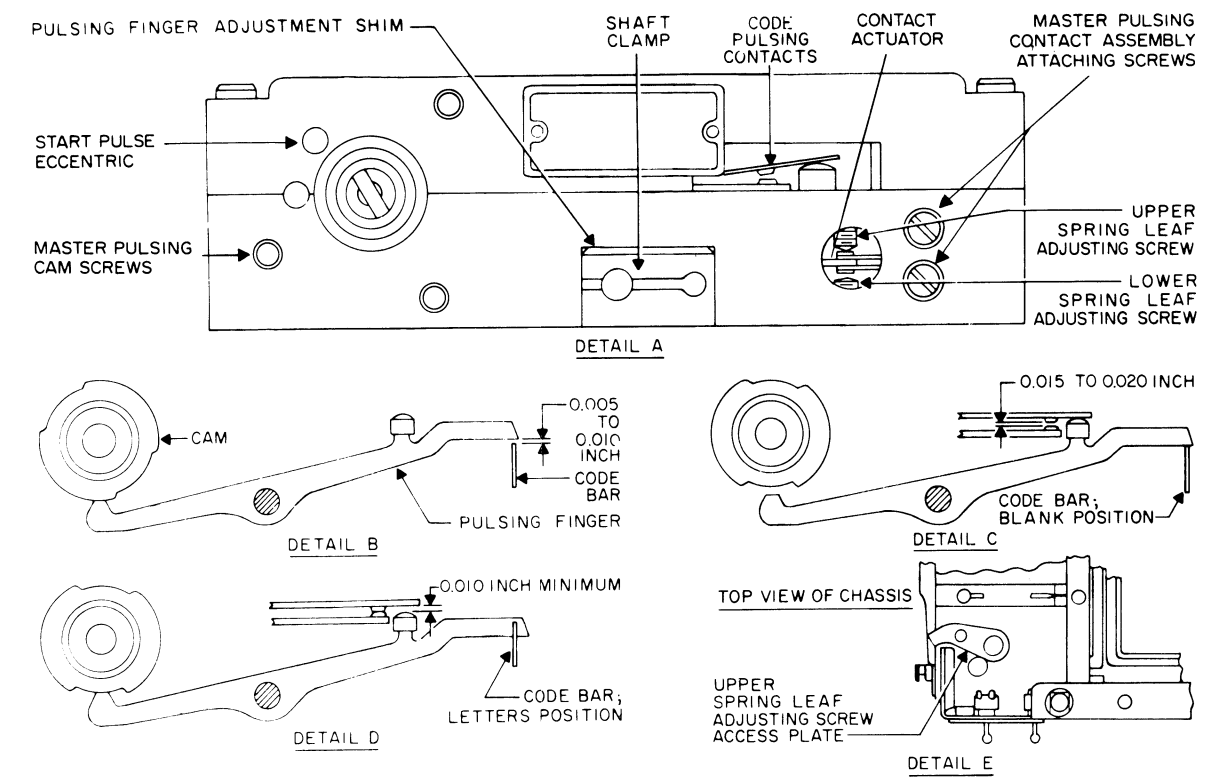


Figure 5-61. Keyboard Adjustment, Parts Location

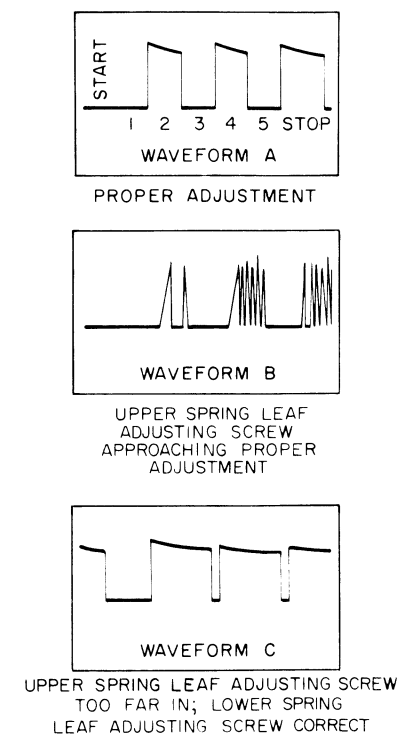


Figure 5-62. Waveforms for Transmitting Letters R

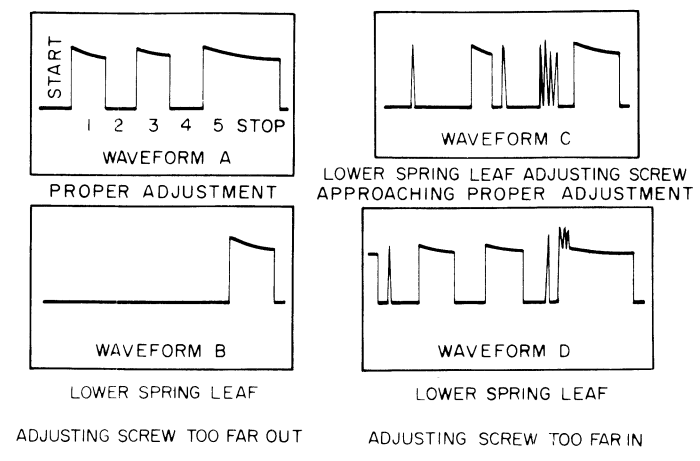


Figure 5-63. Waveforms for Transmitting Letters Y

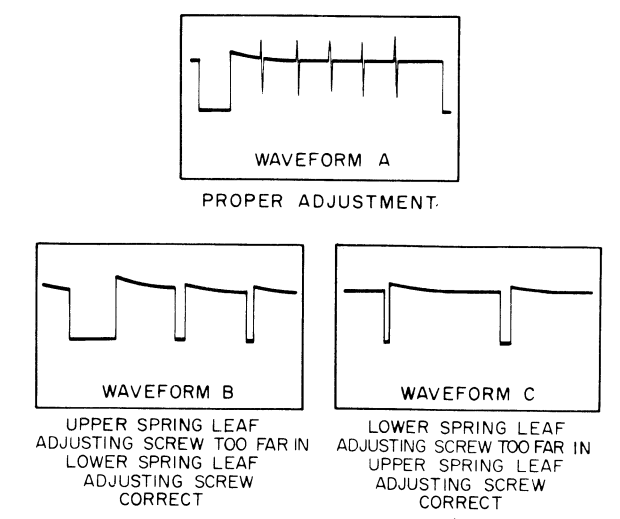


Figure 5-64. Waveforms for Transmitting Letters (LTRS)

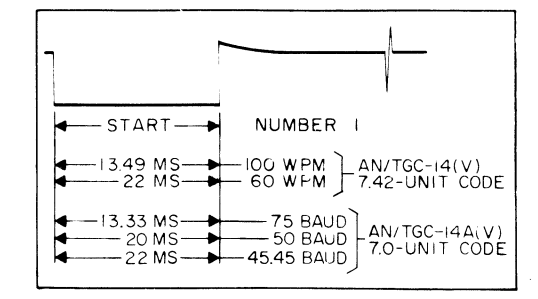


Figure 5-65. Waveform for Timing Adjustment

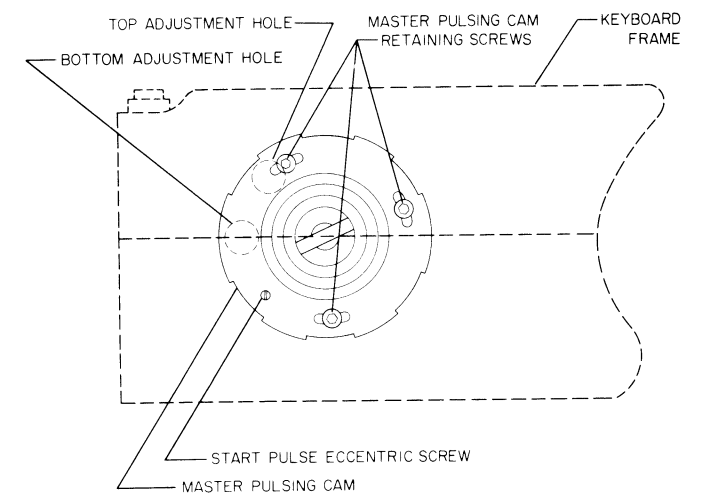


Figure 5-66. Keyboard Timing Adjustment

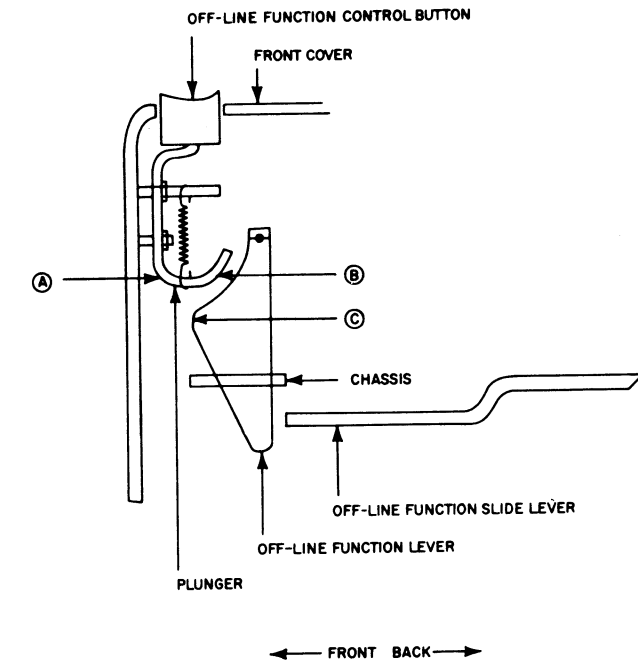


Figure 5-67. Off-Line Function Control Button Mechanism



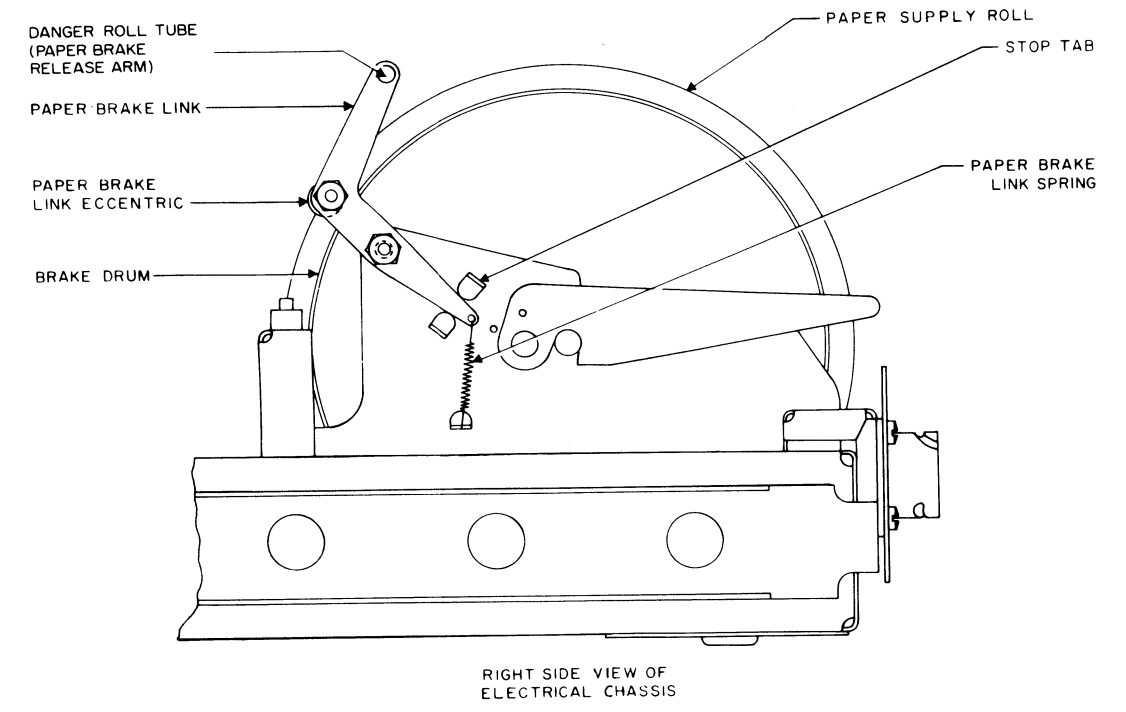


Figure 5-68. Paper Brake Adjustment, Parts Location

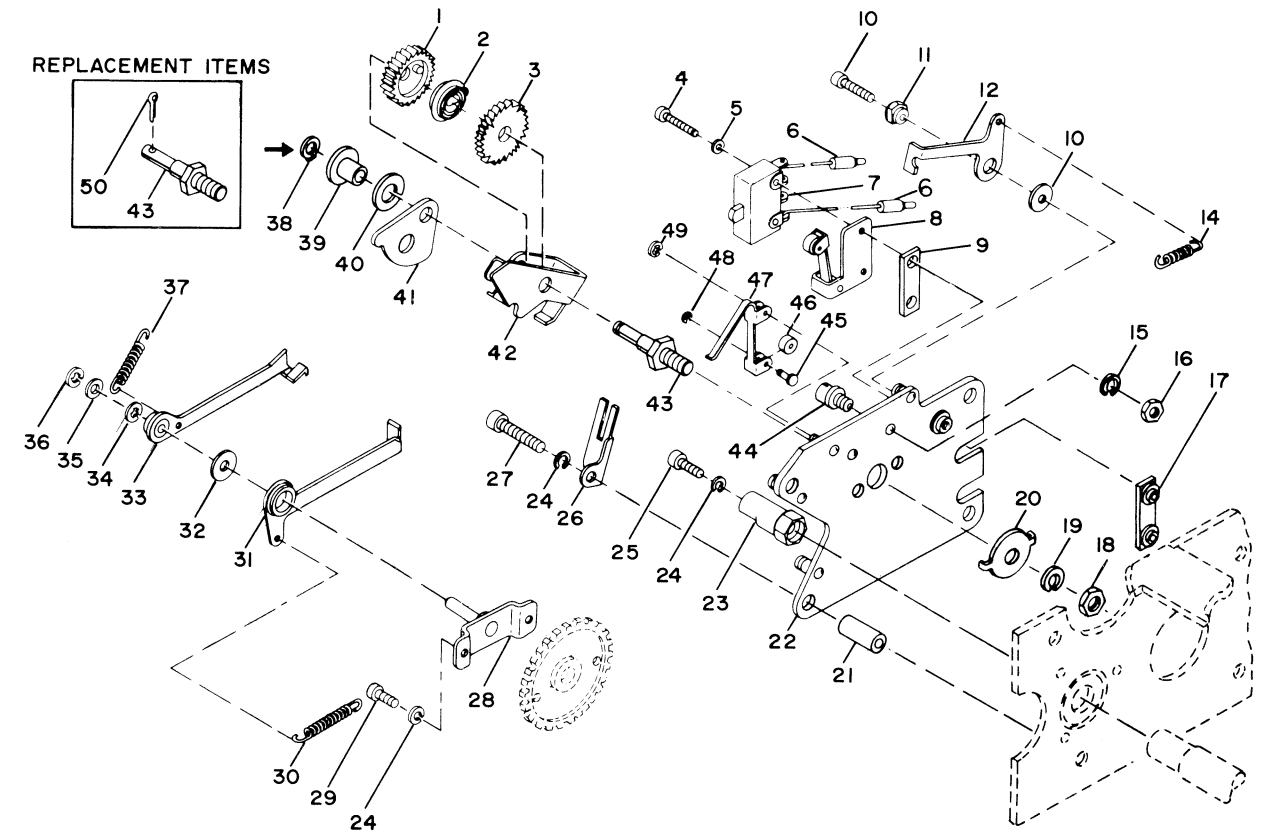


- | | | | |
|----|---------------------------------------|----|--|
| 26 | Guide, Time Delay Feed and Check Pawl | 1 | Ratchet, Advance |
| 27 | Screw | 2 | Spring, Return Spiral |
| 28 | Adapter Assembly, Main Shaft Drive | 3 | Ratchet, Reduction |
| 29 | Screw | 4 | Screw |
| 30 | Spring Time Delay Feed Pawl Helical | 5 | Washer |
| 31 | Pawl Assembly, Time Delay Feed | 6 | Probe, Time Delay Switch |
| 32 | Spacer, Sleeve | 7 | Switch, Time Delay |
| 33 | Pawl Assembly, Time Delay Check | 8 | Actuator, Time Delay Switch |
| 34 | Ring, Retaining | 9 | Spacer |
| 35 | Washer, Felt | 10 | Screw |
| 36 | Ring, Retaining | 11 | Eccentric, Time Delay Secondary |
| 37 | Spring, Time Delay Check Pawl Helical | 12 | Pawl, Time Delay Secondary Check |
| 38 | Ring | 13 | Spacer |
| 39 | Sleeve | 14 | Spring, Time Delay Secondary Check Pawl |
| 40 | Shim | 15 | Lock, Washer |
| 41 | Latch | 16 | Nut, Plain Hex |
| 42 | Yoke | 17 | Plate, Nut |
| 43 | Shaft, Ratchet Support | 18 | Nut, Lock |
| 44 | Post | 19 | Washer, Lock |
| 45 | Pin | 20 | Lock, Ratchet Support Shaft |
| 46 | Roller | 21 | Spacer, Sleeve |
| 47 | Spring | 22 | Plate Assembly, Time Delay Mounting Base |
| 48 | Ring, Retaining | 23 | Extension, Timing Cam Shaft |
| 49 | Ring, Retaining | 24 | Washer, Lock |
| 50 | Pin, Cotter | 25 | Screw |

Figure 5-69. Automatic Time Delay Motor Stop Assembly
SL-4-03315B Figure 16

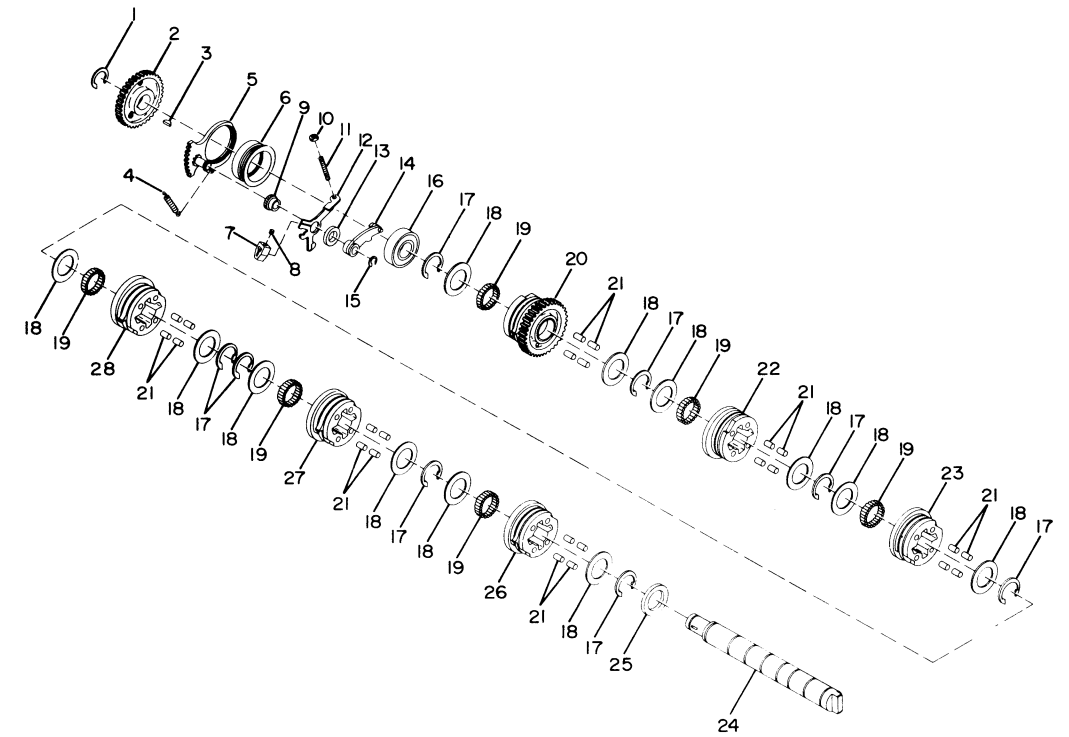


- | | | | |
|----|---|----|----------------------------------|
| 1 | Ring, Retaining | 15 | Ring, Retaining |
| 2 | Gear, Printer Helical | 16 | Bearing, Left-Hand |
| 3 | Key, Woodruff | 17 | Ring, Retaining |
| 4 | Spring, Backstop Lever | 18 | Washer |
| 5 | Range, Adjustment Assembly | 19 | Roller, Needle Bearing |
| 6 | Retainer, Left-Hand Bearing | 20 | Clutch Assembly, A Cam and Start |
| 7 | Clamp | 21 | Roller |
| 8 | Screw, Clamp | 22 | Clutch, B Cam and Lateral No. 3 |
| 9 | Bushing, Start Clutch Backstop Eccentric | 23 | Clutch, C Cam and Lateral No. 4 |
| 10 | Nut, Lock | 24 | Shaft, Selector Main |
| 11 | Setscrew, Start Clutch Release Adjustment | 25 | Spacer |
| 12 | Lever, Start Clutch Backstop | 26 | Clutch, F Cam and Rotary No. 1 |
| 13 | Washer, Felt | 27 | Clutch, F Cam and Rotary No. 1 |
| 14 | Latch | 28 | Clutch, D Cam and Lateral No. 5 |

Figure 5-70. Selector Main Shaft Assembly
SL-4-03315B Figure 23

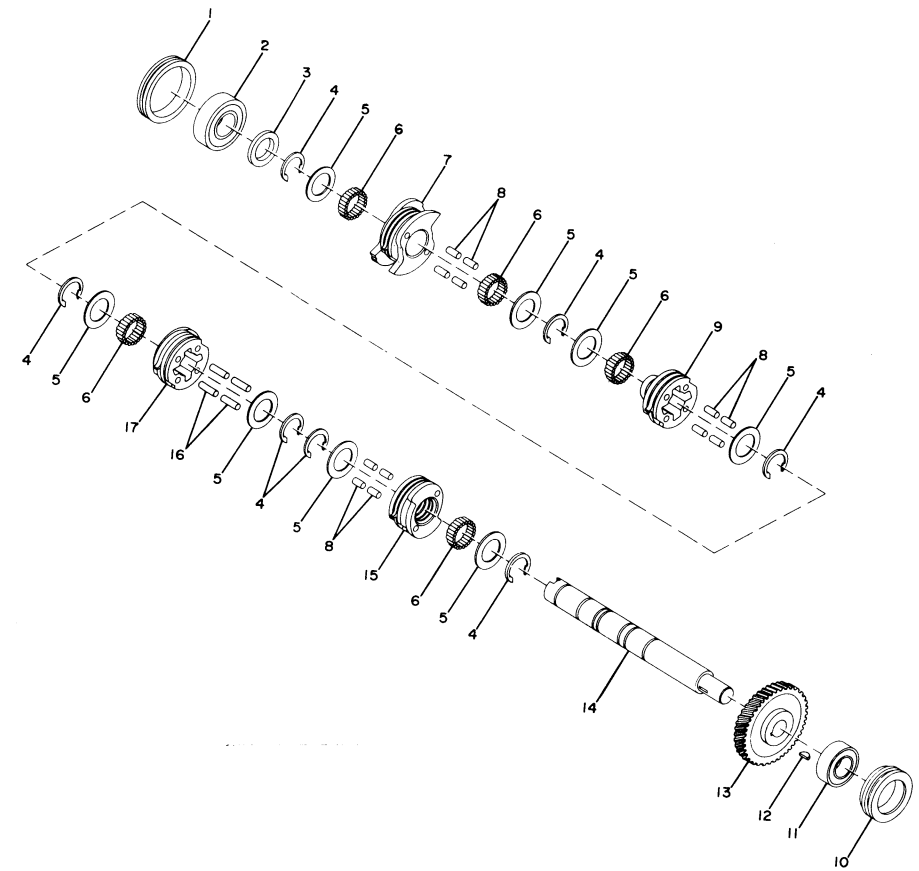


- | | | | |
|---|-------------------------------------|----|------------------------------------|
| 1 | Retainer, Center Bearing | 10 | Retainer, Right-Hand Bearing |
| 2 | Bearing, Center | 11 | Bearing, Right-Hand |
| 3 | Spacer | 12 | Key, Third Reduction Gear |
| 4 | Ring, Retaining | 13 | Gear, Third Reduction |
| 5 | Washer, Flat | 14 | Shaft, Function Main |
| 6 | Roller, Needle Bearing | 15 | Clutch, K Cam, Carriage Return |
| 7 | Clutch, G and H Cam, Print Function | 16 | Roller |
| 8 | Roller | 17 | Clutch, J Cam, Letters and Figures |
| 9 | Clutch, I Cam, Line Feed | | |

Figure 5-71. Function Main Shaft Assembly
SL-4-03315B Figure 22

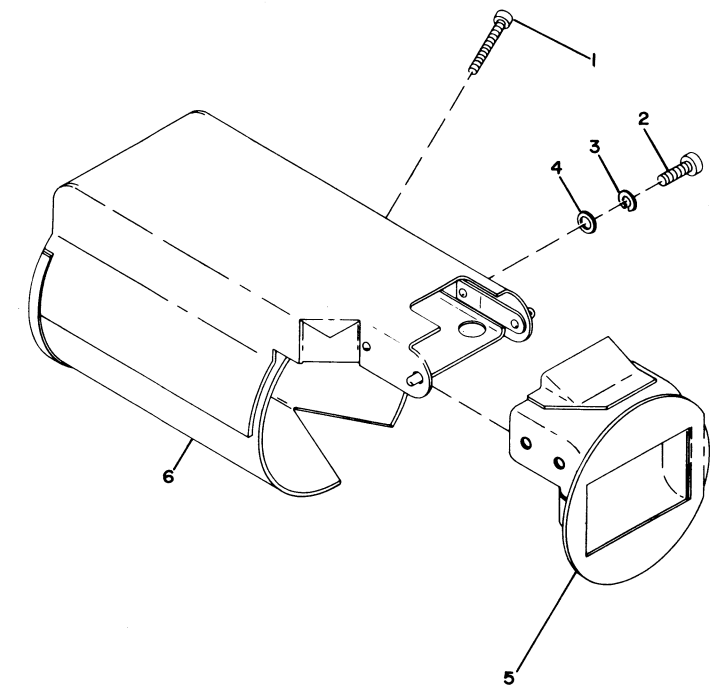


- | | | | |
|---|---------------------------|---|------------------|
| 1 | Screw, Machine (Clamping) | 4 | Washer |
| 2 | Screw, Machine (Mounting) | 5 | Outlet, Cooling |
| 3 | Washer, Lock | 6 | Housing, Cooling |

Figure 5-72. Fan Outlet Duct Assembly
SL-4-03315B Figure 17

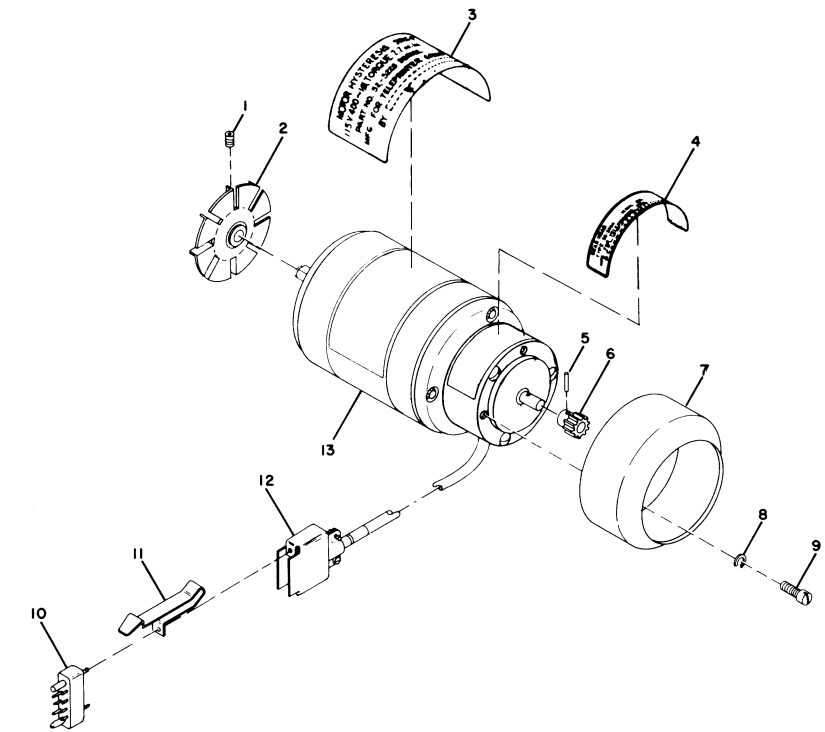


- | | | | |
|---|---------------------|----|-------------------------------|
| 1 | Setscrew, Motor Fan | 8 | Washer, Lock |
| 2 | Fan, Motor | 9 | Screw |
| 3 | Motor, Decal | 10 | Connector |
| 4 | Gear Head Decal | 11 | Lock |
| 5 | Pin, Gear | 12 | Hood |
| 6 | Motor, Pinion Gear | 13 | Gear Head Assembly, Motor and |
| 7 | Cover, Motor | | |

Figure 5-73. Motor (400 Cycle) and Gearhead Assembly
SL-4-03315B Figure 29

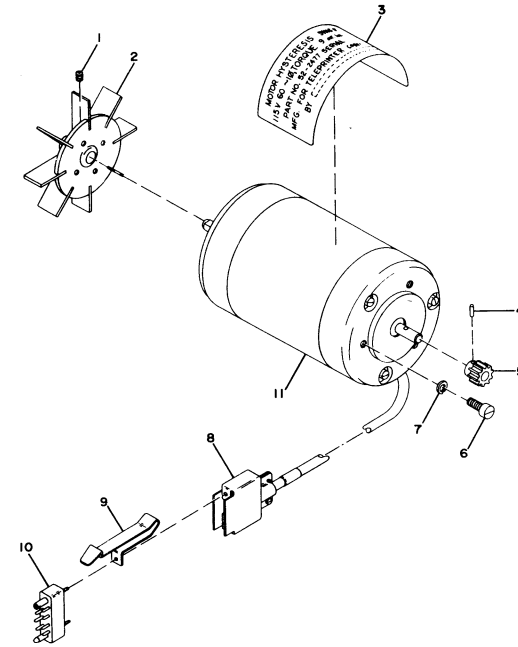


- | | | | |
|---|---------------------|----|-----------------|
| 1 | Setscrew, Motor Fan | 7 | Washer, Lock |
| 2 | Fan, Motor | 8 | Hood |
| 3 | Motor Decal | 9 | Lock |
| 4 | Pin, Gear | 10 | Connector |
| 5 | Pinion, Gear | 11 | Assembly, Motor |
| 6 | Screw | | |

Figure 5-74. Motor (60-Cycle) Assembly
SL-4-03315B Figure 30

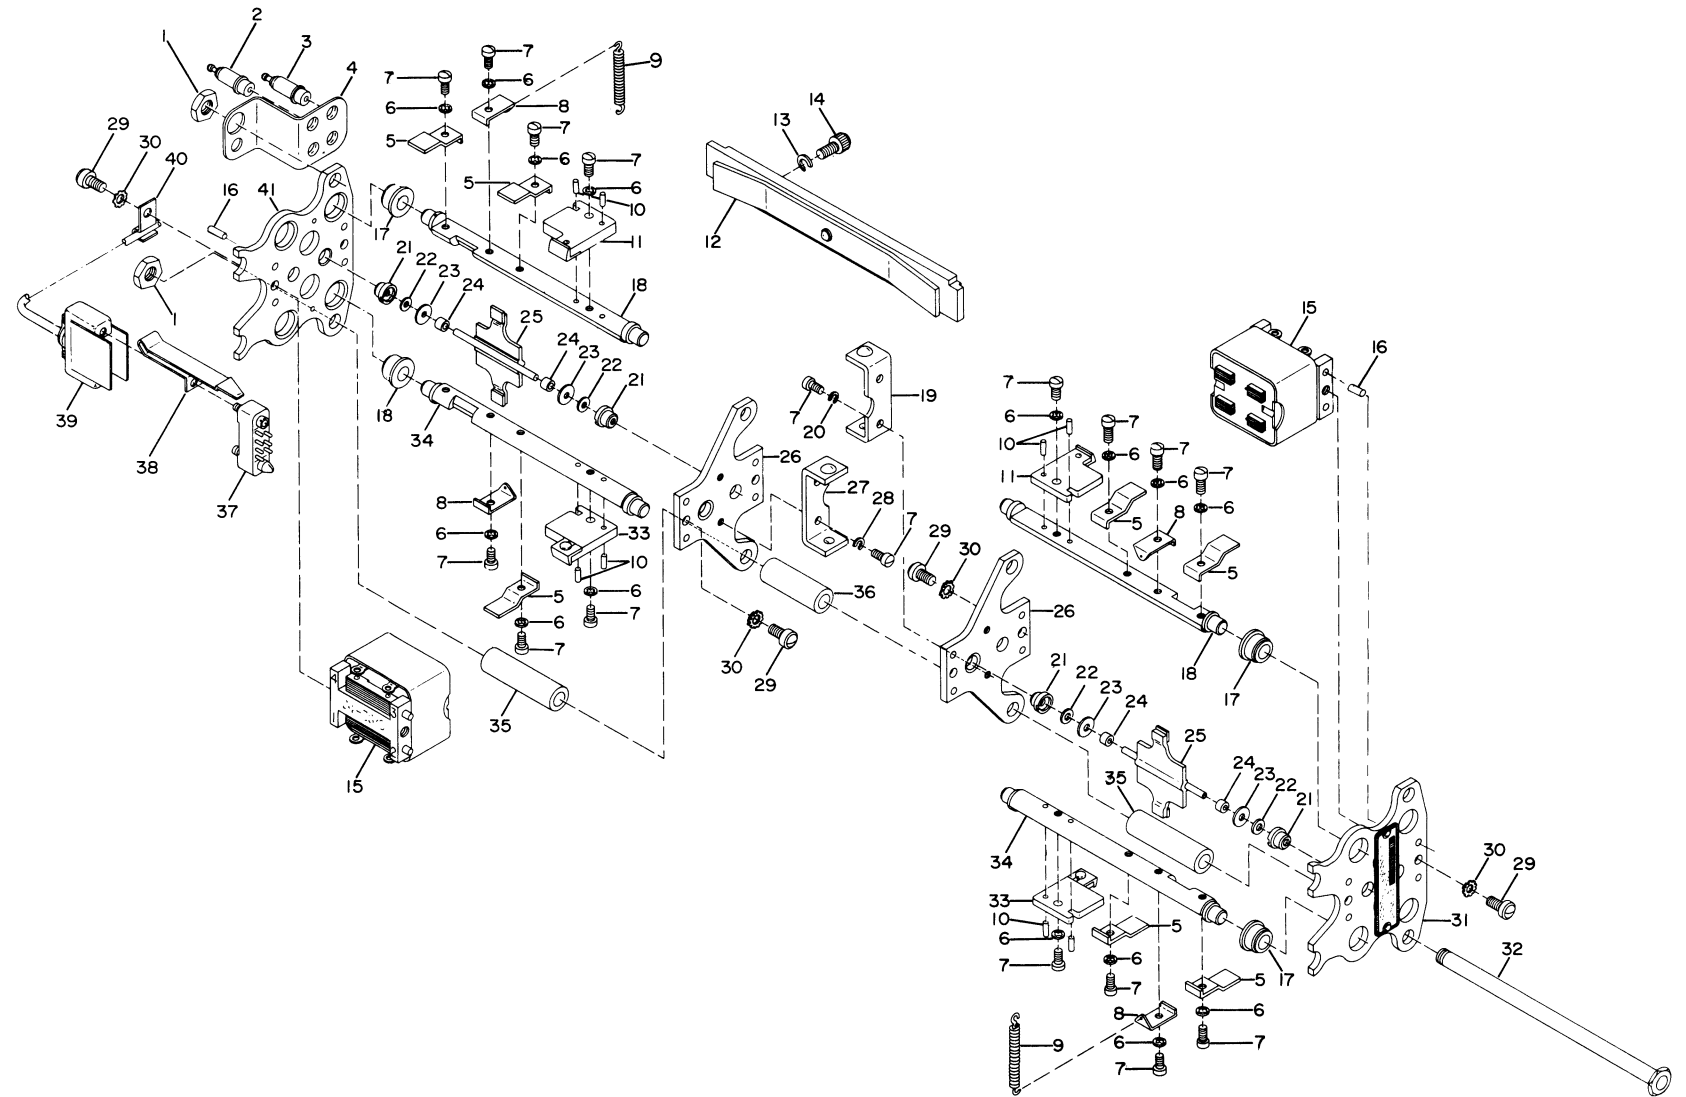


- | | | | | | |
|----|---------------------------------|----|----------------------------|----|------------------------------|
| 1 | Nut | 15 | Magnet, Assembly Selector | 29 | Screw |
| 2 | Terminal | 16 | Pin | 30 | Washer, Lock |
| 3 | Terminal | 17 | Bearing, Shaft | 31 | Plate |
| 4 | Plate | 18 | Shaft, Selector Mark | 32 | Stud, Selector Tie Rod |
| 5 | Latch | 19 | Bar, Stop | 33 | Latch, Armature Space Paddle |
| 6 | Washer, Lock | 20 | Washer, Lock | 34 | Shaft, Selector Space |
| 7 | Screw, Machine | 21 | Bearing, Armature Shaft | 35 | Spacer, Outer Frame Plate |
| 8 | Arm, Selector Shaft Bias Spring | 22 | Washer, Lubricating Wick | 36 | Spacer, Inner Frame Plate |
| 9 | Spring, Selector Shaft Bias | 23 | Retainer, Lubricating Wick | 37 | Connector |
| 10 | Pin, Straight | 24 | Spacer, Armature Shaft | 38 | Lock |
| 11 | Latch, Armature Mark Paddle | 25 | Armature | 39 | Hood |
| 12 | Bar | 26 | Plate | 40 | Bracket, Cable Strain Relief |
| 13 | Washer, Lock | 27 | Bar, Stop | 41 | Plate |
| 14 | Screw, Machine | 28 | Washer, Lock | | |

Figure 5-75. Selector Assembly (AN/TGC-14(V) Only)
SL-4-03315B Figure 18

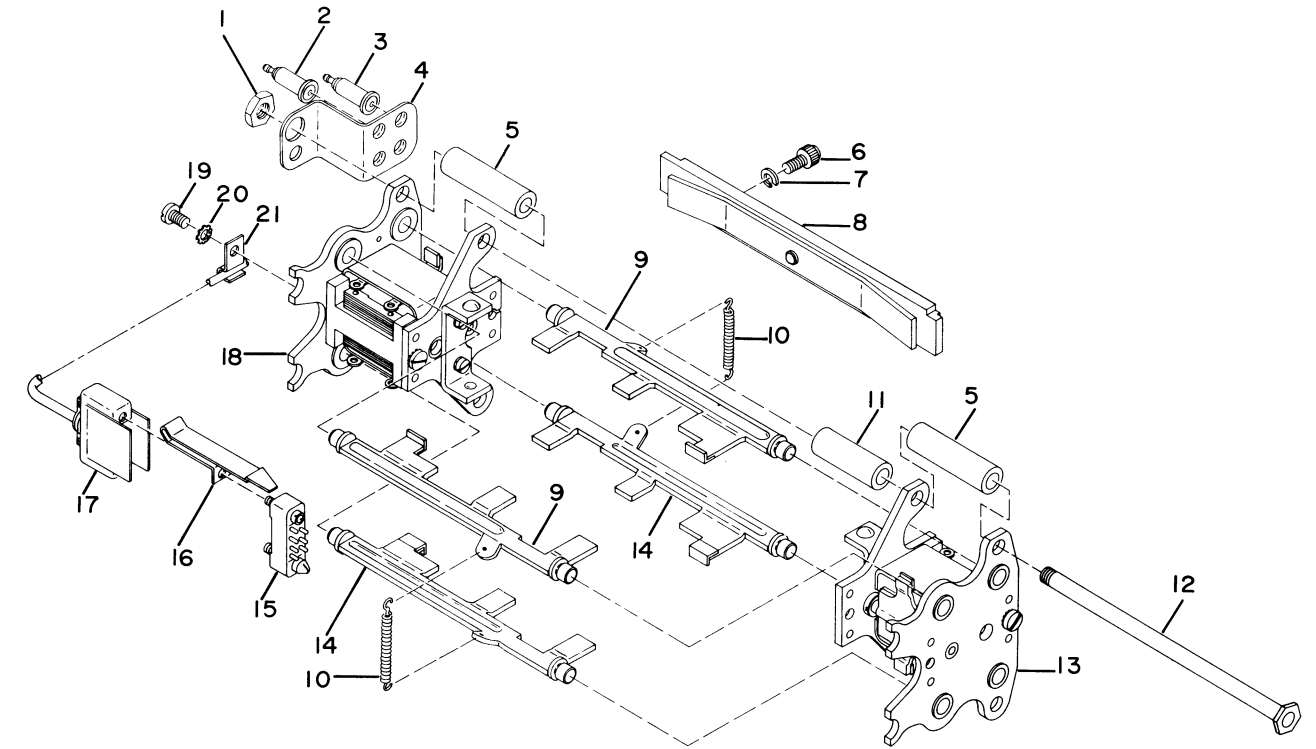

- | | | | |
|----|-----------------------------|----|-----------------------------------|
| 1 | Nut | 12 | Stud, Selector Tie Rod |
| 2 | Terminal | 13 | Frame Assembly, Right-Hand Magnet |
| 3 | Terminal | 14 | Shaft, Selector Space Latch |
| 4 | Plate | 15 | Connector |
| 5 | Spacer, Outer Frame Plate | 16 | Lock |
| 6 | Screw | 17 | Hood |
| 7 | Washer | 18 | Frame Assembly, Left-Hand Magnet |
| 8 | Bar | 19 | Screw |
| 9 | Shaft, Selector Mark Latch | 20 | Washer, Lock |
| 10 | Spring, Selector Shaft Bias | 21 | Bracket, Cable Strain Relief |
| 11 | Spacer, Inner Frame Plate | | |

Figure 5-76. Selector Assembly (AN/TGC-14A(V) Only)
SL-4-03315B Figure 18A

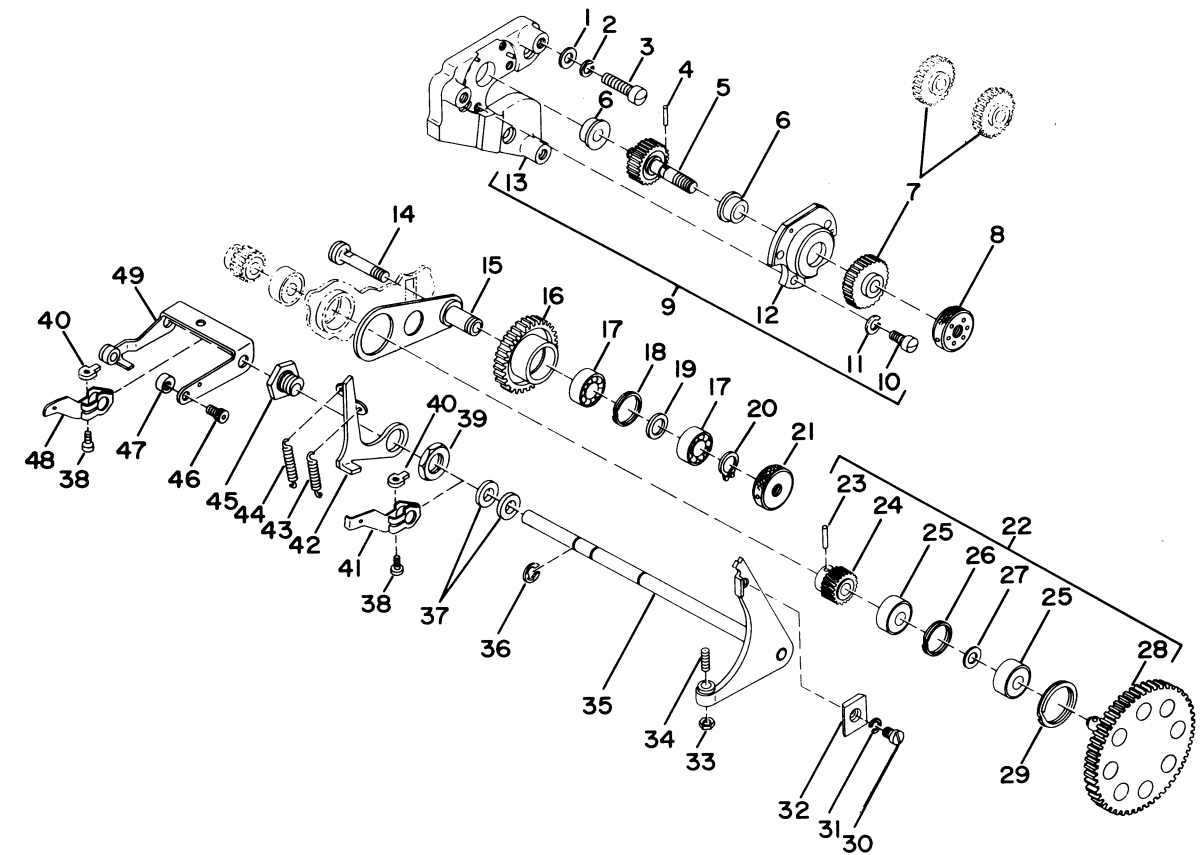

- | | | | |
|----|----------------------------------|----|--|
| 1 | Washer | 26 | Ring |
| 2 | Washer, Lock | 27 | Spacer |
| 3 | Screw | 28 | Gear, Second Reduction |
| 4 | Pin | 29 | Ring |
| 5 | Gear, First Reduction | 30 | Screw |
| 6 | Bearing | 31 | Washer, Lock |
| 7 | Gear, Speed Change | 32 | Stop, 72 Character |
| 8 | Nut, Lock | 33 | Nut, Anti-Turn |
| 9 | Mount Assembly, Motor | 34 | Screw, First Character Adjustment |
| 10 | Screw | 35 | Shaft, V Lever |
| 11 | Washer, Lock | 36 | Ring, Retaining (4) |
| 12 | Cup, Bearing | 37 | Washer, Felt |
| 13 | Plate, Motor Mounting | 38 | Screw |
| 14 | Stud | 39 | Nut, Plain Hex |
| 15 | Arm Assembly, Idler Gear | 40 | Nut, Anti-Turn |
| 16 | Gear, Idler | 41 | Arm, Lock Lever Actuator |
| 17 | Bearing | 42 | Lock Lever |
| 18 | Ring | 43 | Spring, Lock Lever Actuator Arm Helical |
| 19 | Spacer | 44 | Spring, Automatic Carriage Return and
Line Feed Bail Actuator Helical |
| 20 | Ring, Grip | 45 | Bushing, Eccentric |
| 21 | Nut, Lock | 46 | Screw |
| 22 | Pinion Assembly, Third Reduction | 47 | Eccentric, Bail (Carriage Return) |
| 23 | Pin | 48 | Arm, Automatic Carriage Return and
Line Feed Actuator |
| 24 | Pinion, Third Reduction | 49 | Actuator |
| 25 | Bearing | | |

Figure 5-77. Gear Train, Automatic Carriage Return,
and Line Feed Assembly
SL-4-03315B Figure 19



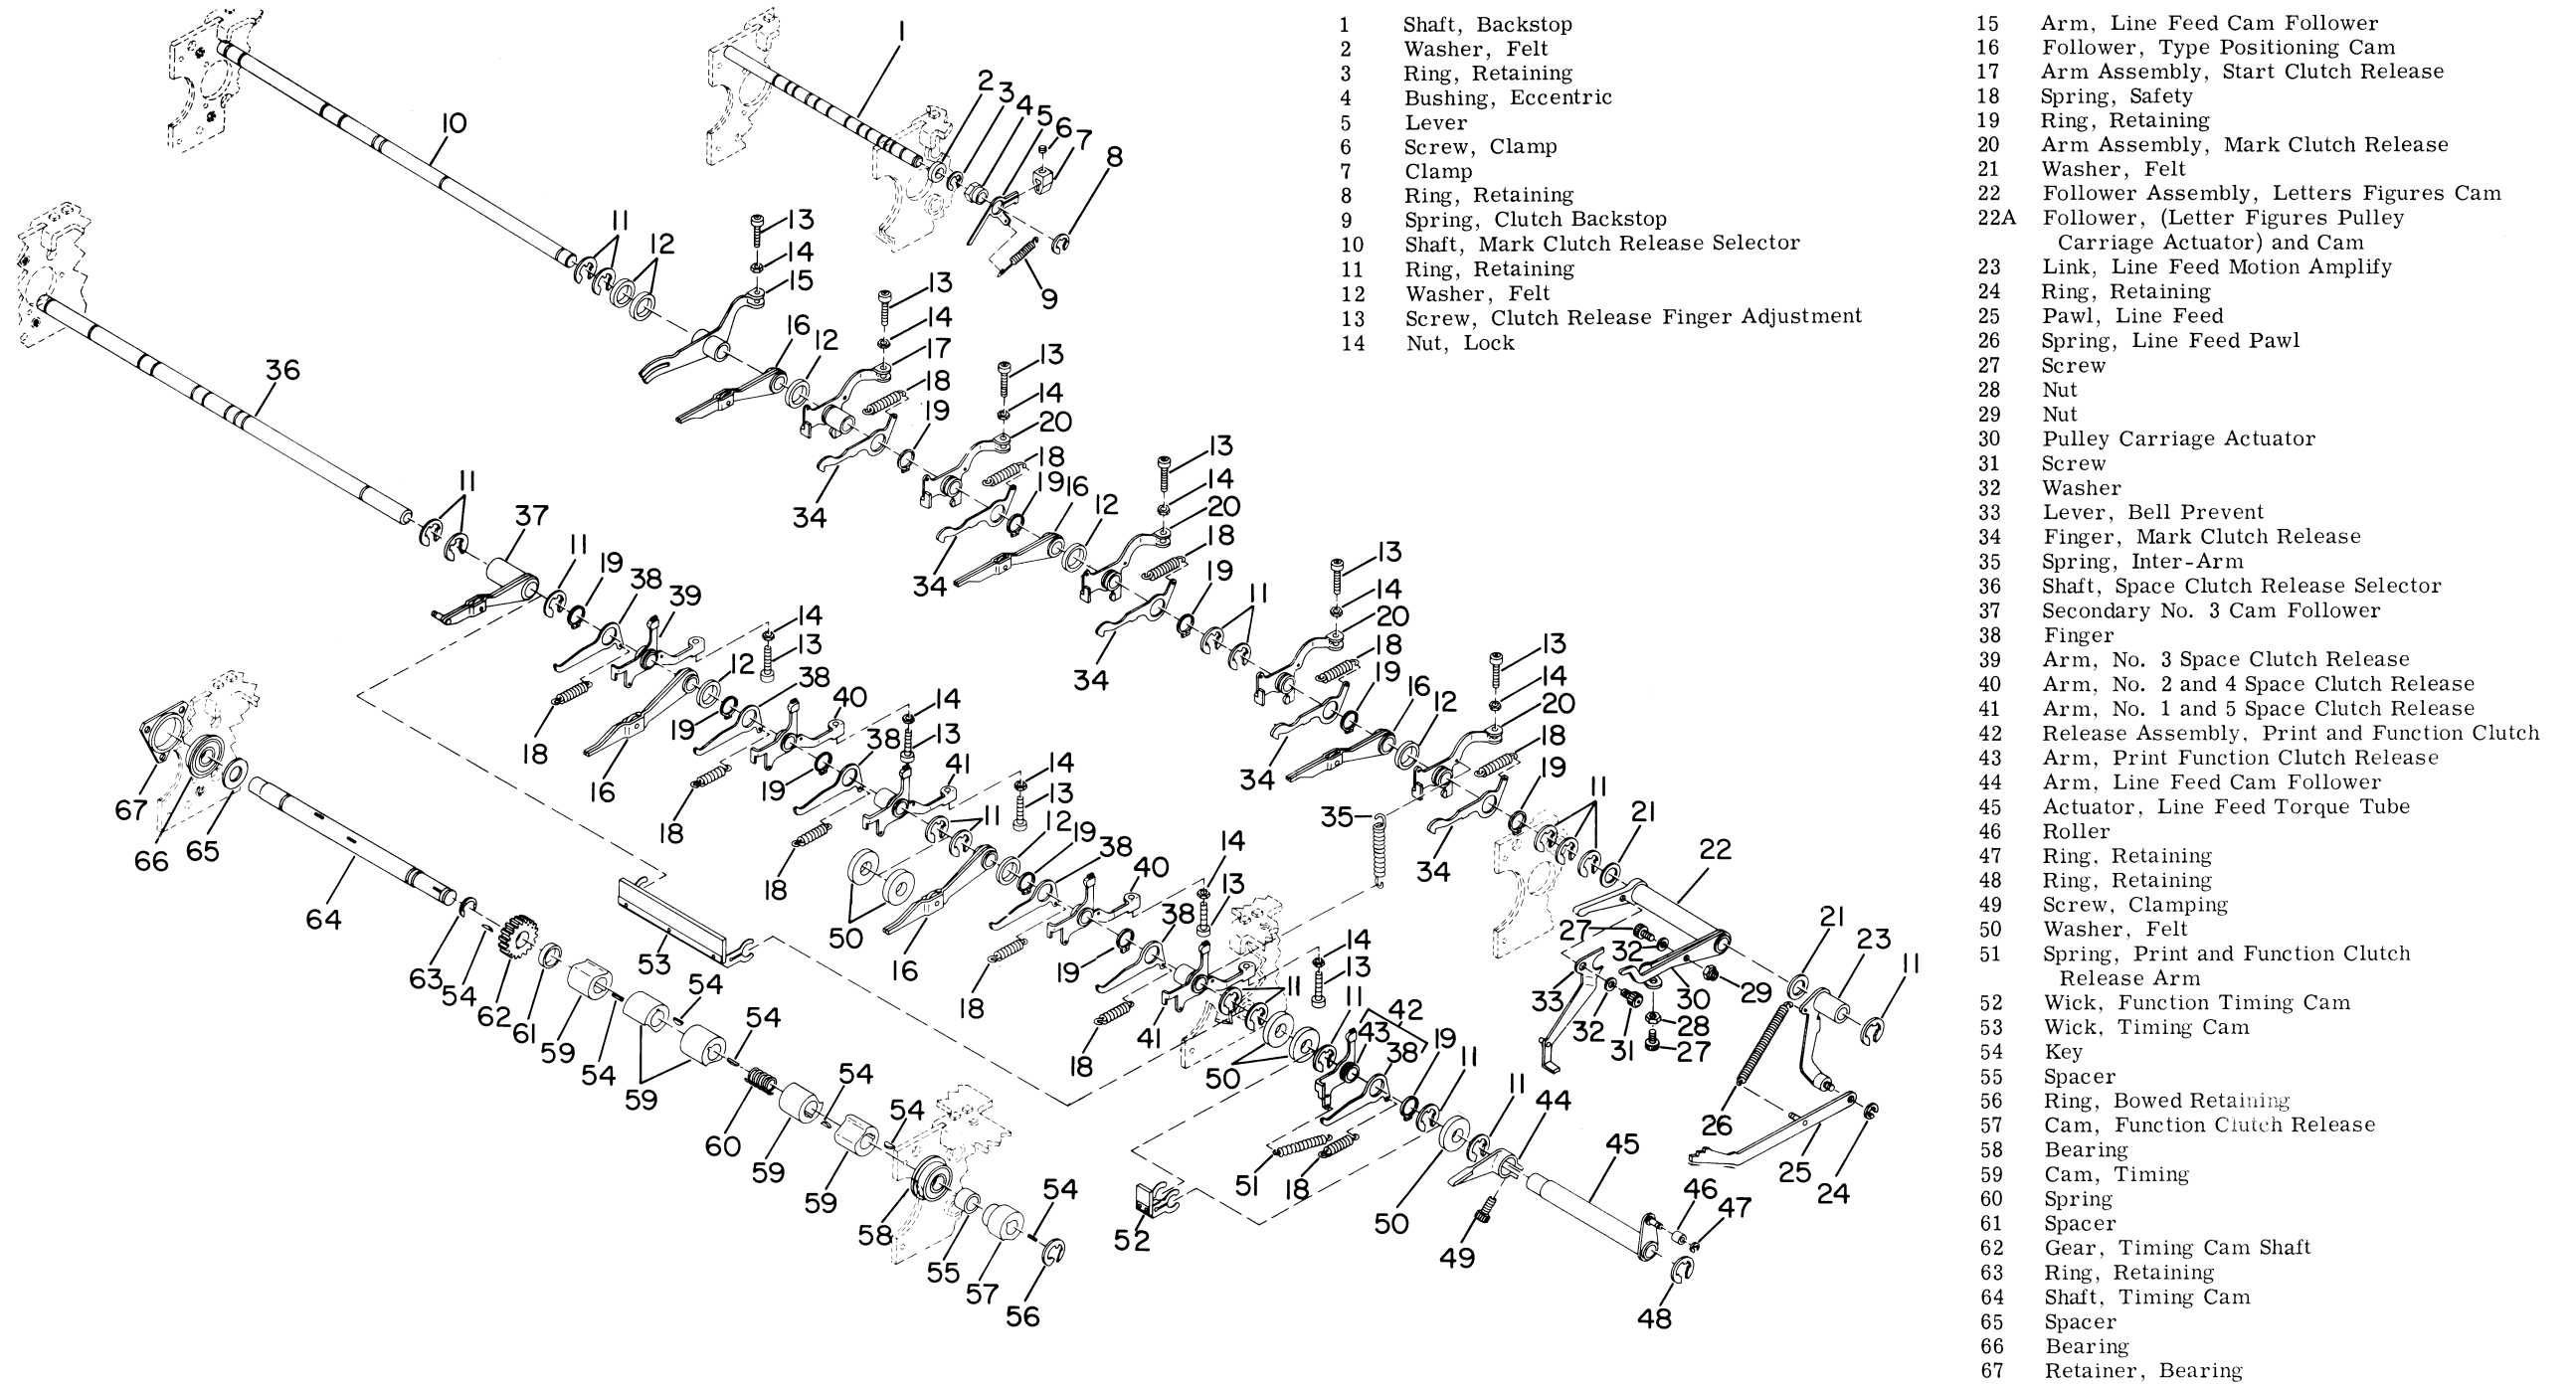


Figure 5-78. Mark and Space Clutch Release Shaft, Timing Cam Shaft, and Backstop Shaft Assembly
SL-4-03315B Figure 20

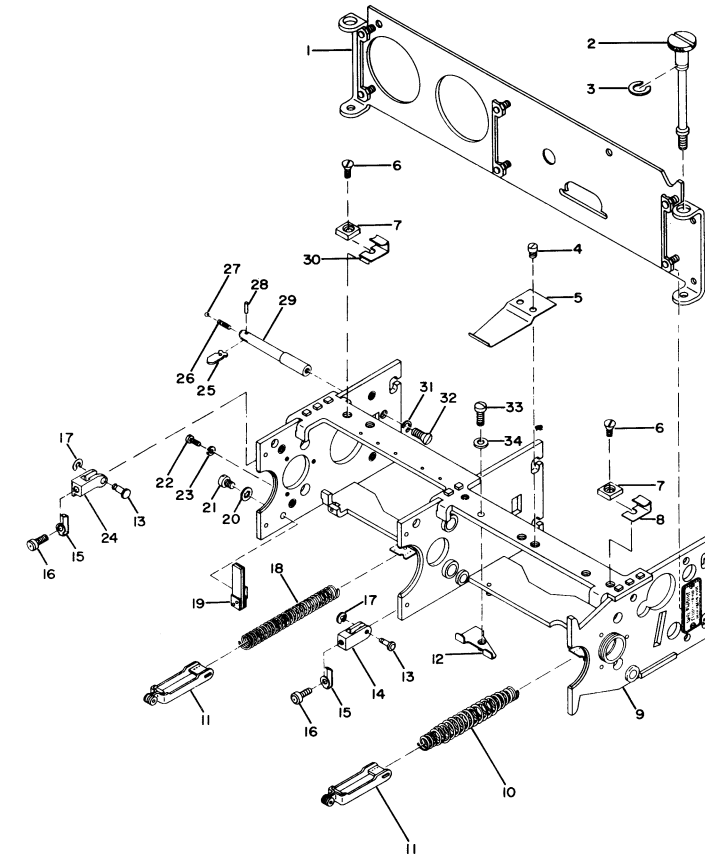


- | | | | |
|----|--|----|--------------------------------------|
| 1 | Plate, Back | 18 | Spring, Print Helical |
| 2 | Screw, Rear Lock | 19 | Wick Assembly, Start Cam Lubricating |
| 3 | Ring, Retaining | 20 | Washer, Lock |
| 4 | Screw | 21 | Screw |
| 5 | Spring, Stop | 22 | Screw, Machine |
| 6 | Screw, Machine | 23 | Washer, Lock |
| 7 | Block | 24 | Clamp, Frame (Top) |
| 8 | Clip, Ribbon Feed Base Spring | 25 | Arm, Lock |
| 9 | Frame, Rear | 26 | Spring, Detent Helical |
| 10 | Spring, Function Helical | 27 | Ball, Detent |
| 11 | Link Assembly, Print and Function
Helical Spring Yoke | 28 | Pin |
| 12 | Clip, Backstop Spring | 29 | Post, Change Gear |
| 13 | Pivot, Stud | 30 | Clip Ribbon Feed Base Spring |
| 14 | Clamp, Frame | 31 | Washer, Lock |
| 15 | Pad | 32 | Screw |
| 16 | Screw | 33 | Screw |
| 17 | Ring, Retaining | 34 | Washer |

Figure 5-79. Rear Frame Assembly
SL-4-03315B Figure 21

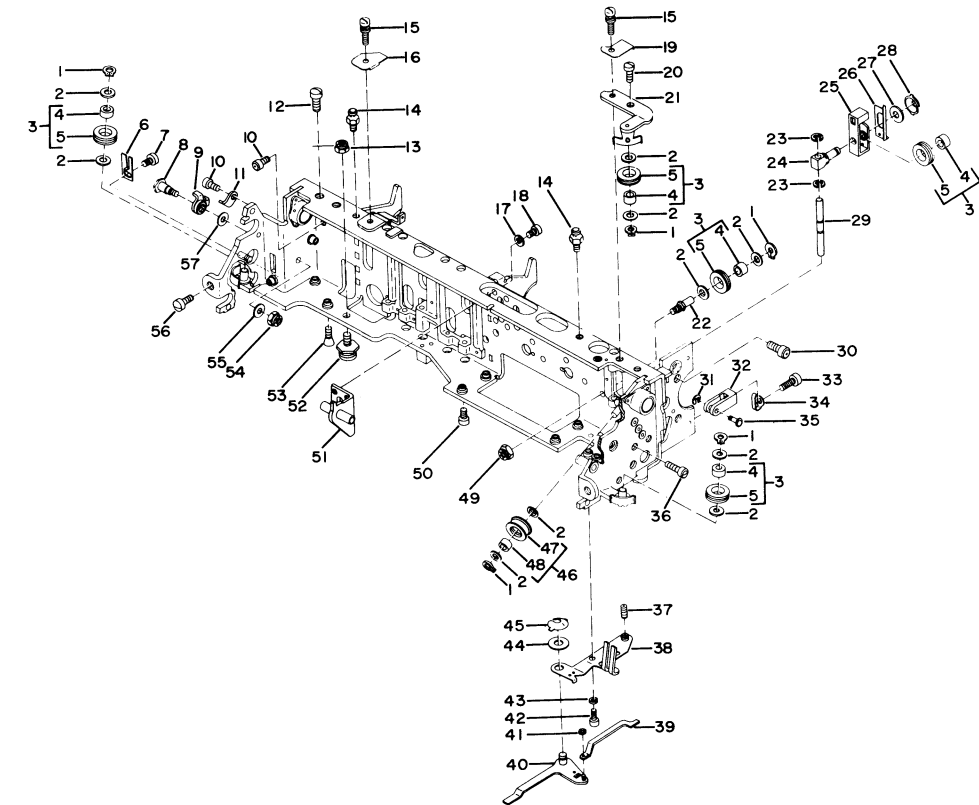

- | | | | |
|----|--|----|--|
| 1 | Ring, Retaining | 30 | Screw |
| 2 | Spacer, Sleeve | 31 | Ring, Retaining |
| 3 | Pulley Assembly | 32 | Clamp, Frame |
| 4 | Bearing | 33 | Screw |
| 5 | Pulley | 34 | Pad |
| 6 | Bracket Print Hammer Actuator Link Guide | 35 | Pivot, Clamp |
| 7 | Screw, Machine | 36 | Screw |
| 8 | Shaft, Print Hammer Release | 37 | Screw, Shift Lever Adjustment |
| 9 | Release Print Hammer | 38 | Bracket, Shift |
| 10 | Screw | 39 | Shift, Line Feed |
| 11 | Lever, Print Hammer Release Stop | 40 | Arm Line Feed Shift |
| 12 | Screw, Machine | 41 | Ring, Retaining |
| 13 | Nut, Lock | 42 | Screw |
| 14 | Pin, Paper Guide Retaining | 43 | Washer, Lock |
| 15 | Screw | 44 | Washer |
| 16 | Cover Left-Hand Guide | 45 | Ring, Grip |
| 17 | Washer, Lock | 46 | Pulley Assembly, Lateral Control Belt |
| 18 | Screw, Machine | 47 | Pulley |
| 19 | Cover, Right-Hand Guide | 48 | Bearing |
| 20 | Screw | 49 | Nut |
| 21 | Bracket | 50 | Screw |
| 22 | Pin | 51 | Bracket Assembly, Print Lever and
Character Advance Lever Shaft Support |
| 23 | Ring, Retaining | 52 | Locator, Printing Electrical Chassis |
| 24 | Rod | 53 | Screw, Machine |
| 25 | Carriage, Pulley | 54 | Nut, Self-Locking |
| 26 | Clip, Spring | 55 | Washer, Flat |
| 27 | Spacer, Sleeve | 56 | Screw, Machine |
| 28 | Ring, Retaining | 57 | Washer |
| 29 | Pin, Straight | | |

Figure 5-80. Front Frame Assembly (Front View)
SL-4-03315B Figure 15

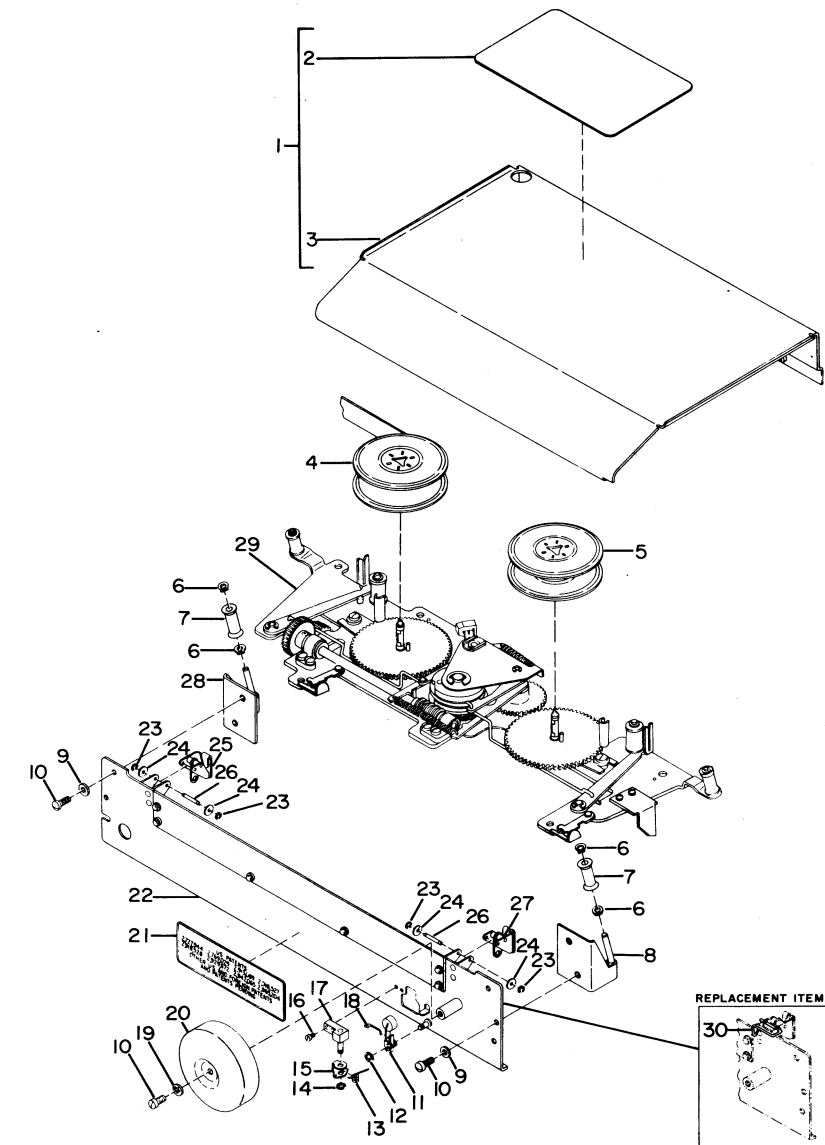

- | | | | |
|----|----------------------------------|----|--|
| 1 | Guide Assembly, Paper | 17 | Bracket & Shaft Assembly |
| 2 | Diagram, Ribbon Threading Guide | 18 | Link, Wire |
| 3 | Guide | 19 | Washer, Lock |
| 4 | Ribbon and Spool | 20 | Bell |
| 5 | Spool, Ribbon | 21 | Plate, Patent |
| 6 | Ring, Retaining | 22 | Plate Assembly, Front |
| 7 | Roller, Ribbon Guide | 23 | Ring, Retaining |
| 8 | Bracket, Right-Hand Ribbon Guide | 24 | Washer, Felt |
| 9 | Washer, Flat | 25 | Guide Assembly, Left-Hand Ribbon Vibrator |
| 10 | Screw, Machine | 26 | Shaft Ribbon Vibrator Pivot |
| 11 | Lever Assembly, End of Line Bell | 27 | Guide Assembly, Right-Hand Ribbon Vibrator |
| 12 | Ring, Retaining | 28 | Bracket, Left-Hand Ribbon Guide |
| 13 | Spring, Torsion | 29 | Plate Assembly, Ribbon Feed Top (see figure 5-39, Appendix, for breakdown) |
| 14 | Ring, Retaining | 30 | Spring Clip |
| 15 | Lever | | |
| 16 | Screw, Machine | | |

Figure 5-81. Ribbon Feed and Front Plate Assemblies
SL-4-03315B Figure 8



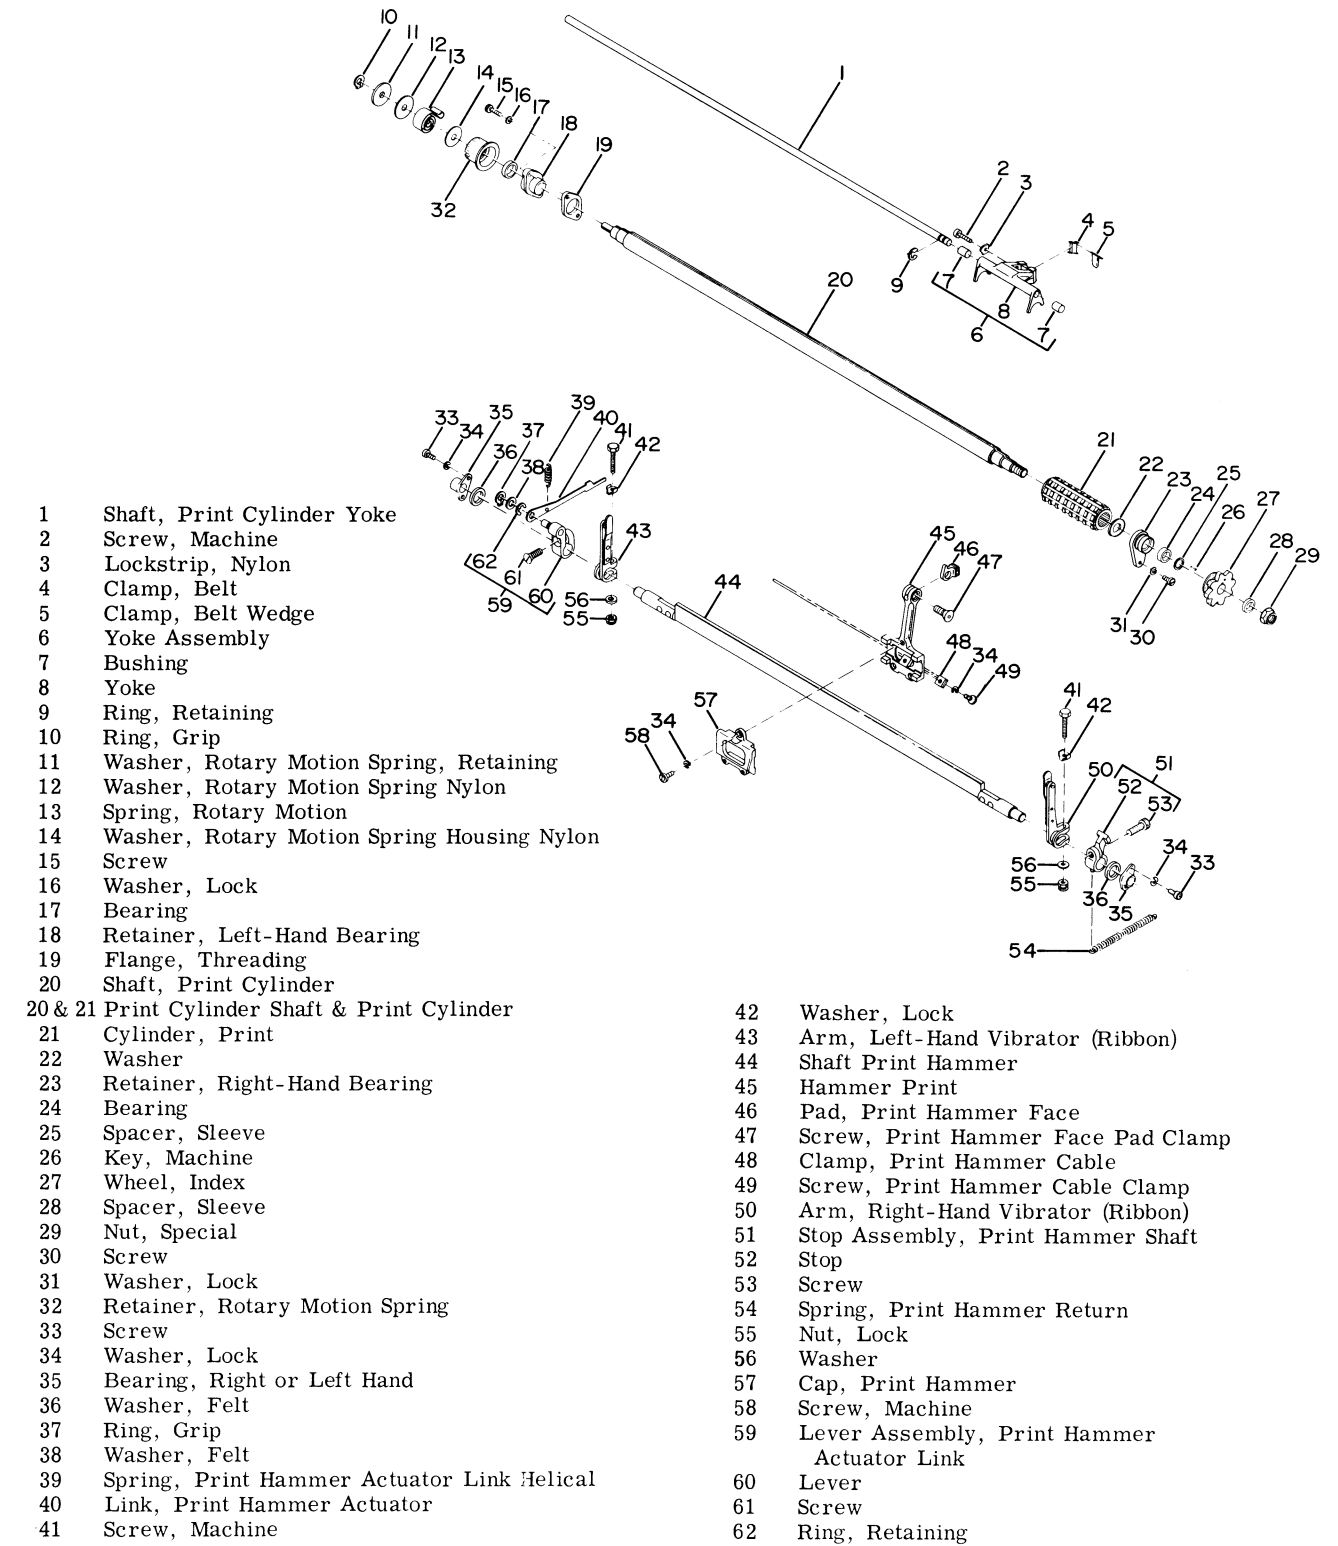


Figure 5-82. Print Hammer, Print Cylinder,
and Print Cylinder Yoke Assembly
SL-4-03315B Figure 10

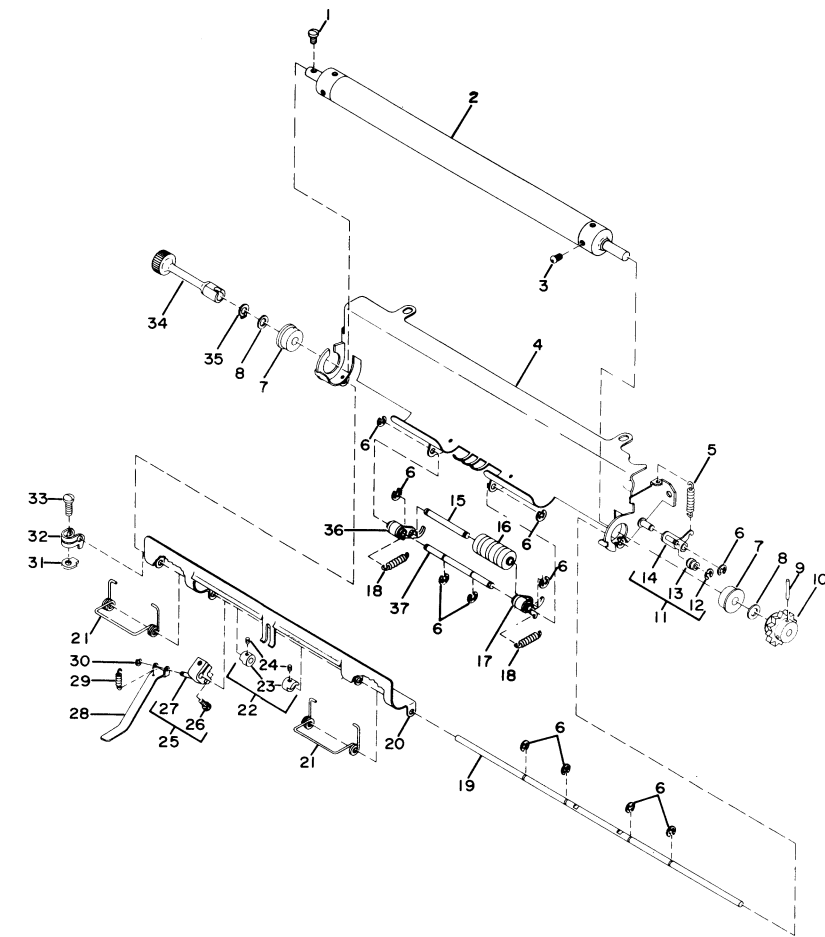


- | | | | |
|----|--|----|---|
| 1 | Screw, Machine | 20 | Pad, Pressure |
| 2 | Roll, Paper Feed Rubber | 21 | Spring, Pad |
| 3 | Sprocket, Paper Feed Tooth | 22 | Cam Assembly, Pressure Release |
| 4 | Guide, Paper Feed | 23 | Cam, Pressure Release |
| 5 | Spring, Paper Feed Detent | 24 | Setscrew, Pressure Release Cam |
| 6 | Ring, Retaining | 25 | Clamp Assembly, Paper Pressure Release
Lever Pivot |
| 7 | Bearing, Ball | 26 | Screw |
| 8 | Washer | 27 | Clamp |
| 9 | Pin Ratchet Roll | 28 | Lever, Paper Pressure Release |
| 10 | Ratchet Paper Feed Detent | 29 | Spring, Paper Release Lever |
| 11 | Back Stop Assembly, Paper Feed Detent | 30 | Ring, Retaining |
| 12 | Ring, Retaining | 31 | Nut, Anti-Turn |
| 13 | Roller, Detent | 32 | Arm, Paper Feed Stop |
| 14 | Arm, Paper Feed Detent | 33 | |
| 15 | Shaft, Pressure Roll | 34 | Knob, Paper Feed |
| 16 | Roll, Pressure | 35 | Ring, Grip |
| 17 | Arm, Right-Hand Pressure Roll Actuator | 36 | Arm, Left-Hand Pressure Roll Actuator |
| 18 | Spring, Pressure Roll | 37 | Shaft, Pressure Roll Pivot |
| 19 | Shaft, Paper Feed Pressure Release | | |

Figure 5-83. Paper Feed Assembly
SL-4-03315B Figure 11

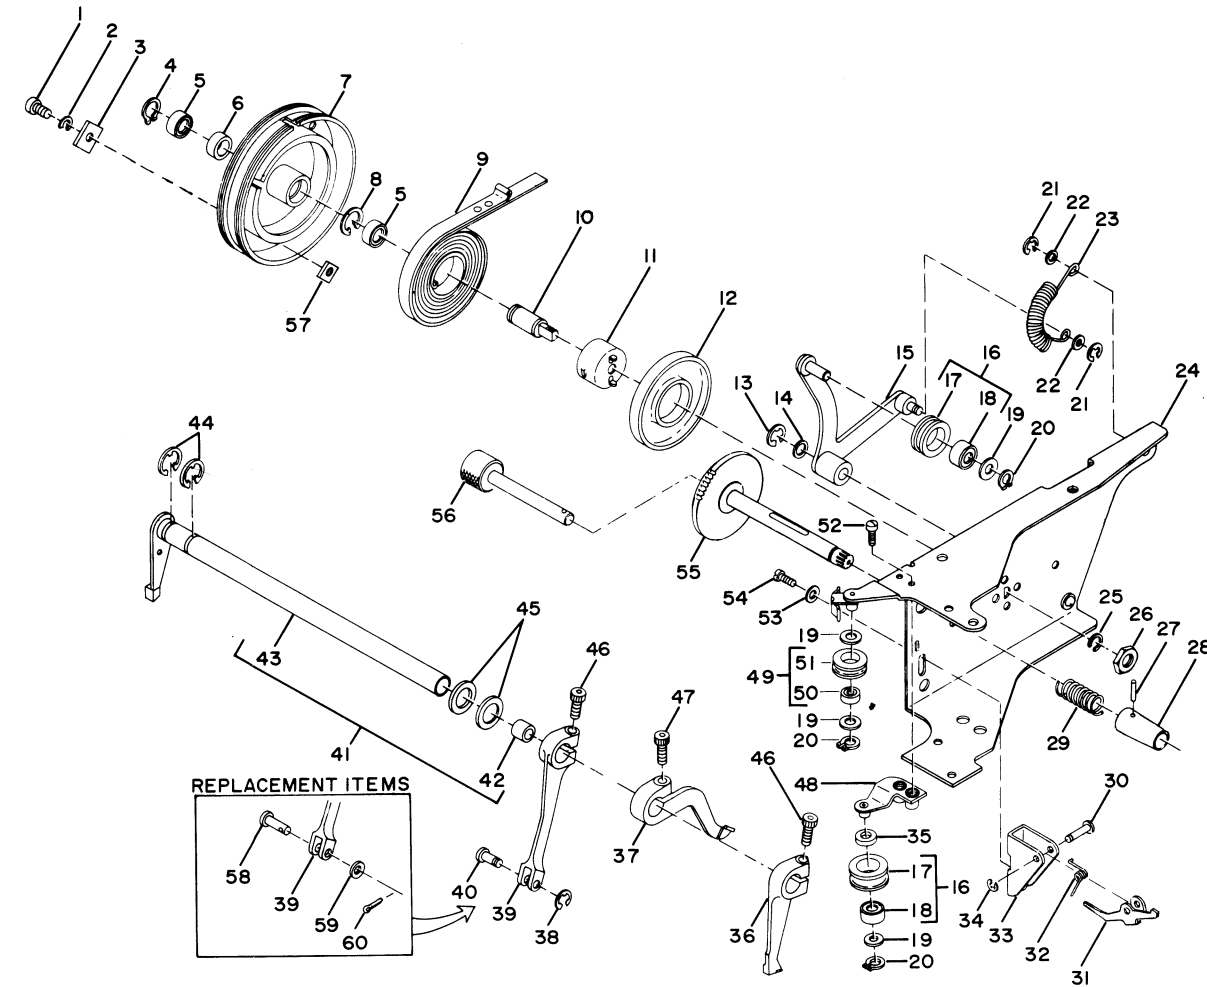

- | | | | | | |
|----|--------------------------------------|----|-----------------------------------|----|--------------------------------|
| 1 | Screw | 21 | Ring, Retaining | 41 | Shaft Assembly Print Lever |
| 2 | Washer, Lock | 22 | Washer, Flat | 42 | Bearing |
| 3 | Clamp, Lateral Control Belt | 23 | Spring, Lateral Tension Helical | 43 | Shaft |
| 4 | Ring, Retaining | 24 | Bracket Assembly, Takeup Drum | 44 | Ring, Retaining |
| 5 | Bearing | 25 | Washer, Lock | 45 | Washer, Felt |
| 6 | Spacer | 26 | Nut, Plain Hex | 46 | Screw, Clamping |
| 7 | Drum | 27 | Pin Groove | 47 | Screw, Clamp |
| 8 | Ring | 28 | Lock, Conical Range Finder Slide | 48 | Bracket, Left-Hand Belt Pulley |
| 9 | Spring, Carriage Return Spiral | 29 | Spring, Range Finder Lock Helical | 49 | Pulley Assembly, Cable |
| 10 | Shaft, Takeup Drum | 30 | Shaft | 50 | Bearing |
| 11 | Cup, Carriage Return Spring Mounting | 31 | Lever | 51 | Pulley |
| 12 | Holder, Carriage Return Spring | 32 | Spring | 52 | Screw, Machine |
| 13 | Ring | 33 | Bracket | 53 | Washer, Flat |
| 14 | Washer, Flat | 34 | Ring, Retaining | 54 | Screw, Machine |
| 15 | Arm, Takeup (Lateral Belt) | 35 | Spacer | 55 | Dial, Range |
| 16 | Pulley Assembly, Belt | 36 | Arm, Print Prevent | 56 | Knob, Range Finder |
| 17 | Pulley | 37 | Follower, Print Cam | 57 | Nut, Clamp |
| 18 | Bearing | 38 | Ring, Retaining | 58 | Pin, Clevis |
| 19 | Spacer | 39 | Arm, Print Spring | 59 | Washer, Nylon |
| 20 | Ring | 40 | Stud, Print Spring Yoke Pivot | 60 | Cotter Pin |

Figure 5-84. Takeup Drum and Linkage Assembly
SL-4-03315B Figure 12

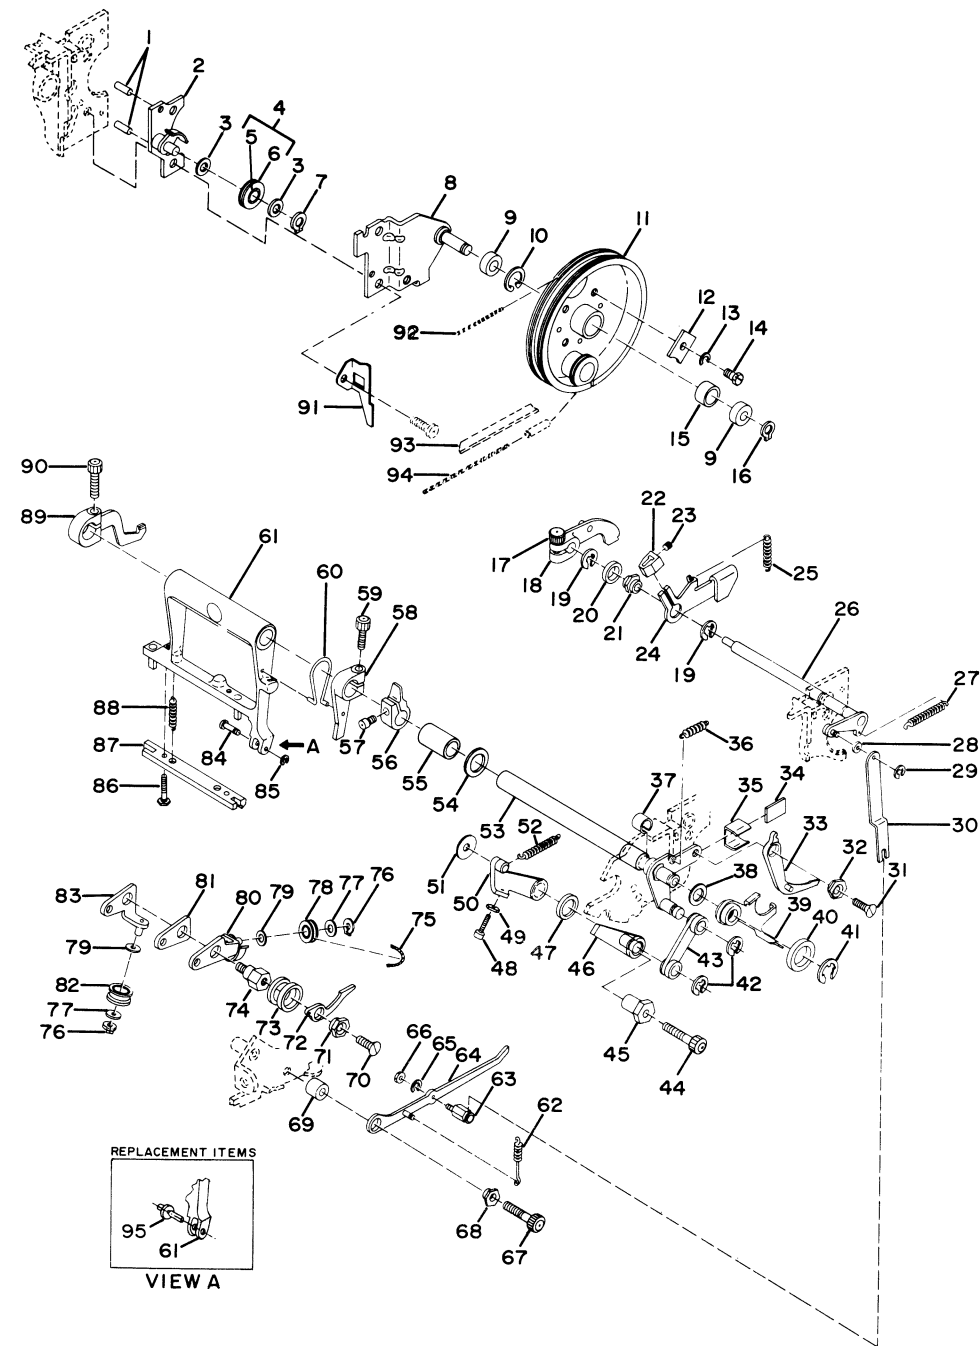

- | | | | |
|----|---|----|--|
| 1 | Pin, Dowel | 50 | Pawl |
| 2 | Rotary Pulley, Shim and Shaft | 51 | Washer |
| 3 | Spacer | 52 | Spring, Rotary Detent Pawl |
| 4 | Pulley Assembly | 53 | Shaft Assembly, Character Advance Lever |
| 5 | Bearing | 54 | Spacer |
| 6 | Pulley | 55 | Spacer |
| 7 | Ring, Grip | 56 | Clamp |
| 8 | Bracket, Advance Drum | 57 | Screw |
| 9 | Bearing, Ball | 58 | Arm, Lifter |
| 10 | Ring, Internal Retaining | 59 | Screw, Clamping |
| 11 | Drum, Advance | 60 | Spring, Lifter Arm |
| 12 | Clamp, Cable | 61 | Lever Assembly Function |
| 13 | Washer, Lock | 62 | Spring, Check Pawl |
| 14 | Screw, Cable Clamp | 63 | Stud, Eccentric |
| 15 | Spacer | 64 | Pawl, Check |
| 16 | Ring, Grip | 65 | Washer, Lock |
| 17 | Screw, Clamping | 66 | Nut, Plain Hex |
| 18 | Follower, Carriage Return Cam | 67 | Screw |
| 19 | Ring, Retaining | 68 | Bushing, Check Pawl Eccentric |
| 20 | Washer, Felt | 69 | Spacer |
| 21 | Bushing, Eccentric | 70 | Screw, Machine |
| 22 | Clamp | 71 | Bushing, Advance Suppression Latch Eccentric |
| 23 | Setscrew | 72 | Latch, Advance Suppression Latch Eccentric |
| 24 | Lever, Bounce Prevent | 73 | Washers, Felt |
| 25 | Spring, Bounce Prevent Lever | 74 | Stud, Advance Suppression Latch Mounting |
| 26 | Shaft Assembly, Carriage Return | 75 | Cable, Rotary |
| 27 | Spring, Advance Prevent Lever | 76 | Ring, Grip |
| 28 | Spacer | 77 | Spacer |
| 29 | Ring, Retaining | 78 | Pulley Assembly |
| 30 | Link, Check Pawl | 79 | Spacer |
| 31 | Screw | 80 | Shaft Assembly |
| 32 | Bushing, Character Advance Pawl Eccentric | 81 | Bracket, Spacer |
| 33 | Pawl, Character Advance | 82 | Pulley |
| 34 | Strip, Felt | 83 | Bracket, Lateral Control Belt Pulley |
| 35 | Clip, Felt Strip | 84 | Stud, Function Spring Yoke Pivot |
| 36 | Spring, Character Advance Pawl | 85 | Ring |
| 37 | Strip, Felt | 86 | Screw, Special |
| 38 | Shim | 87 | Bar, Function |
| 39 | Lever, Advance Prevent | 88 | Spring, Function Lever Compression |
| 40 | Washer, Felt | 89 | Follower, Function Cam |
| 41 | Ring Retaining | 90 | Screw, Clamping |
| 42 | Ring Retaining | 91 | Bracket, Check Pawl Guide |
| 43 | Link, Index | 92 | Cable, Return |
| 44 | Screw | 93 | Belt, Lateral Control |
| 45 | Bushing, Rotary Detent Pawl Eccentric | 94 | Cable, Hammer |
| 46 | Arm, Rotary Detent Actuator | 95 | Pin, Function Spring Yoke Pivot Stud |
| 47 | Washer, Felt | 96 | Pincotter |
| 48 | Screw, Rotary Detent Pawl Adjustment | 97 | Washer, Nylon |
| 49 | Nut, Plain Hex | 98 | Pin |

Figure 5-85. Advance Drum and Linkage Assembly
SL-4-03315B Figure 13

- 1 Setscrew, Clamp
- 2 Clamp
- 3 Backstop, Function
- 4 Bushing, Function Backstop Eccentric
- 5 Spacer, Sleeve
- 6 Ring, Retaining
- 7 Shaft, Function Backstop
- 8 Ring, Retaining
- 9 Spacers
- 10 Lever, Carriage Return & Line Feed Sensing Finger
- 11 Arm, Line Feed Clutch Release
- 12 Spring, Function Sensing Finger Lever Helical
- 13 Lever, Off Line Line Feed Sensing Finger
- 14 Lever, Function Sensing Finger
- 15 Arm, Figures Clutch Release
- 16 Lever, Bell Actuator Sensing Finger
- 17 Arm, Bell Advance Suppression
- 18 Arm, Letters Clutch Release
- 19 Lever, Off Line Letters Sensing Finger
- 20 Lever, Off Line Carriage Return Sensing Finger

- 21 Arm, Carriage Return Clutch Release
- 22 Spring, Function Clutch Release Arm Return Helical
- 23 Spring, Off Line Letters Sensing Finger Lever
- 24 Rod, Bell Actuator Connecting
- 25 Spring, Function Backstop
- 26 Screw, Function Advance Prevent Adjustment
- 27 Plate, Nylon Locking Bar
- 28 Bar
- 29 Shaft, Advance Prevent Bail Carriage Return Bar
- 30 Arm, Blank Advance Suppression
- 31 Lever, Blank Sensing Finger
- 32 Arm, Space
- 33 Shaft, Function Clutch Release
- 34 Ring, Retaining
- 35 Frame Assembly, Function Clutch Release and Back-Stop
- 36 Shaft, Function Clutch Release Arm Stop
- 37 Ring, Retaining
- 38 Spring, Print Prevent Rod Actuator Arm Bias
- 39 Ring, Retaining
- 40 Arm, Right-Hand Print Prevent Rod Actuator
- 41 Screw, Print Prevent Rod Actuator Arm
- 42 Rod, Assembly
- 43 Washer, Flat
- 44 Screw
- 45 Strip, Lock
- 46 Screw, Print Prevent Adjustment

- 47 Screw
- 48 Shaft Assembly, Print Prevent Rod Lever
- 49 Arm, Left-Hand Print Prevent Rod Actuator
- 50 Nut
- 51 Stud, Rotary Chain Adjustment
- 52 Pin
- 53 Ring, Retaining
- 54 Chain, Rotary
- 55 Spacer
- 56 Pin
- 57 Ring, Retaining
- 58 Spring, Safety
- 59 Strip, Rotary
- 60 Ring, Retaining
- 61 Ring, Retaining
- 62 Pulley Assembly, Rotary Cable
- 63 Pulley
- 64 Bearing
- 65 Pin
- 66 Slide Assembly, Function
- 67 Spacer
- 68 Screw
- 69 Spacer
- 70 Clip
- 71 Washer, Lock
- 72 Screw
- 73 Slide, Rotary Function
- 74 Support
- 75 Slide, Lateral Control Function
- 76 Pulley Assembly, Lateral Control Belt
- 77 Pulley
- 78 Bearing
- 79 Ring, Retaining
- 80 Pin
- 81 Fork
- 82 Spring, Slack Takeup
- 83 Strip, Lateral Control
- 84 Slide, Slack Takeup
- 85 Link
- 86 Lever, Lateral Control Chain Takeup
- 87 Eccentric, Lateral Control Chain Takeup
- 88 Washer, Lock
- 89 Screw
- 90 Pin
- 91 Chain, Lateral Control
- 92 Pin
- 93 Spacer
- 94 Ring, Retaining
- 95 Spacer
- 96 Ring, Retaining
- 97 Link, Detent
- 98 Pin
- 99 Spring, Safety
- 100 Screw
- 101 Plate, Retaining
- 102 Nut, Plain Hex
- 103 Setscrew, Print Prevent Stop Adjustment
- 104 Spring, Off-Line Function Return Helical
- 105 Slide Assembly
- 106 Lever Assembly, Bell
- 107 Bar, Spring
- 108 Strip, Function Sensing Finger Lever Stop
- 109 Spring, Clip

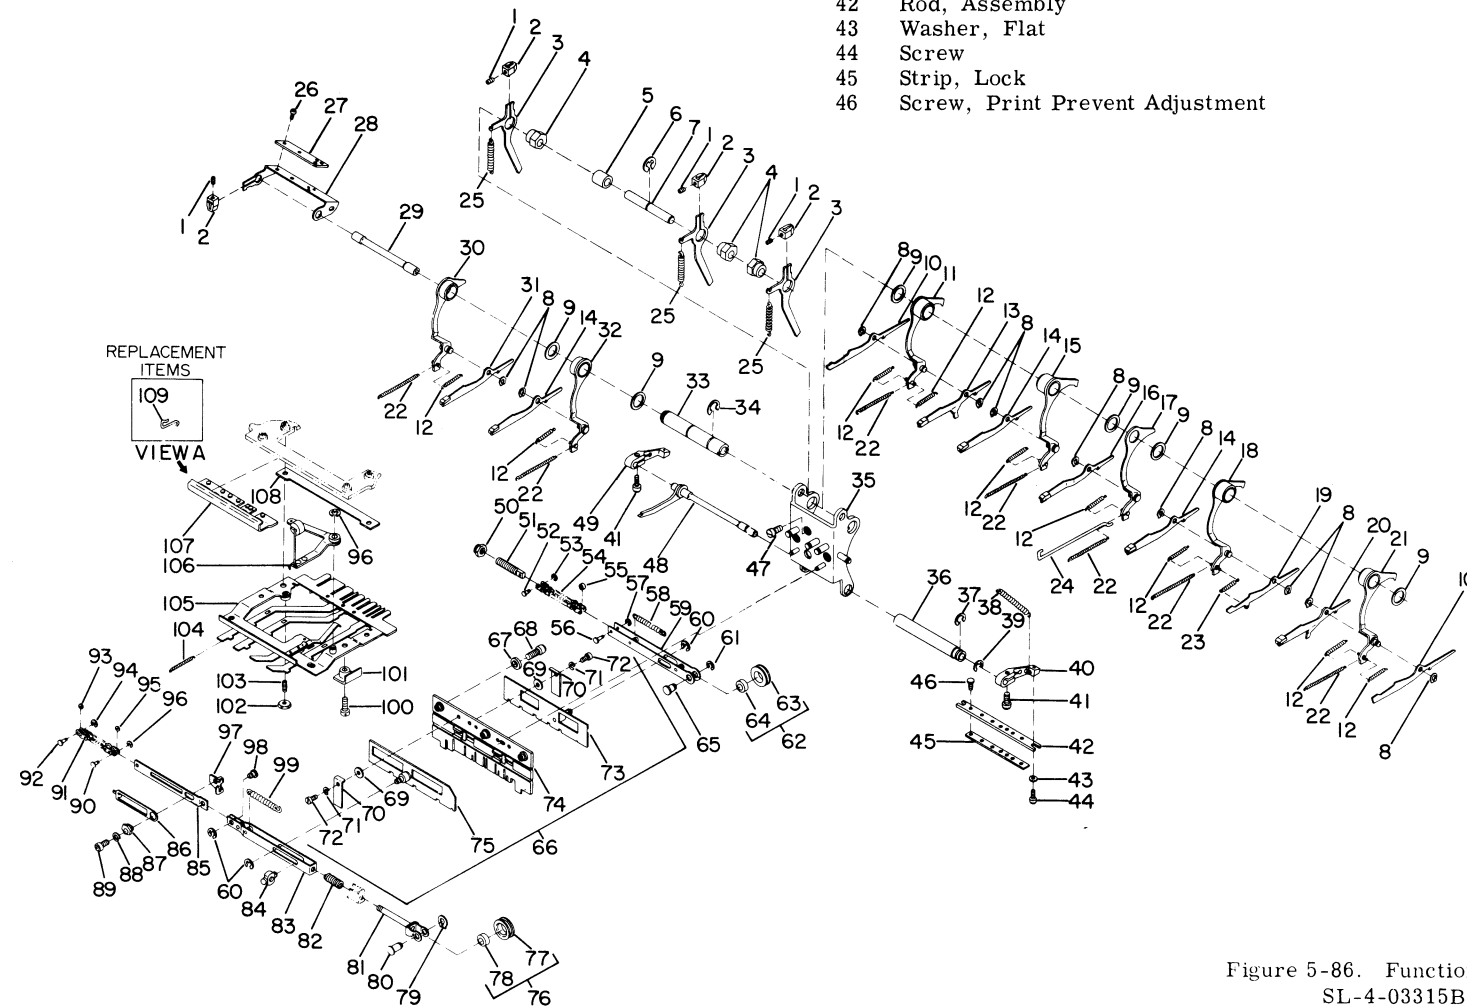


Figure 5-86. Function Selector Assembly
SL-4-03315B Figure 17

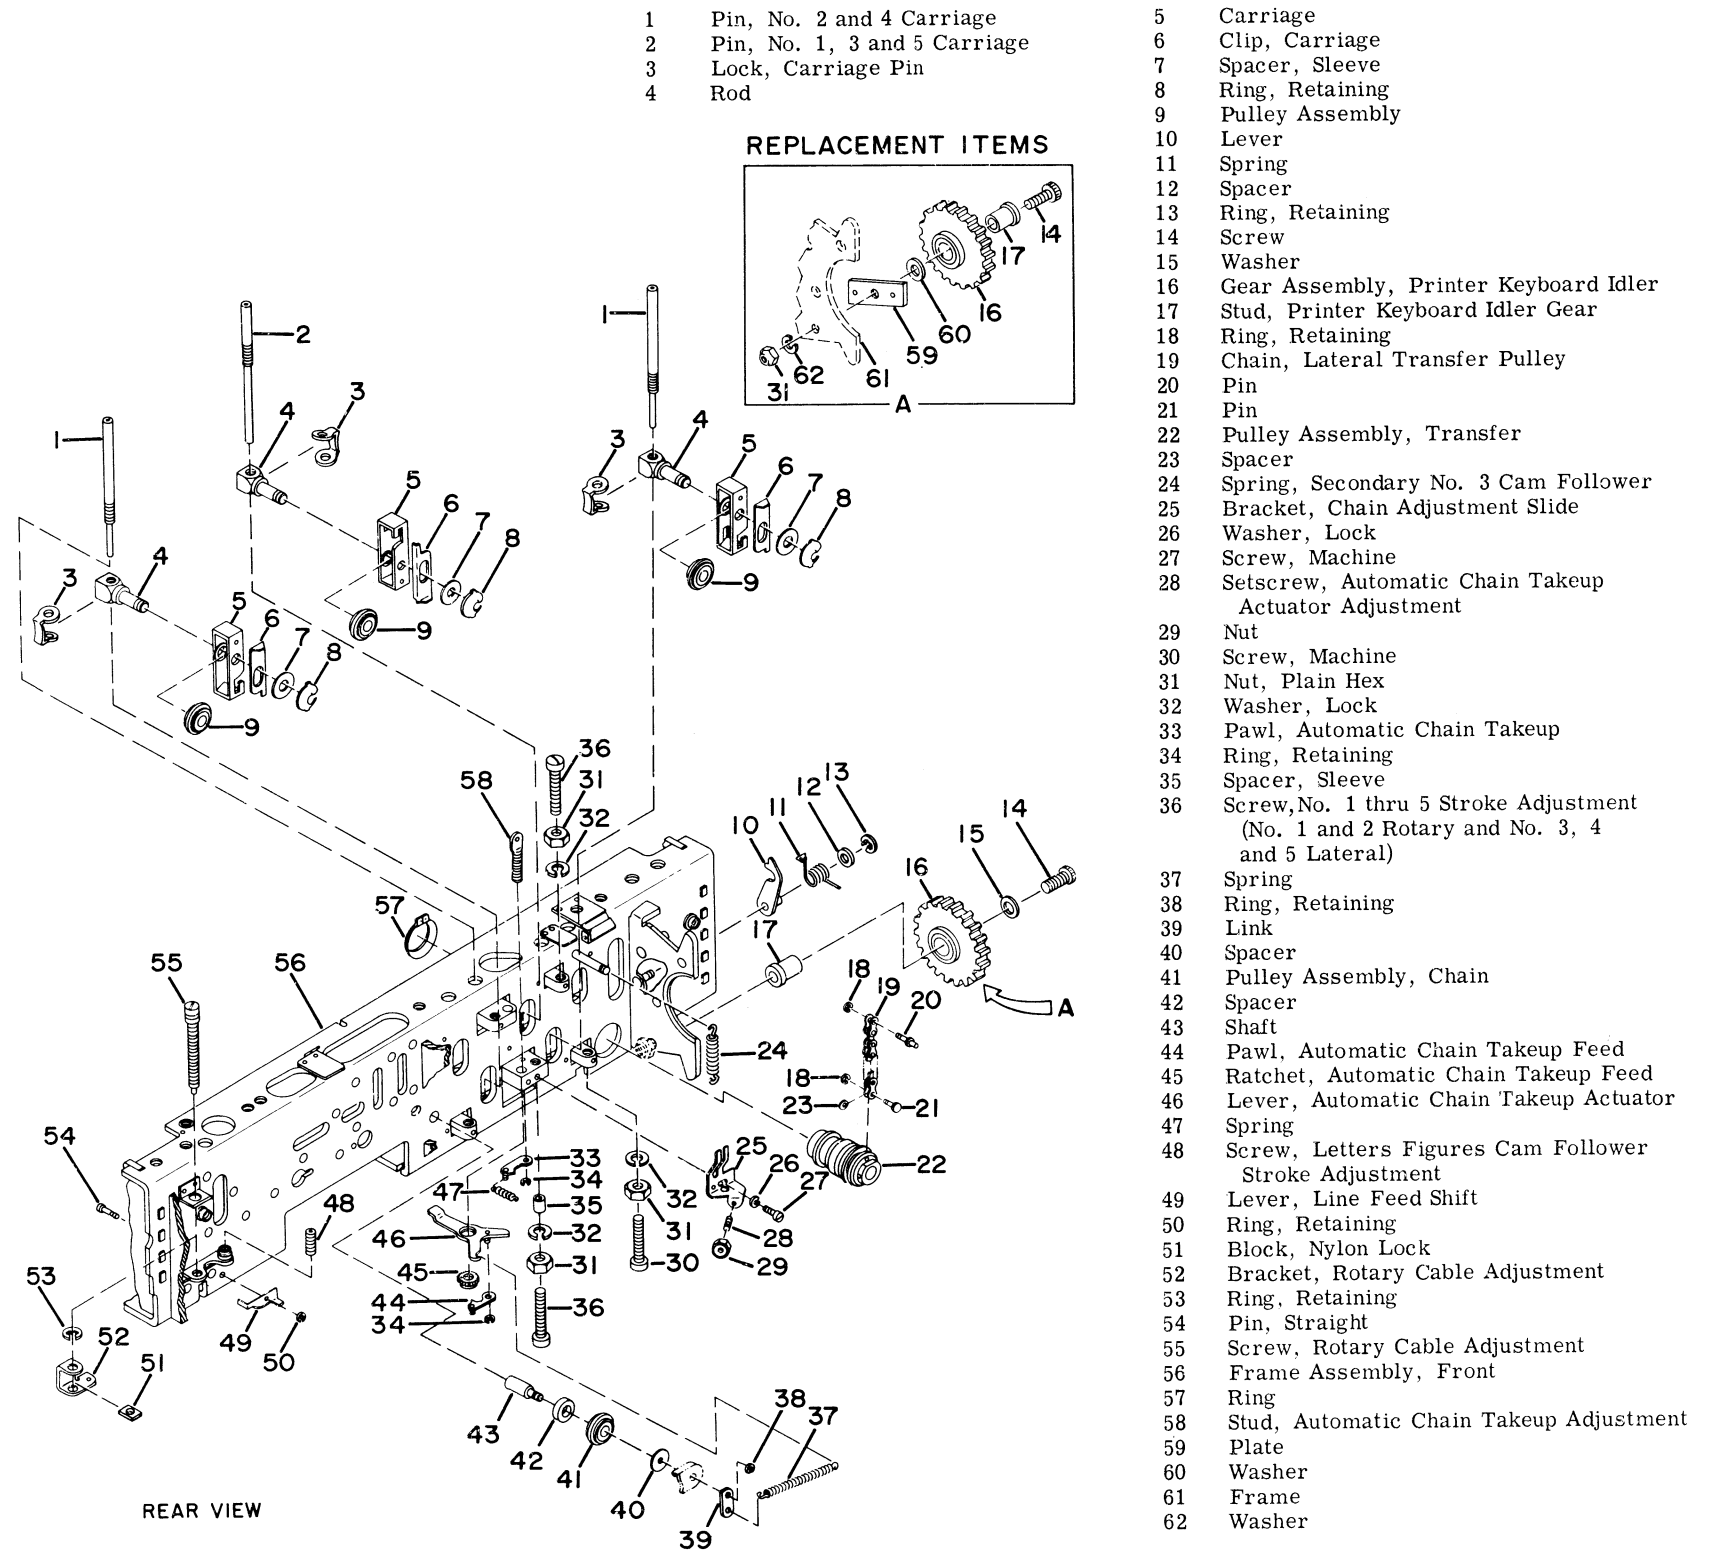


Figure 5-87. Front Frame Assembly (Rear View)
SL-4-03315B Figure 15A


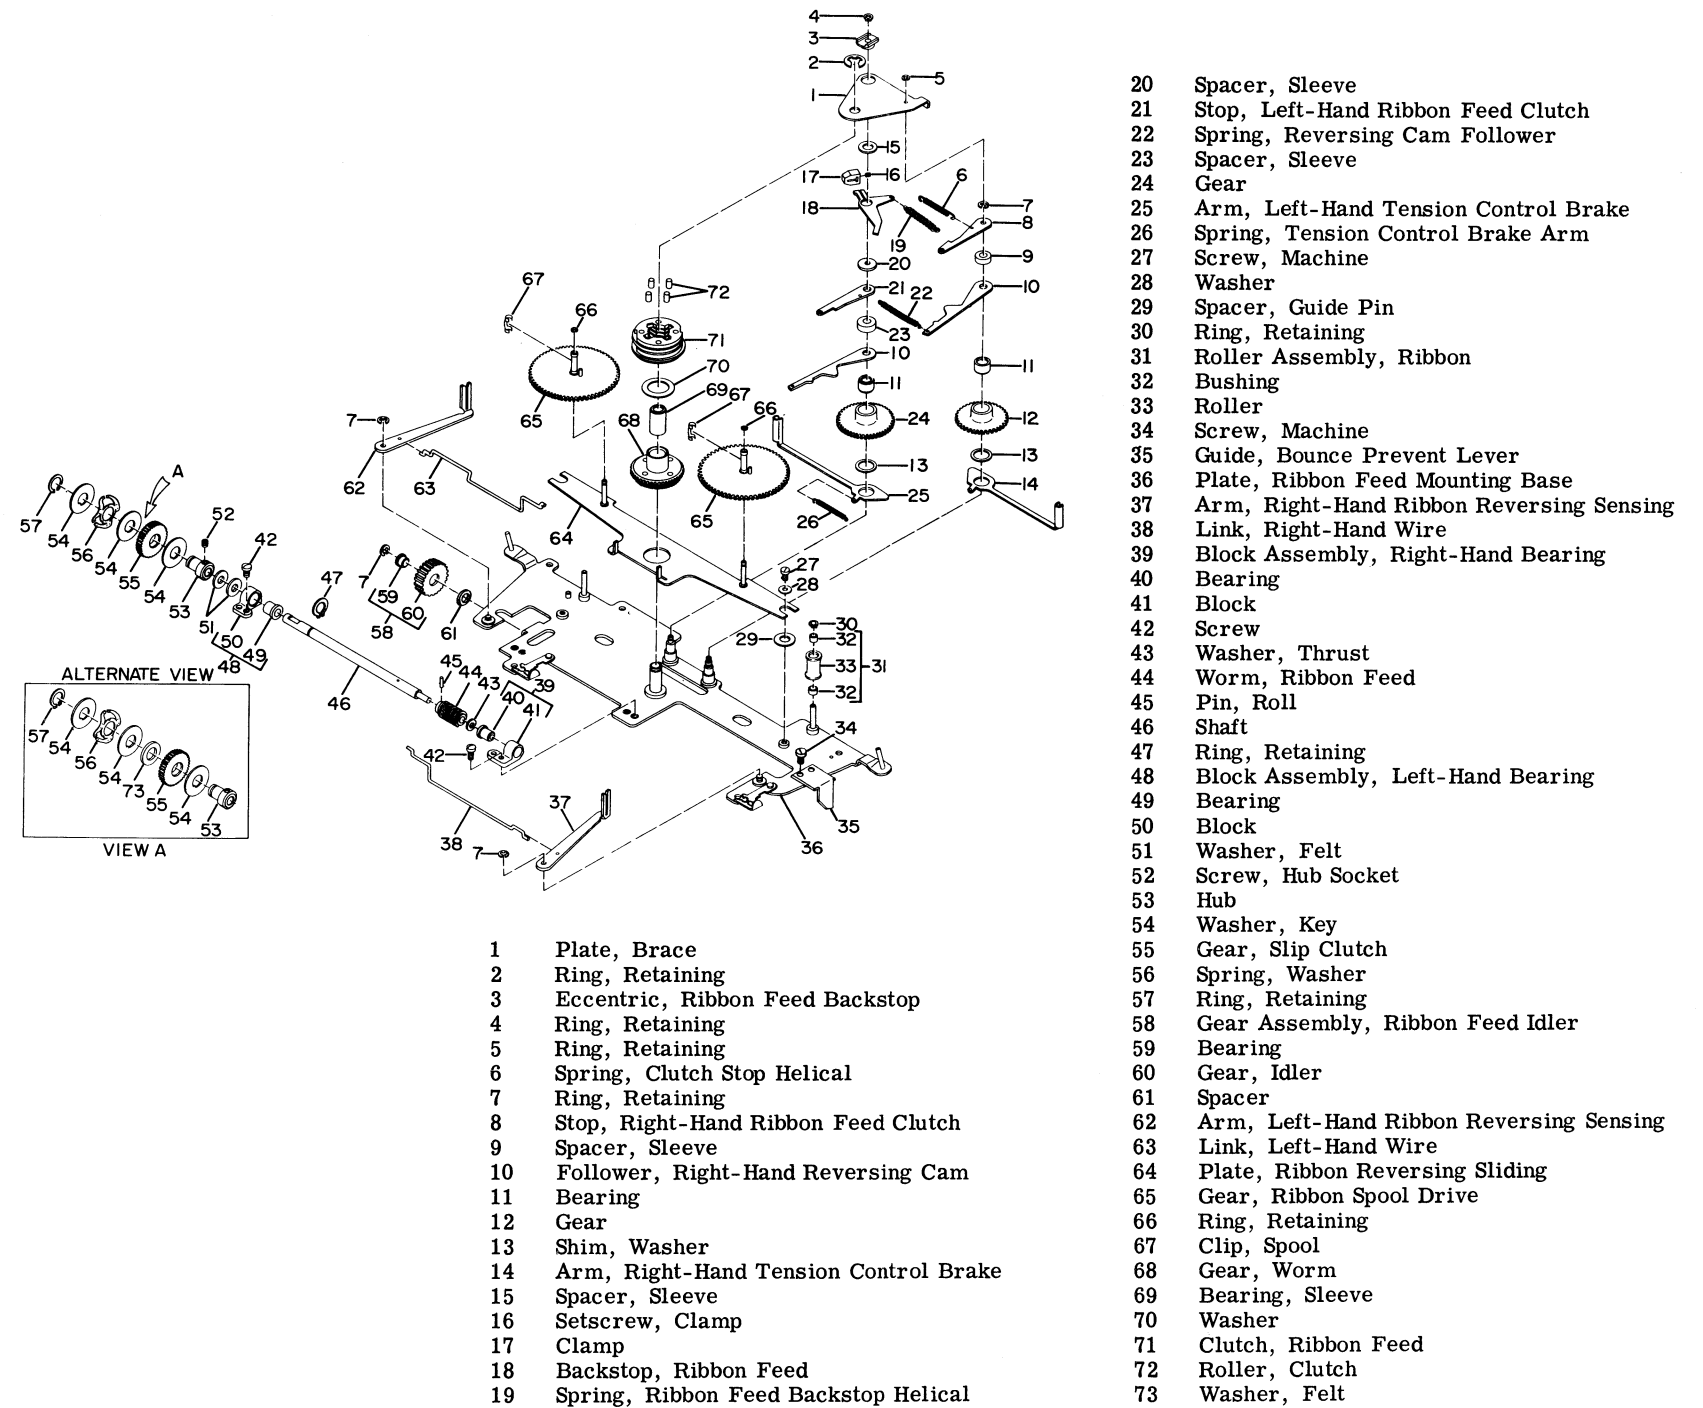


Figure 5-88. Ribbon Feed Top Plate Assembly
SL-4-03315B Figure 9

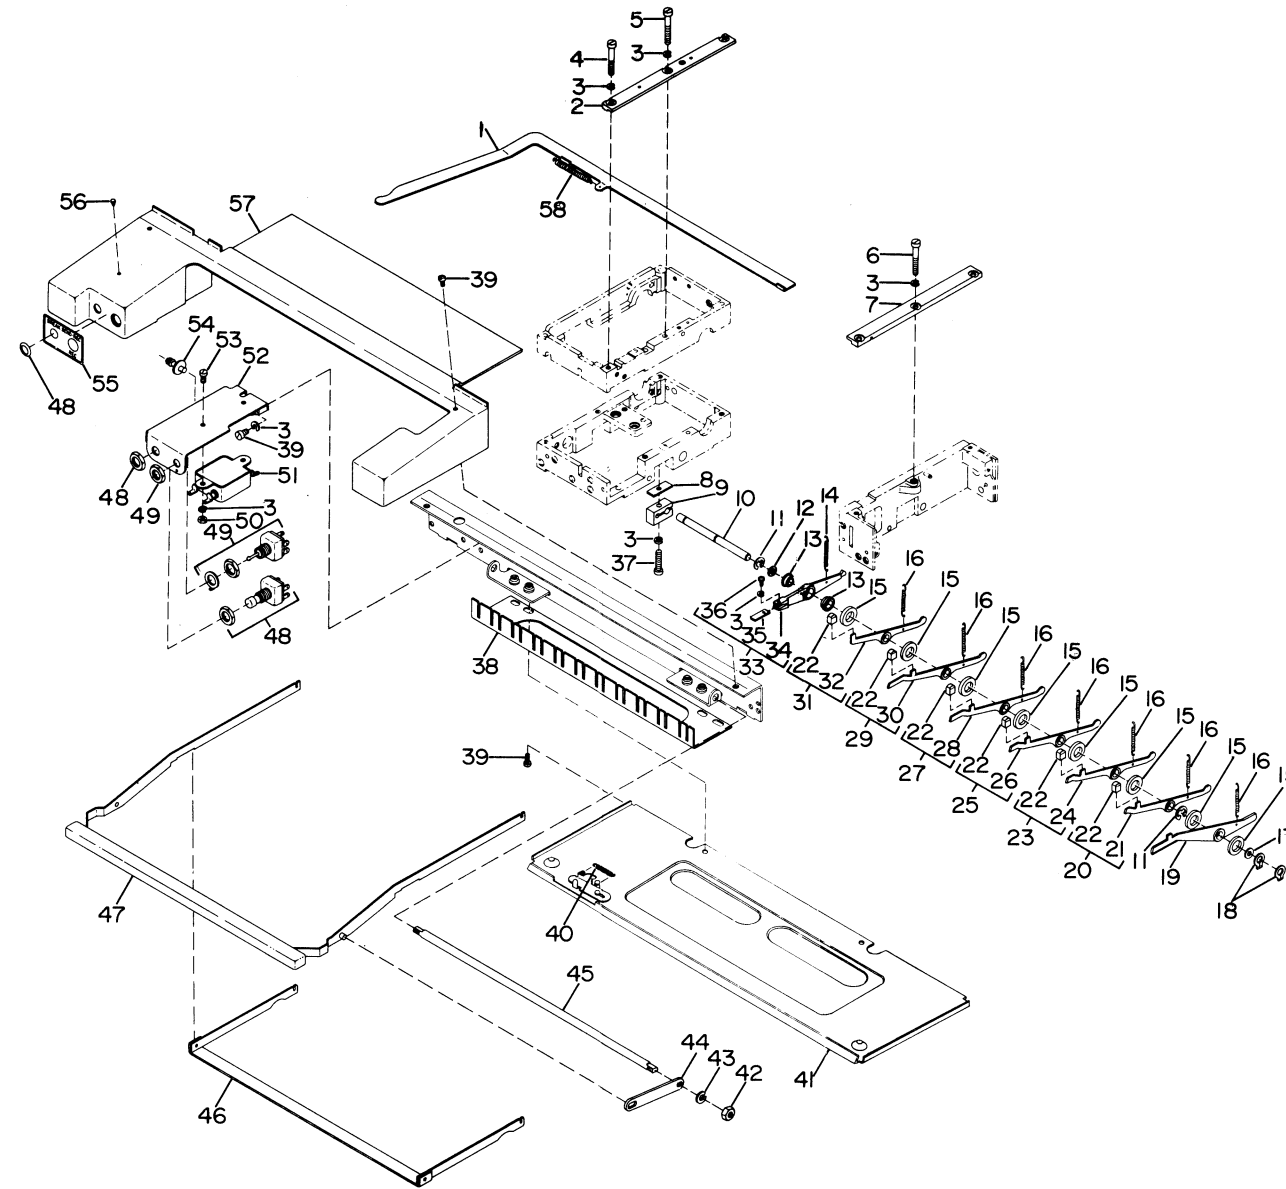

- 1 Bar, Keyboard Lock
- 2 Rail, Keyboard Left-Hand
- 3 Washer, Lock
- 4 Screw, Machine
- 5 Screw, Machine
- 6 Screw, Machine
- 7 Rail, Keyboard Right-Hand
- 8 Shim, Pulsing Finger Adjustment
- 9 Clamp, Shaft
- 10 Shaft, Pulsing Finger and Prevent Lever
- 11 Ring, Retaining
- 12 Spacer, Sleeve
- 13 Bearing, Master Pulsing Cam Follower
- 14 Spring, Helical
- 15 Washer, Felt
- 16 Spring, Helical
- 17 Spacer, Sleeve
- 18 Ring, Retaining
- 19 Lever, Keyboard Code Bar Prevent
- 20 Finger Assembly, No. 5 Pulsing
- 21 Finger
- 22 Pusher
- 23 Finger Assembly, No. 4 Pulsing
- 24 Finger
- 25 Finger Assembly, No. 3 Pulsing
- 26 Finger
- 27 Finger Assembly, No. 2 Pulsing
- 28 Finger
- 29 Finger Assembly, No. 1 Pulsing
- 30 Finger
- 31 Finger Assembly, Start Pulsing
- 32 Finger
- 33 Follower Assembly, Master Pulsing Cam
- 34 Follower, Cam
- 35 Actuator, Keyboard Contact
- 36 Screw, Machine
- 37 Screw, Machine
- 38 Guide, Front Key
- 39 Screw, Machine
- 40 Spring
- 41 Cover, Space Bar Safety Guard
- 42 Nut, Plain Hex
- 43 Washer, Lock
- 44 Arm, Space Bar Control
- 45 Shaft, Space Bar
- 46 Pad, Wear
- 47 Bar, Space
- 48 Switch, Break Pushbutton
- 49 Switch, Send●Rec-Rec Toggle
- 50 Nut, Plain Hex
- 51 Filter, Keyboard
- 52 Bracket, Switch
- 53 Screw, Machine
- 54 Terminals
- 55 Plate Designation
- 56 Pad, Keyboard Cover
- 57 Cover, Keyboard
- 58 Spring, Keyboard Lock Bar Helical

Figure 5-89. Keyboard Assembly (Sheet 1 of 3)
SL-4-03315B Figure 6



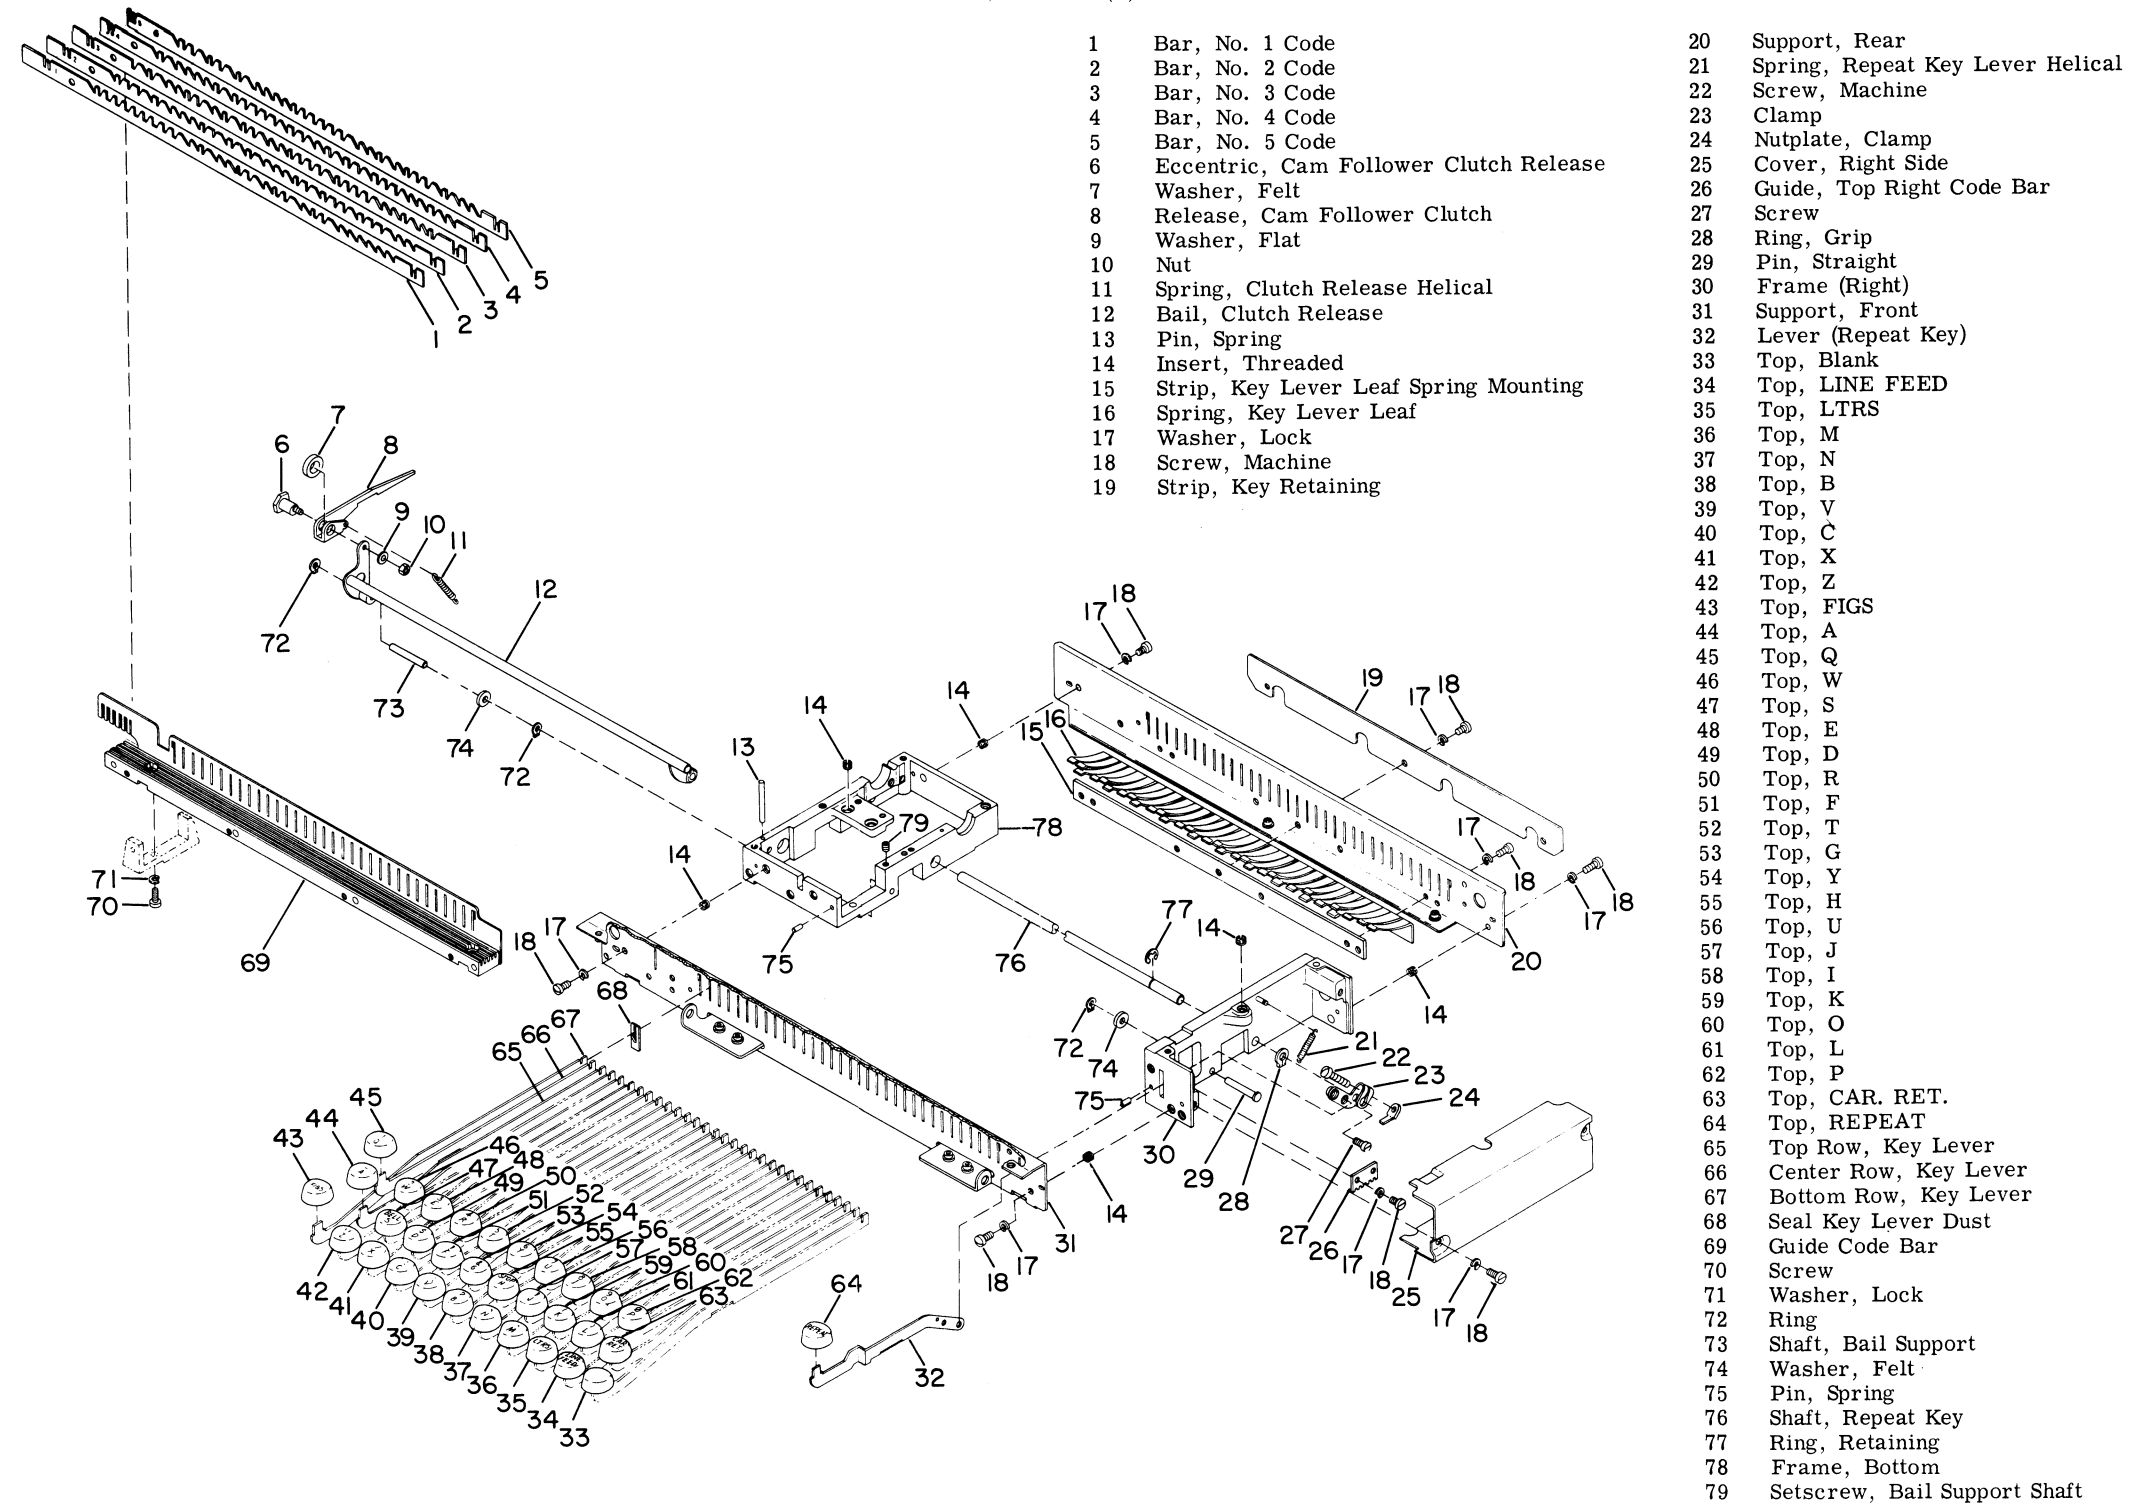


Figure 5-89. Keyboard Assembly (Sheet 2 of 3)
SL-4-03315B Figure 6A

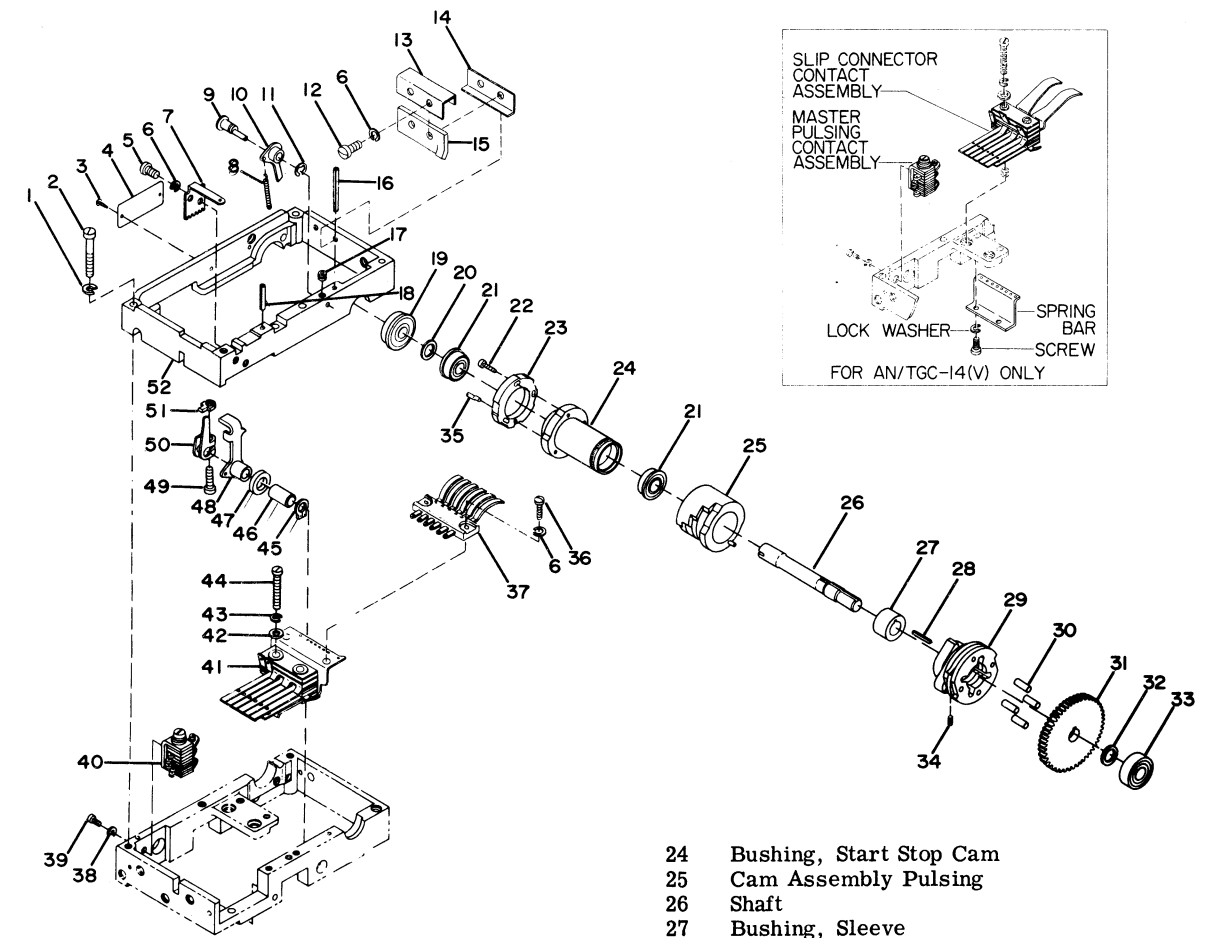


- | | | | |
|----|-------------------------------------|----|-----------------------------------|
| 1 | Washer, Lock | 24 | Bushing, Start Stop Cam |
| 2 | Screw, Machine | 25 | Cam Assembly Pulsing |
| 3 | Screw, Drive | 26 | Shaft |
| 4 | Plate, Identification | 27 | Bushing, Sleeve |
| 5 | Screw, Machine | 28 | Key |
| 6 | Washer, Lock | 29 | Clutch Assembly |
| 7 | Guide, Top Left Code Bar | 30 | Roller, Clutching |
| 8 | Spring, Backstop | 31 | Gear, Keyboard Guide |
| 9 | Shaft, Backstop Eccentric | 32 | Spacer, Sleeve |
| 10 | Backstop Assembly Clutch | 33 | Bearing |
| 11 | Ring, Retaining | 34 | Setscrew, Clutch Assembly |
| 12 | Screw, Machine | 35 | Eccentric, Start Pulse |
| 13 | Plate, Keyboard Cam Wick Mounting | 36 | Screw, Machine |
| 14 | Bracket, Keyboard Cam Wick Mounting | 37 | Contact Assembly, Slip Connector |
| 15 | Wick, Keyboard Cam | 38 | Washer, Lock |
| 16 | Pin, Spring | 39 | Screw, Machine |
| 17 | Setscrew, Backstop, Eccentric Shaft | 40 | Contact Assembly, Master Pulsing |
| 18 | Pin, Spring | 41 | Contact Assembly, Code Pulsing |
| 19 | Bearing | 42 | Washer, Flat |
| 20 | Spacer, Sleeve | 43 | Washer, Lock |
| 21 | Bearing | 44 | Screw, Machine |
| 22 | Screw | 45 | Ring, Grip |
| 23 | Cam Master Pulsing | 46 | Bushing, Repeat Key Shaft |
| | | 47 | Washer, Felt |
| | | 48 | Finger, Clutch Release |
| | | 49 | Screw, Repeat Key Actuator Arm |
| | | 50 | Arm, Repeat Key Actuator Arm |
| | | 51 | Nutplate, Repeat Key Actuator Arm |
| | | 52 | Frame, Top |

Figure 5-89. Keyboard Assembly (Sheet 3 of 3)
SL-4-03315B Figure 6B

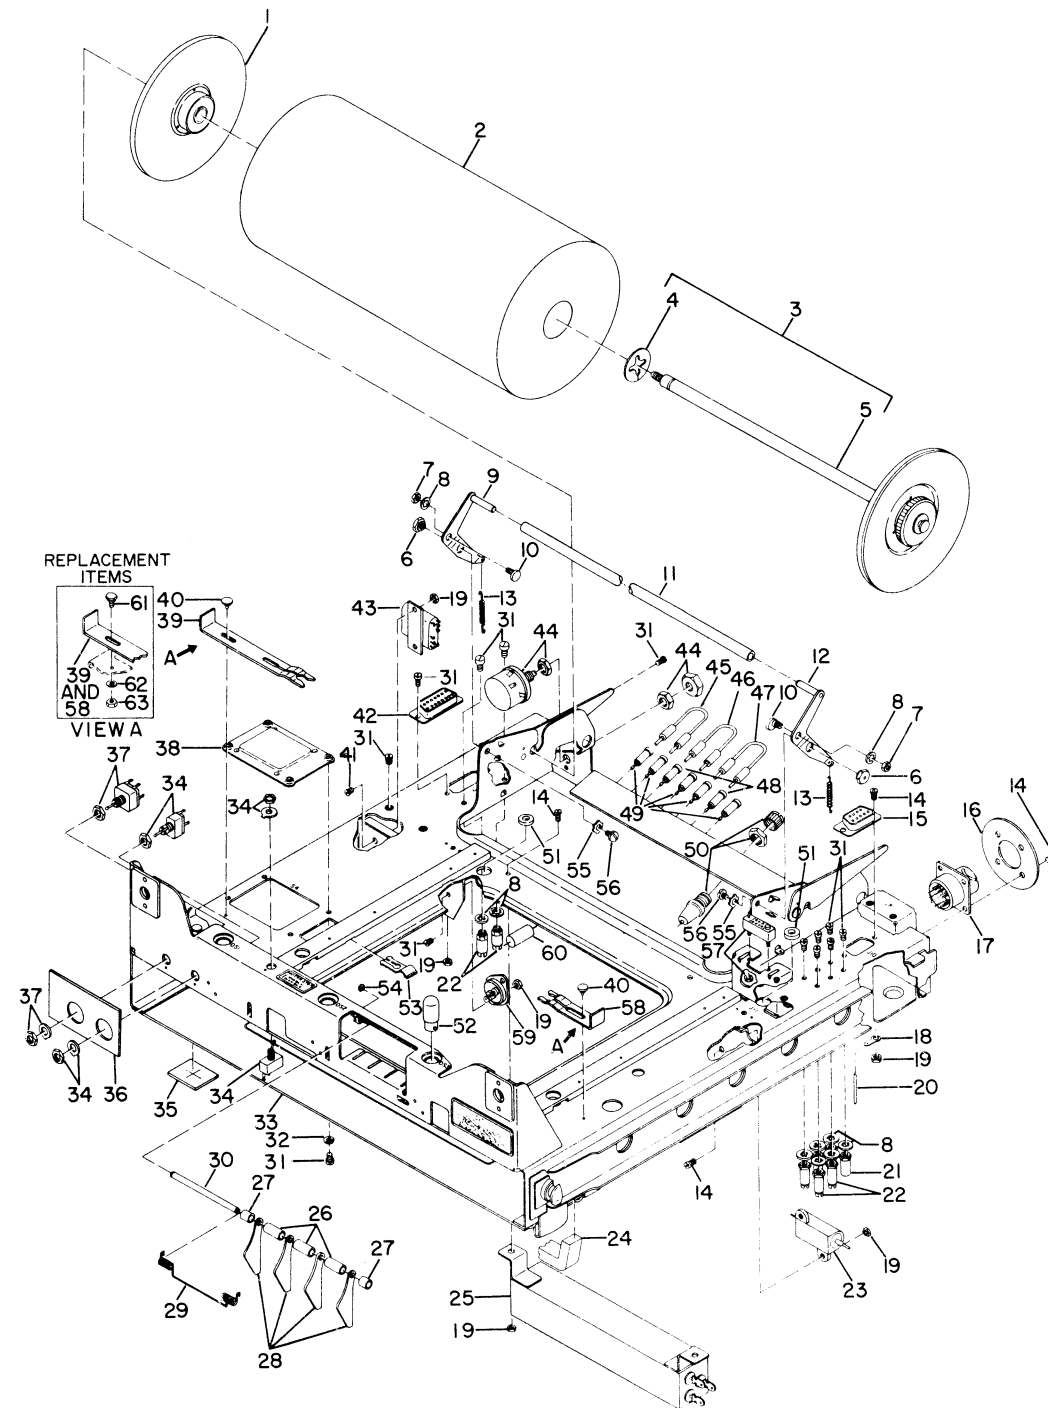


- 1 Drum, Brake
- 2 Roll, Paper Supply
- 3 Shaft and Disc Assembly, Paper Support
- 4 Disc, Guide
- 5 Drum Assembly
- 6 Pivot, Paper Brake Link
- 7 Nut
- 8 Washer, Lock
- 9 Link, Left-Hand Paper Brake
- 10 Eccentric, Paper Brake Link
- 11 Tube, Dancer Roll (Paper Brake Release)
- 12 Link, Right-Hand Paper Brake
- 13 Spring, Paper Brake Link
- 14 Screw
- 15 Receptacle, Signal Line Power Supply
- 16 Plate, Seal
- 17 Receptacle, Service Cable
- 18 Terminal, Solder
- 19 Nut
- 20 Shaft
- 21 Terminal, Heating Element
- 22 Terminal
- 23 Resistor, D-c Motor
- 24 Seal, Dust
- 25 Capacitor, Motor Starting
- 26 Spacer
- 27 Spacer
- 28 Lever, Off-Line Function
- 29 Spring
- 30 Shaft
- 31 Screw
- 32 Washer, Lock
- 33 Chassis
- 34 Switch Copy Light
- 35 Seal, Dust
- 36 Seal, Dust
- 37 Switch, Motor Main Power
- 38 Block, Contact
- 39 Printer Slide Lock
- 40 Rivet, Stud
- 41 Screw
- 42 Receptacle, Line Sensor
- 43 Relay, Motor Stop
- 44 Resistor, Line Adjustment
- 45 Cord Assembly, White Patch
- 46 Cord Assembly, Blue Patch
- 47 Cord Assembly, Red Patch
- 48 Receptacle, Red Patching
- 49 Receptacle, White Patching
- 50 Fuseholder
- 51 Grommet
- 52 Lamp
- 53 Clamp, Harness
- 54 Ring
- 55 Washer, Lock
- 56 Screw
- 57 Receptacle, Motor
- 58 Printer Slide Lock
- 59 Thermostat
- 60 Resistor, External Line Sensor
- 61 Screw, Stud
- 62 Washer, Lock
- 63 Nut, Plain Hex

Figure 5-90. Electrical Chassis Assembly
SL-4-03315B Figure 24

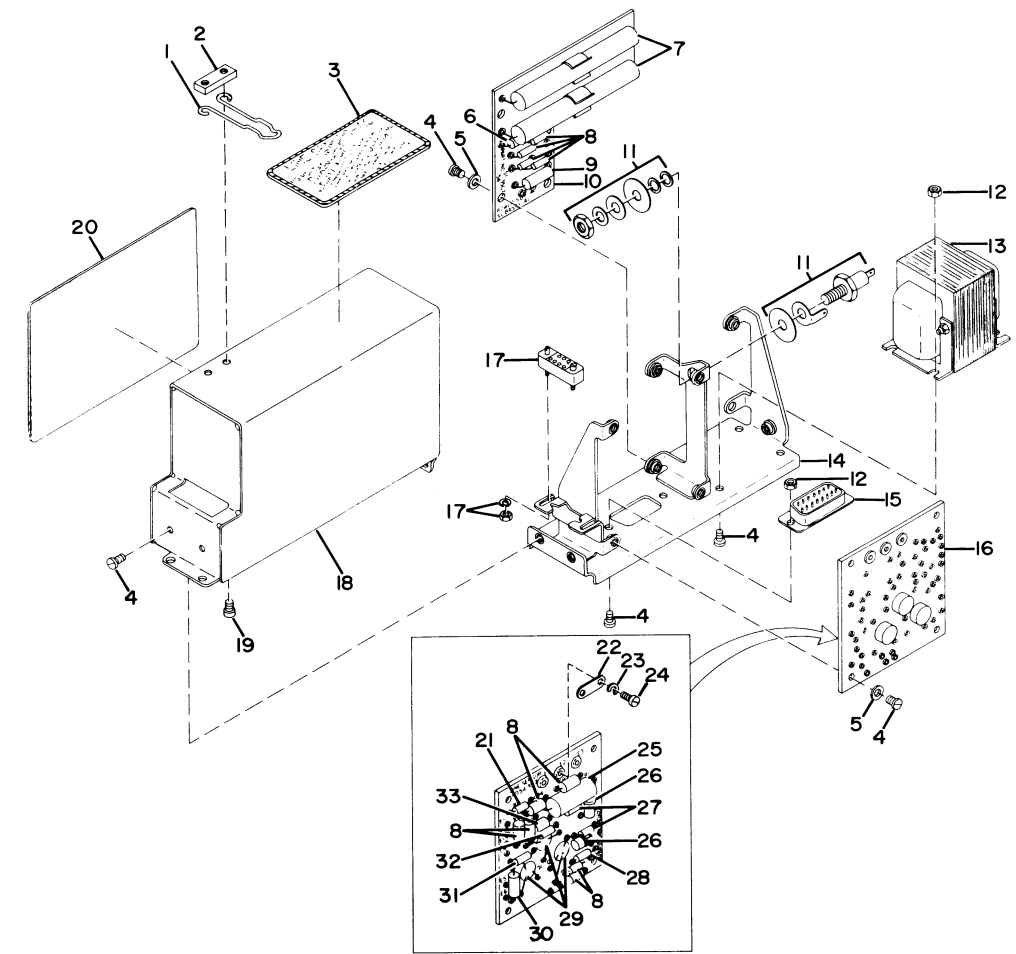


- | | | | |
|----|------------------------|----|-----------------------|
| 1 | Clip, Selector Cable | 17 | Receptacle, Selector |
| 2 | Clip, Holder | 18 | Cover |
| 3 | Nameplate | 19 | Screw |
| 4 | Screw | 20 | Nameplate |
| 5 | Washer, Flat | 21 | Resistor |
| 6 | Resistor | 22 | Strip, High-Low Range |
| 7 | Capacitor | 23 | Washer, Lock |
| 8 | Rectifier | 24 | Screw |
| 9 | Resistor | 25 | Resistor |
| 10 | Board | 26 | Diode |
| 11 | Diode | 27 | Resistor |
| 12 | Nut | 28 | Resistor |
| 13 | Transformer | 29 | Transistor |
| 14 | Bracket | 30 | Resistor |
| 15 | Connector, Line Sensor | 31 | Resistor |
| 16 | Board | 32 | Resistor |
| | | 33 | Resistor |

Figure 5-91. Line Sensor
SL-4-03315B Figure 26

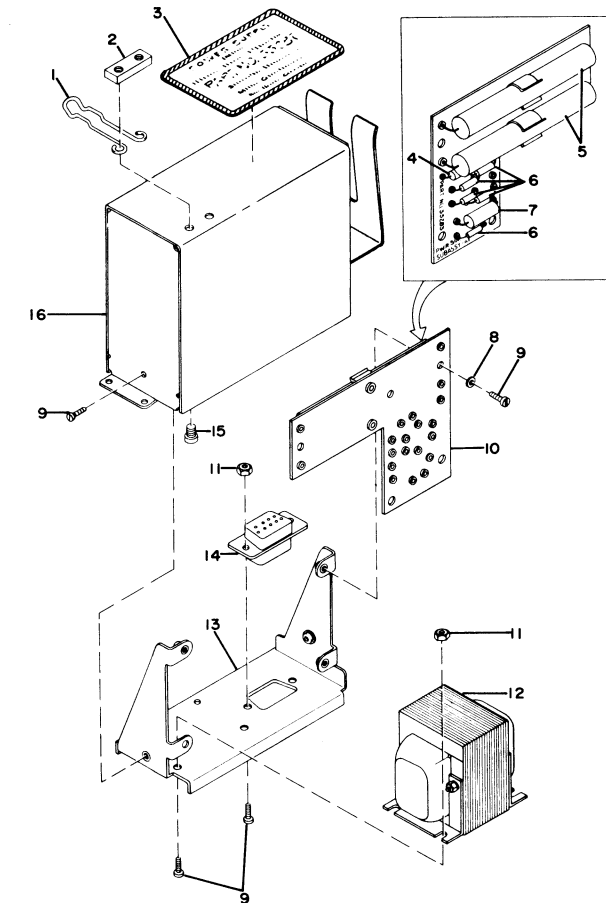


- | | | | |
|---|-------------------|----|------------------------------|
| 1 | Clip, Motor Cable | 9 | Screw |
| 2 | Clip, Holder | 10 | Board |
| 3 | Nameplate | 11 | Nut |
| 4 | Resistor | 12 | Transformer |
| 5 | Capacitor | 13 | Bracket |
| 6 | Rectifier | 14 | Connector, Signal Line Power |
| 7 | Resistor | 15 | Screw |
| 8 | Washer | 16 | Cover |

Figure 5-92. Signal Line Power Supply
SL-4-03315B Figure 27

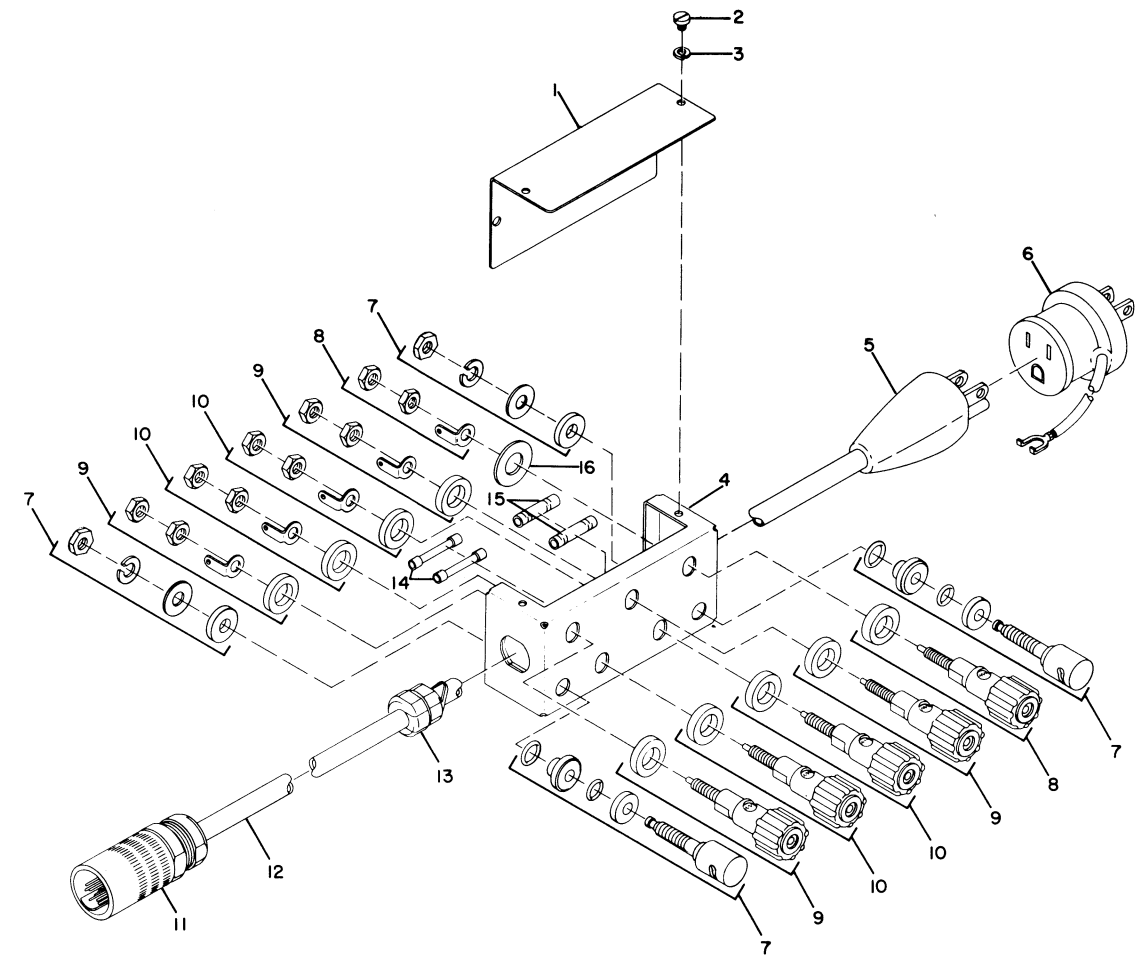


- | | | | |
|---|----------------|----|-------------------------------|
| 1 | Cover | 9 | Post, Binding |
| 2 | Screw, Machine | 10 | Post, Binding |
| 3 | Washer, Lock | 11 | Connector-Plug, Service Cable |
| 4 | Junction Box | 12 | Cable, Electric |
| 5 | Cord | 13 | Bushing, Sleeve |
| 6 | Adapter | 14 | Capacitors (C1, C2) |
| 7 | Post, Binding | 15 | Splice |
| 8 | Post, Binding | 16 | Washer, Flat |

Figure 5-93. Service Cable
SL-4-03315B Figure 28

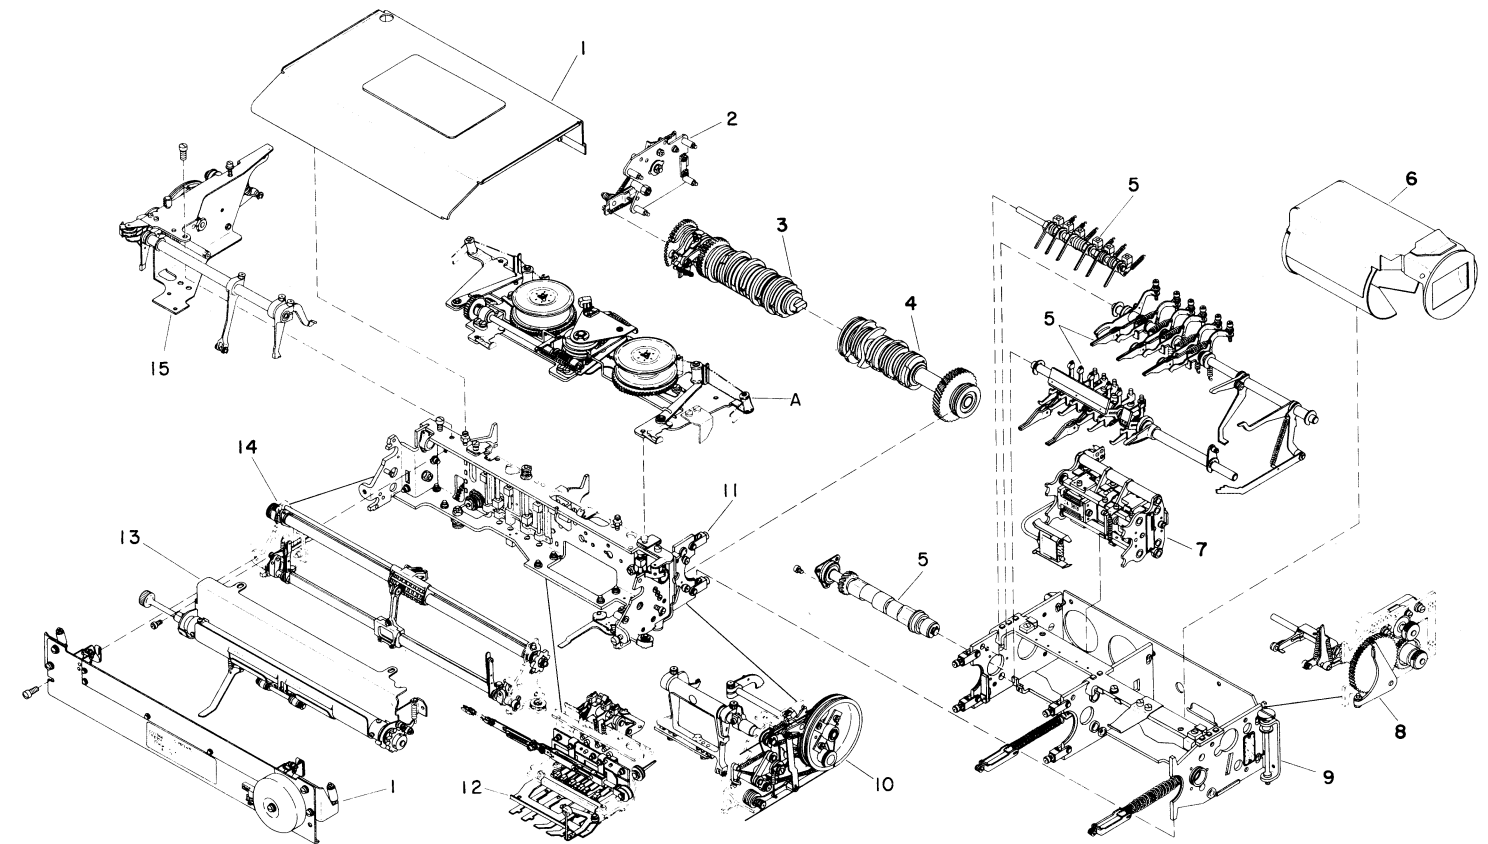

- | | | | |
|---|--|----|--|
| 1 | Assemblies, Ribbon Feed, Front Plate and Paper Guide (See figure 5-81, Appendix, for breakdown) | 8 | Feed Assembly, Gear Train and Automatic Carriage Return Line (See figure 5-77, Appendix, for breakdown) |
| 2 | Time Delay Assembly, Automatic Motor Stop (See figure 5-69, Appendix, for breakdown) | 9 | Frame Assembly, Rear (See figure 5-79, Appendix, for breakdown) |
| 3 | Shaft Assembly, Selector Main (See figure 5-70, Appendix, for breakdown) | 10 | Linkage Assembly, Advance Drum (See figure 5-85, Appendix, for breakdown) |
| 4 | Shaft Assembly, Function Main (See figure 5-71, Appendix, for breakdown) | 11 | Frame Assembly, Front (See figures 5-80 and 5-87, Appendix, for breakdown) |
| 5 | Shaft Assembly, Mark and Space Clutch Release Shaft, Timing Cam Shaft, and Backstop (See figure 5-69, Appendix, for breakdown) | 12 | Selector Assembly, Function (See figure 5-86, Appendix, for breakdown) |
| 6 | Duct Assembly, Fan Outlet (See figure 5-72, Appendix, for breakdown) | 13 | Feed Assembly, Paper (See figure 5-83, Appendix, for breakdown) |
| 7 | Selector Assembly (See figures 5-75 or 5-76, Appendix, for breakdown) | 14 | Shaft Assembly, Print Hammer, Print Cylinder, and Print Cylinder Yoke (See figure 5-82, Appendix, for breakdown) |
| | | 15 | Assemblies, Takeup Drum, Bracket, and Print Shaft (See figure 5-84, Appendix, for breakdown) |


Figure 5-94. Printer Assembly
SL-4-03315B Figure 7

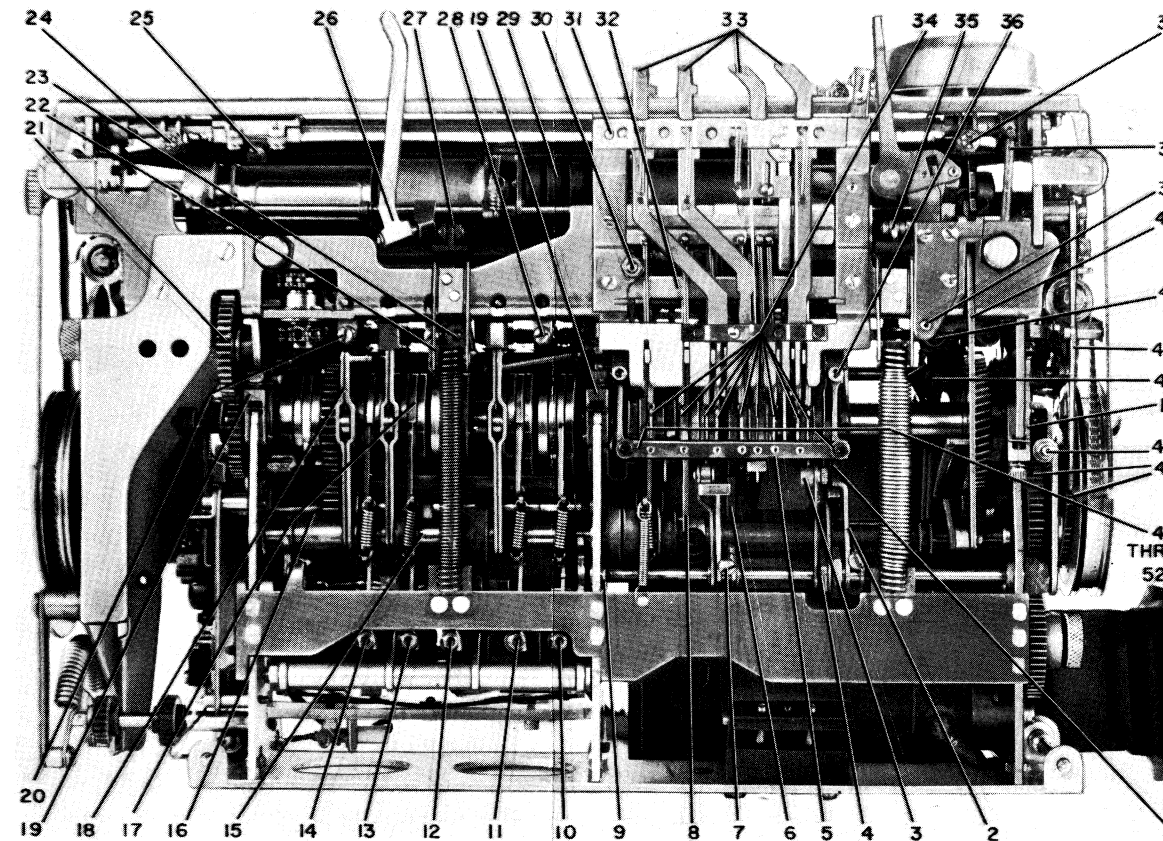

- | | | | |
|----|---|----|---|
| 1 | Carriage Return Cam (table 5-6, step 8, Appendix) | 14 | No. 3 Space Clutch Release Finger Adjustment Screw |
| 2 | Lock Lever Actuator Arm | 15 | Space Selector Shaft |
| 3 | Automatic Carriage Return and Line Feed Bail Actuator Eccentric (table 5-7, step 2, Appendix) | 16 | Timing Cam Shaft |
| 4 | Carriage Return Lock Lever Eccentric Bushing (table 5-7, step 1, Appendix) | 17 | No. 4 Clutch Cage |
| 5 | Print Prevent Rod (table 5-6, step 9, Appendix) | 18 | Secondary No. 3 Cam Follower |
| 6 | Letters Figures Cam Follower (table 5-6, step 8, Appendix) | 19 | Frame Clamps |
| 7 | Automatic Carriage Return and Line Feed Actuator Arm Screw | 20 | No. 3 Lateral Stroke Adjustment Screw |
| 8 | Line Feed Cam Follower (table 5-6, step 8, Appendix) | 21 | Keyboard Drive Gear |
| 9 | V Lever Shaft Bushing (table 5-7, step 1, Appendix) | 22 | No. 5 Lateral Stroke Adjustment Screw |
| 10 | No. 1 Space Clutch Release Finger Adjustment Screw | 23 | Automatic Chain Takeup Ratchet |
| 11 | No. 2 Space Clutch Release Finger Adjustment Screw | 24 | Left-Hand Vibrator Arm Lock Nut |
| 12 | No. 5 Space Clutch Release Finger Adjustment Screw | 25 | Print Hammer Cable Clamp Screw |
| 13 | No. 4 Space Clutch Release Finger Adjustment Screw | 26 | Paper Pressure Release Lever (table 5-6, step 6, Appendix) |
| | | 27 | Print Spring Yoke Pivot Stud and Link (table 5-5, step 14, Appendix) |
| | | 28 | No. 1 Rotary Stroke Adjustment Screw |
| | | 29 | Pressure Roll |
| | | 30 | Print Prevent Stop Adjustment Setscrew |
| | | 31 | Off Line Function Slide (table 5-6, step 9, Appendix) |
| | | 32 | Function Sensing Finger Lever Stop Strip |
| | | 33 | Off Line Function Slide Levers (table 5-6, step 9, Appendix) |
| | | 34 | Function Sensing Finger Levers (table 5-6, step 8, Appendix) |
| | | 35 | Function Spring Yoke Pivot Stud and Link (table 5-5, step 14, Appendix) |
| | | 36 | Print Prevent Rod Actuator Arm Screw |
| | | 37 | Right-Hand Vibrator Arm Lock Nut |
| | | 38 | Paper Feed Detent and Ratchet (table 5-6, step 6, Appendix) |
| | | 39 | Shift Lever Adjustment Screw |
| | | 40 | Line Feed Pawl (table 5-6, step 6, Appendix) |
| | | 41 | Letters Figures Cam Follower Stroke Adjustment Screw |
| | | 42 | Check Pawl |
| | | 43 | Letter Figures Arm Adjustment Screw |
| | | 44 | First Character Adjustment Screw (table 5-7, step 1, Appendix) |
| | | 45 | Advance Ratchet (table 5-6, step 7, Appendix) |
| | | 46 | Blank Print Prevent Adjustment Screw |
| | | 47 | Space Print Prevent Adjustment Screw |
| | | 48 | Line Feed Print Prevent Adjustment Screw |
| | | 49 | Figures Print Prevent Adjustment Screw |
| | | 50 | Bell Print Prevent Adjustment Screw |
| | | 51 | Letters Print Prevent Adjustment Screw |
| | | 52 | Carriage Return Print Prevent Adjustment Screw |


For location of items 46 through 52 on print prevent rod read from left to right.

Figure 5-95. Printer Assembly, Bottom View

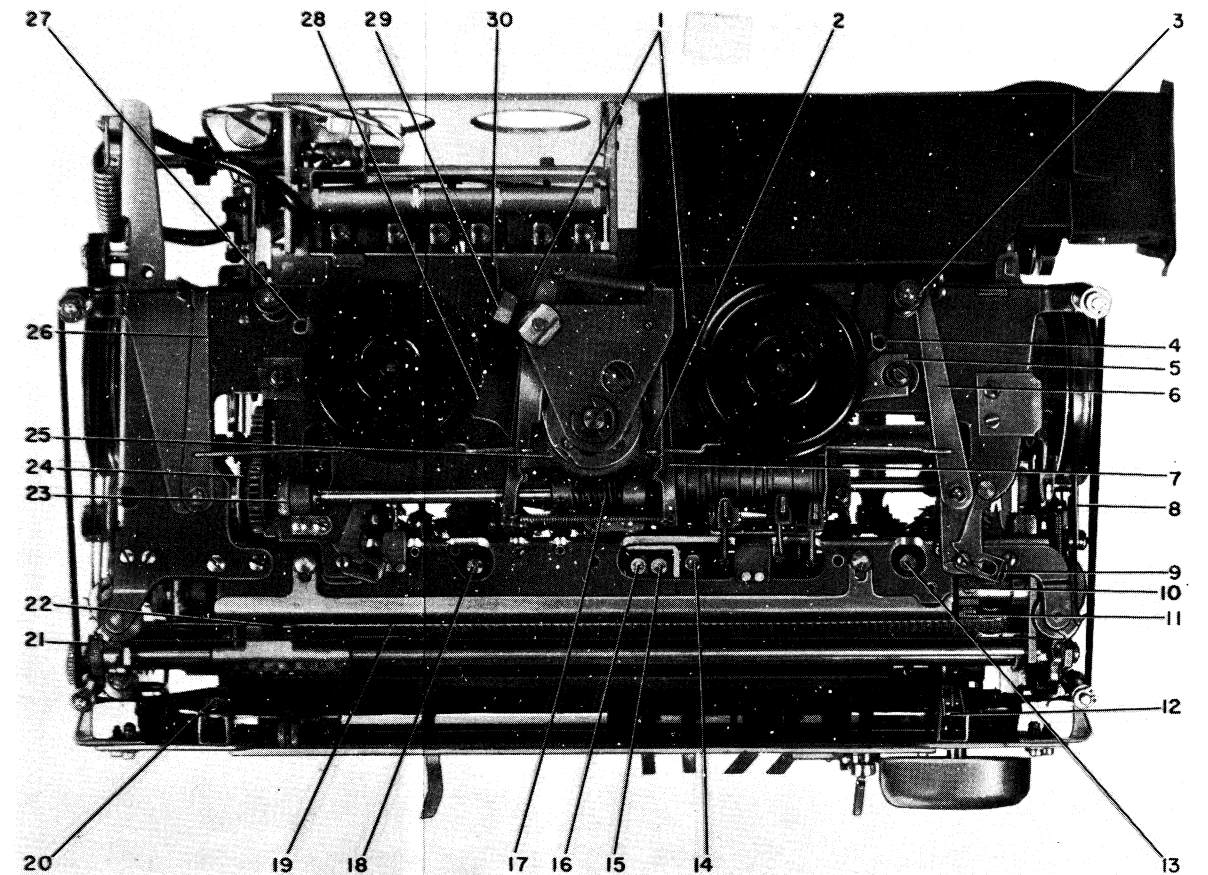

- | | | | |
|----|---|-----|--|
| 1 | Intermediate Drive Gears (table 5-6, step 1, Appendix) | *17 | Ribbon Feed Worm (table 5-5, step 2, Appendix) |
| 2 | Ribbon Feed Clutch Stop | 18 | Print Spring Arm Clamping Screw |
| 3 | Ribbon Roller | 19 | Lateral Control Belt (table 5-5, step 3, Appendix) |
| 4 | Right-Hand Tension Control Brake Arm | 20 | Left-Hand Ribbon Vibrator Guide (table 5-5, step 1, Appendix) |
| 5 | Ribbon Reversing Sliding Plate | 21 | Rotary Motion Spring Retainer (table 5-6, step 2, Appendix) |
| 6 | Right-Hand Ribbon Reversing Sensing Arm (table 5-6, step 1, Appendix) | 22 | Print Cylinder Yoke Clamp |
| 7 | Reversing Cam Follower | 23 | Felt Washer (table 5-5, step 5, Appendix) |
| 8 | Return Cable (table 5-5, step 3, Appendix) | 24 | Ribbon Feed Slip Clutch Gear (table 5-5, step 2, Appendix) |
| 9 | Lock Clips | 25 | Clutch Shaft Worm Gear |
| 10 | Code Bar Actuator Clamp (table 5-5, step 4, Appendix) | 26 | Left-Hand Ribbon Reversing Sensing Arm (table 5-6, step 1, Appendix) |
| 11 | Code Bar Actuator Clamp Screw | 27 | Left-Hand Tension Control Brake Arm |
| 12 | Right-Hand Ribbon Vibrator Guide (table 5-5, step 1, Appendix) | 28 | Ribbon Spool Drive Gear |
| 13 | Lifter Arm Clamping Screw | 29 | Ribbon Feed Backstop |
| 14 | Function Cam Follower Clamping Screw | 30 | Ribbon Feed Top Plate Assembly |
| 15 | Print Prevent Arm Clamping Screw | | |
| 16 | Print Cam Follower Clamping Screw | | |

Figure 5-96. Printer Assembly, Top View

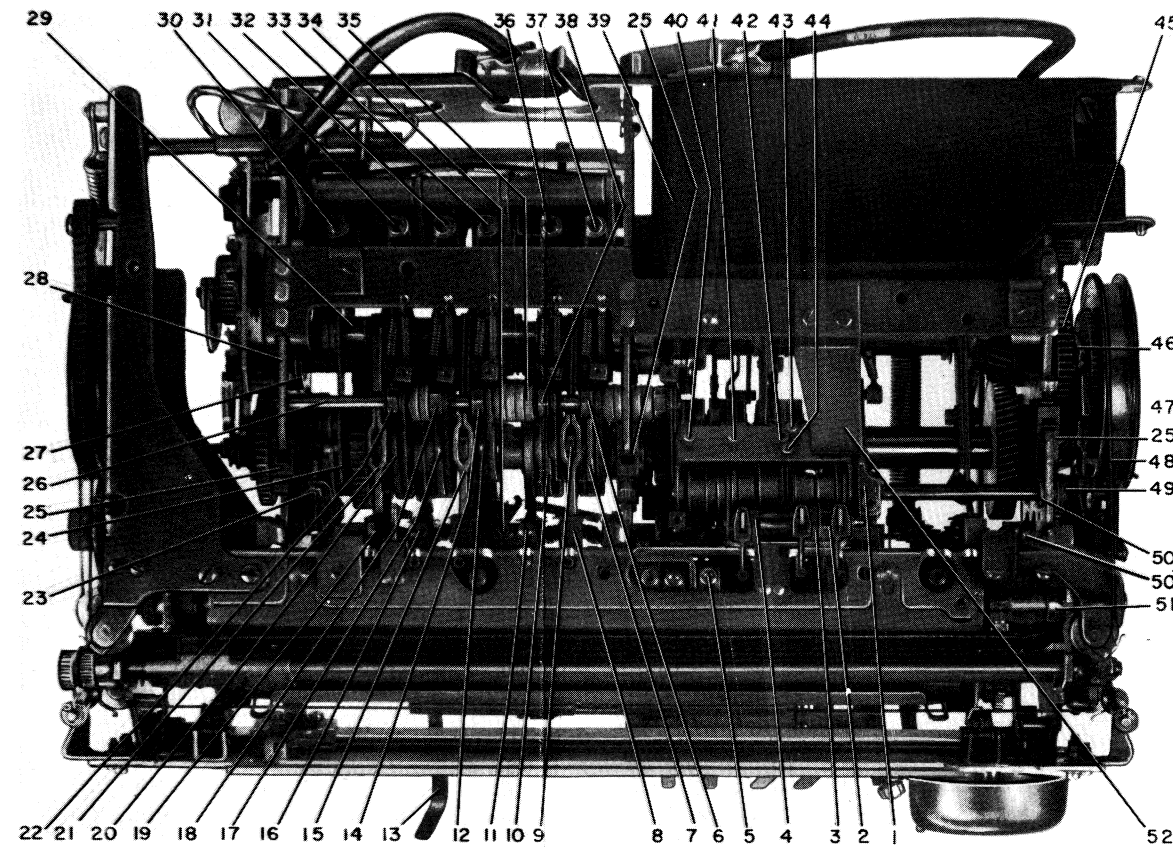

- 1 Carriage Return Cam Follower (table 5-6, step 5, Appendix)
- 2 Carriage Return Backstop Eccentric Bushing
- 3 Letters Figures Backstop Eccentric Bushing
- 4 Line Feed Backstop Eccentric Bushing
- 5 Function Cam Follower Screw
- 6 No. 1 Clutch Backstop Eccentric Bushing
- 7 No. 1 Mark Clutch Release Finger (table 5-7, step 2, Appendix, typical)
- 8 No. 1 Carriage Pulley (table 5-7, step 4, Appendix, typical)
- 9 No. 1 Type Positioning Cam Follower (table 5-7, step 4, Appendix, typical)
- 10 No. 2 Mark Clutch Release Finger
- 11 No. 2 Rotary Stroke Adjustment Screw
- 12 No. 5 Mark Clutch Release Finger
- 13 Paper Pressure Release Lever
- 14 No. 5 Clutch Backstop Eccentric Bushing
- 15 No. 5 Type Positioning Cam Follower
- 16 No. 4 Lateral Stroke Adjustment Screw
- 17 No. 4 Mark Clutch Release Finger
- 18 No. 4 Clutch Backstop Eccentric Bushing
- 19 No. 3 Carriage Pulley
- 20 No. 3 Mark Clutch Release Finger
- 21 No. 3 Type Positioning Cam Follower
- 22 No. 3 Clutch Backstop Eccentric Bushing
- 23 Start Clutch Backstop
- 24 Start Clutch Release Latch Pin

- 25 Frame Clamps
- 26 Backstop Shaft
- 27 Timing Cam Shaft
- 28 Start Clutch Release Arm
- 29 Mark Selector Shaft
- 30 Start Clutch Release Arm Adjustment Screw
- 31 No. 3 Clutch Release Finger Adjustment Screw
- 32 No. 4 Clutch Release Finger Adjustment Screw
- 33 No. 5 Clutch Release Finger Adjustment Screw
- 34 Rotary Chain Adjustment Stud
- 35 Felt Washer
- 36 No. 2 Clutch Release Finger Adjustment Screw
- 37 No. 1 Clutch Release Finger Adjustment Screw
- 38 No. 2 Clutch Backstop Eccentric Bushing
- 39 Fan Outlet Duct Assembly
- 40 Blank Advance Prevent Adjustment Screw
- 41 Line Feed Advance Prevent Adjustment Screw
- 42 Figures Advance Prevent Adjustment Screw
- 43 Letters Advance Prevent Adjustment Screw
- 44 Bell Advance Prevent Adjustment Screw
- 45 Second Reduction Gear (table 5-5, step 13, Appendix)
- 46 V Lever Tab (table 5-7, step 1, Appendix)
- 47 Third Reduction Gear (table 5-5, step 13, Appendix)
- 48 Bounce Prevent Lever
- 49 Bounce Prevent Lever Eccentric Bushing
- 50 Carriage Return Shaft Bushing
- 50a Rotary Cable Adj. Screw
- 51 Character Advance Lever Shaft Bushing
- 52 Advance Prevent Stop Spring

Mark Side

Mark Side

Figure 5-97. Printer Assembly, Top View (Ribbon Feed Top Plate Assembly Removed)

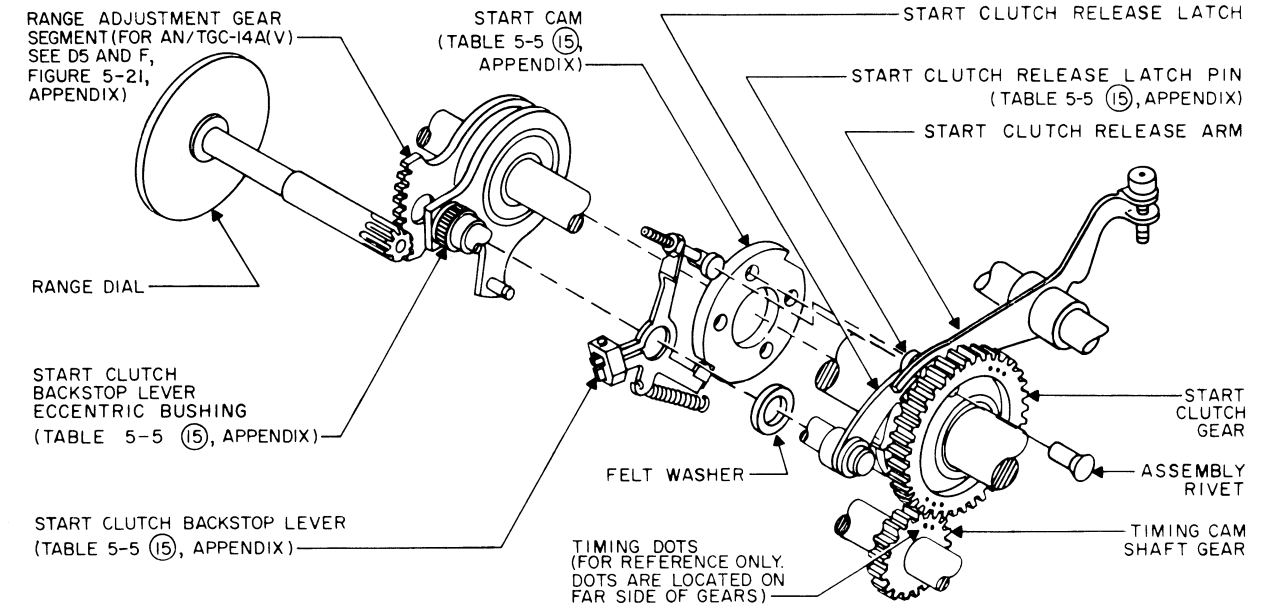
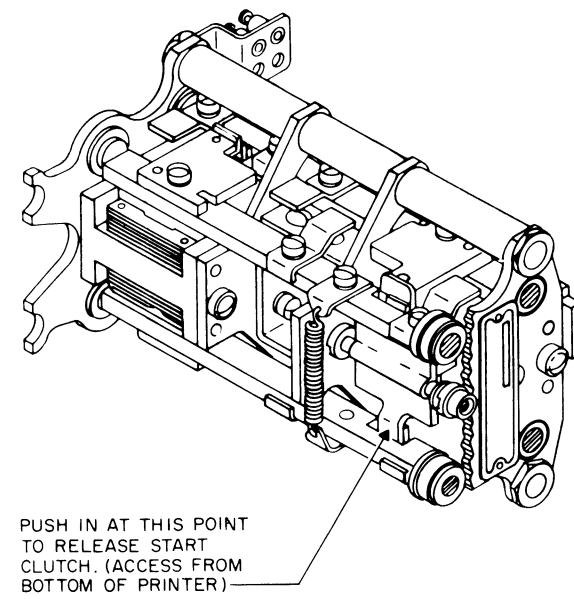


Figure 5-99. Start Clutch Release Mechanism, Exploded View

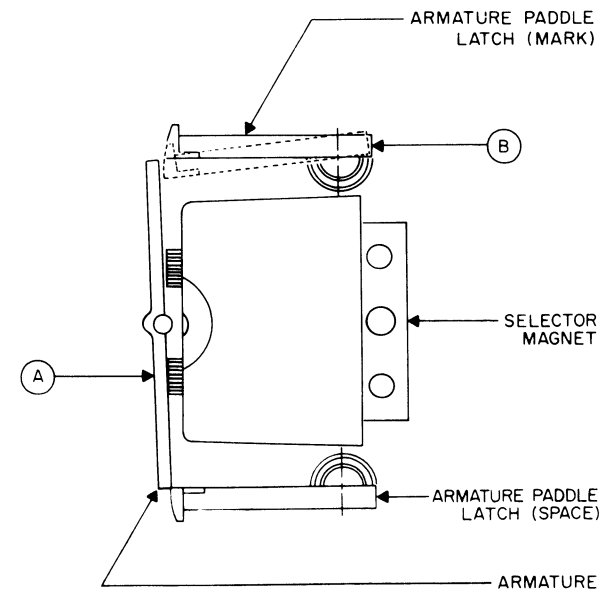


Figure 5-98. Selector Assembly


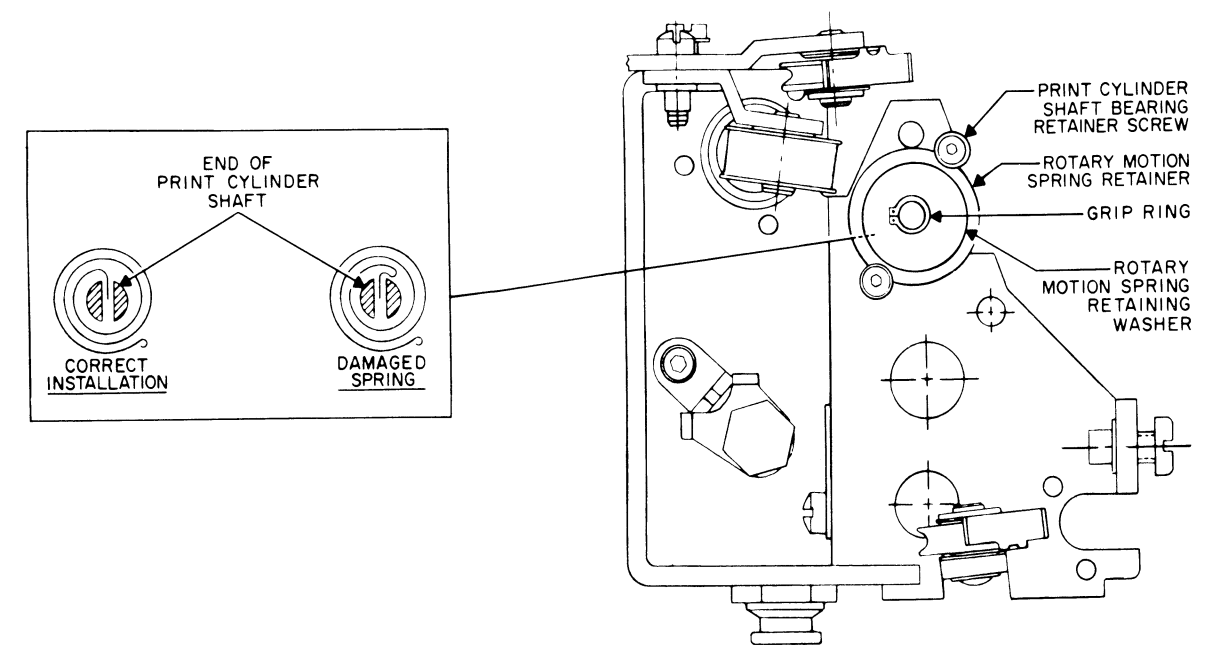


Figure 5-100. Rotary Cable Installation, Left-Side View

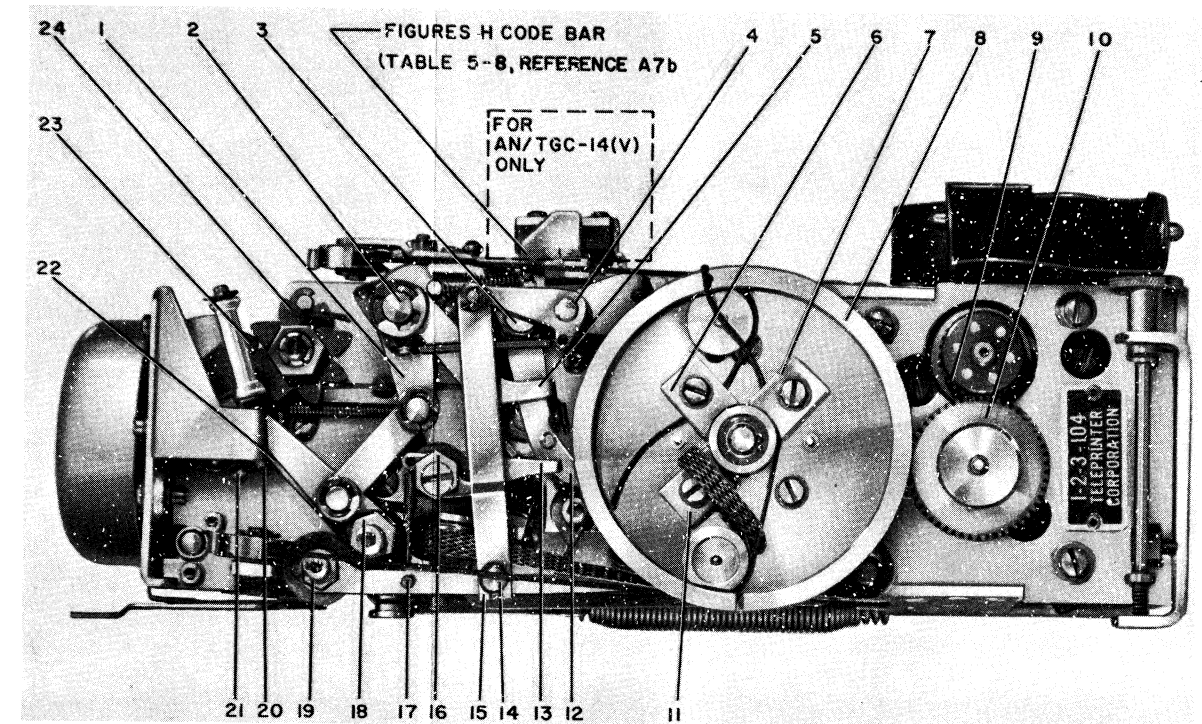

- | | | | |
|----|--|----|---|
| 1 | Function Shaft Terminal Lever | 13 | Advance Suppression Latch |
| 2 | Character Advance Lever Shaft | 14 | Check Pawl Eccentric Stud |
| 3 | Character Advance Pawl Eccentric Bushing | 15 | Check Pawl Link |
| 4 | Carriage Return Lever | 16 | Advance Suppression Latch Eccentric Bushing |
| 5 | Advance Prevent Lever Tab | 17 | Check Pawl |
| 6 | Return Cable Clamp | 18 | Rotary Detent Pawl Eccentric Bushing |
| 7 | Print Hammer Cable Clamp | 19 | Check Pawl Eccentric Bushing |
| 8 | Advance Drum | 20 | Rotary Detent Pawl Tab |
| 9 | Speed Change Gear | 21 | Rotary Detent Pawl Adjustment Screw |
| 10 | Idler Gear | 22 | Rotary Detent Pawl |
| 11 | Lateral Control Belt Clamp | 23 | Rotary Detent Pawl Pin |
| 12 | Character Advance Pawl | 24 | Index Wheel |

Figure 5-101. Printer Assembly, Right-Side View

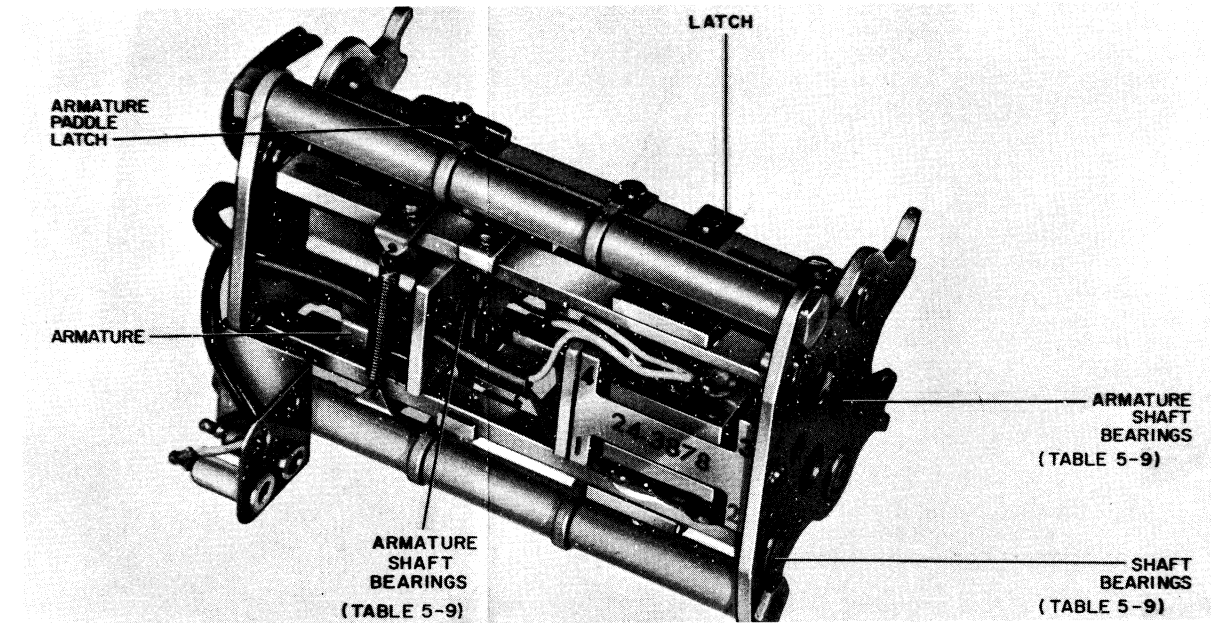


Figure 5-102. Selector Assembly, Lubrication Points

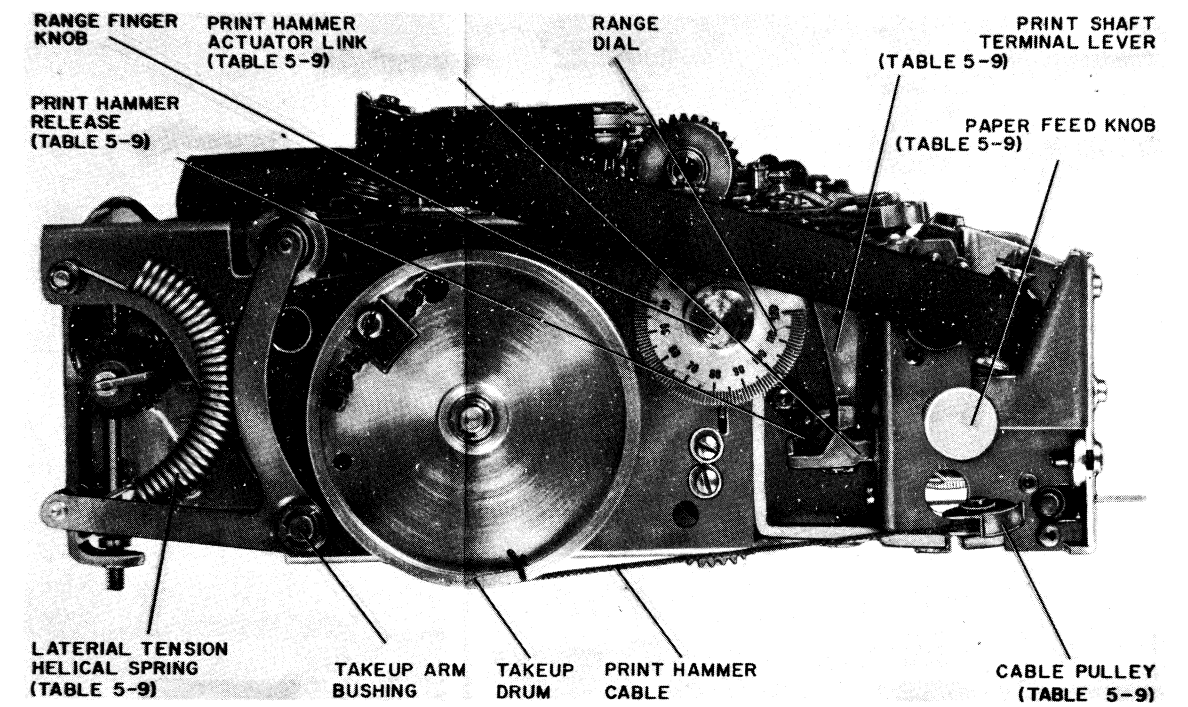


Figure 5-103. Printer Assembly, Left-Side View

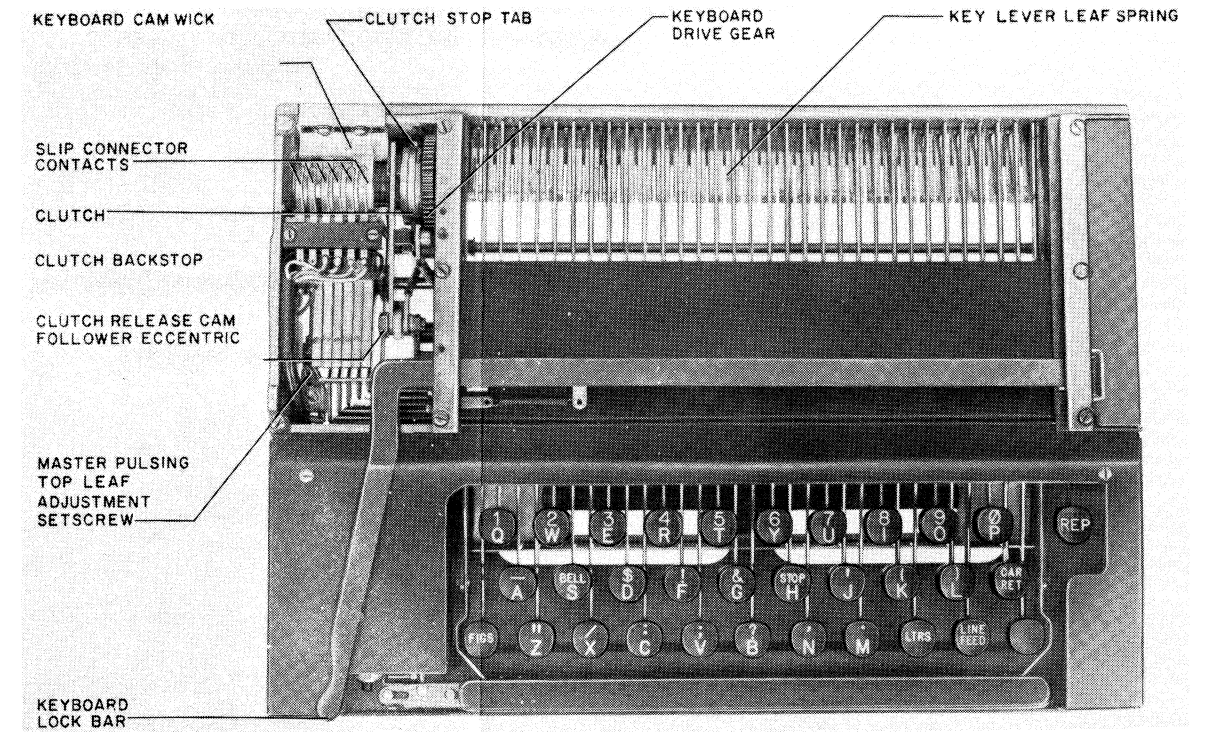


Figure 5-104. Keyboard Assembly, Top View (TT-318A/UG)

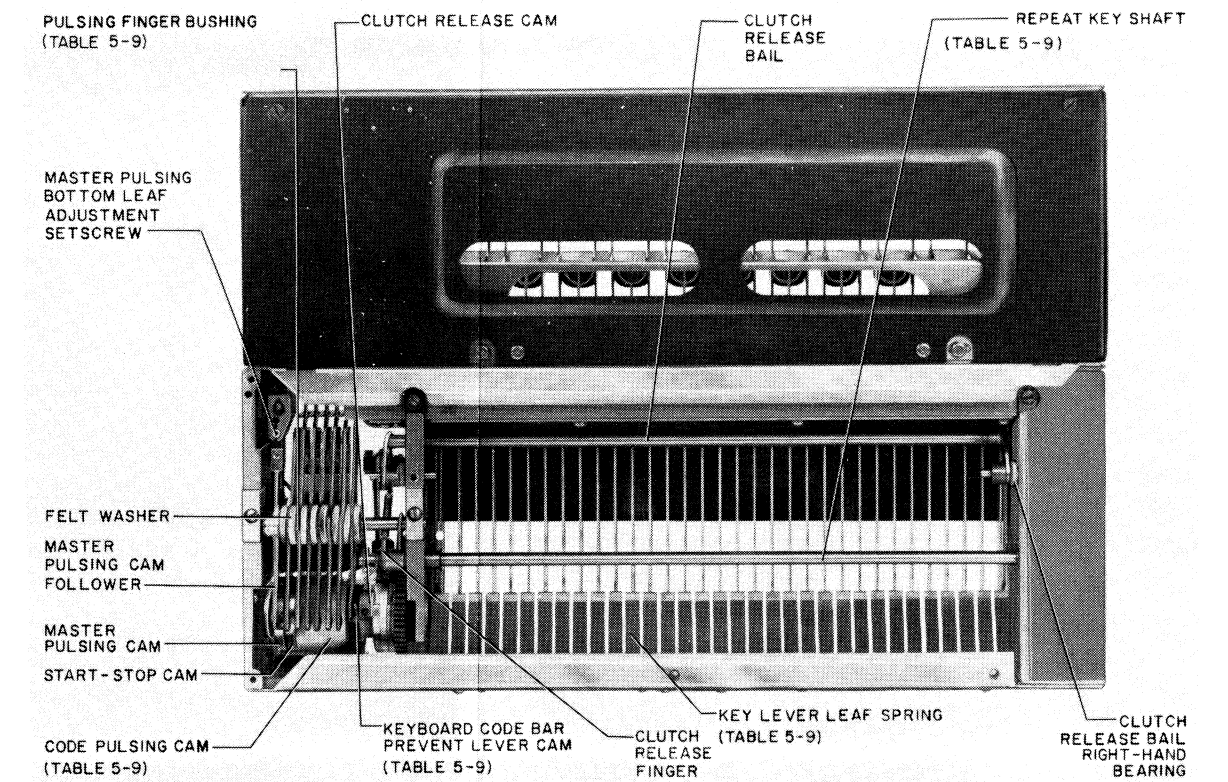



Figure 5-105. Keyboard Assembly, Bottom View (TT-318A/UG)

NOTES

1. REFERENCE DESIGNATIONS ARE ABBREVIATED. PREFIX THE DESIGNATION WITH THE UNIT NUMBER, OR ASSEMBLY DESIGNATION, OR BOTH.
2. ALL RESISTORS ARE 1/2 WATT ±5% AND VALUES ARE IN OHMS UNLESS OTHERWISE INDICATED.
3. ALL CAPACITORS ARE ±10% AND VALUES ARE IN MICROFARADS (UF) UNLESS OTHERWISE INDICATED.
4. ALL MEASUREMENTS OBTAINED WITH 20,000-OHMS-PER-VOLT METER. UNLESS OTHERWISE INDICATED, VALUES AT SIGNIFICANT TEST POINTS ARE TO COMMON GROUND, WITH ALL UNITS INTERCONNECTED, BUT WITH THE EQUIPMENT DEENERGIZED. SEE SECTION 4 FOR COMPLETE VOLTAGE READINGS.
5. PATCHED FOR SIMPLEX INTERNAL BATTERY OPERATION. FOR PATCHING OPTIONS SEE PARAGRAPH 2-9.
6. ALL DIODES ARE TYPE AFIN645 UNLESS OTHERWISE INDICATED.
7. THE SYMBOL  DENOTES A ZENER DIODE.

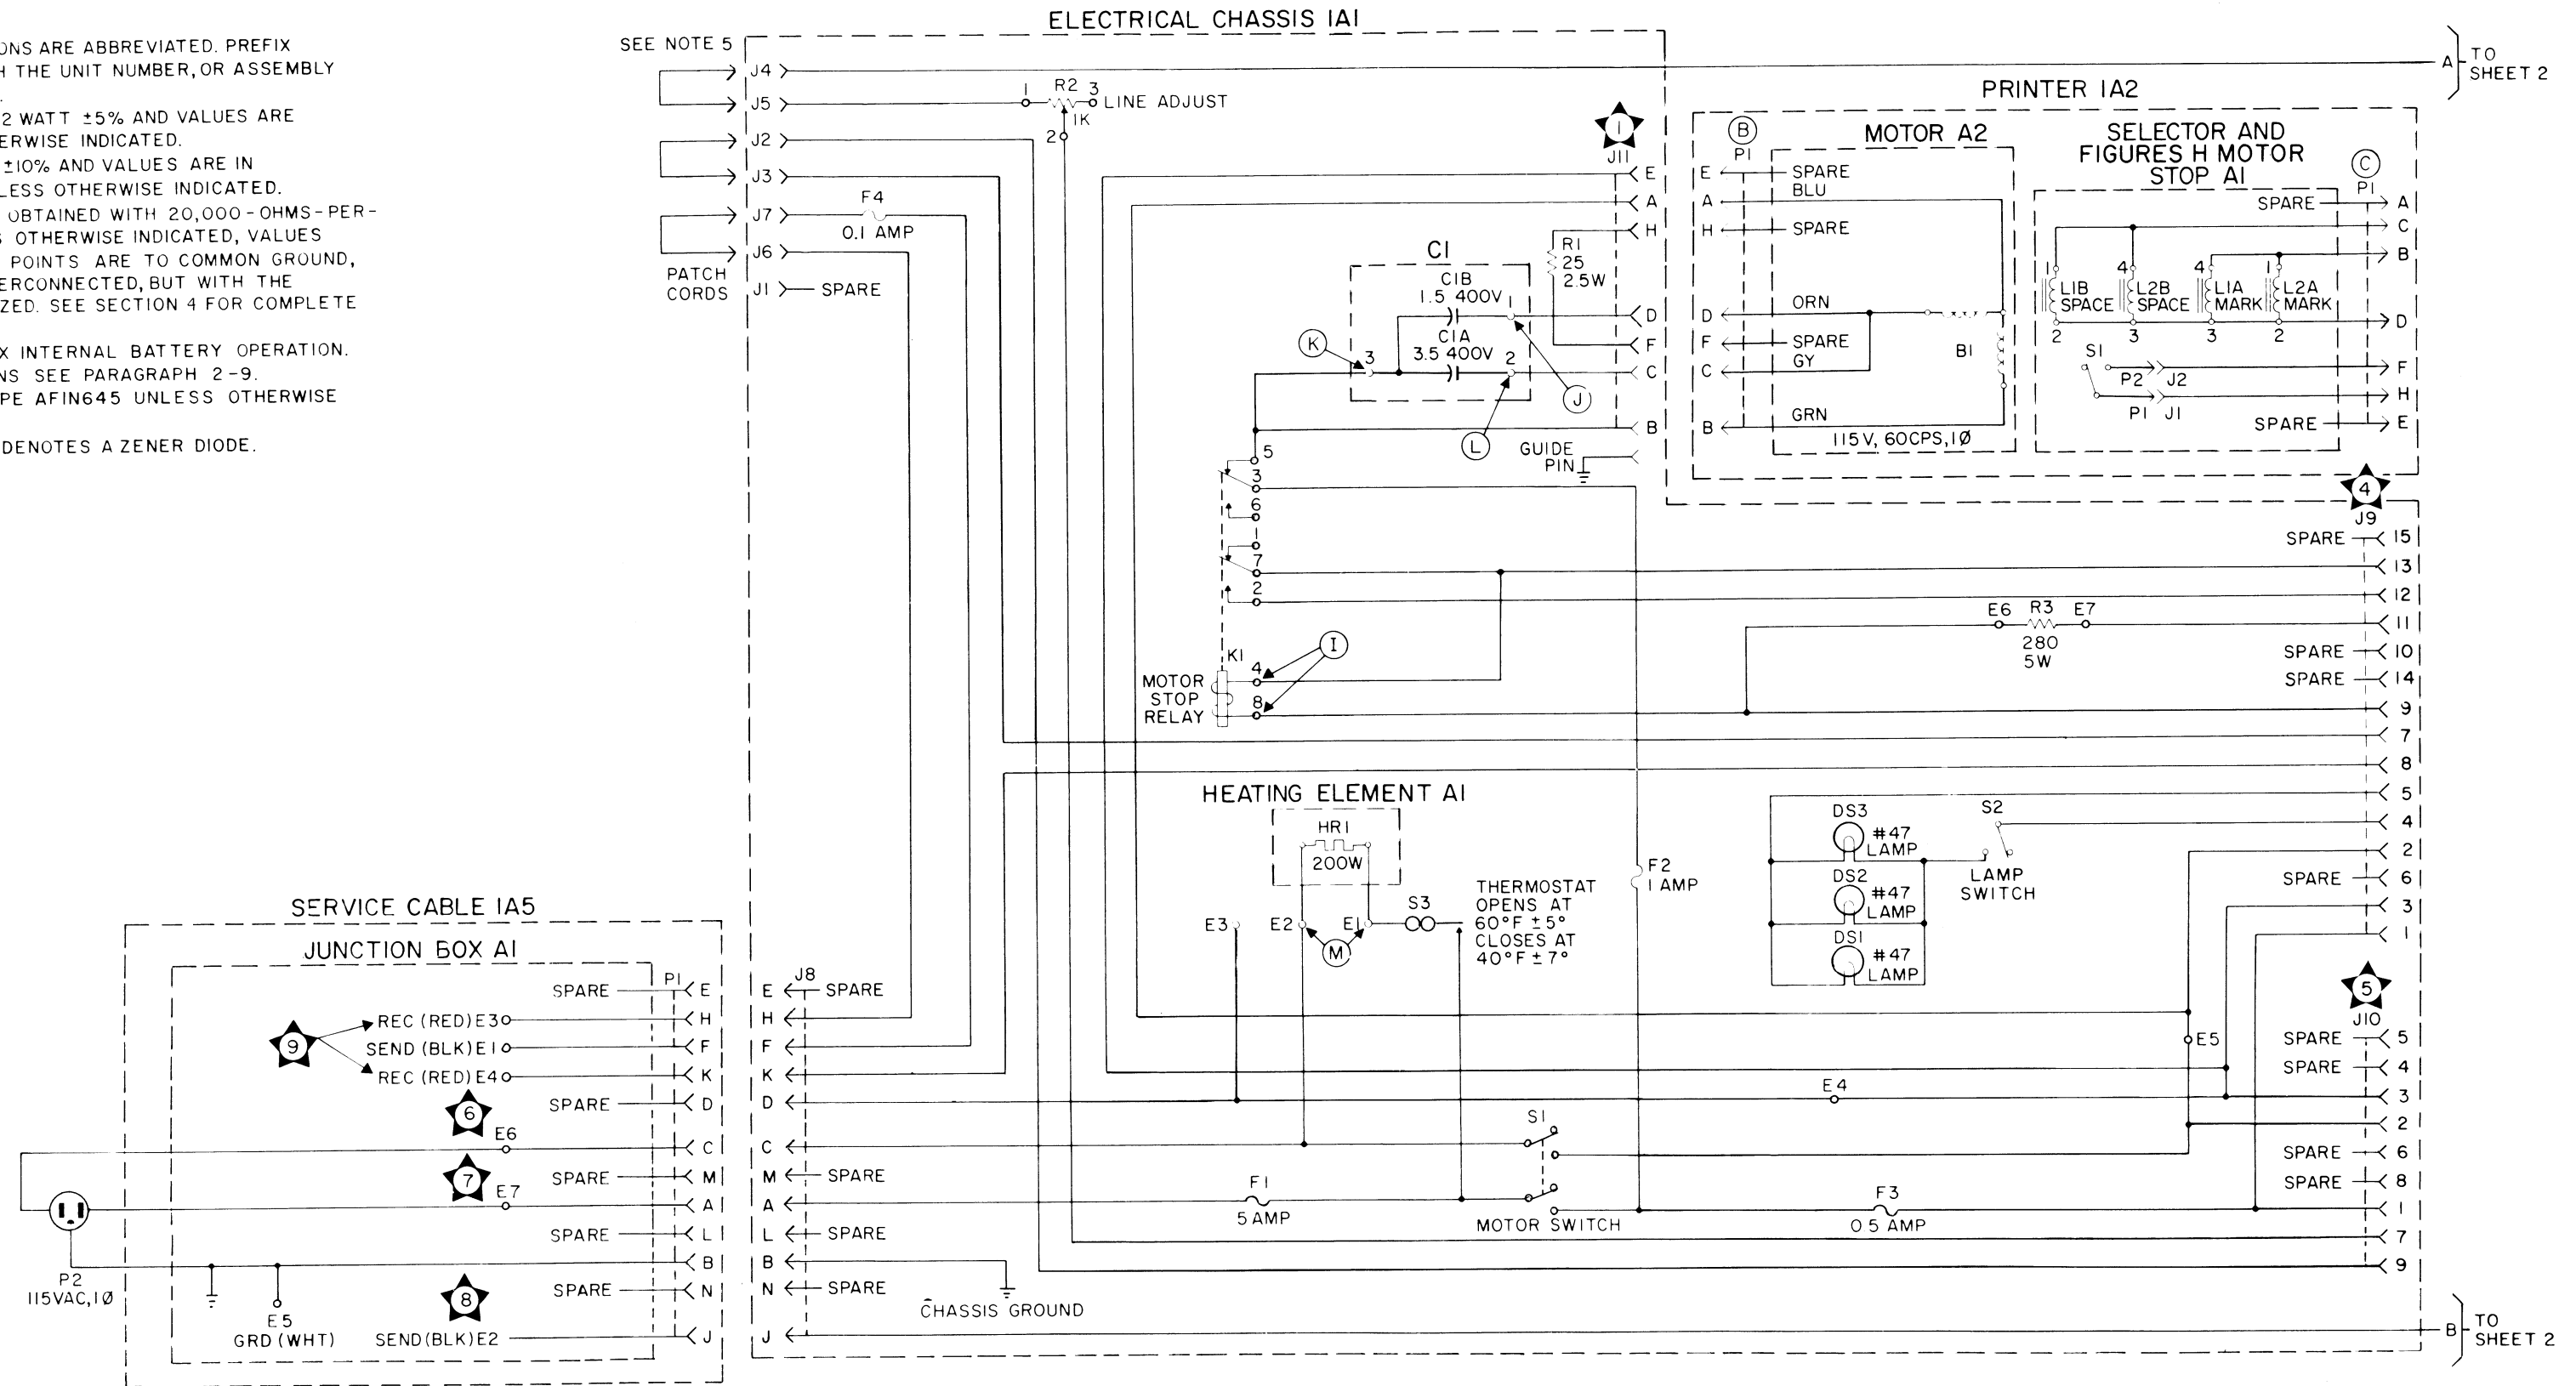


Figure 5-106. Teletypewriter Set AN/TGC-14(V), Schematic Diagram (Sheet 1 of 2)

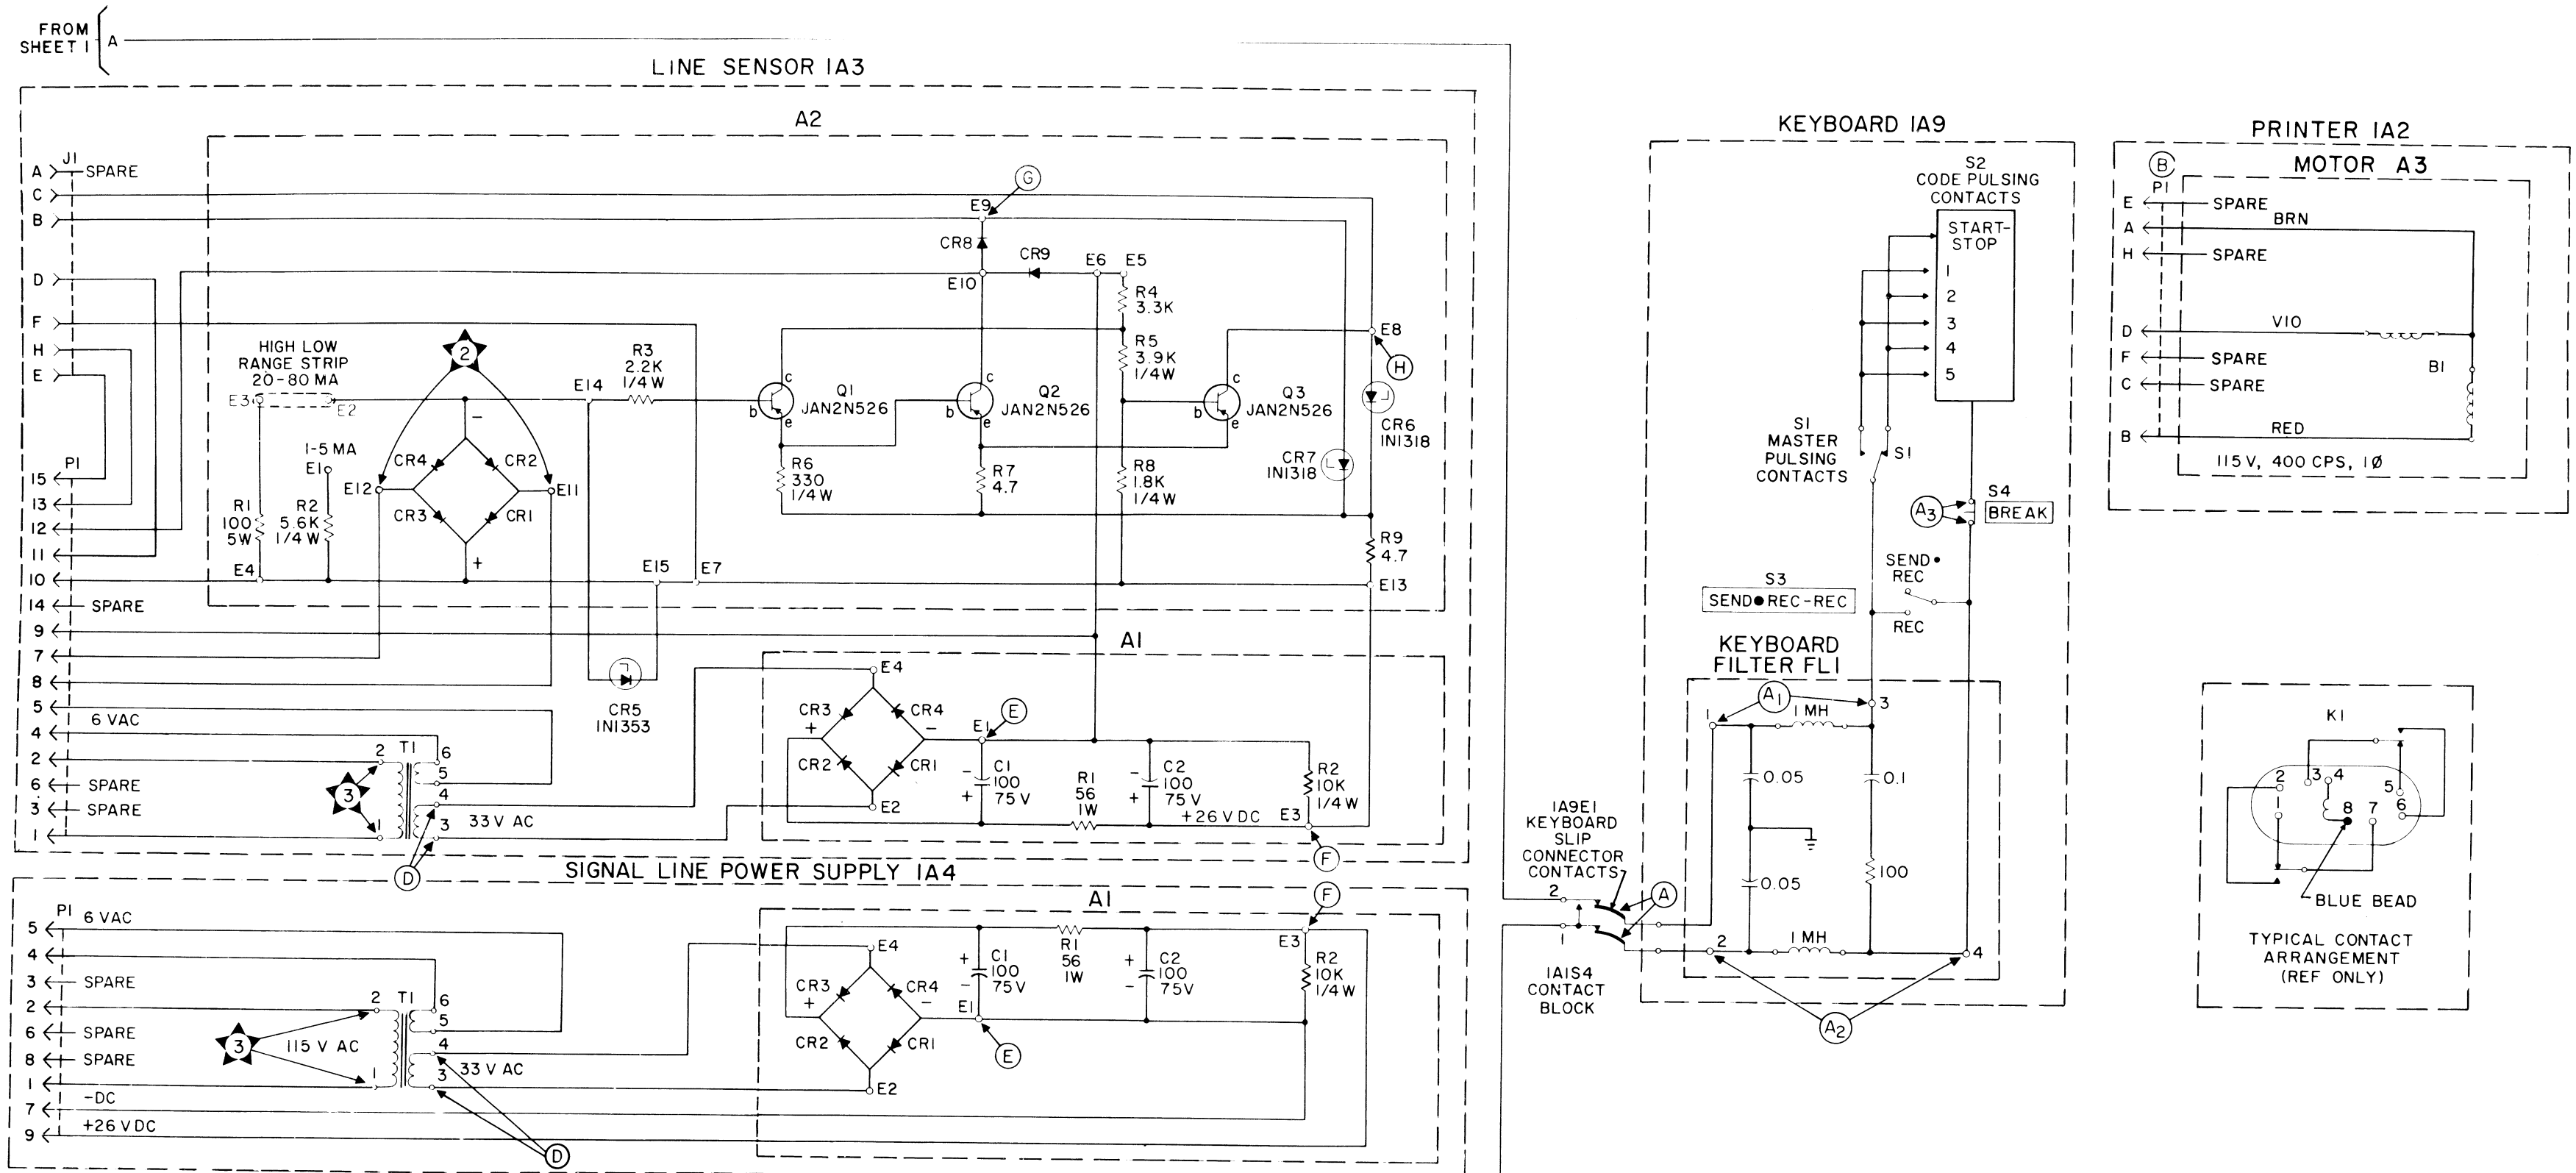



Figure 5-106. Teletypewriter Set AN/TGC-14 (V), Schematic Diagram (Sheet 2 of 2)

ORIGINAL

NOTES

1. REFERENCE DESIGNATIONS ARE ABBREVIATED. PREFIX THE DESIGNATION WITH THE UNIT NUMBER, OR ASSEMBLY DESIGNATION, OR BOTH.
2. ALL RESISTORS ARE 1/2 WATT ±5% AND VALUES ARE IN OHMS UNLESS OTHERWISE INDICATED.
3. ALL CAPACITORS ARE ±10% AND VALUES ARE IN MICROFARADS (UF) UNLESS OTHERWISE INDICATED.
4. ALL MEASUREMENTS OBTAINED WITH 20,000-OHMS-PER-VOLT METER. UNLESS OTHERWISE INDICATED, VALUES AT SIGNIFICANT TEST POINTS ARE TO COMMON GROUND, WITH ALL UNITS INTERCONNECTED, BUT WITH THE EQUIPMENT DEENERGIZED. SEE SECTION 4 FOR COMPLETE VOLTAGE READINGS.
5. PATCHED FOR SIMPLEX INTERNAL BATTERY OPERATION. FOR PATCHING OPTIONS SEE PARAGRAPH 2-9.
6. ALL DIODES ARE TYPE AFIN645 UNLESS OTHERWISE INDICATED.
7. THE SYMBOL  DENOTES A ZENER DIODE.

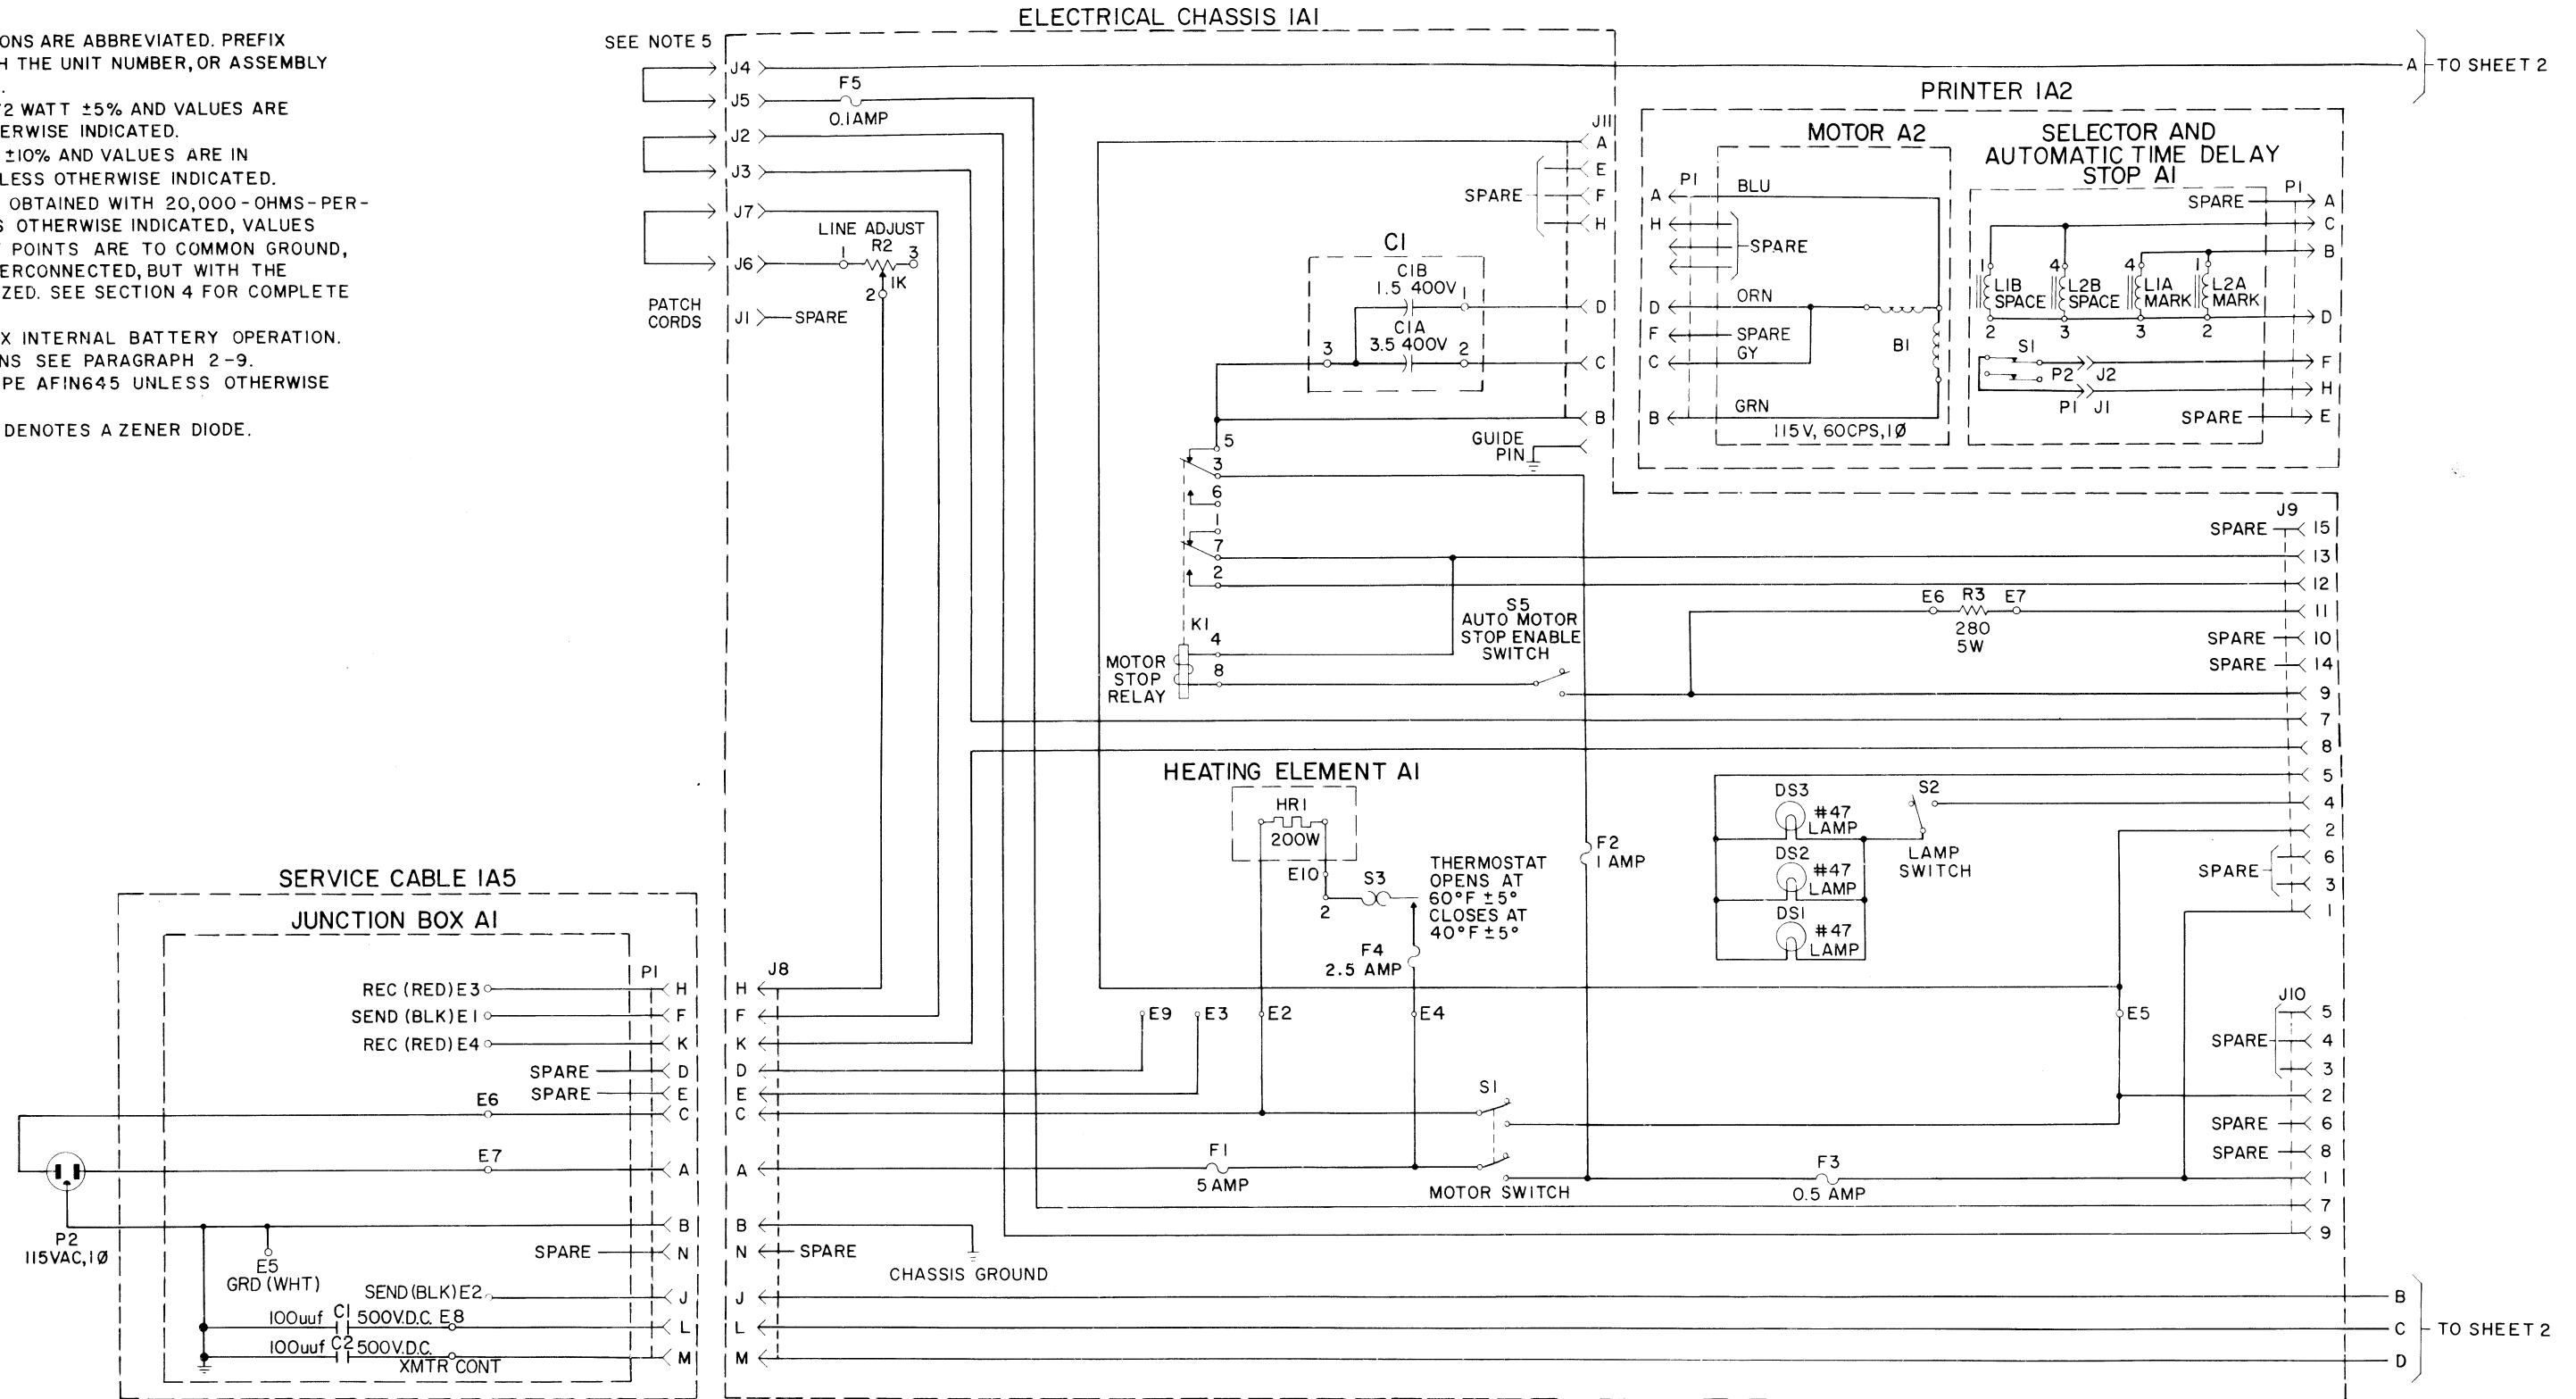


Figure 5-107. Teletypewriter Set AN/TGC-14A(V), Schematic Diagram (Sheet 1 of 2)


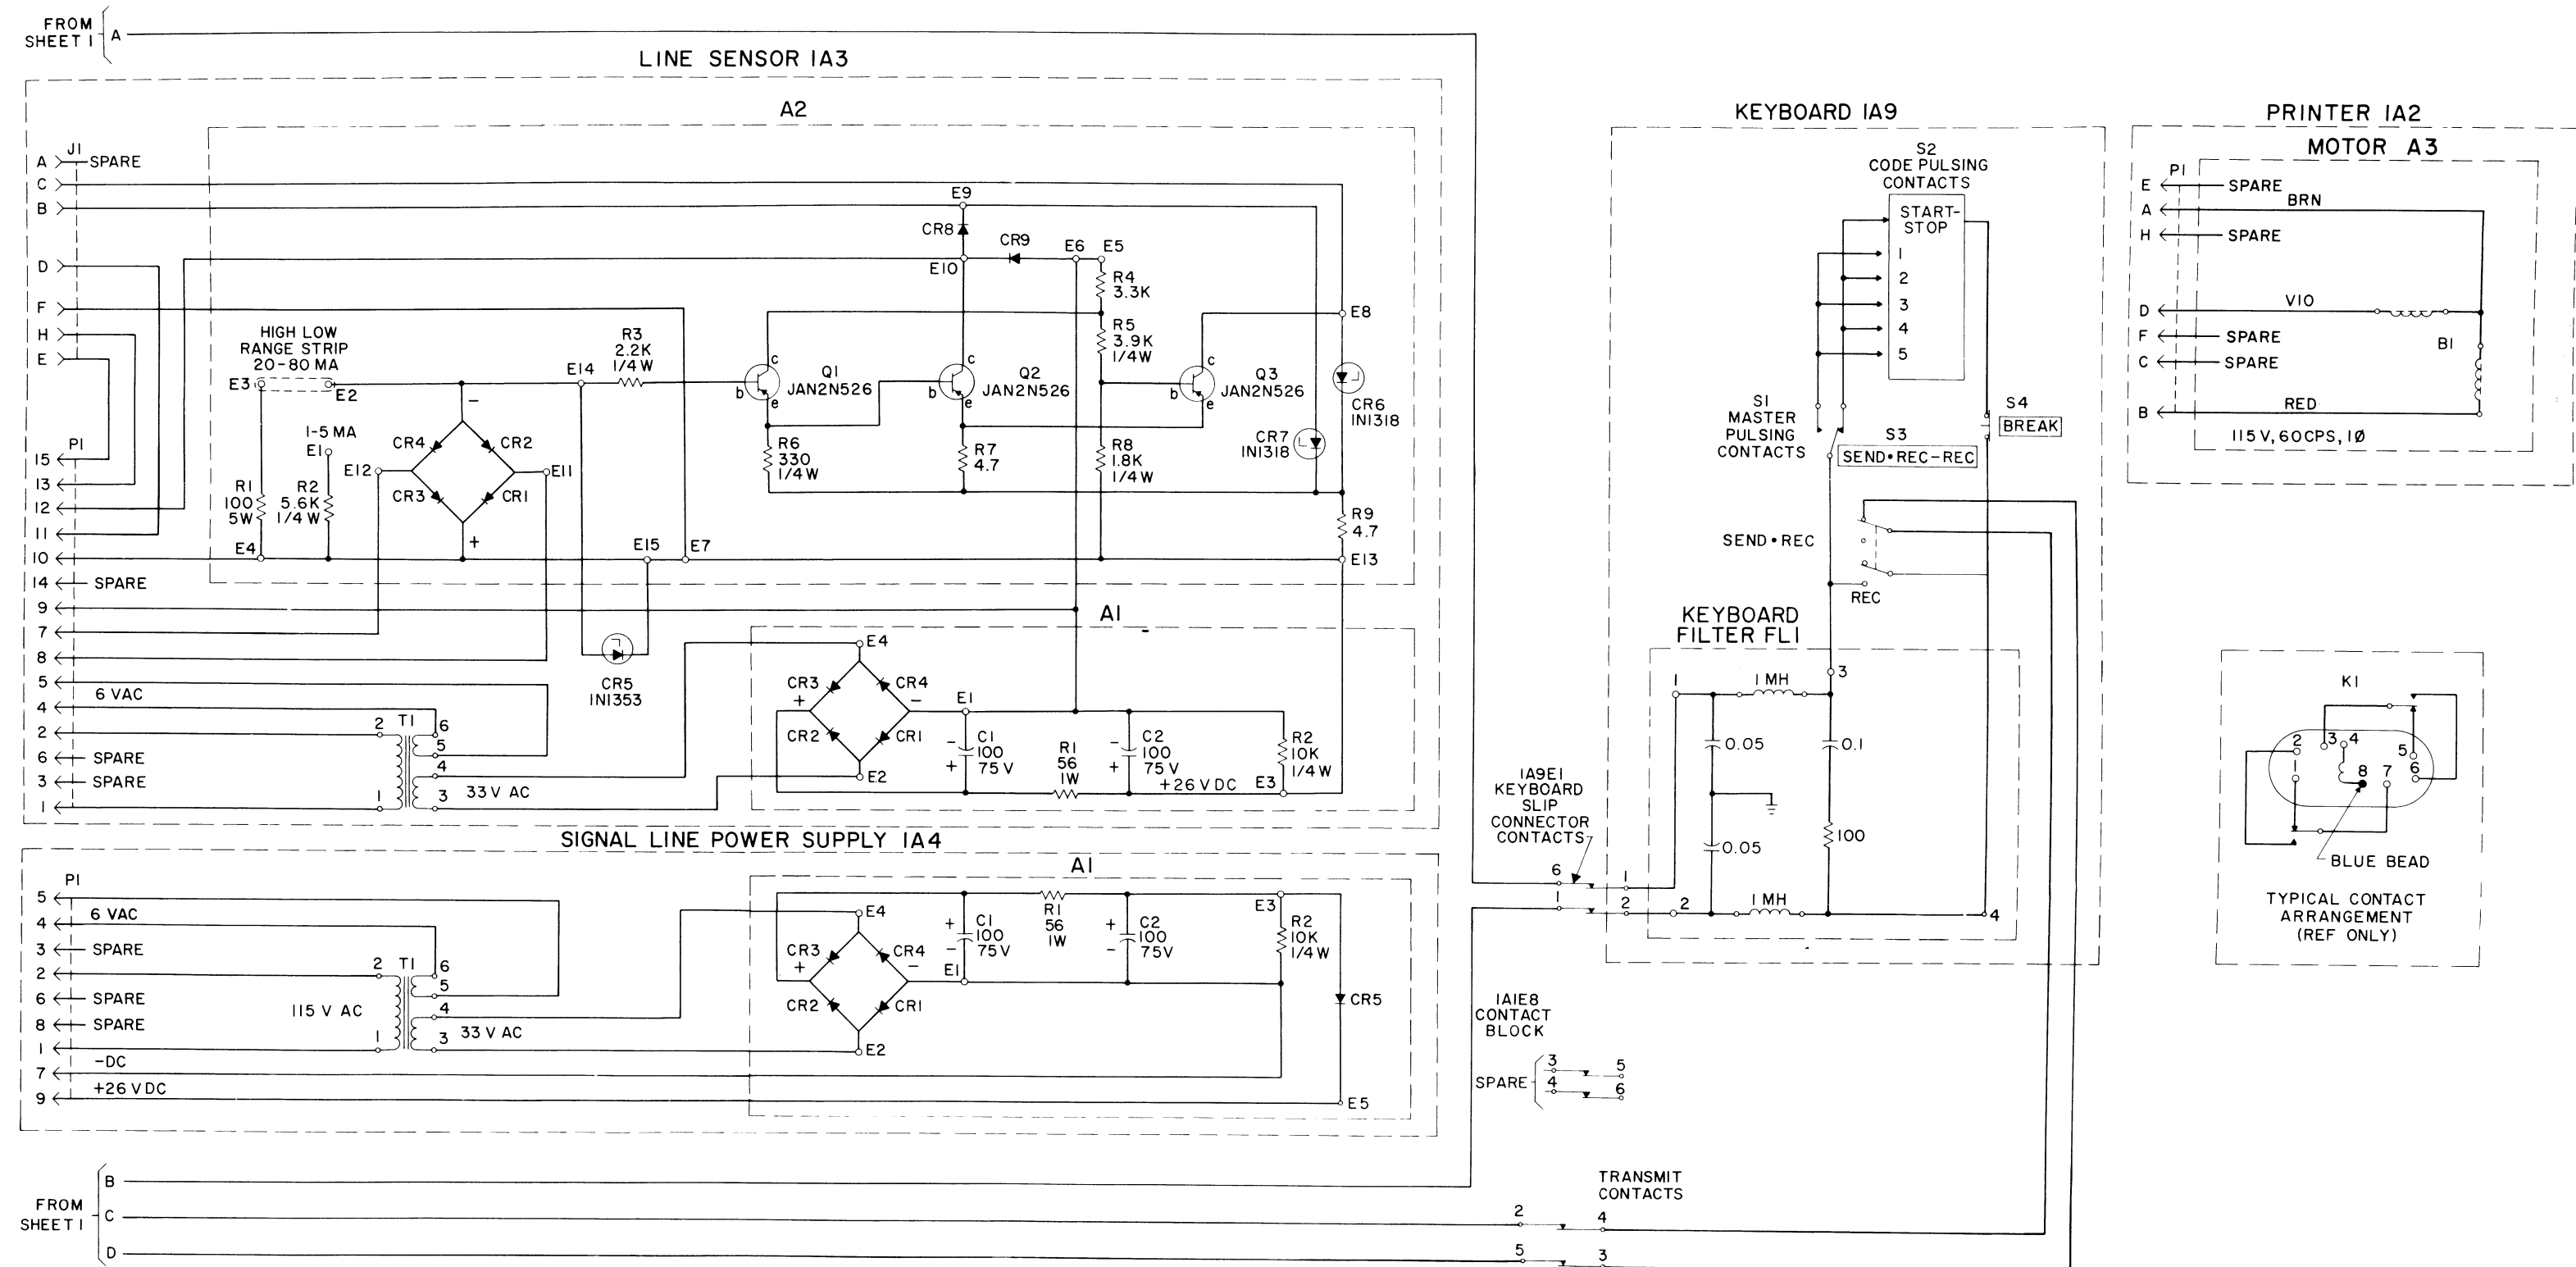



Figure 5-107. Teletypewriter Set AN/TGC-14A(V), Schematic Diagram (Sheet 2 of 2)

ORIGINAL

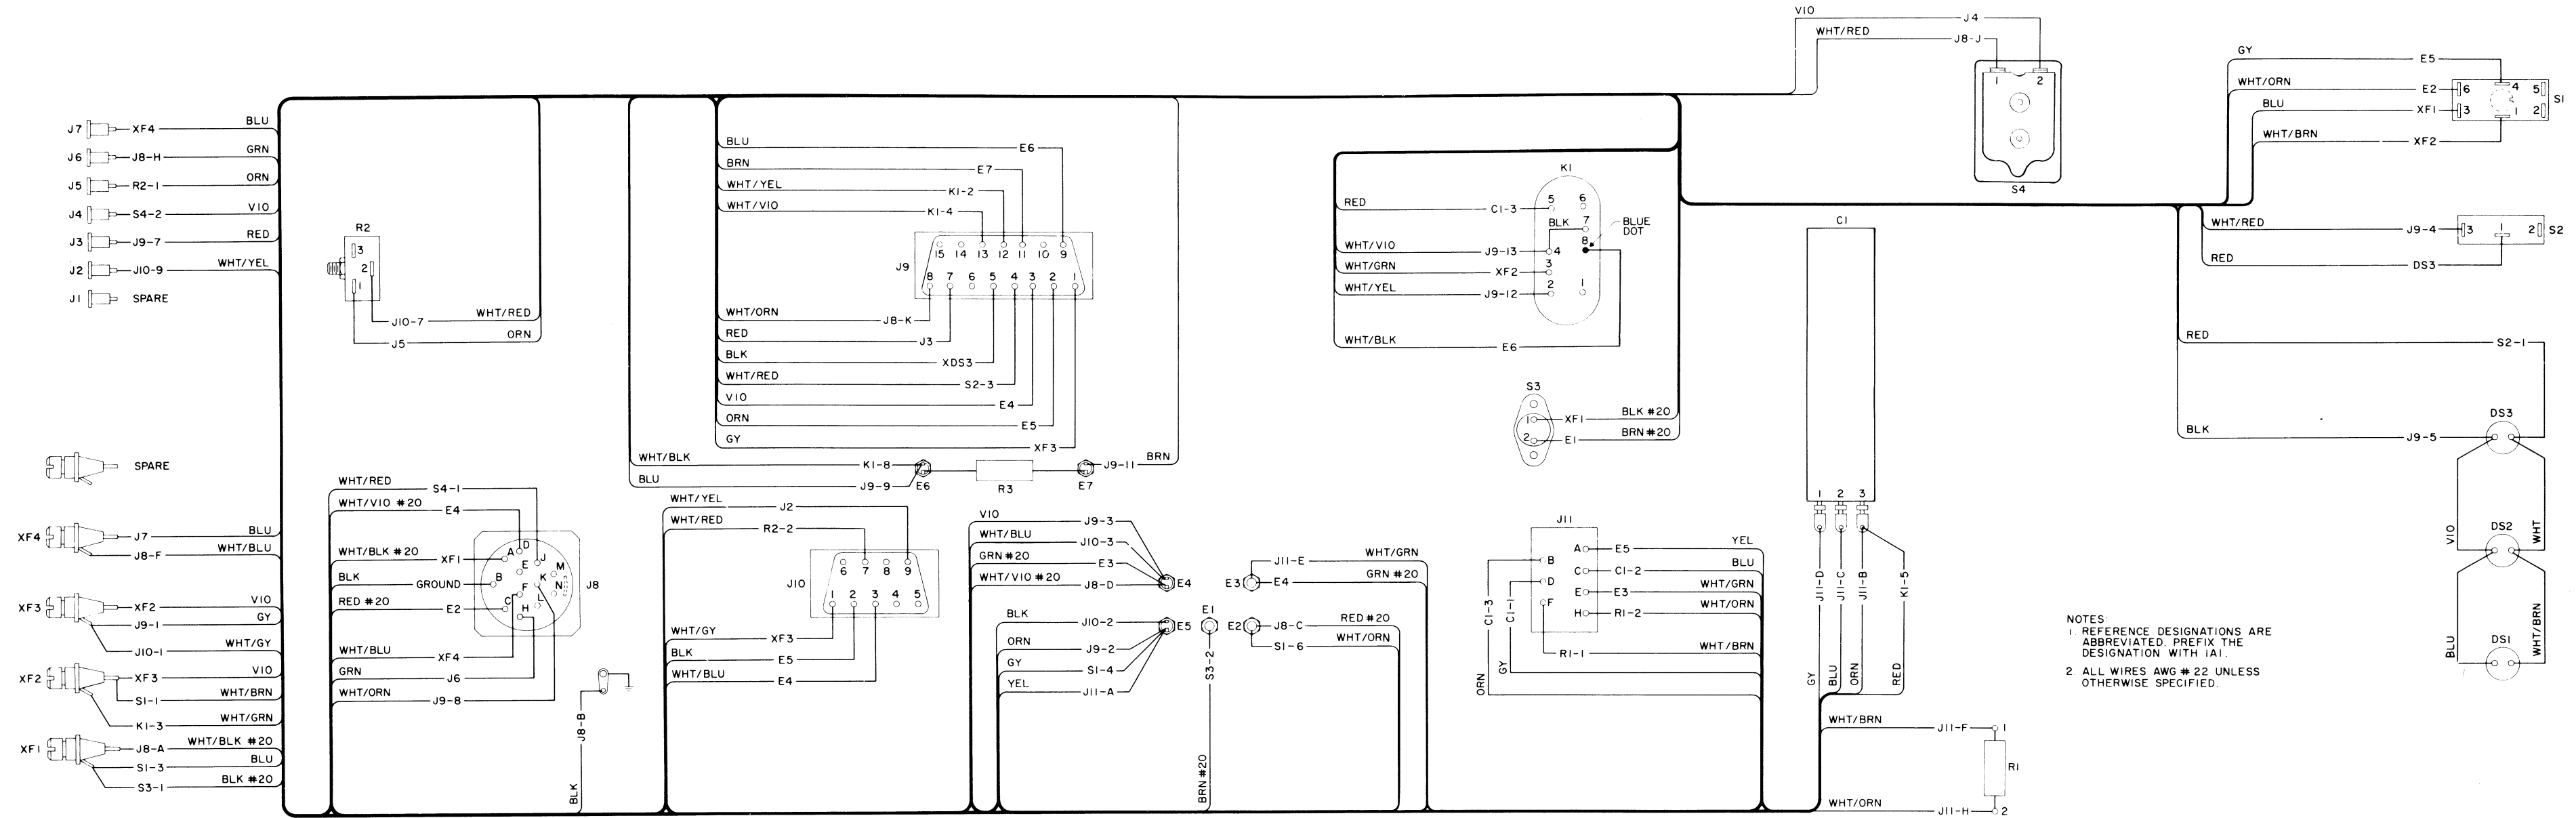


NOTES:
1 REFERENCE DESIGNATIONS ARE ABBREVIATED. PREFIX THE DESIGNATION WITH 'A'.
2 ALL WIRES AWG # 22 UNLESS OTHERWISE SPECIFIED.

Figure 5-108. Teletypewriter Set AN/TGC-14(V), Wiring Diagram

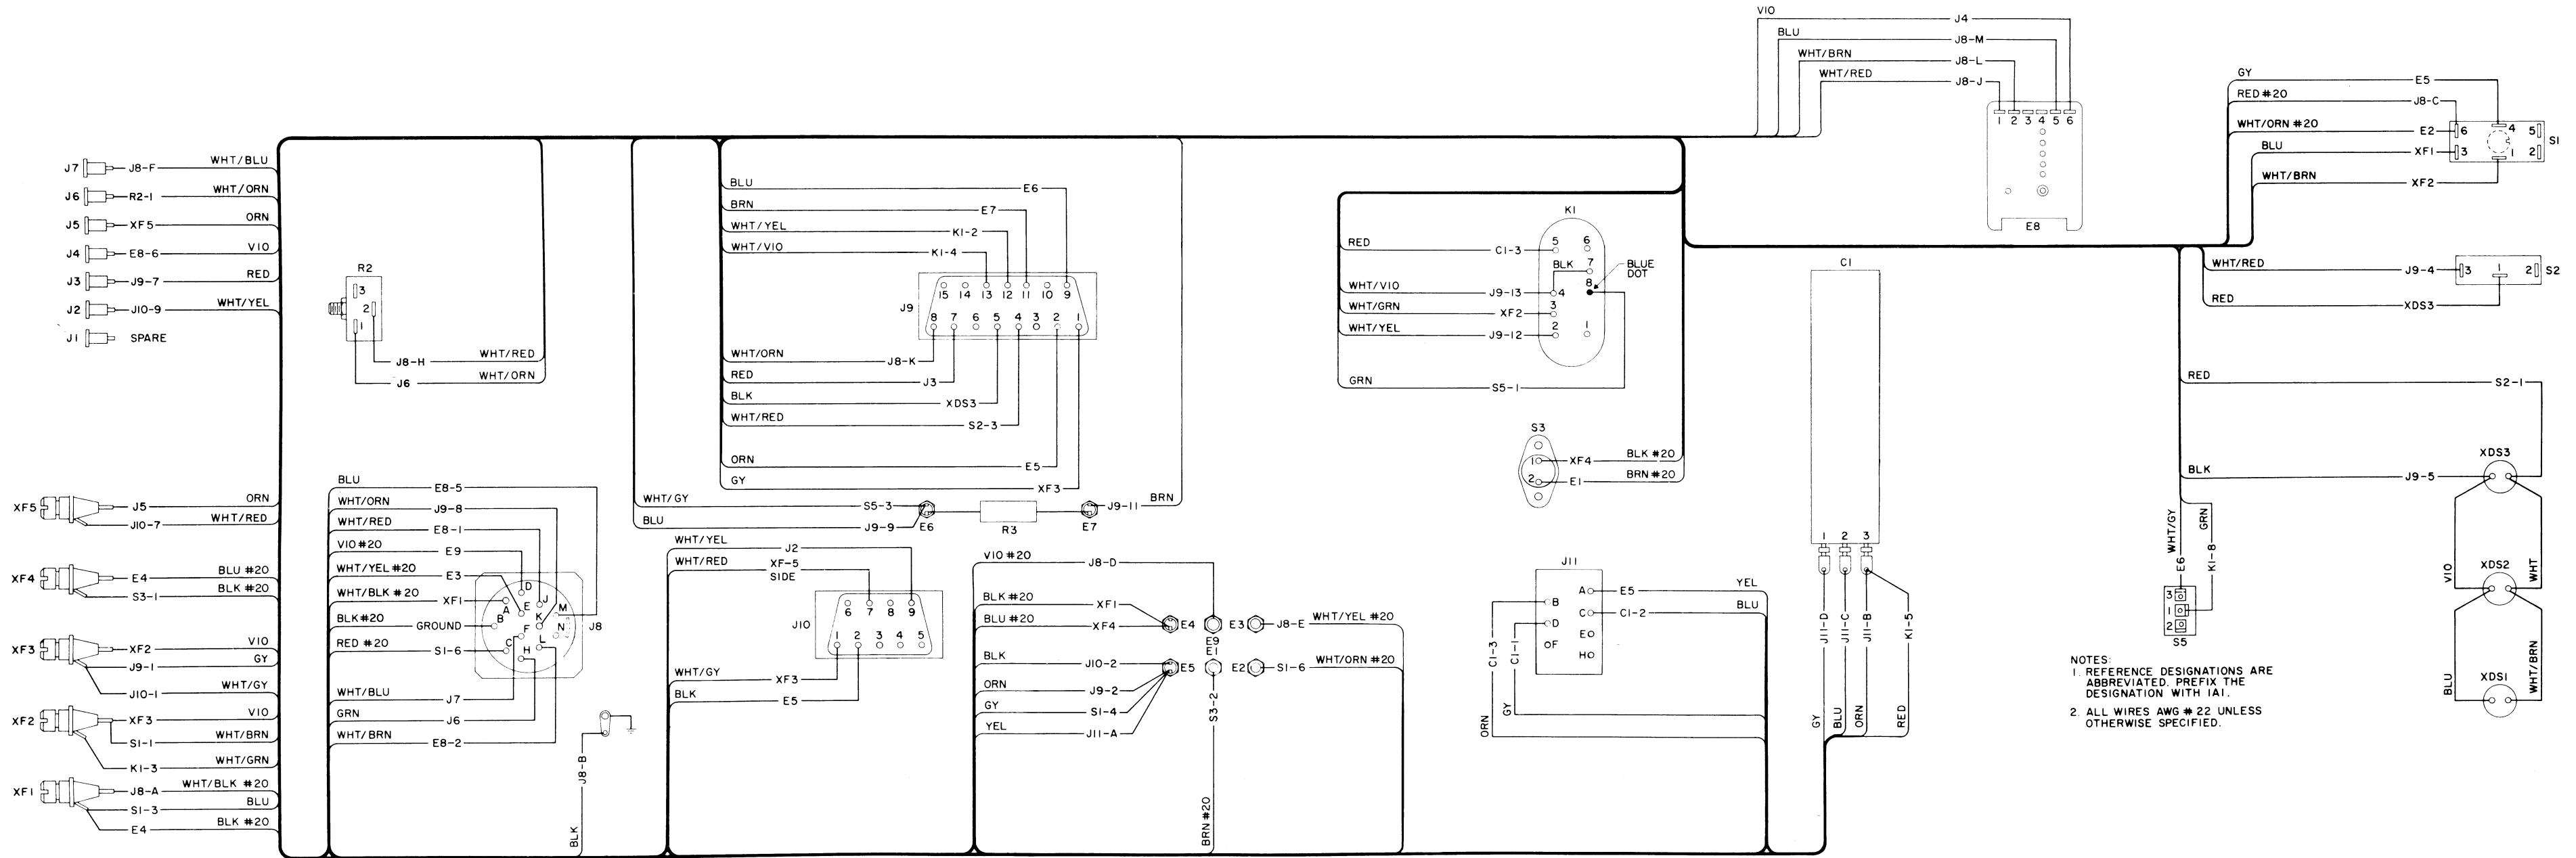


NOTES:
1. REFERENCE DESIGNATIONS ARE ABBREVIATED. PREFIX THE DESIGNATION WITH IA1.
2. ALL WIRES AWG # 22 UNLESS OTHERWISE SPECIFIED.

Figure 5-109. Teletypewriter Set AN/TGC-14A(V), Wiring Diagram

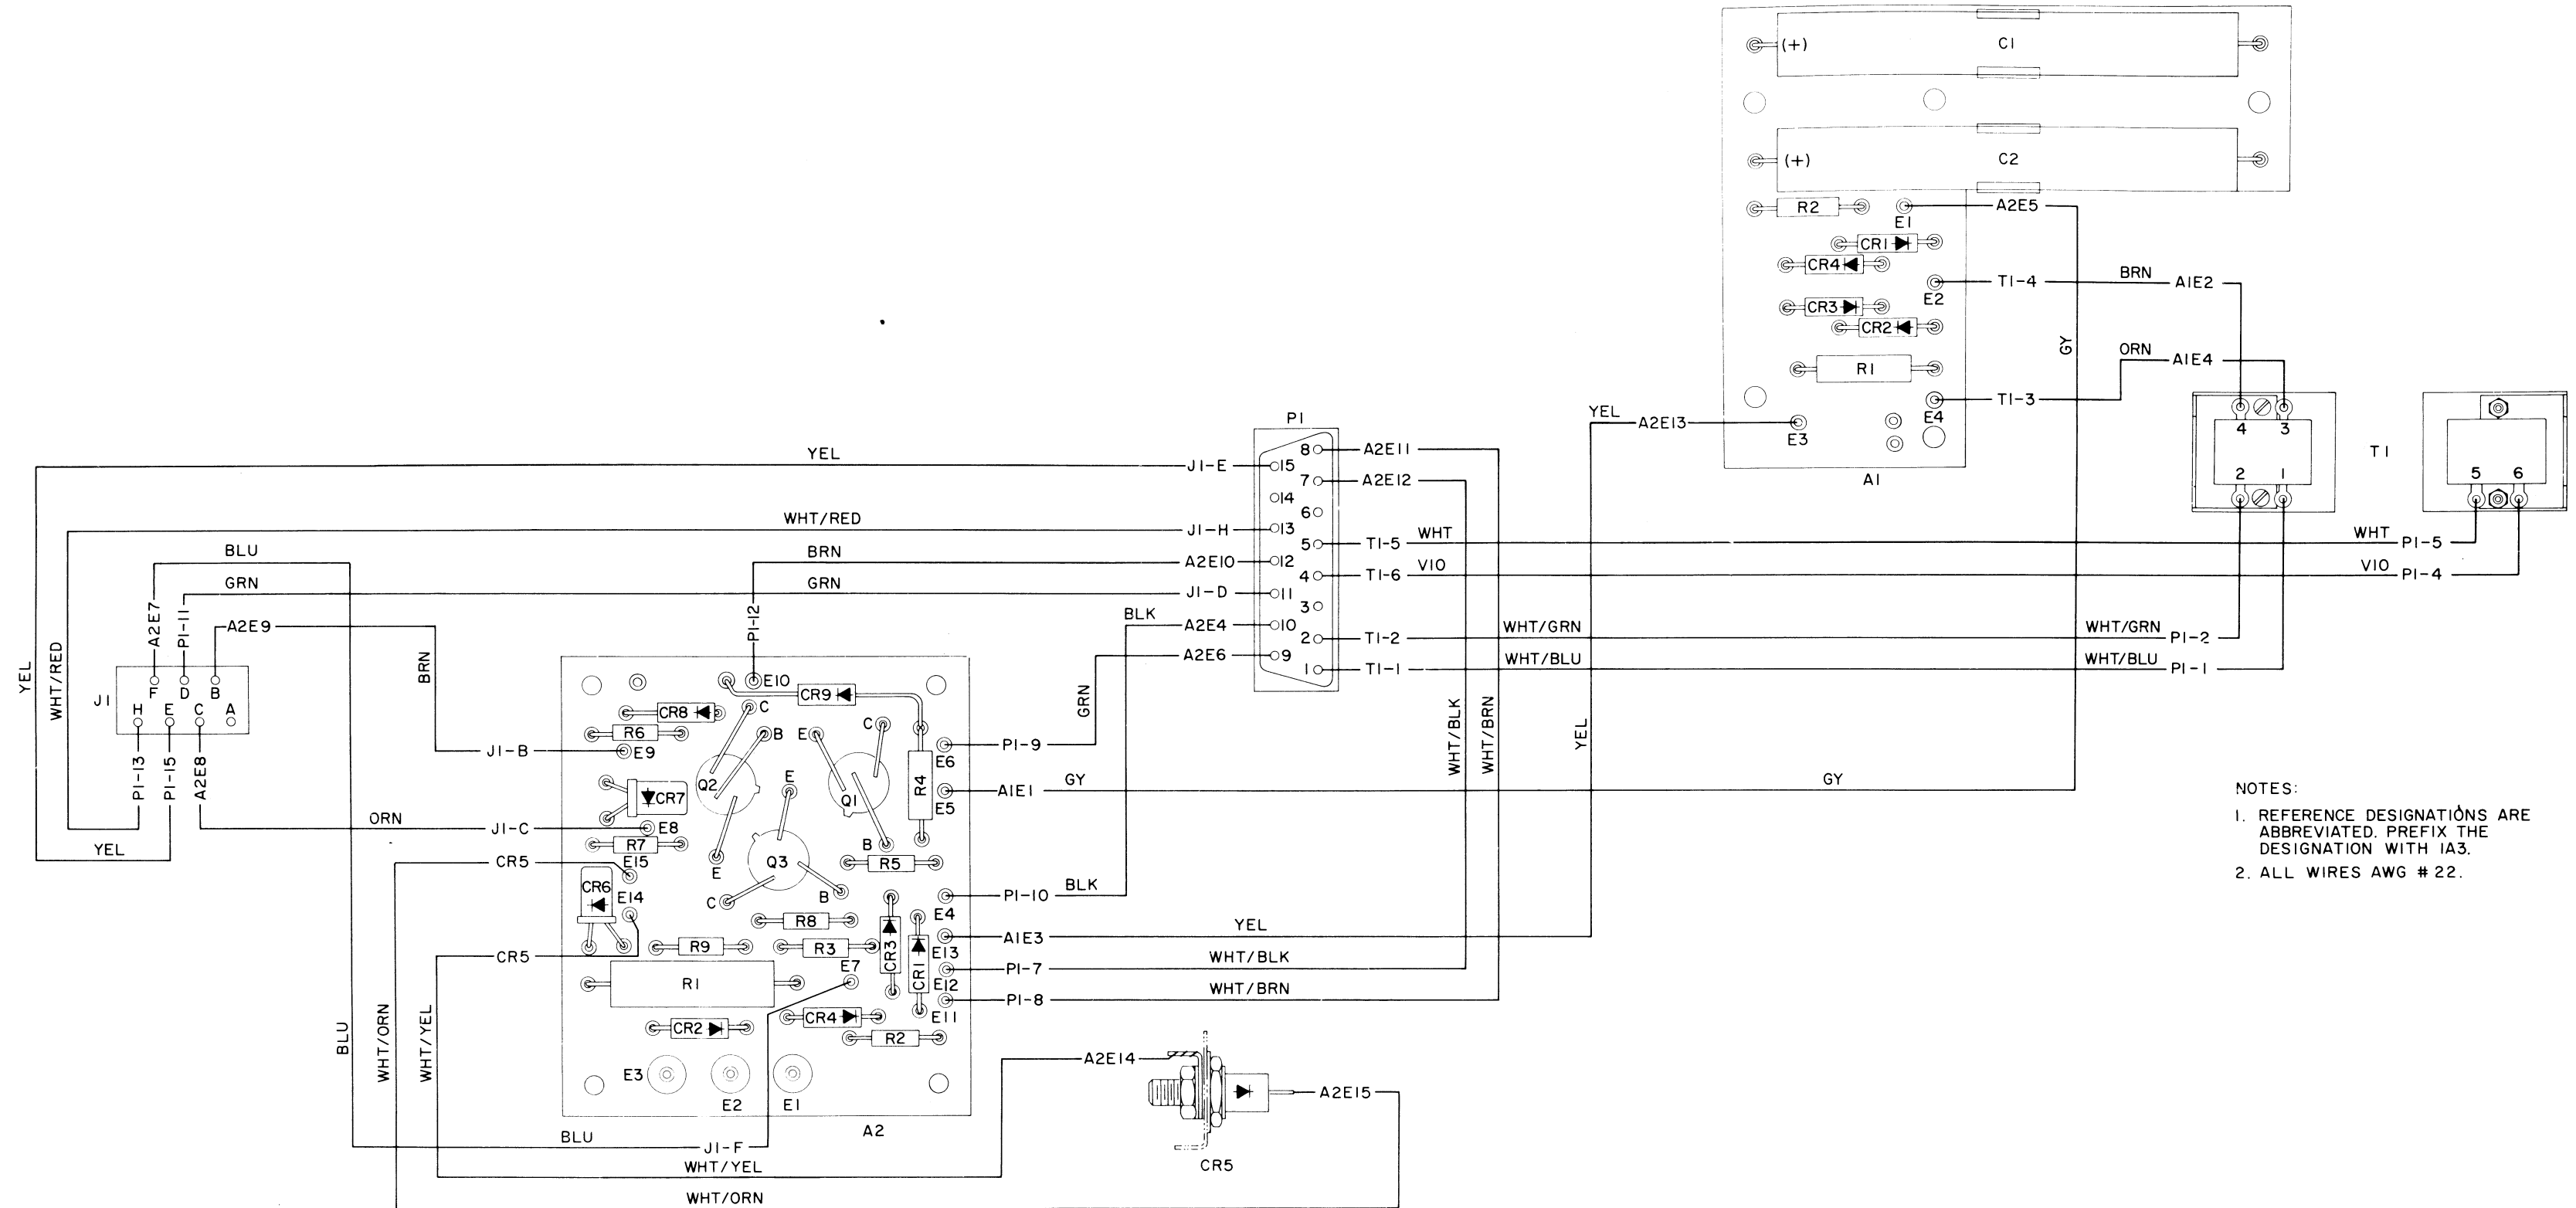


- NOTES:
1. REFERENCE DESIGNATIONS ARE ABBREVIATED. PREFIX THE DESIGNATION WITH IA3.
 2. ALL WIRES AWG # 22.

Figure 5-110. Line Sensor, Wiring Diagram

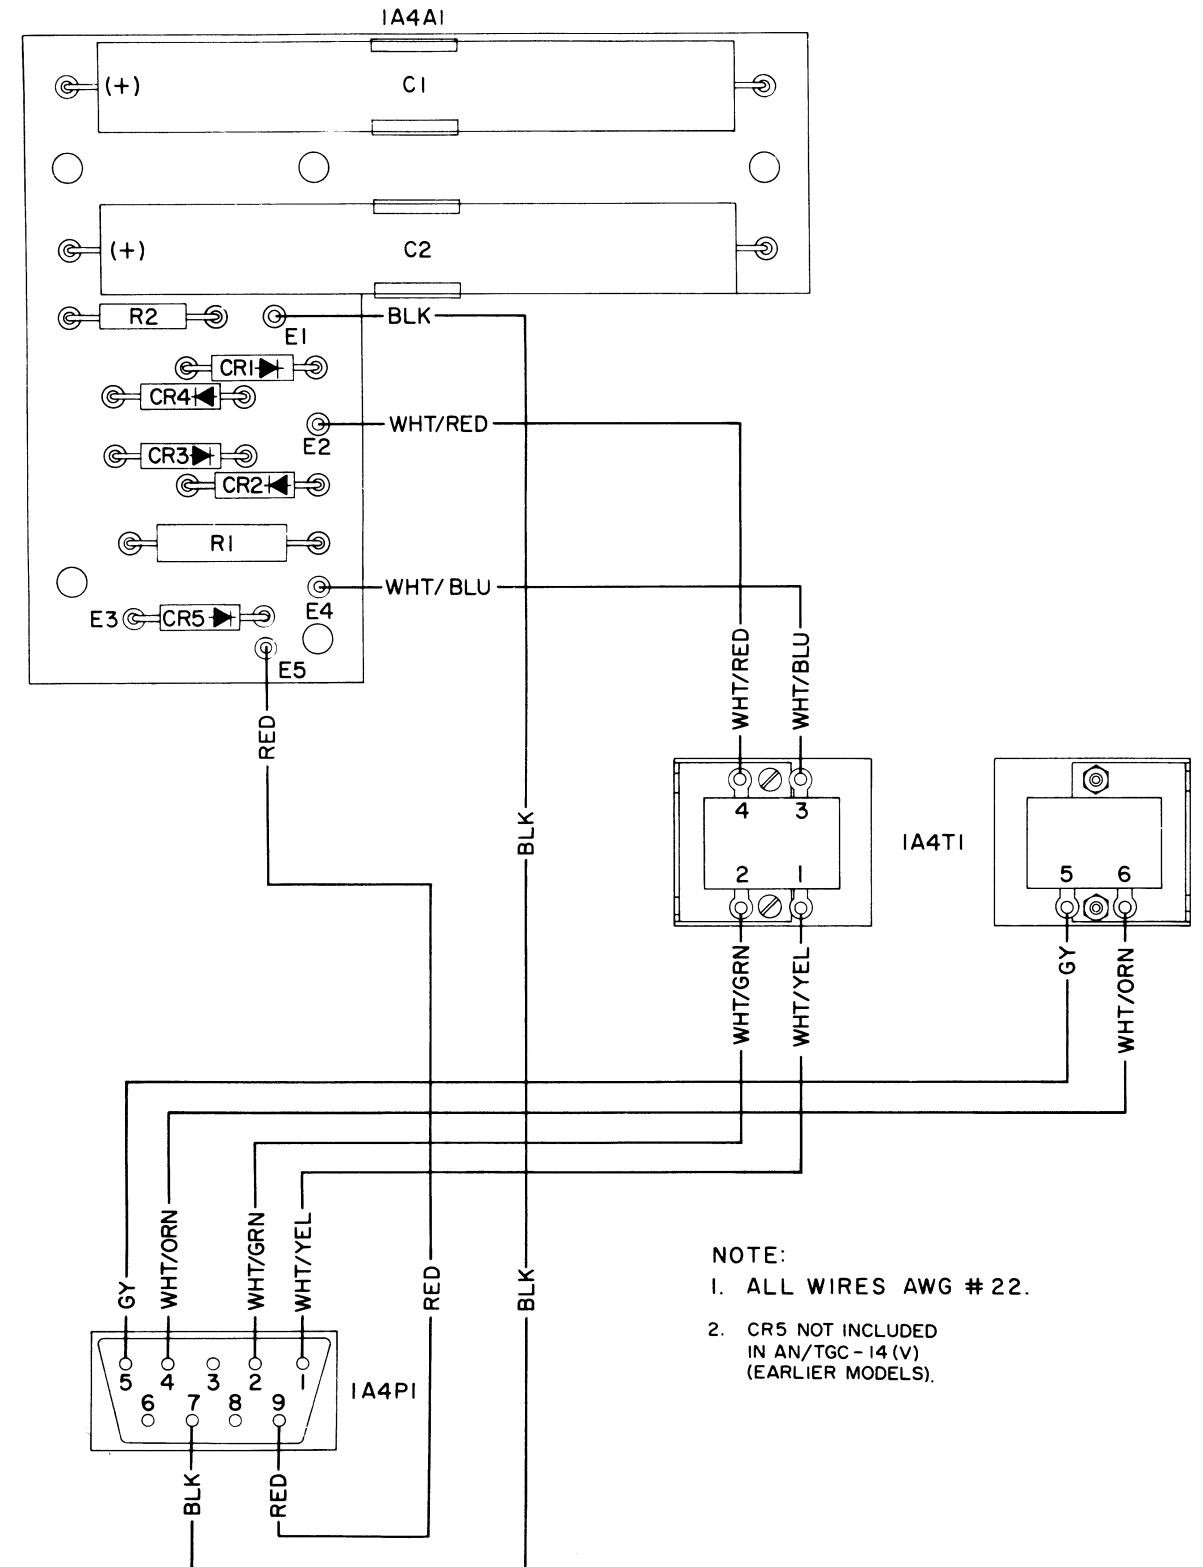

NOTE:
1. ALL WIRES AWG # 22.
2. CR5 NOT INCLUDED
IN AN/TGC - 14 (V)
(EARLIER MODELS).

Figure 5-111. Signal Line Power Supply, Wiring Diagram

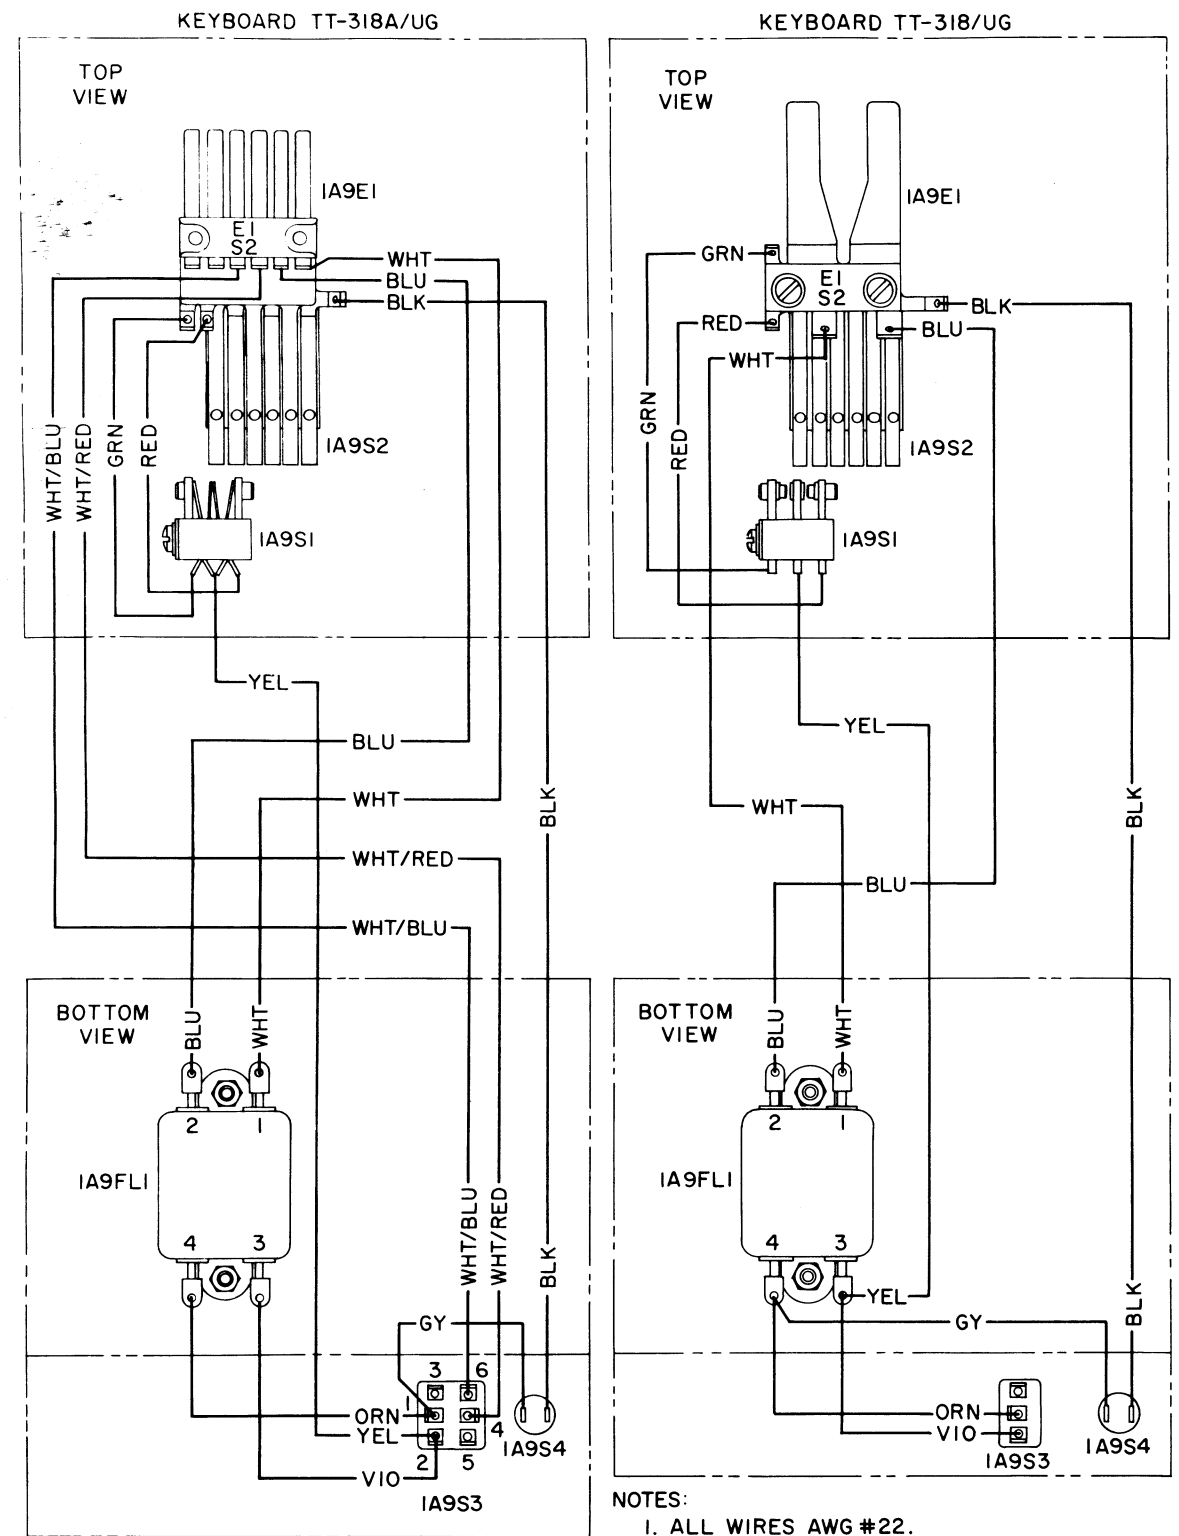

NOTES:
1. ALL WIRES AWG #22.
2. COMPONENTS SHOWN AS VIEWED FROM WIRING SIDE.

Figure 5-112. Keyboard TT-318/UG, Wiring Diagram

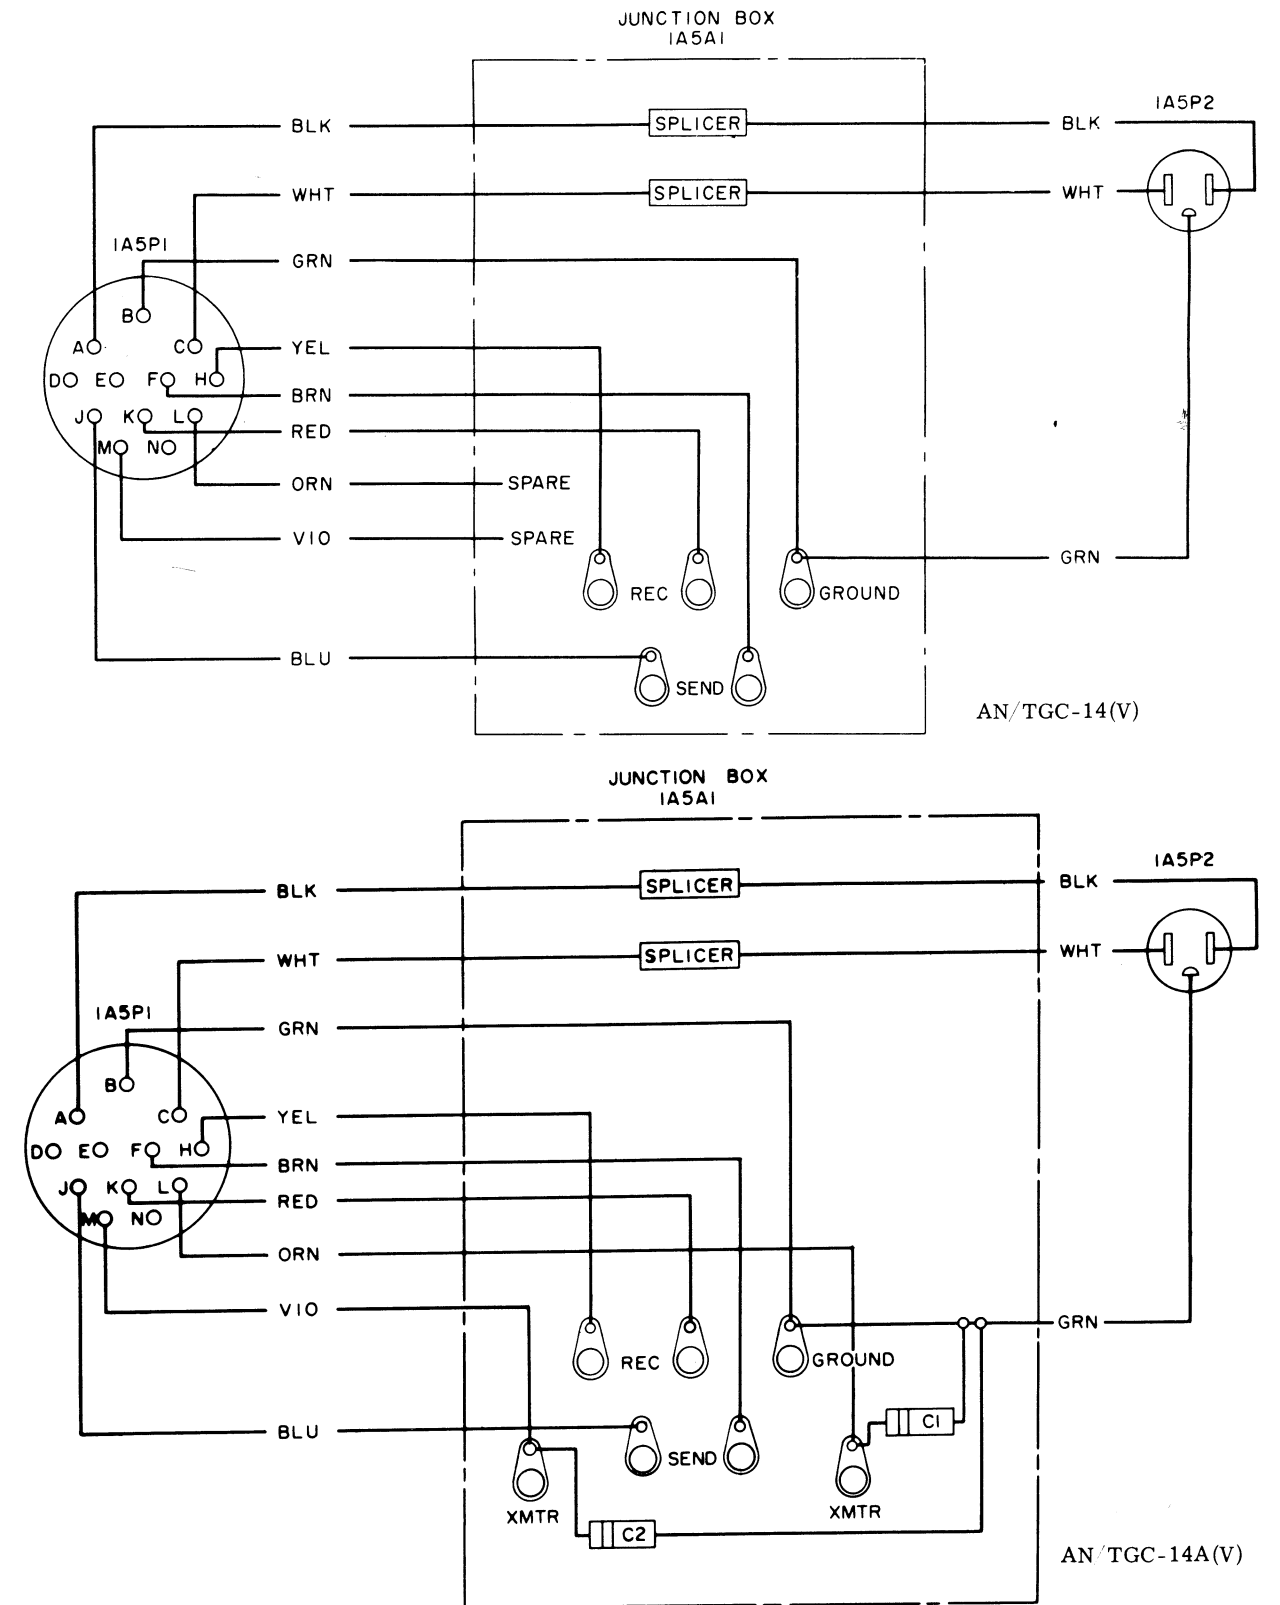


Figure 5-113. Service Cables, Wiring Diagrams, AN TGC-14(V) and AN TGC-14A(V)

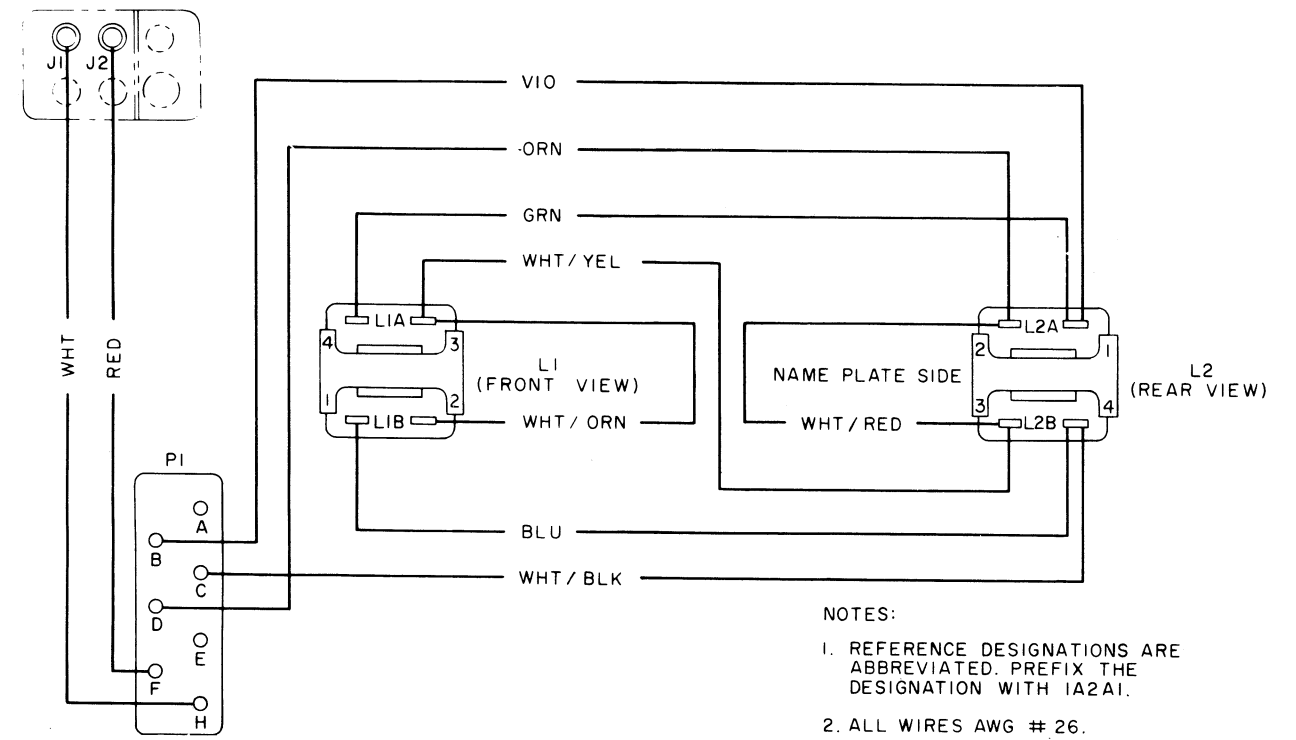


Figure 5-114. Selector, Wiring Diagram